

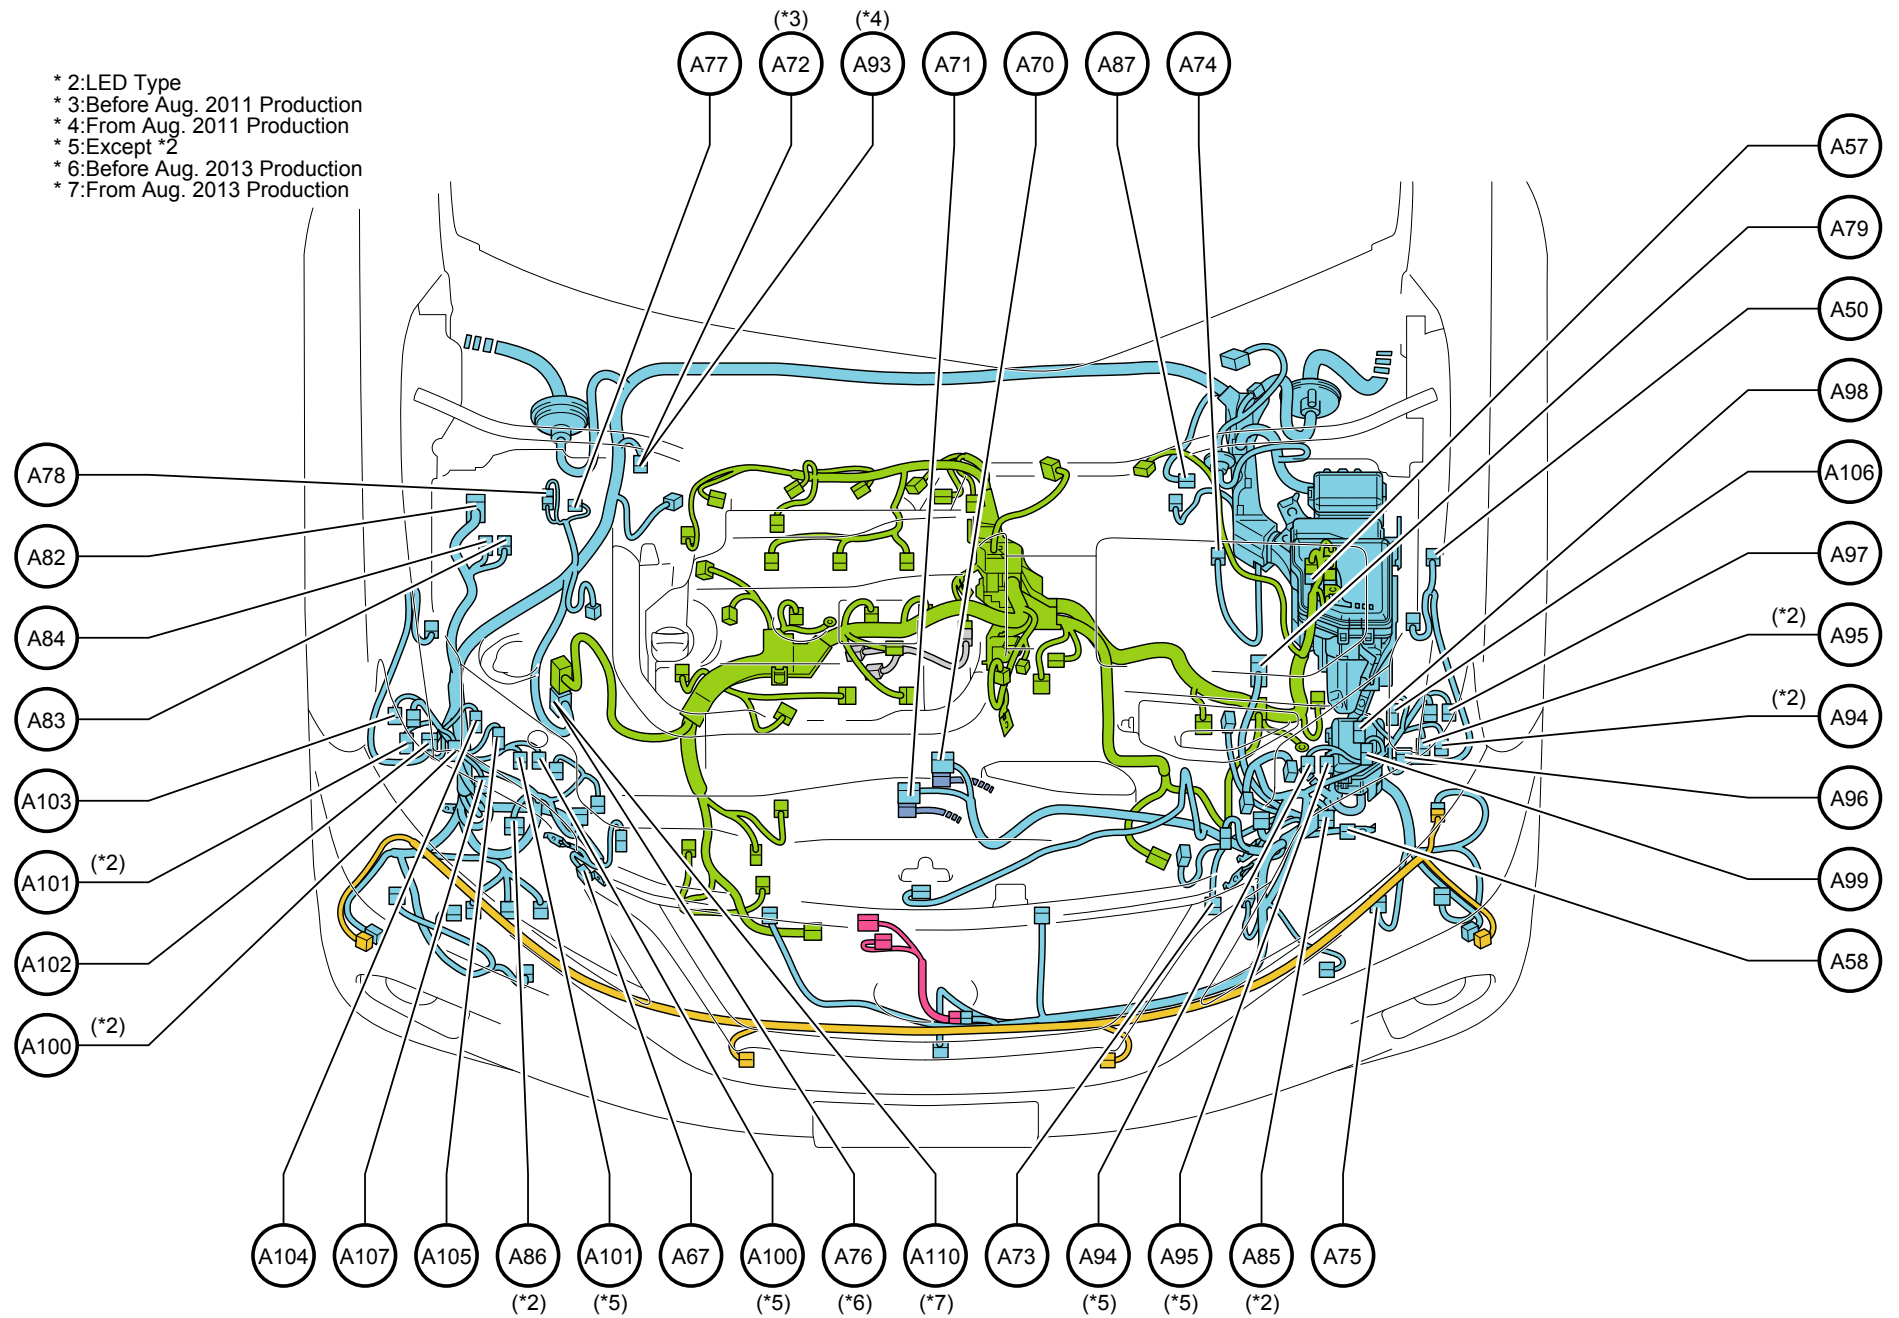
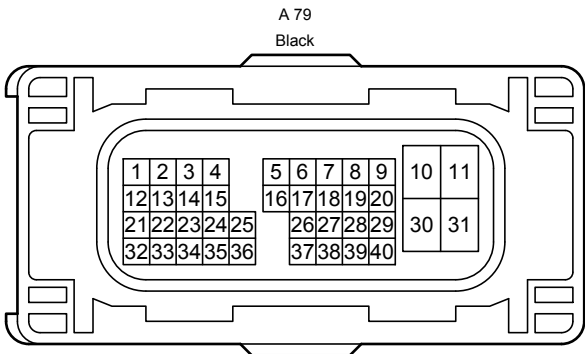
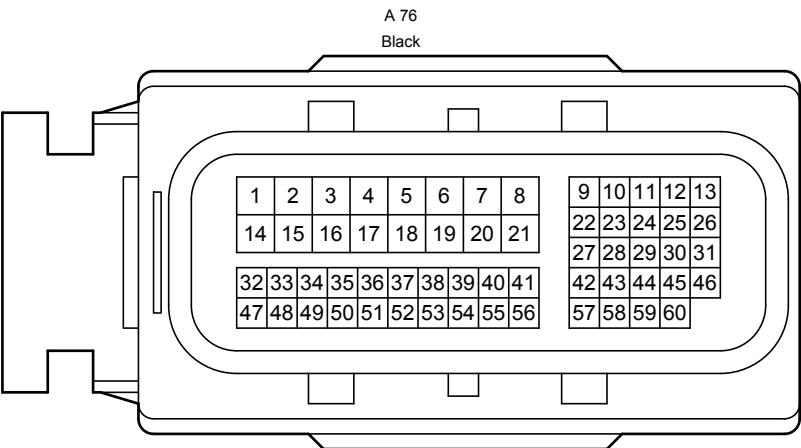
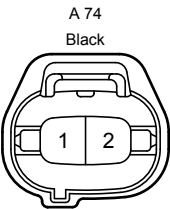
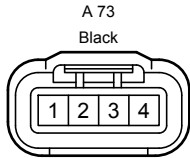
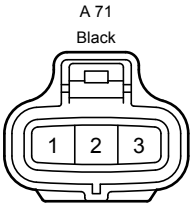
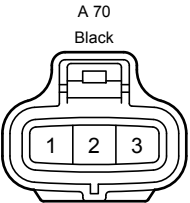
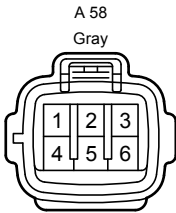


Position of Parts in Engine Compartment <LHD>

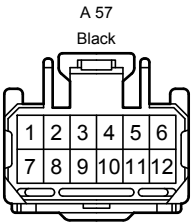

A 50	Wireless Door Lock Buzzer
A 57	Junction Connector
A 58	Junction Connector
A 67	Junction Connector
A 70	No. 1 Cooling Fan ECU
A 71	No. 2 Cooling Fan ECU
A 72	Fuel Pump Resistor
A 73	Inverter Water Pump Motor Assembly
A 74	Heater Water Pump Assembly
A 75	Oil Motor Pump Assembly
A 76	ECM
A 77	Short Connector
A 78	Short Connector
A 79	Inverter Assembly with Converter
A 82	Brake Actuator Assembly
A 83	Brake Actuator Assembly
A 84	Brake Actuator Assembly
A 85	Headlight Assembly LH
A 86	Headlight Assembly RH
A 87	Brake Stroke Simulator
A 93	Fuel Pump Resistor
A 94	Headlight Assembly LH
A 95	Headlight Assembly LH
A 96	Headlight Assembly LH
A 97	Headlight Assembly LH
A 98	Headlight Assembly LH
A 99	Headlight Assembly LH
A 100	Headlight Assembly RH
A 101	Headlight Assembly RH
A 102	Headlight Assembly RH
A 103	Headlight Assembly RH
A 104	Headlight Assembly RH
A 105	Headlight Assembly RH
A 106	Headlight Assembly LH
A 107	Headlight Assembly RH
A 110	ECM

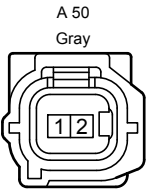

Position of Parts in Engine Compartment <LHD>

