


Position of Parts in Engine Compartment <LHD>

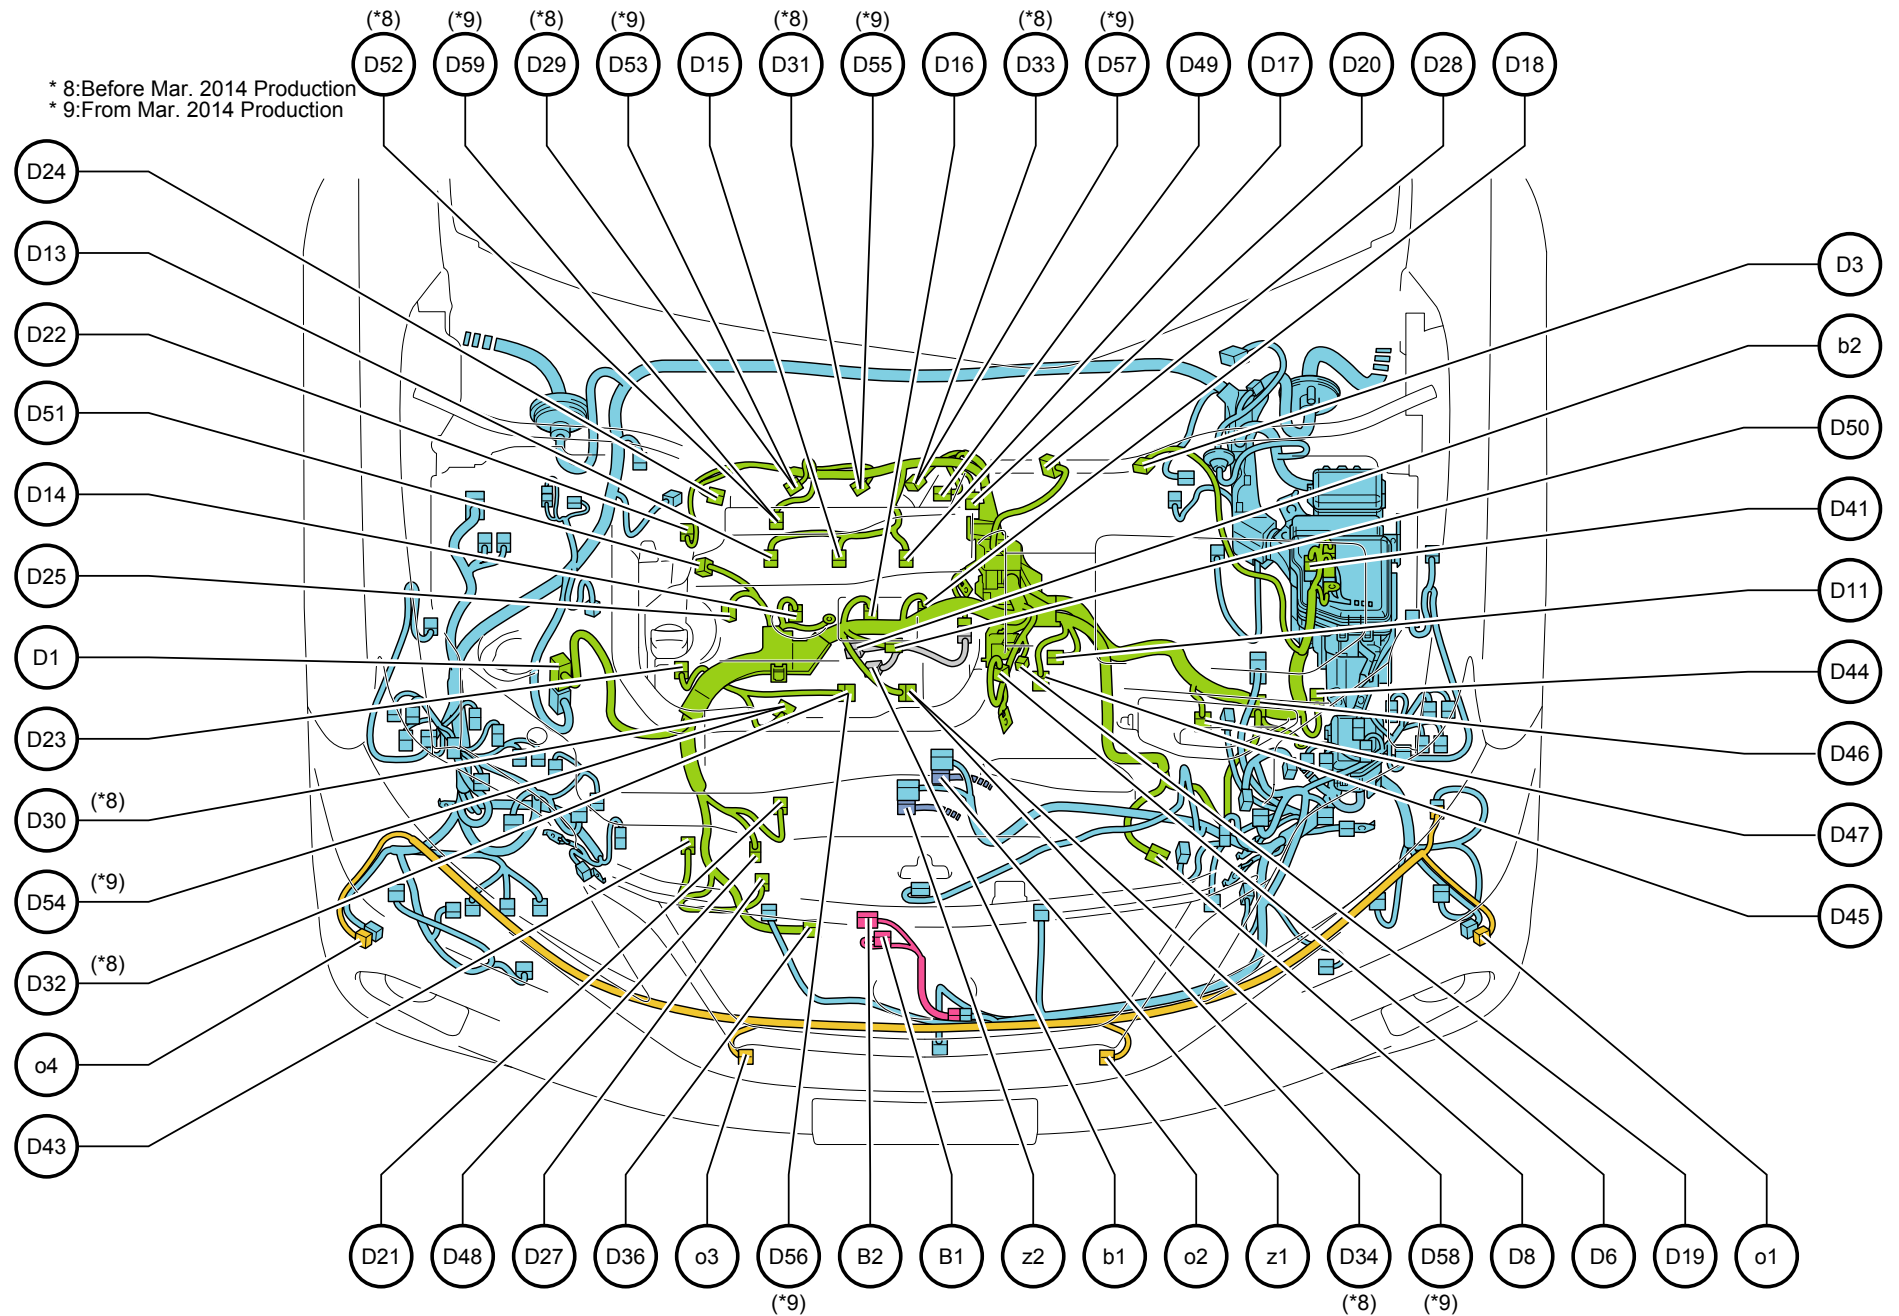

- B 1 Millimeter Wave Radar Sensor Assembly
- B 2 Smog Ventilation Sensor


- D 1 ECM
- D 3 Intake Mass Air Flow Meter Sub-Assembly
- D 6 Purge VSV
- D 8 Shift Lever Position Sensor
- D 11 E.F.I. Engine Coolant Temperature Sensor
- D 13 Fuel Injector Assembly (No. 1)
- D 14 Fuel Injector Assembly (No. 2)
- D 15 Fuel Injector Assembly (No. 3)
- D 16 Fuel Injector Assembly (No. 4)
- D 17 Fuel Injector Assembly (No. 5)
- D 18 Fuel Injector Assembly (No. 6)
- D 19 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- D 20 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 21 Crank Position Sensor
- D 22 VVT Sensor (Bank 1 Intake Side)
- D 23 VVT Sensor (Bank 2 Intake Side)
- D 24 Cam Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- D 25 Cam Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- D 27 Engine Oil Pressure Switch Assembly
- D 28 Throttle with Motor Body Assembly
- D 29 Ignition Coil Assembly (No. 1)
- D 30 Ignition Coil Assembly (No. 2)
- D 31 Ignition Coil Assembly (No. 3)
- D 32 Ignition Coil Assembly (No. 4)
- D 33 Ignition Coil Assembly (No. 5)
- D 34 Ignition Coil Assembly (No. 6)
- D 36 Oxygen Sensor (Bank 2 Sensor 2)
- D 41 Junction Connector
- D 43 Engine Oil Level Sensor
- D 44 Inverter Assembly with Converter
- D 45 No. 1 Front Motor Generator
- D 46 No. 2 Front Motor Generator
- D 47 No. 2 Front Motor Generator
- D 48 Compressor with Motor Assembly
- D 49 Noise Filter (Ignition Bank 1)
- D 50 Noise Filter (Ignition Bank 2)
- D 51 EGR Valve Assembly
- D 52 E.F.I. Vacuum Sensor Assembly
- D 53 Ignition Coil Assembly (No. 1)
- D 54 Ignition Coil Assembly (No. 2)
- D 55 Ignition Coil Assembly (No. 3)
- D 56 Ignition Coil Assembly (No. 4)
- D 57 Ignition Coil Assembly (No. 5)
- D 58 Ignition Coil Assembly (No. 6)
- D 59 E.F.I. Vacuum Sensor Assembly

- b 1 Knock Control Sensor (Bank 2)
- b 2 Knock Control Sensor (Bank 1)

- o 1 No. 1 Ultrasonic Sensor (Front Left)
- o 2 No. 1 Ultrasonic Sensor (Front Left Center)
- o 3 No. 1 Ultrasonic Sensor (Front Right Center)
- o 4 No. 1 Ultrasonic Sensor (Front Right)

- z 1 No. 1 Cooling Fan ECU , No. 1 Cooling Fan Motor
- z 2 No. 2 Cooling Fan ECU , No. 2 Cooling Fan Motor

Position of Parts in Engine Compartment <LHD>

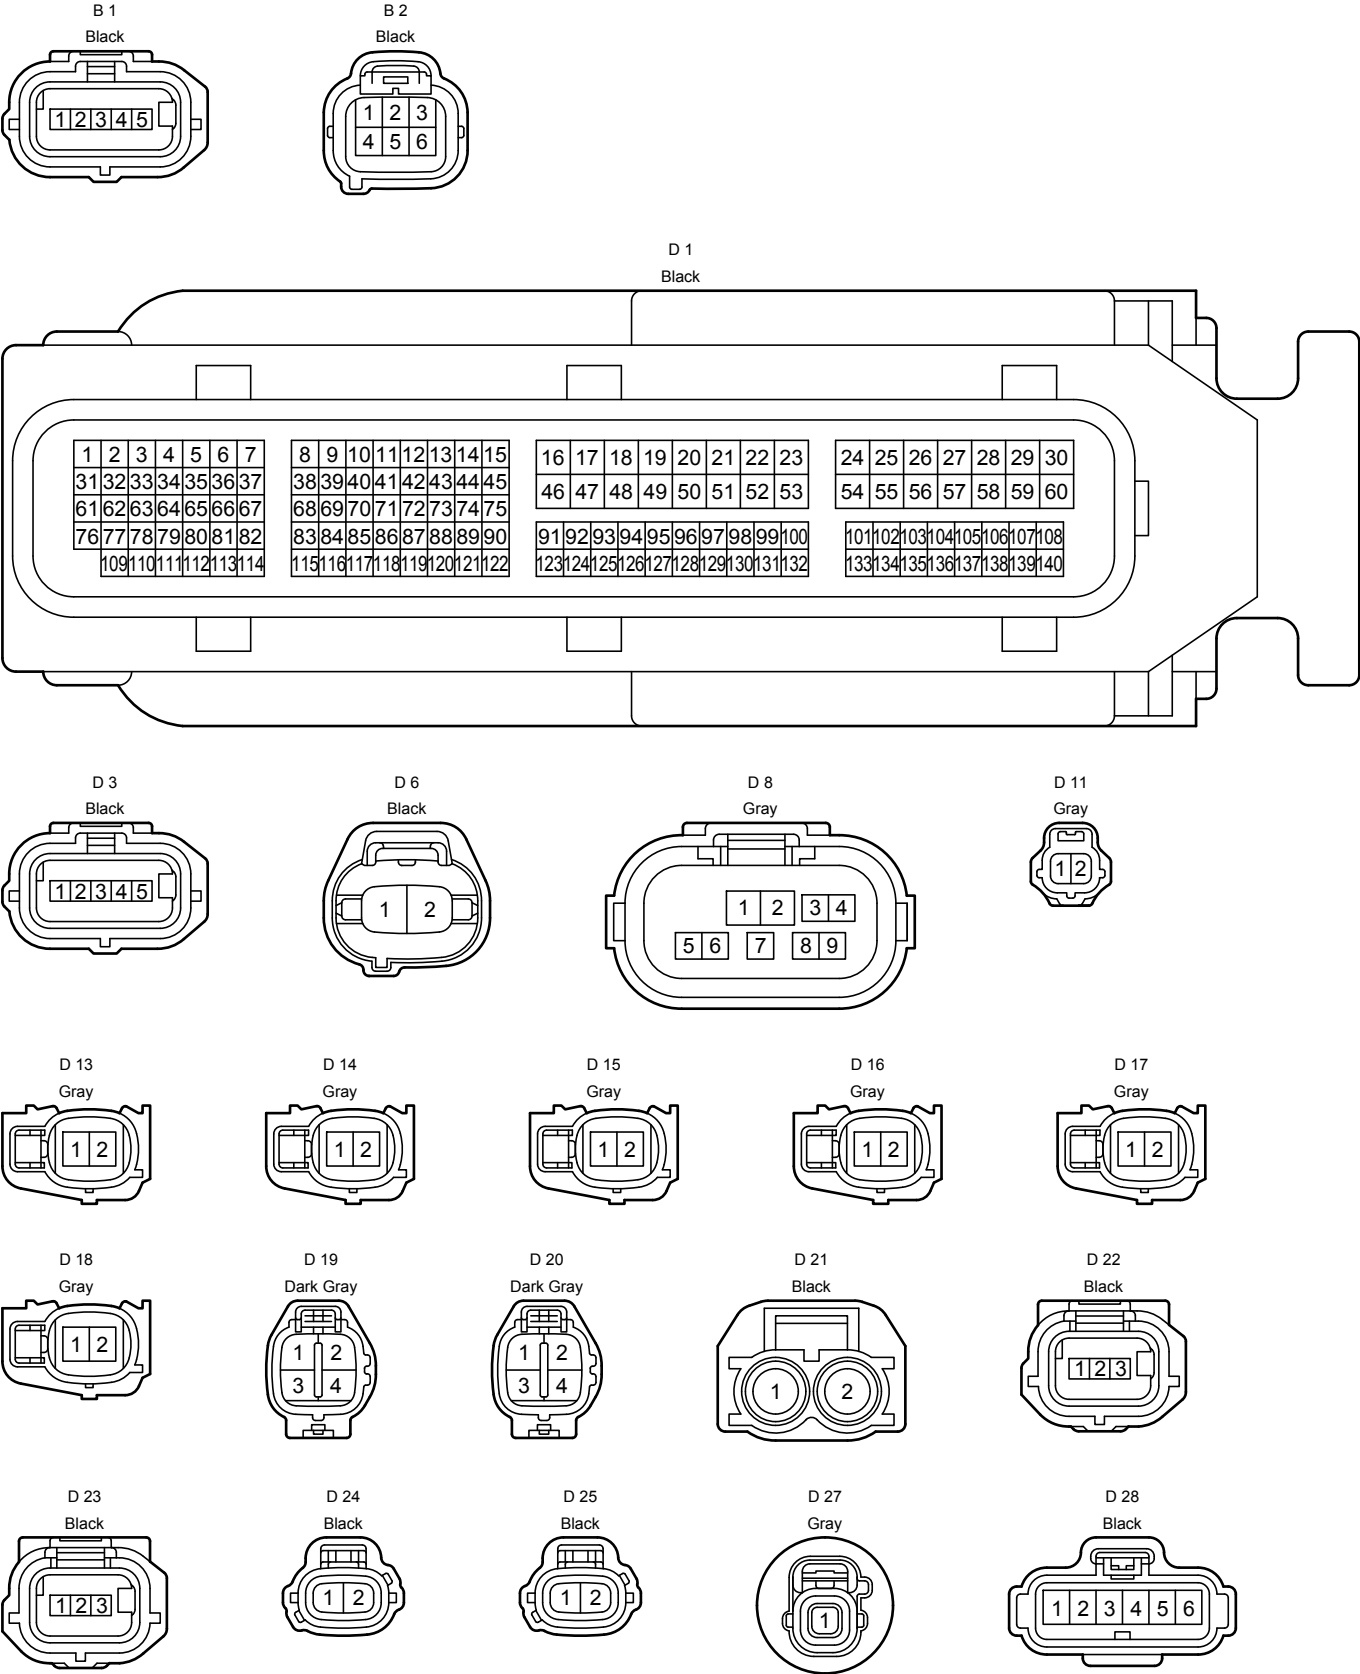

Position of Parts in Engine Compartment <LHD>

