



# Position of Parts in Body <LHD>

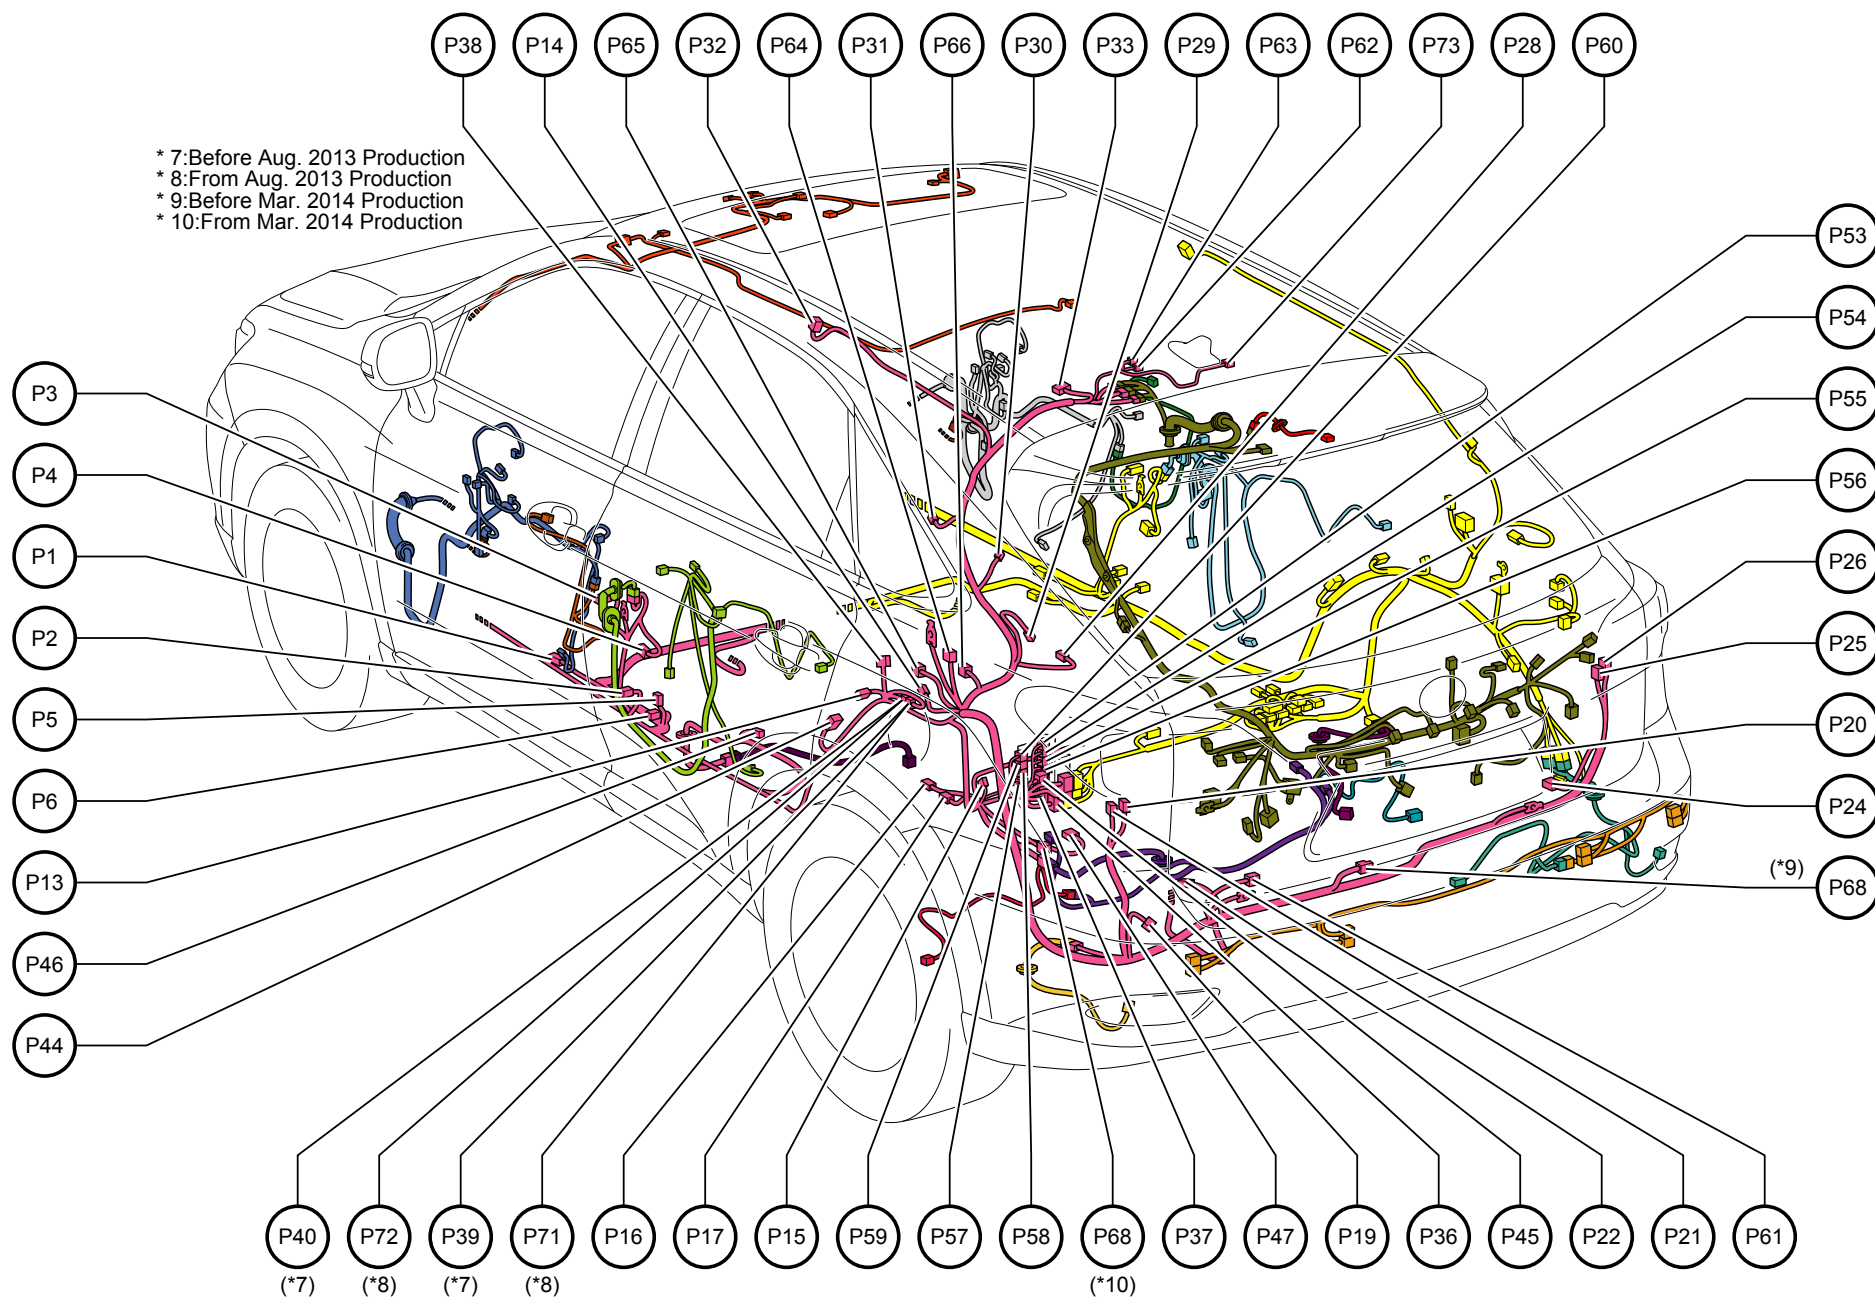

|      |                                               |
|------|-----------------------------------------------|
| P 1  | No. 1 Interior Illumination Light Assembly LH |
| P 2  | Front Seat Outer Belt Assembly LH             |
| P 3  | Front Door Courtesy Light Switch Assembly LH  |
| P 4  | Side Airbag Sensor Assembly LH                |
| P 5  | Front Seat Outer Belt Assembly LH             |
| P 6  | Front Seat Outer Belt Assembly LH             |
| P 13 | Rear Door Courtesy Light Switch Assembly LH   |
| P 14 | Rear No. 1 Seat Belt Assembly Outer LH        |
| P 15 | Diode (Back Door)                             |
| P 16 | Rear Side Airbag Squib Circuit LH             |
| P 17 | Rear Seat Inner with Center Belt Assembly LH  |
| P 19 | Fuel Filler Opening Lid Lock Sub-Assembly     |
| P 20 | Rear Combination Light Assembly LH            |
| P 21 | Rear Combination Light Assembly LH            |
| P 22 | Rear No. 3 Speaker Assembly                   |
| P 24 | Height Control Valve Harness Assembly         |
| P 25 | Rear Combination Light Assembly RH            |
| P 26 | Rear Combination Light Assembly RH            |
| P 28 | No. 2 Room Light Assembly LH                  |
| P 29 | Rear Power Point Socket Assembly              |
| P 30 | Quarter Side Speaker Assembly LH              |
| P 31 | Noise Filter (Center Stop Light Assembly)     |
| P 32 | Curtain Shield Airbag Assembly LH             |
| P 33 | Power Back Door Unit Assembly                 |
| P 36 | Junction Connector                            |
| P 37 | Junction Connector                            |
| P 38 | Junction Connector                            |
| P 39 | Junction Connector                            |
| P 40 | Junction Connector                            |
| P 44 | Rear Airbag Sensor LH                         |
| P 45 | Junction Connector                            |
| P 46 | Inter Lock Switch                             |
| P 47 | Brake Control Power Supply Assembly           |
| P 53 | Junction Connector                            |
| P 54 | Junction Connector                            |
| P 55 | Junction Connector                            |
| P 56 | Junction Connector                            |
| P 57 | Junction Connector                            |
| P 58 | Junction Connector                            |
| P 59 | Junction Connector                            |
| P 60 | Junction Connector                            |
| P 61 | Battery Thermometer Sensor                    |
| P 62 | Noise Filter (Center Stop Light Assembly)     |
| P 63 | Noise Filter (Center Stop Light Assembly)     |
| P 64 | Noise Filter (Rear Window Defogger)           |
| P 65 | Junction Connector                            |
| P 66 | Junction Connector                            |
| P 68 | Fuse Box                                      |
| P 71 | Junction Connector                            |
| P 72 | Junction Connector                            |
| P 73 | Tire Pressure Warning Antenna                 |

# Position of Parts in Body <LHD>

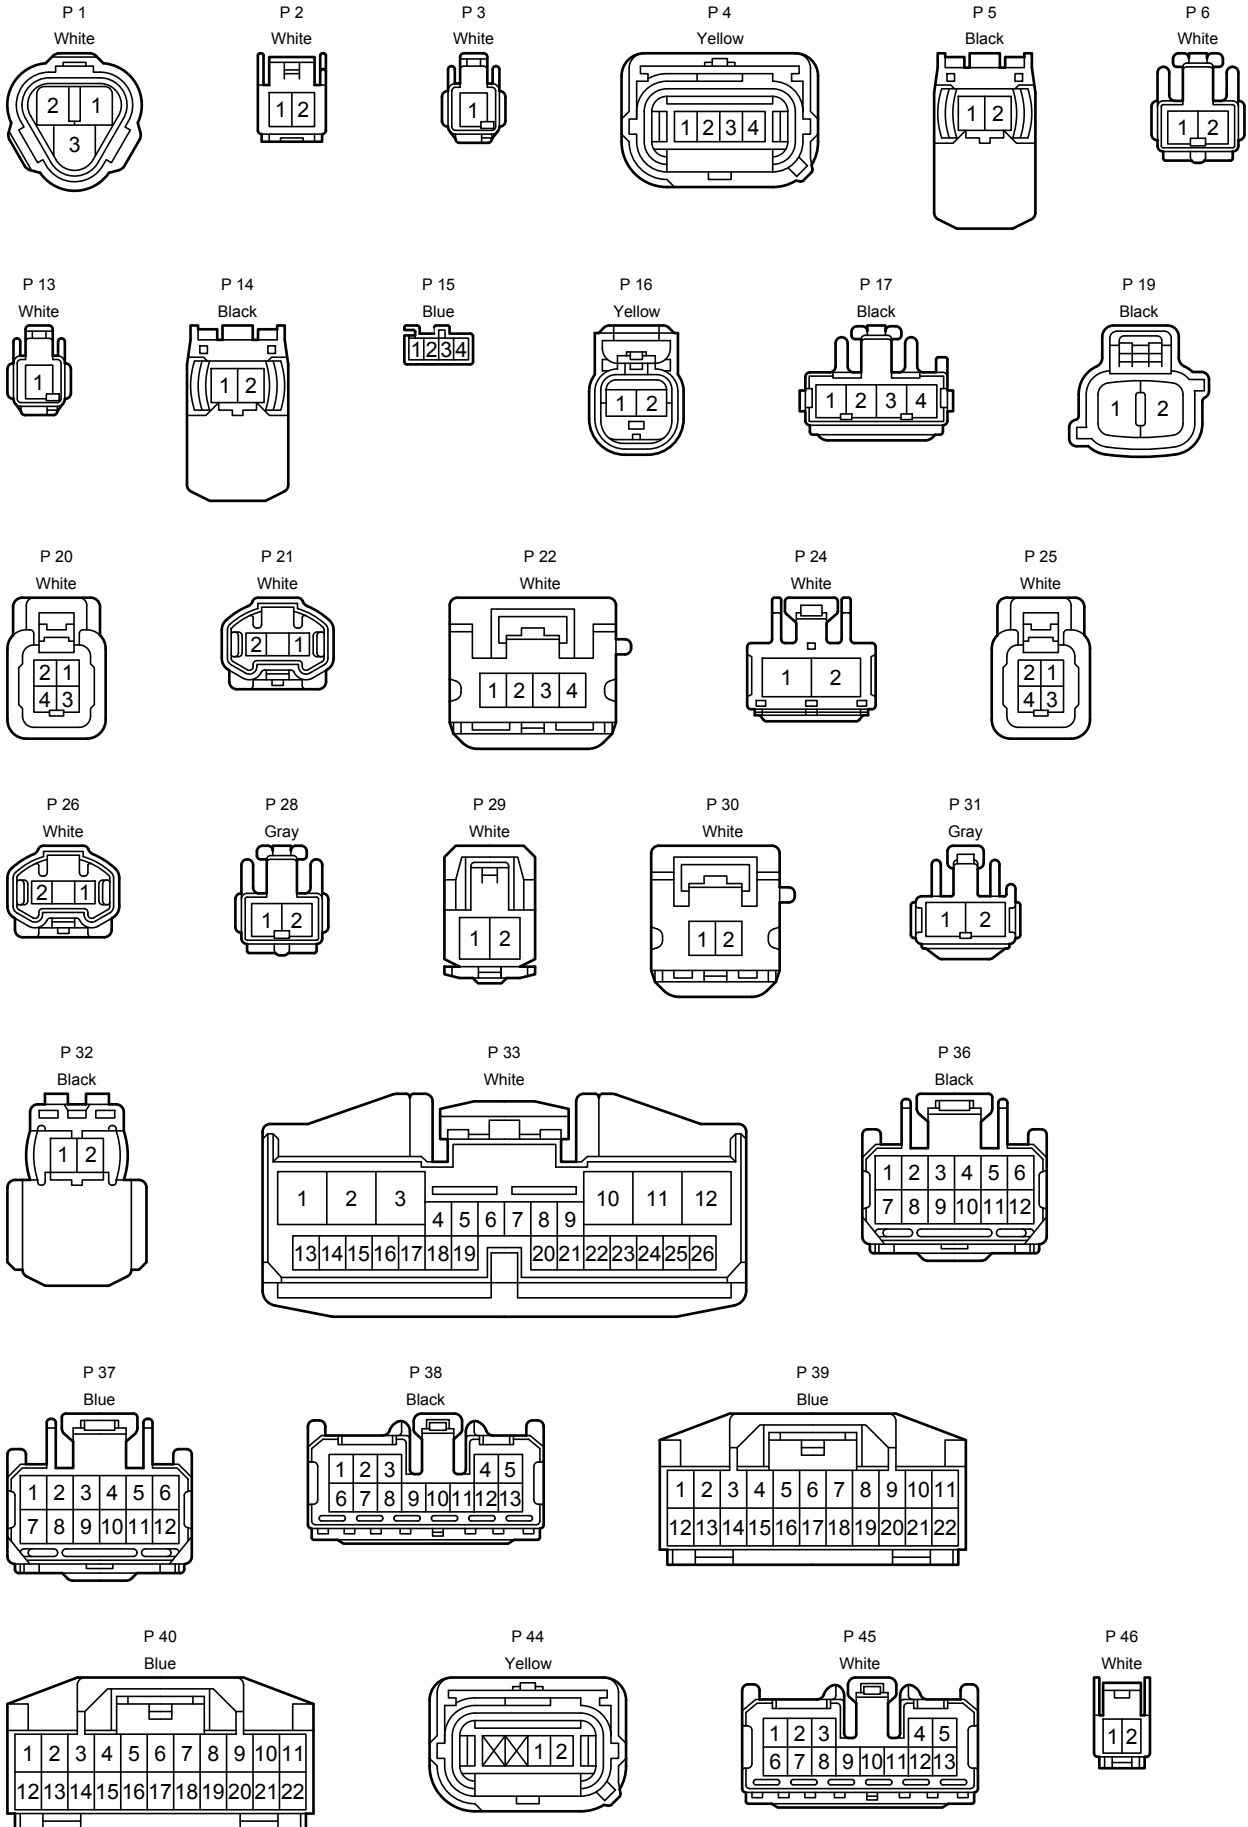

# Position of Parts in Body <LHD>

