


Position of Parts in Seat <RHD>

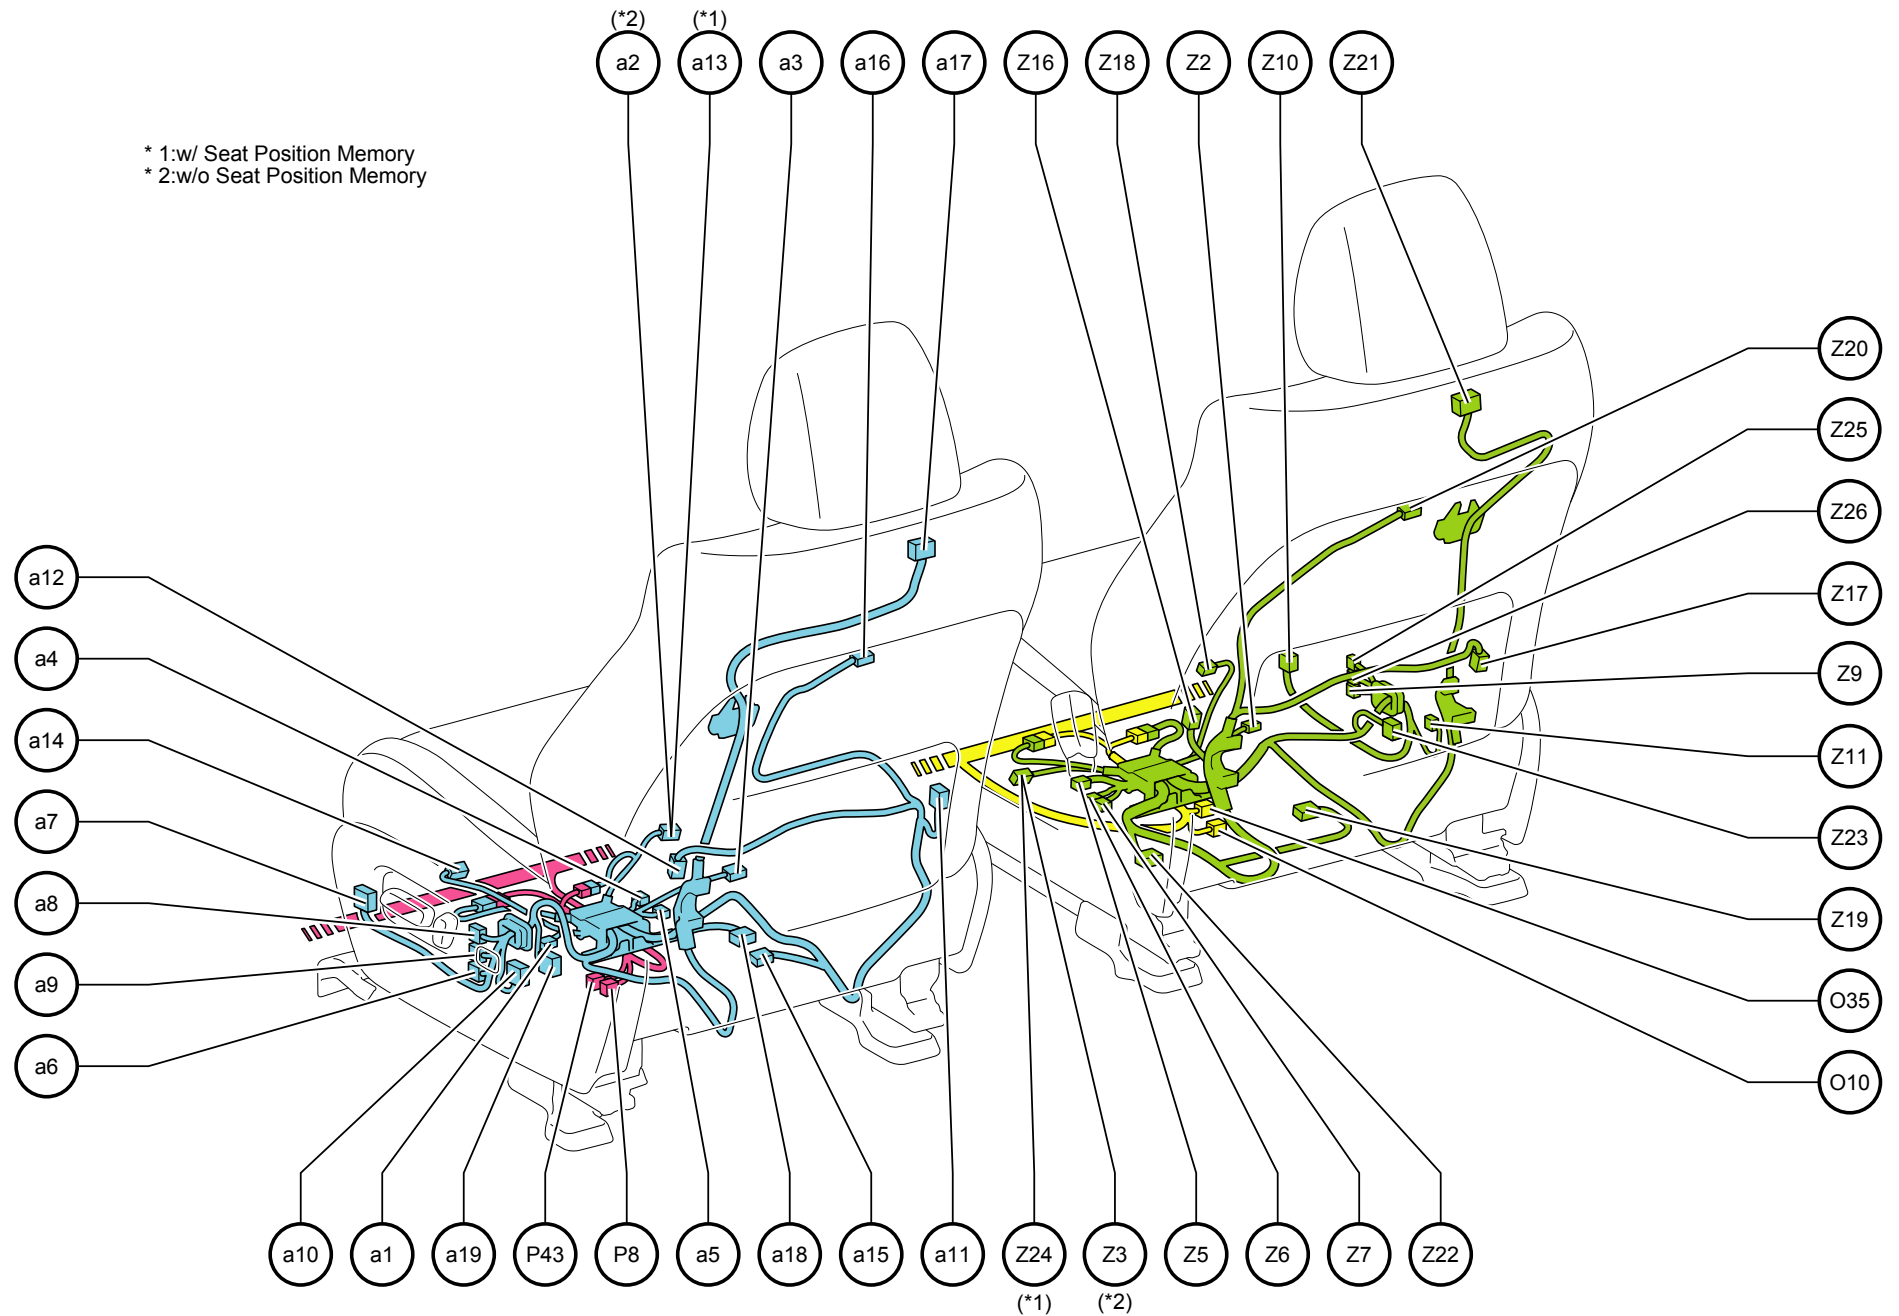

 
 







 
 
 








 
 
 





 
 
 

 
O 10 Front Side Airbag Squib Circuit RH
O 35 Front Seat Inner Belt Assembly RH

P 8 Front Side Airbag Squib Circuit LH
P 43 Front Seat Inner Belt Assembly LH

Z 2 Front Power Seat Vertical Position Motor Assembly RH
Z 3 Front Power Seat Slide Position Motor Assembly RH
Z 5 Front Power Seat Lift Position Motor Assembly RH
Z 6 Seat Heater Control Sub-Assembly RH
Z 7 Front Seat Inner Belt Assembly RH
Z 9 Front Power Seat Switch RH
Z 10 Seat Variable Cushion Switch RH
Z 11 Power Seat Front Switch Assembly RH
Z 16 Front Lumbar Support Forward and Back Motor Assembly RH
Z 17 Front Power Seat Reclining Position Motor Assembly RH
Z 18 Front Power Seat Cushion Control Motor Assembly RH
Z 19 Seat Cushion Climate Control Blower Assembly RH
Z 20 Seat Back Climate Control Blower RH
Z 21 Seat Back Display RH
Z 22 Junction Connector
Z 23 Junction Connector
Z 24 Front Power Seat Slide Position Motor Assembly RH
Z 25 Front Position Control ECU and Switch Assembly RH
Z 26 Front Position Control ECU and Switch Assembly RH

a 1 Front Power Seat Vertical Position Motor Assembly LH
a 2 Front Power Seat Slide Position Motor Assembly LH
a 3 Front Power Seat Lift Position Motor Assembly LH
a 4 Seat Heater Control Sub-Assembly LH
a 5 Front Seat Inner Belt Assembly LH
a 6 Front Power Seat Switch LH
a 7 Seat Variable Cushion Switch LH
a 8 Front Position Control ECU and Switch Assembly LH
a 9 Front Position Control ECU and Switch Assembly LH
a 10 Front Power Seat Switch Assembly LH
a 11 Front Lumbar Support Forward and Back Motor Assembly LH
a 12 Front Power Seat Reclining Position Motor Assembly LH
a 13 Front Power Seat Slide Position Motor Assembly LH
a 14 Front Power Seat Cushion Control Motor Assembly LH
a 15 Seat Cushion Climate Control Blower Assembly LH
a 16 Seat Back Climate Control Blower LH
a 17 Seat Back Display LH
a 18 Junction Connector
a 19 Junction Connector

Position of Parts in Seat <RHD>

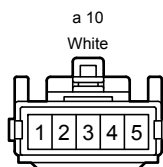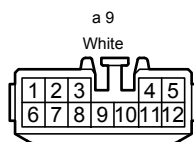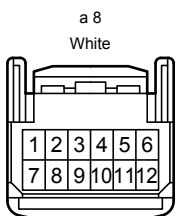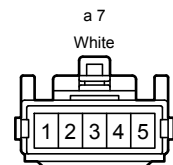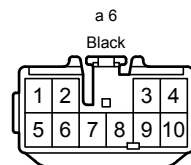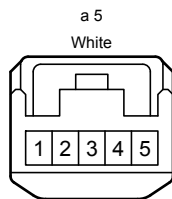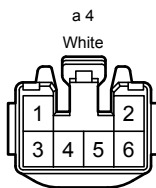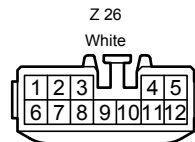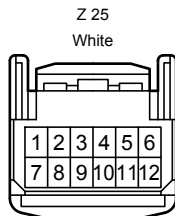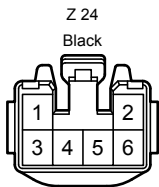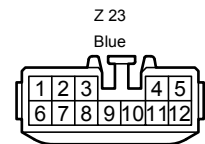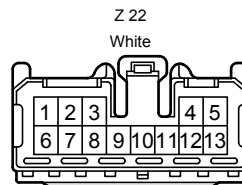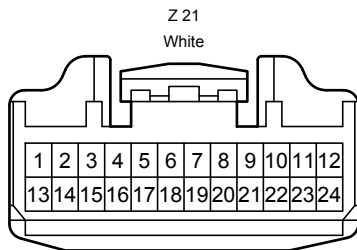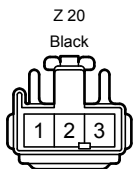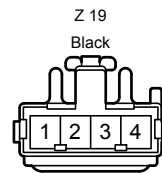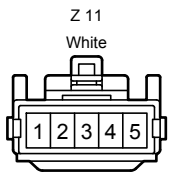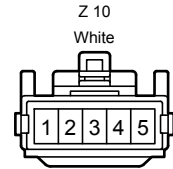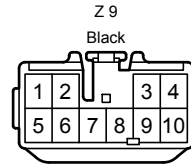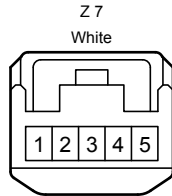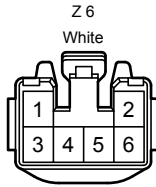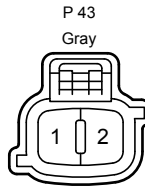

Position of Parts in Seat <RHD>

