

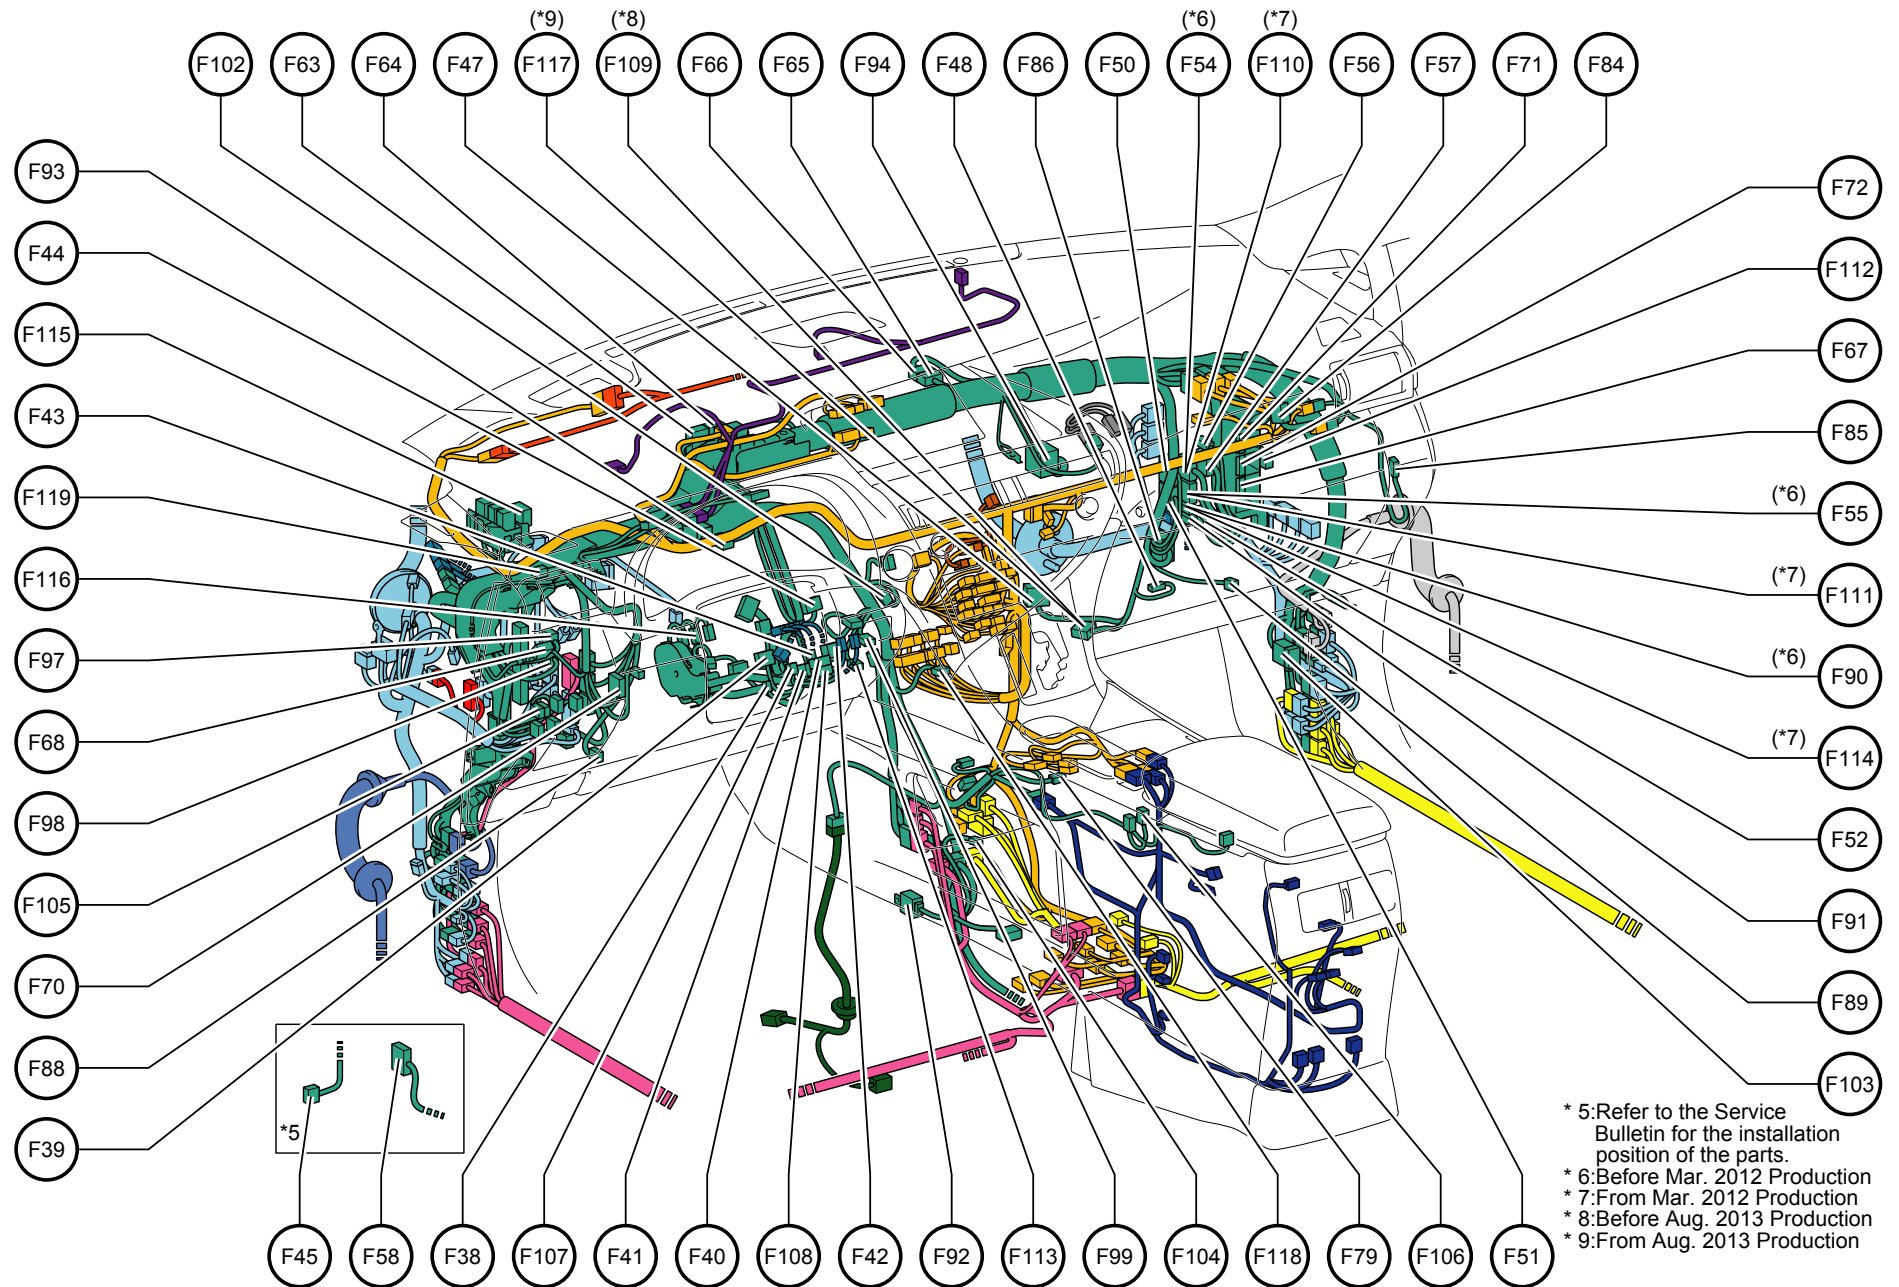
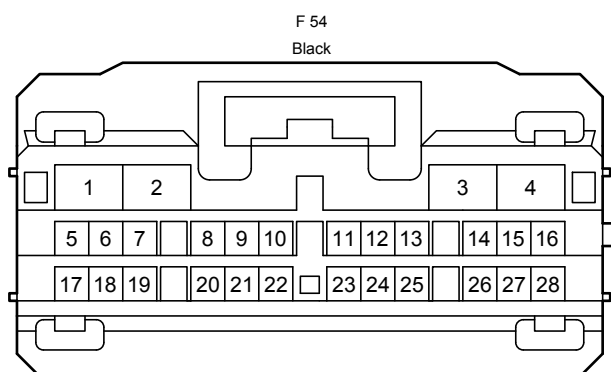
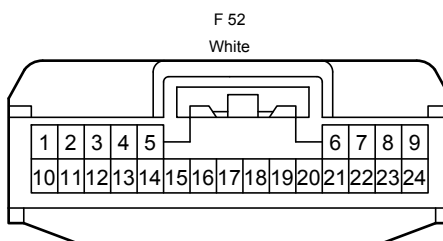
 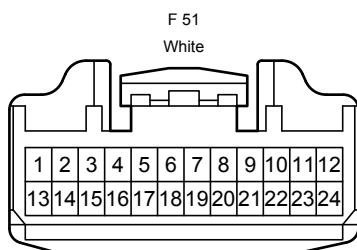
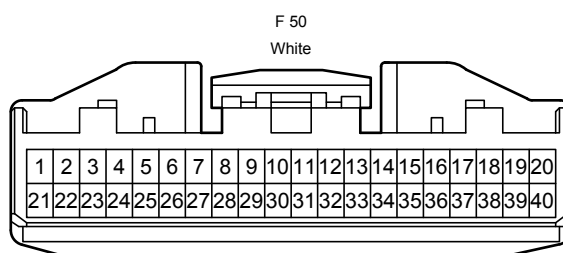

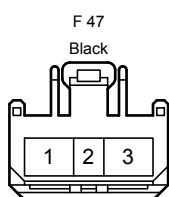
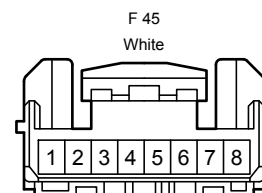
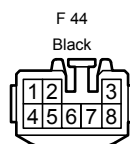
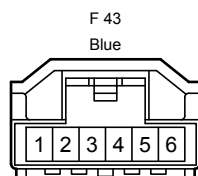
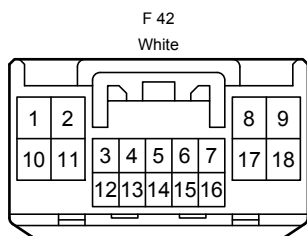
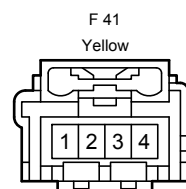


Position of Parts in Instrument Panel <LHD>

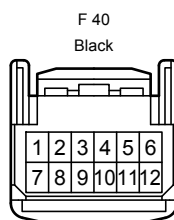


F 38	Power Tilt Motor
F 39	Headlight Dimmer Switch Assembly
F 40	Spiral Cable Sub-Assembly
F 41	Spiral Cable Sub-Assembly
F 42	Windshield Wiper Switch Assembly
F 43	Steering Sensor
F 44	Turn Signal Flasher Assembly
F 45	ID Code Box
F 47	Blower with Fan Motor Sub-Assembly
F 48	No. 1 Interior Illumination Light Assembly RH
F 50	A/C Amplifier Assembly
F 51	A/C Amplifier Assembly
F 52	Clearance Warning ECU Assembly
F 54	Parking Assist ECU
F 55	Parking Assist ECU
F 56	Seat Belt Control ECU
F 57	Seat Belt Control ECU
F 58	Certification ECU Assembly
F 63	Junction Connector
F 64	Junction Connector
F 65	Junction Connector
F 66	Junction Connector
F 67	Junction Connector
F 68	Junction Connector
F 70	Junction Connector
F 71	Junction Connector
F 72	Junction Connector
F 79	Shift Position Indicator
F 84	Double Lock Door Control Relay Assembly
F 85	Airbag Cut Off Switch Cylinder Sub-Assembly
F 86	Junction Connector
F 88	Lower No. 2 Instrument Panel Airbag Assembly
F 89	Lower No. 1 Instrument Panel Airbag Assembly
F 90	Parking Assist ECU
F 91	Parking Assist ECU
F 92	Junction Connector
F 93	Junction Connector
F 94	Junction Connector
F 97	Power Management Control ECU
F 98	Power Management Control ECU
F 99	Front Room Temperature Sensor
F 102	Junction Connector
F 103	Junction Connector
F 104	Power Point Socket Assembly (No. 2)
F 105	Headlight Leveling Switch
F 106	Pattern Select Switch Assembly
F 107	Spiral Cable Sub-Assembly
F 108	Spiral Cable Sub-Assembly
F 109	Blower with Fan Motor Sub-Assembly
F 110	Parking Assist ECU
F 111	Parking Assist ECU
F 112	Option Connector (Remote Engine Starter)
F 113	Steering Heater Switch
F 114	Parking Assist ECU
F 115	Rear Fog Light Relay
F 116	Tire Pressure Warning Reset Switch
F 117	Blower with Fan Motor Sub-Assembly
F 118	Tire Pressure Warning ECU and Receiver
F 119	Diode (Turn Signal)

Position of Parts in Instrument Panel <LHD>

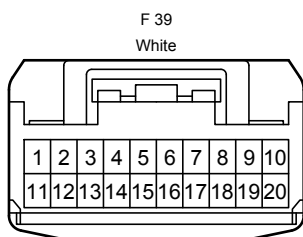


Position of Parts in Instrument Panel <LHD>


F 55
White

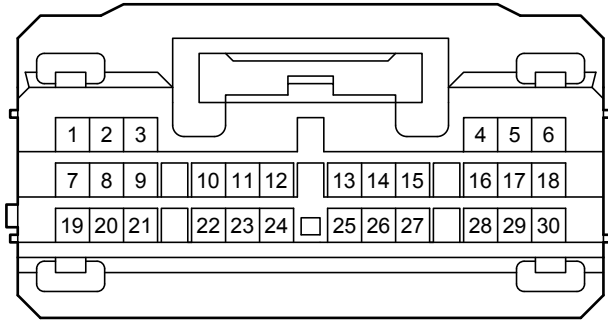


F 56
White

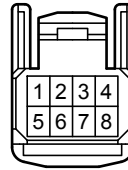


F 57
White

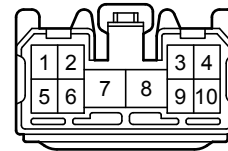


F 58
White

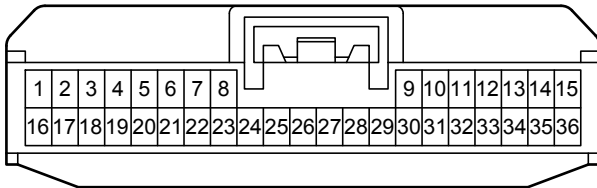


F 63
Black

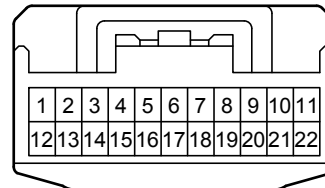


F 64
Black

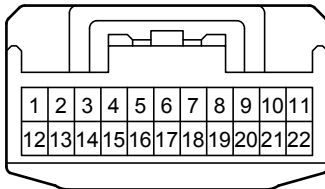


F 65
White

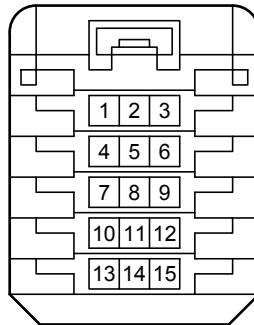


F 66
White

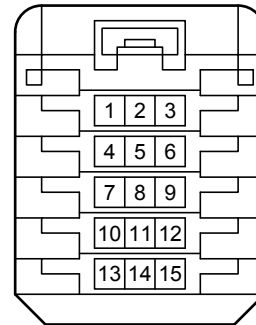


F 67
Black

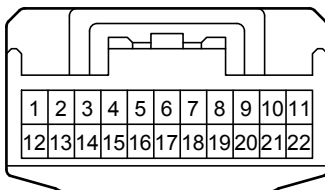


F 68
Black

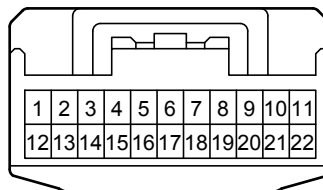


F 70
Blue

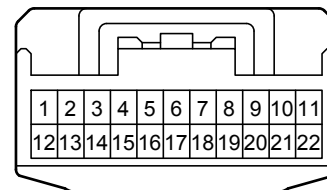

F 71
Blue

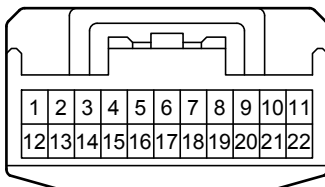


















F 72
White

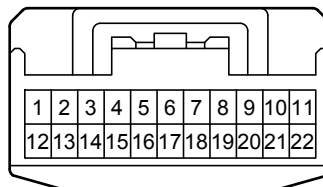

F 79
White



    
Position of Parts in Instrument Panel <LHD>

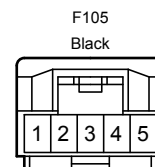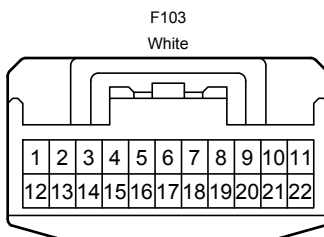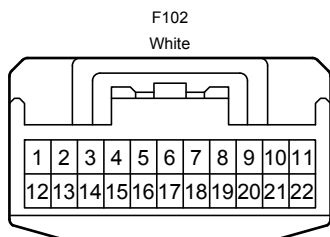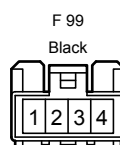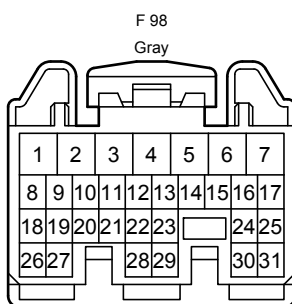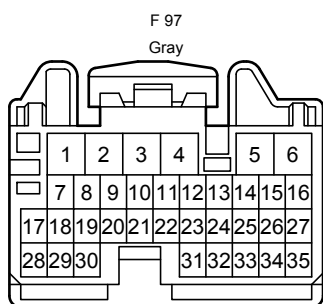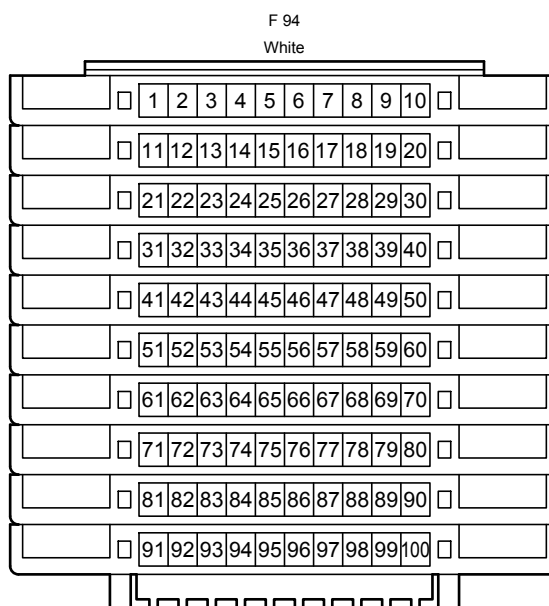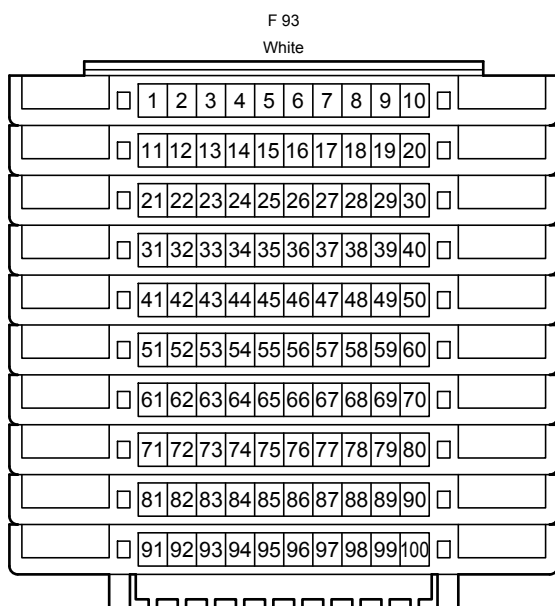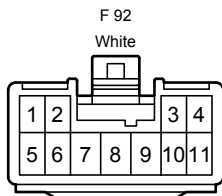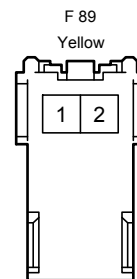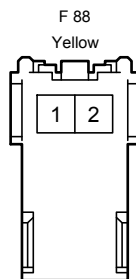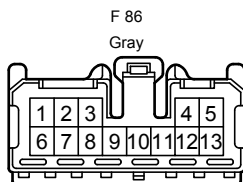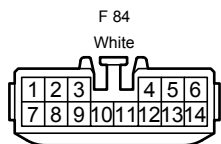

Position of Parts in Instrument Panel <LHD>


F106

Black

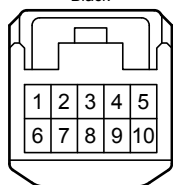


F107

 Black




F108

Black

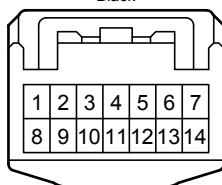


F109

White

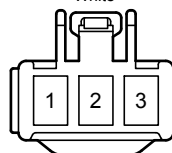


F110

White

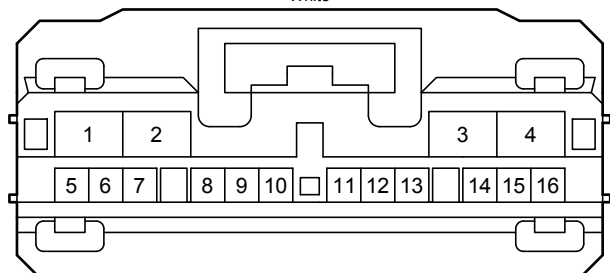


F111

Black

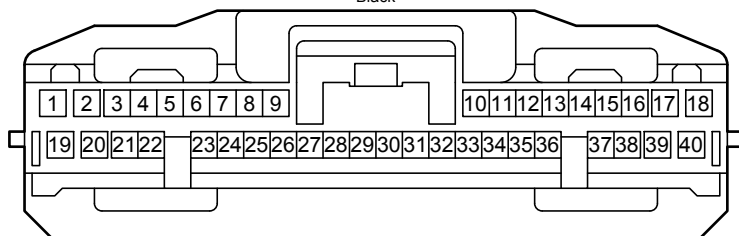


F112

White

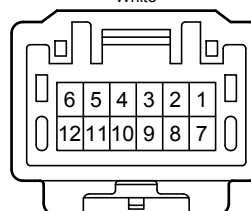


F113

Blue

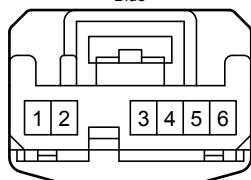


F114

 Gray




F115

White

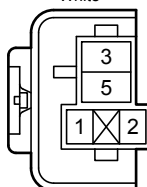


F116

 Black




F117

White

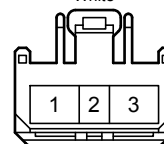

F118

 White



F119

Gray

