



















Position of Parts in Engine Compartment (LHD 2GR-FKS)

* 3: Before Aug. 2016 Production
 * 4: From Aug. 2016 Production

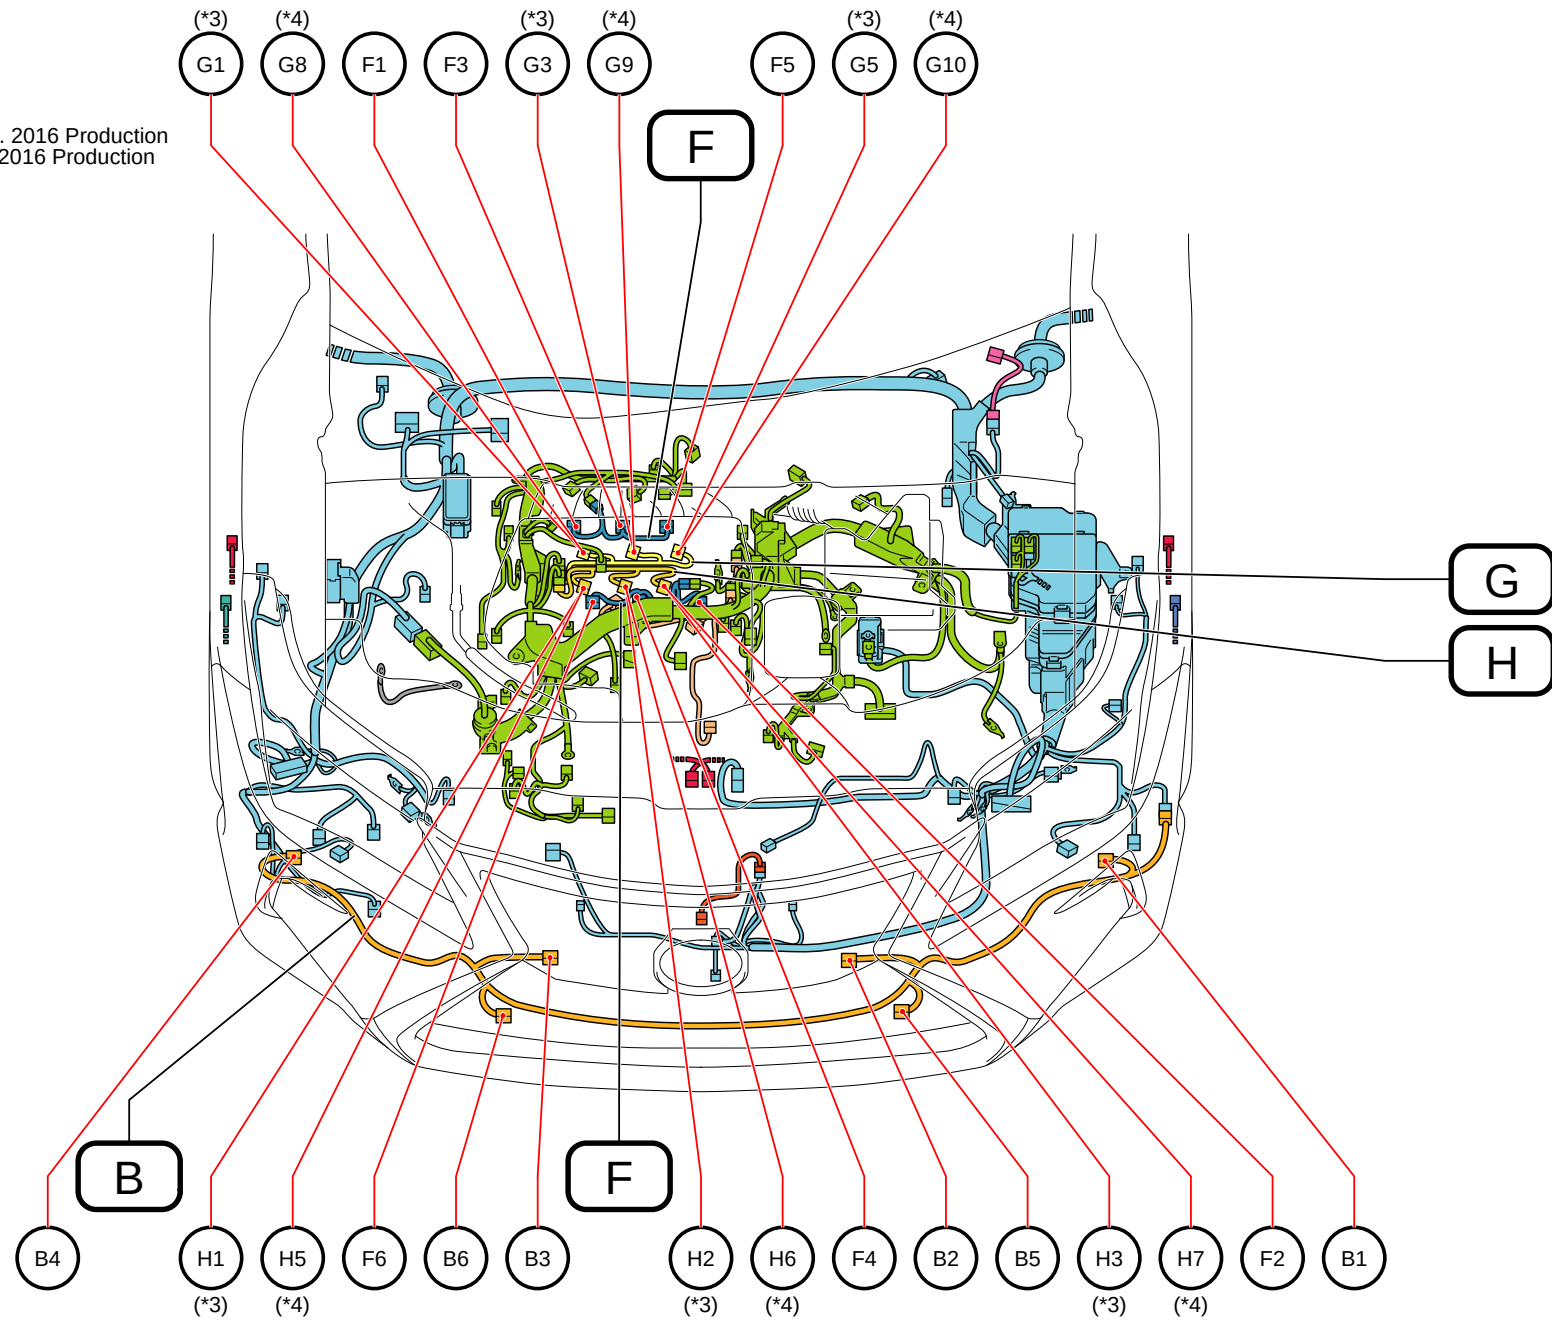


B1	Front No. 1 Ultrasonic Sensor LH
B2	Front No. 1 Ultrasonic Sensor LH Center
B3	Front No. 1 Ultrasonic Sensor RH Center
B4	Front No. 1 Ultrasonic Sensor RH
B5	Front No. 1 Ultrasonic Sensor LH Center
B6	Front No. 1 Ultrasonic Sensor RH Center
F1	Fuel Injector Assembly No. 1 (for Port Injection)
F2	Fuel Injector Assembly No. 6 (for Port Injection)
F3	Fuel Injector Assembly No. 3 (for Port Injection)
F4	Fuel Injector Assembly No. 4 (for Port Injection)
F5	Fuel Injector Assembly No. 5 (for Port Injection)
F6	Fuel Injector Assembly No. 2 (for Port Injection)
G1	Fuel Injector Assembly No. 1 (for Direct Injection)
G3	Fuel Injector Assembly No. 3 (for Direct Injection)
G5	Fuel Injector Assembly No. 5 (for Direct Injection)
G8	Fuel Injector Assembly No. 1 (for Direct Injection)
G9	Fuel Injector Assembly No. 3 (for Direct Injection)
G10	Fuel Injector Assembly No. 5 (for Direct Injection)
H1	Fuel Injector Assembly No. 2 (for Direct Injection)
H2	Fuel Injector Assembly No. 4 (for Direct Injection)
H3	Fuel Injector Assembly No. 6 (for Direct Injection)
H5	Fuel Injector Assembly No. 2 (for Direct Injection)
H6	Fuel Injector Assembly No. 4 (for Direct Injection)
H7	Fuel Injector Assembly No. 6 (for Direct Injection)

Position of Parts in Engine Compartment (LHD 2GR-FKS)

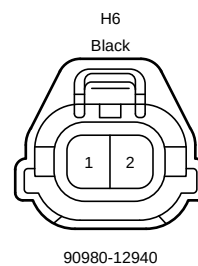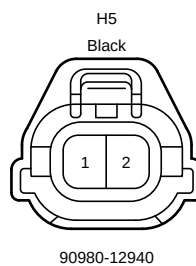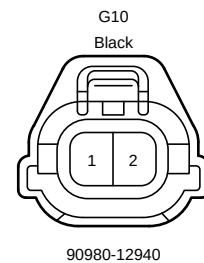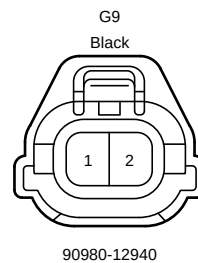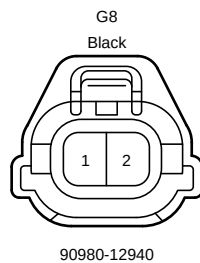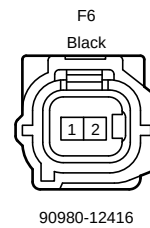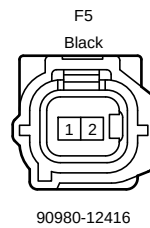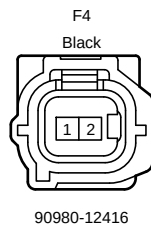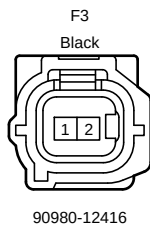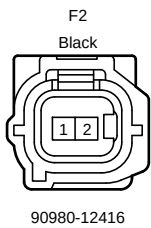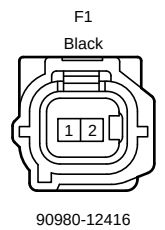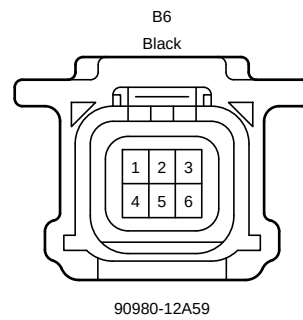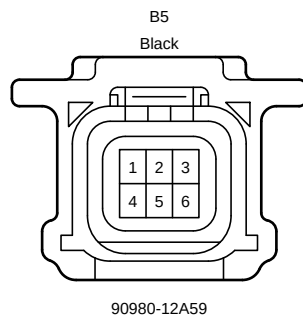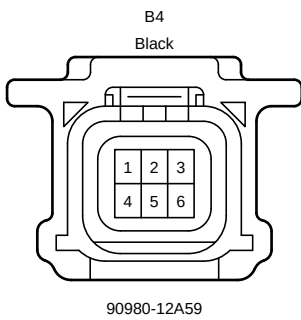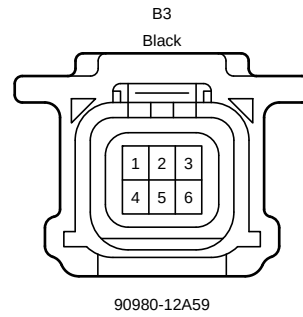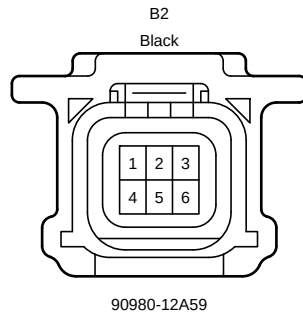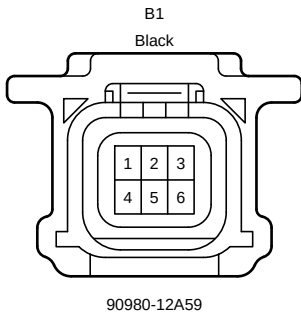

H7

Black

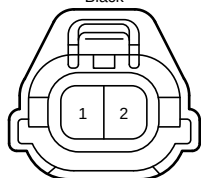

90980-12940