



# Position of Parts in Engine Compartment (RHD 2GR-FKS)

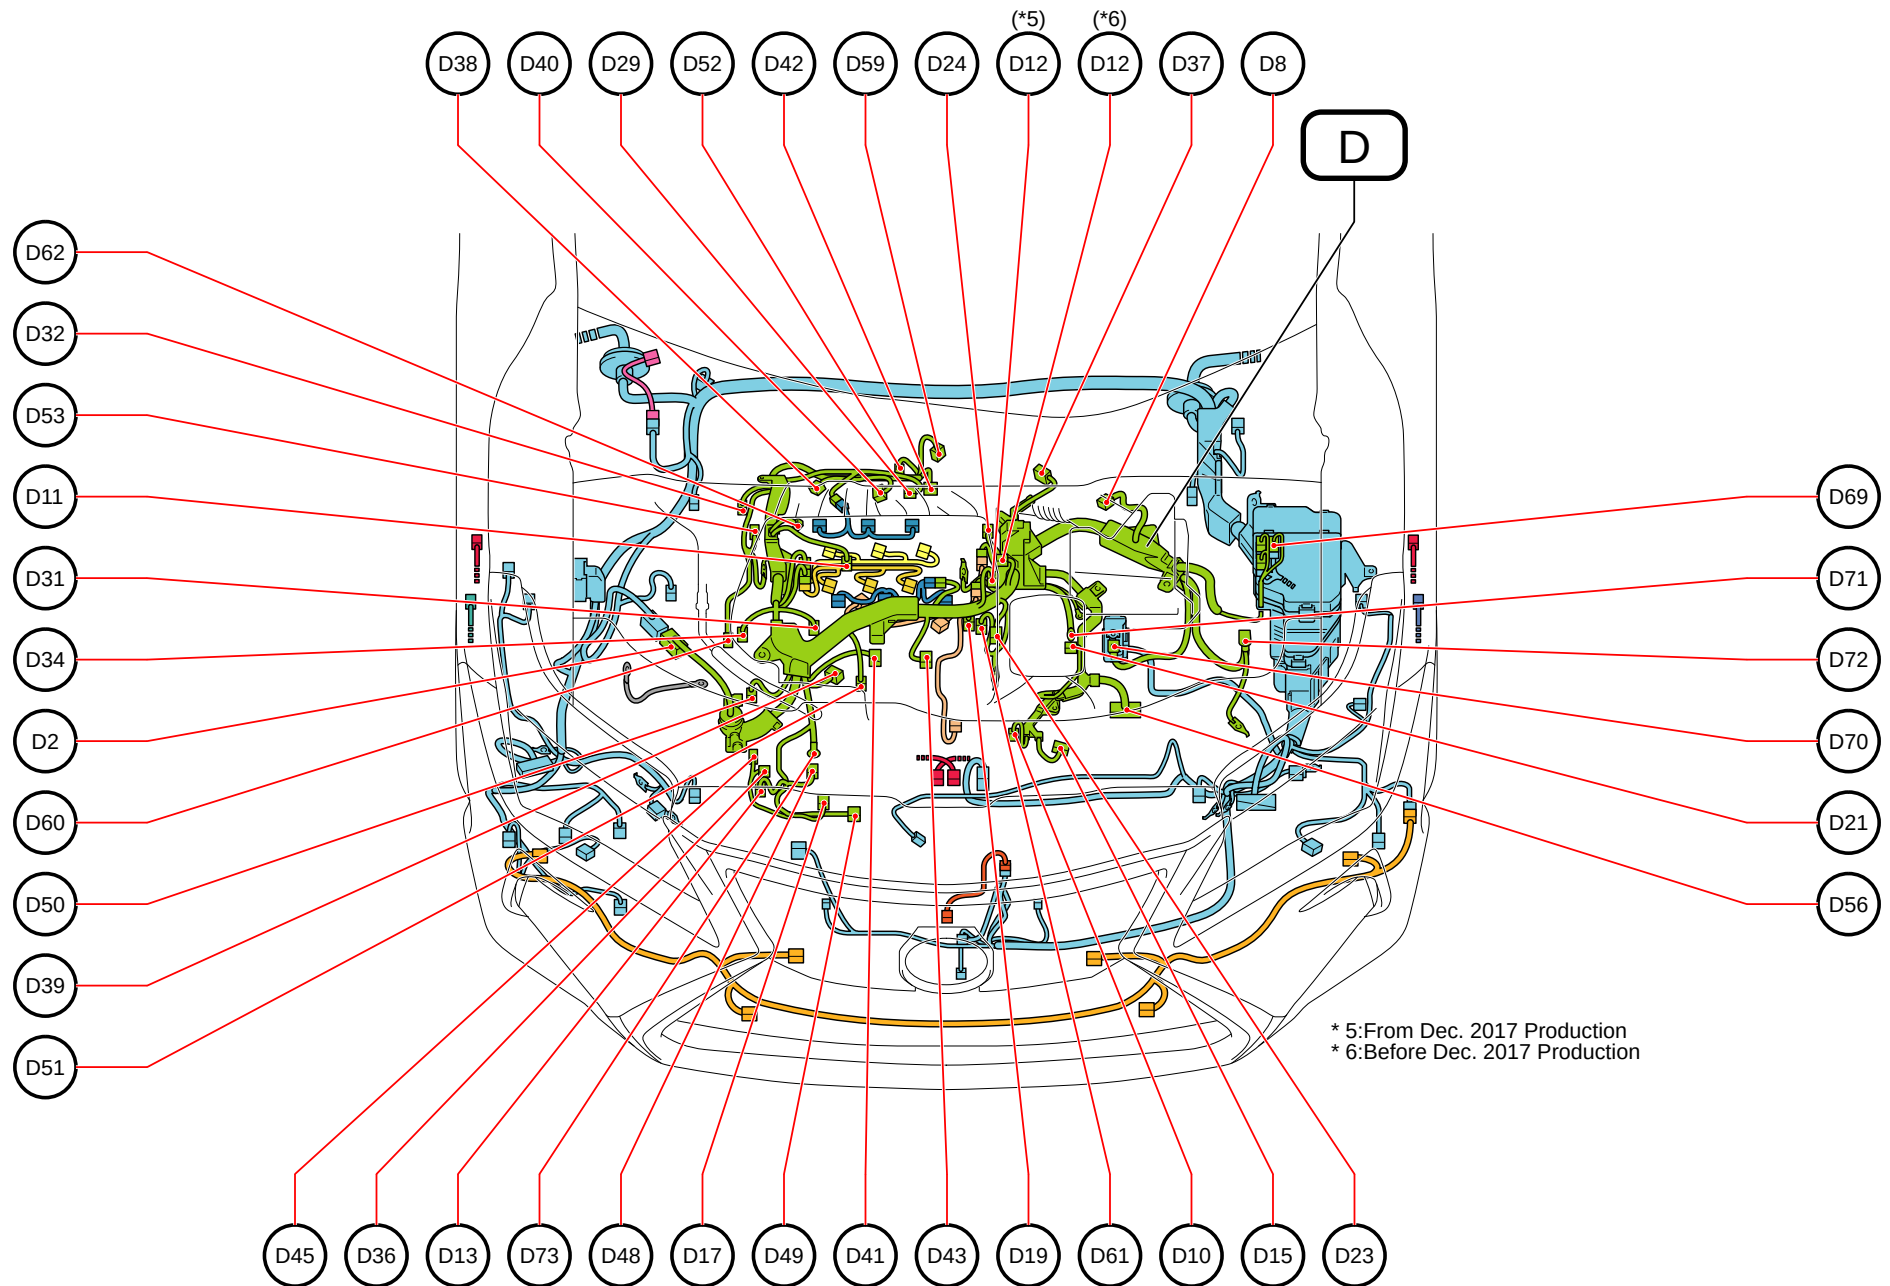

|     |                                                                  |
|-----|------------------------------------------------------------------|
| D2  | ECM                                                              |
| D8  | Intake Mass Air Flow Meter Sub-Assembly                          |
| D10 | No. 1 Vacuum Switching Valve Assembly                            |
| D11 | No. 2 Vacuum Switching Valve Assembly                            |
| D12 | Purge VSV                                                        |
| D13 | Compressor with Pulley Assembly                                  |
| D15 | Park/Neutral Position Switch Assembly                            |
| D17 | Compressor with Pulley Assembly                                  |
| D19 | E.F.I. Engine Coolant Temperature Sensor                         |
| D21 | Starter Assembly                                                 |
| D23 | No. 2 Air Fuel Ratio Sensor (Bank 2 Sensor 1)                    |
| D24 | Air Fuel Ratio Sensor (Bank 1 Sensor 1)                          |
| D29 | VVT Sensor (Bank 1 Intake Side)                                  |
| D31 | VVT Sensor (Bank 2 Intake Side)                                  |
| D32 | Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)  |
| D34 | Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)  |
| D36 | Engine Oil Pressure Switch Assembly                              |
| D37 | Throttle Body with Motor Assembly                                |
| D38 | Ignition Coil Assembly No. 1                                     |
| D39 | Ignition Coil Assembly No. 2                                     |
| D40 | Ignition Coil Assembly No. 3                                     |
| D41 | Ignition Coil Assembly No. 4                                     |
| D42 | Ignition Coil Assembly No. 5                                     |
| D43 | Ignition Coil Assembly No. 6                                     |
| D45 | Engine Oil Level Sensor                                          |
| D48 | Generator Assembly                                               |
| D49 | No. 2 Oxygen Sensor (Bank 2 Sensor 2)                            |
| D50 | Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side) |
| D51 | VVT Sensor (Bank 2 Exhaust Side)                                 |
| D52 | VVT Sensor (Bank 1 Exhaust Side)                                 |
| D53 | Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side) |
| D56 | ECT Solenoid (Transmission Wire)                                 |
| D59 | Fuel Pump Assembly                                               |
| D60 | Water Inlet with Thermostat Sub-Assembly                         |
| D61 | Fuel Pressure Sensor (High Pressure Side)                        |
| D62 | Fuel Pressure Sensor (Low Pressure Side)                         |
| D69 | No. 1 Junction Connector                                         |
| D70 | Battery                                                          |
| D71 | Starter Assembly                                                 |
| D72 | Battery                                                          |
| D73 | Generator Assembly                                               |


## Position of Parts in Engine Compartment (RHD 2GR-FKS)

D2  
Black

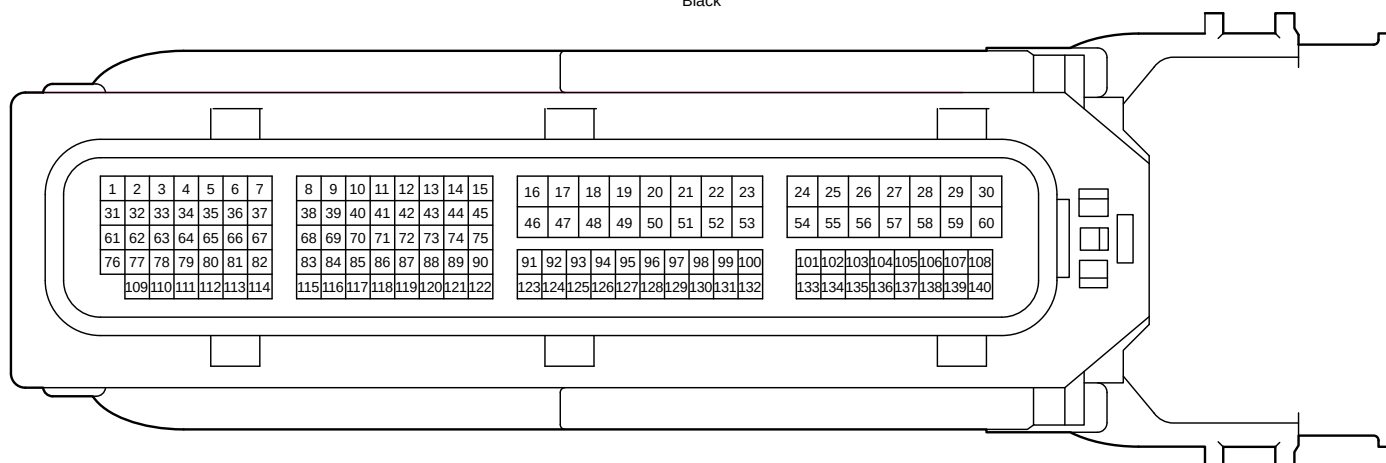


82824-48470

D8  
Black

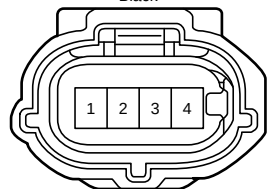


90980-12A85

D10  
Black

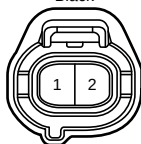


90980-12B06

D11  
Brown

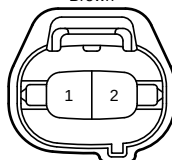


90980-11149

D12  
Black

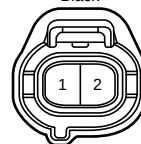


90980-12B06

D13  
Gray

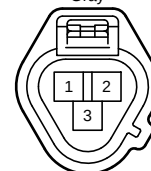


90980-11016

D15  
Black

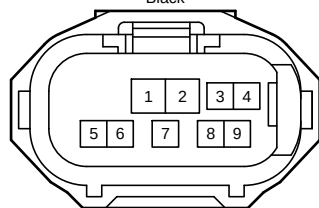


90980-12A23

D17  
Black

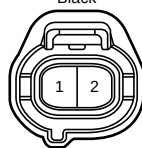


90980-12B06

D19  
Black

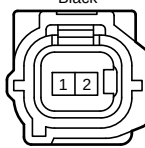

90980-12416

D21  
Black

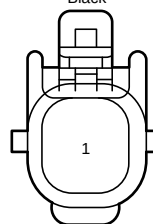

90980-12941

D23  
Gray




90980-11178

D24  
Gray




90980-11178

D29  
Black

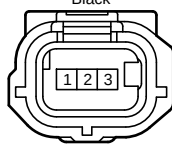


90980-12353

D31  
Black

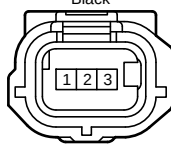


90980-12353

 D32  
Black



90980-11875

 D34  
Black




90980-11875

D36  
Gray




90980-11363

D37  
Black

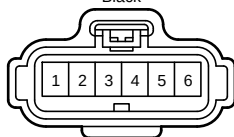


90980-11858

 D38  
Black




90980-12A29

 D39  
Black



90980-12A29

 D40  
Black



90980-12A29

## Position of Parts in Engine Compartment (RHD 2GR-FKS)

