



Position of Parts in Engine Compartment (LHD 8AR-FTS)

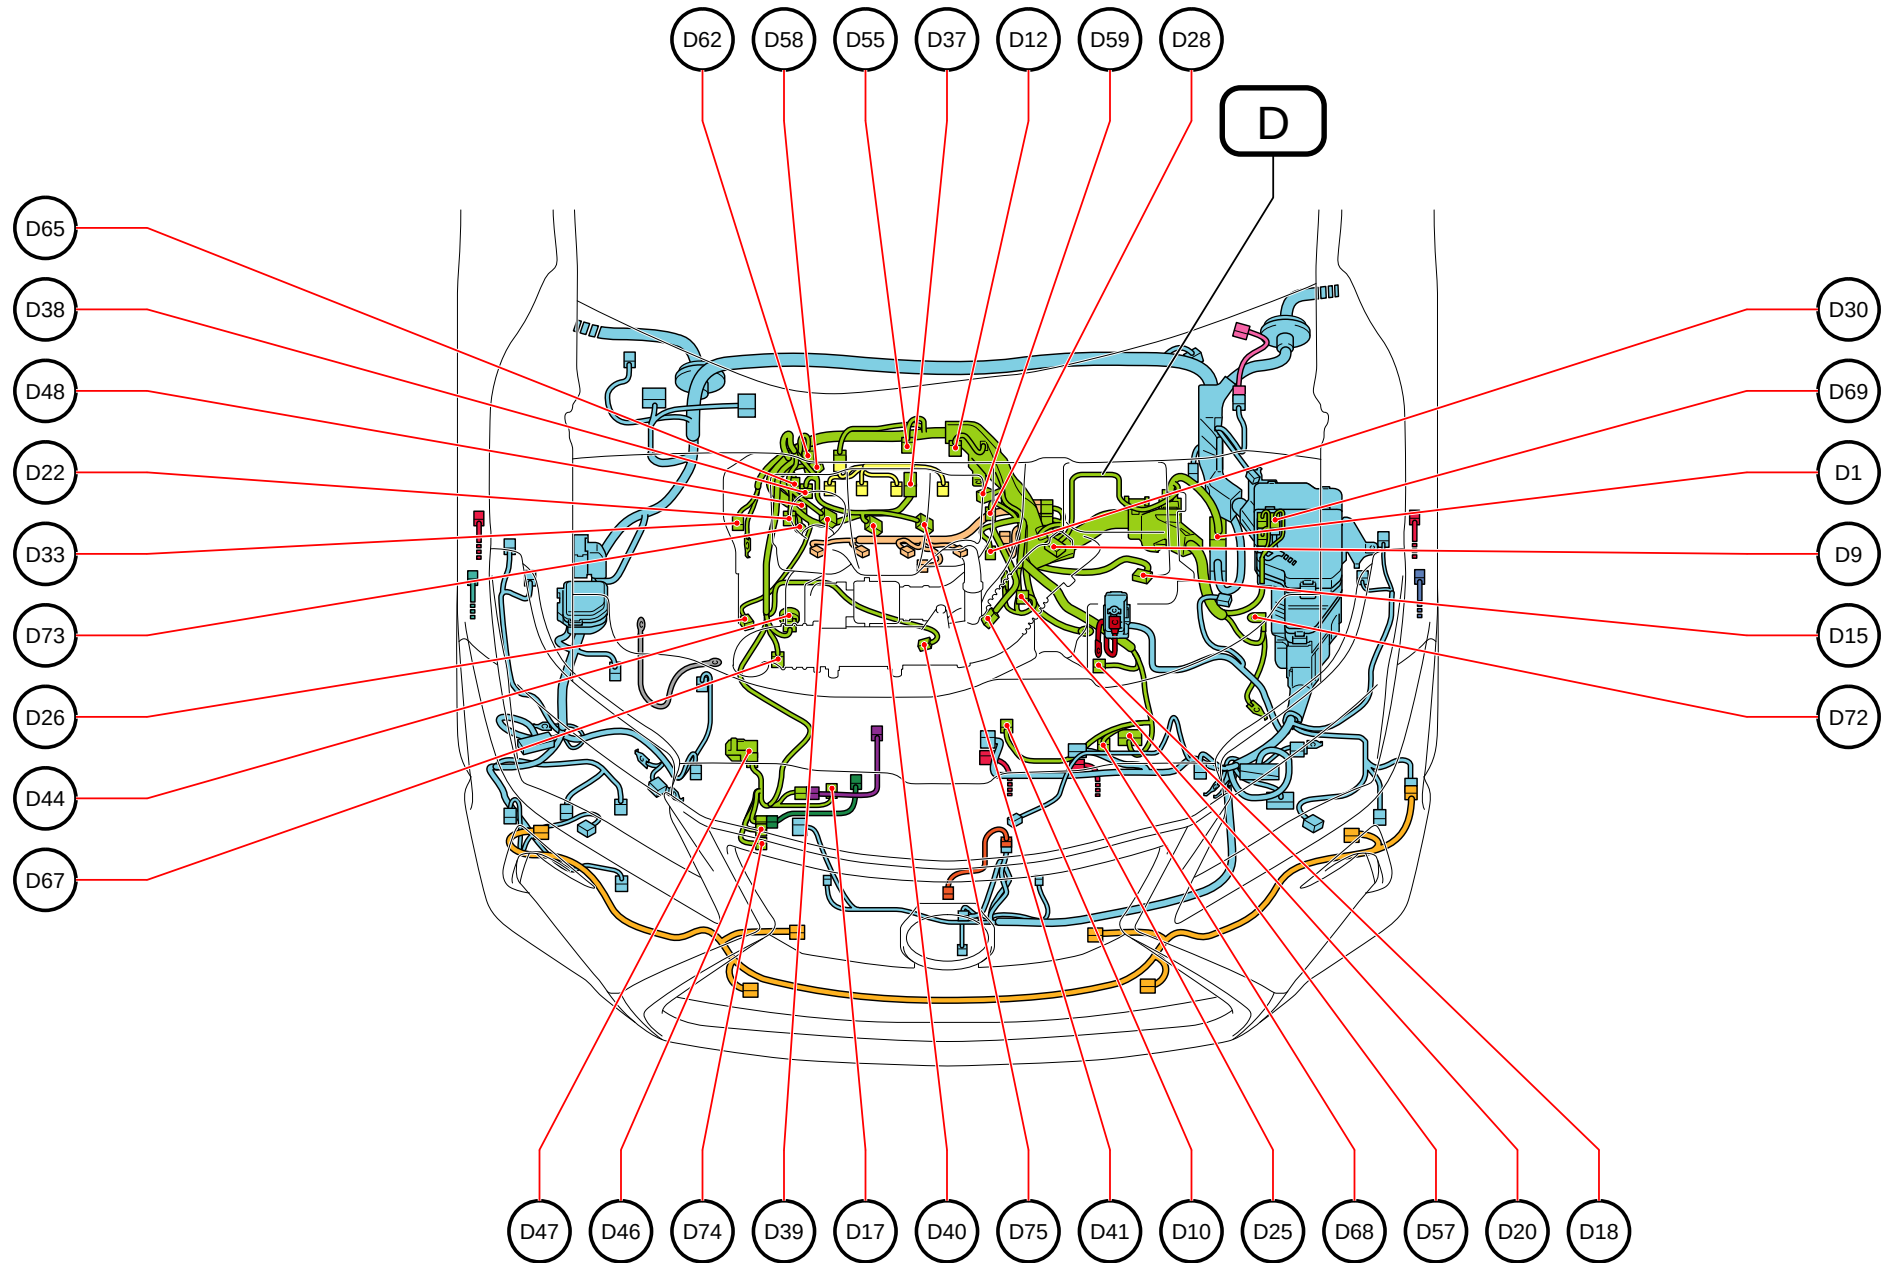


D1	ECM
D9	Intake Mass Air Flow Meter Sub-Assembly
D10	No. 1 Vacuum Switching Valve Assembly
D12	Purge VSV
D15	Park/Neutral Position Switch Assembly
D17	Compressor with Pulley Assembly
D18	Starter Assembly
D20	E.F.I. Engine Coolant Temperature Sensor
D22	Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
D25	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D26	Crank Position Sensor
D28	Camshaft Position Sensor (Intake Side)
D30	Camshaft Position Sensor (Exhaust Side)
D33	Camshaft Timing Oil Control Valve Assembly (Intake Side)
D37	Throttle Body with Motor Assembly
D38	Ignition Coil Assembly No. 1
D39	Ignition Coil Assembly No. 2
D40	Ignition Coil Assembly No. 3
D41	Ignition Coil Assembly No. 4
D44	Oil Pressure Sender Gage Assembly
D46	Engine Oil Level Sensor
D47	Engine Oil Temperature Sensor (Temperature Sensor)
D48	Generator Assembly
D55	No. 2 Turbo Pressure Sensor
D57	ECT Solenoid (Transmission Wire)
D58	No. 1 Turbo Pressure Sensor
D59	Fuel Pump Assembly
D62	Fuel Pressure Sensor (Low Pressure Side)
D65	Vacuum Regulating Valve Assembly
D67	No. 2 Vacuum Switching Valve Assembly
D68	Oil Pump with Motor Assembly
D69	No. 1 Junction Connector
D72	Battery
D73	Generator Assembly
D74	No. 2 Air Fuel Ratio Sensor (Bank 1 Sensor 2)
D75	Differential Pressure Sensor


Position of Parts in Engine Compartment (LHD 8AR-FTS)

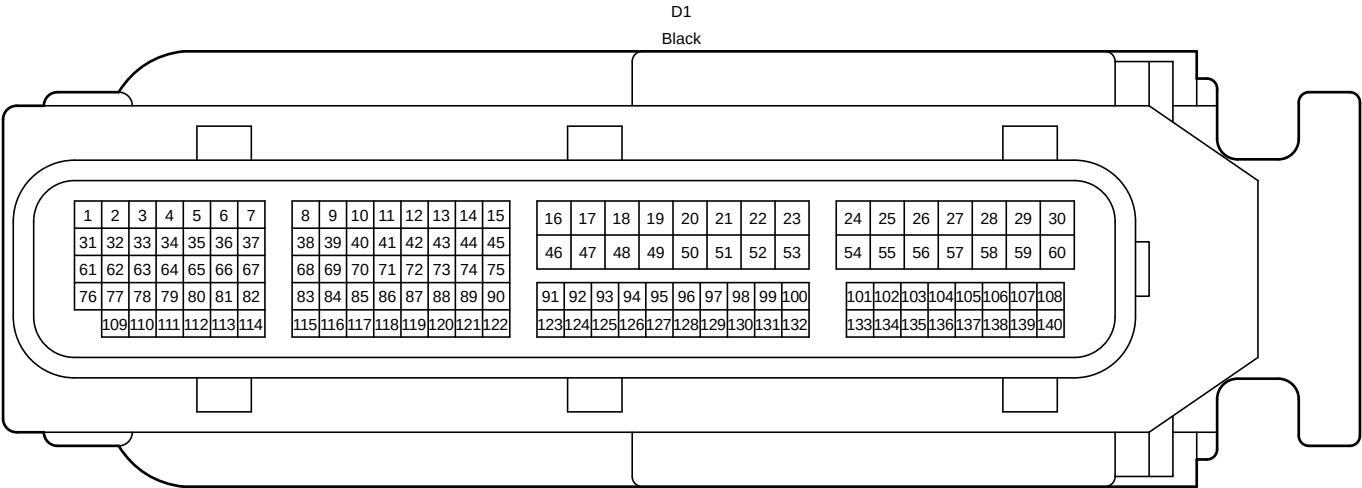


90980-12836

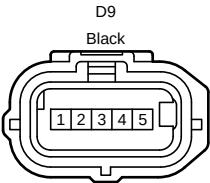


90980-12292

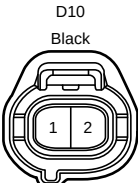


90980-12B06

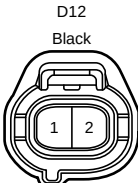

90980-12B06

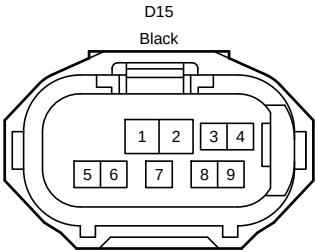

90980-12A23

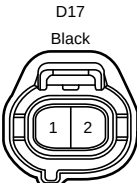


90980-12B06



90980-11410




90980-10735

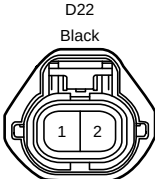


90980-12B90




90980-10869

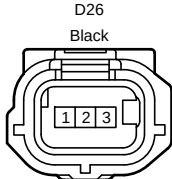


90980-12353

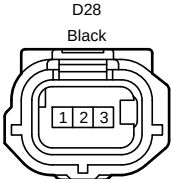


90980-12353

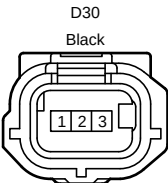


90980-12353

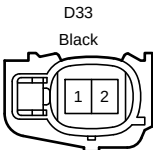


90980-11875

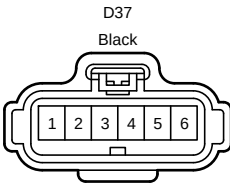


90980-11858

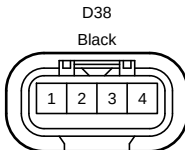


90980-12A29

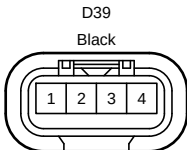


90980-12A29

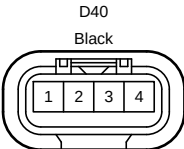


90980-12A29

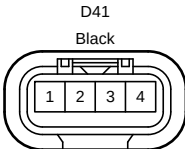


90980-12A29

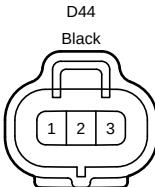

90980-10845

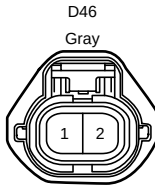

90980-12B90
(w/o Canister Pump Module)

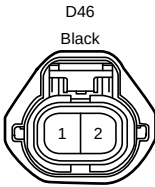

90980-12B90
(w/ Canister Pump Module)

Position of Parts in Engine Compartment (LHD 8AR-FTS)

