



Position of Parts in Engine Compartment (LHD 8AR-FTS)

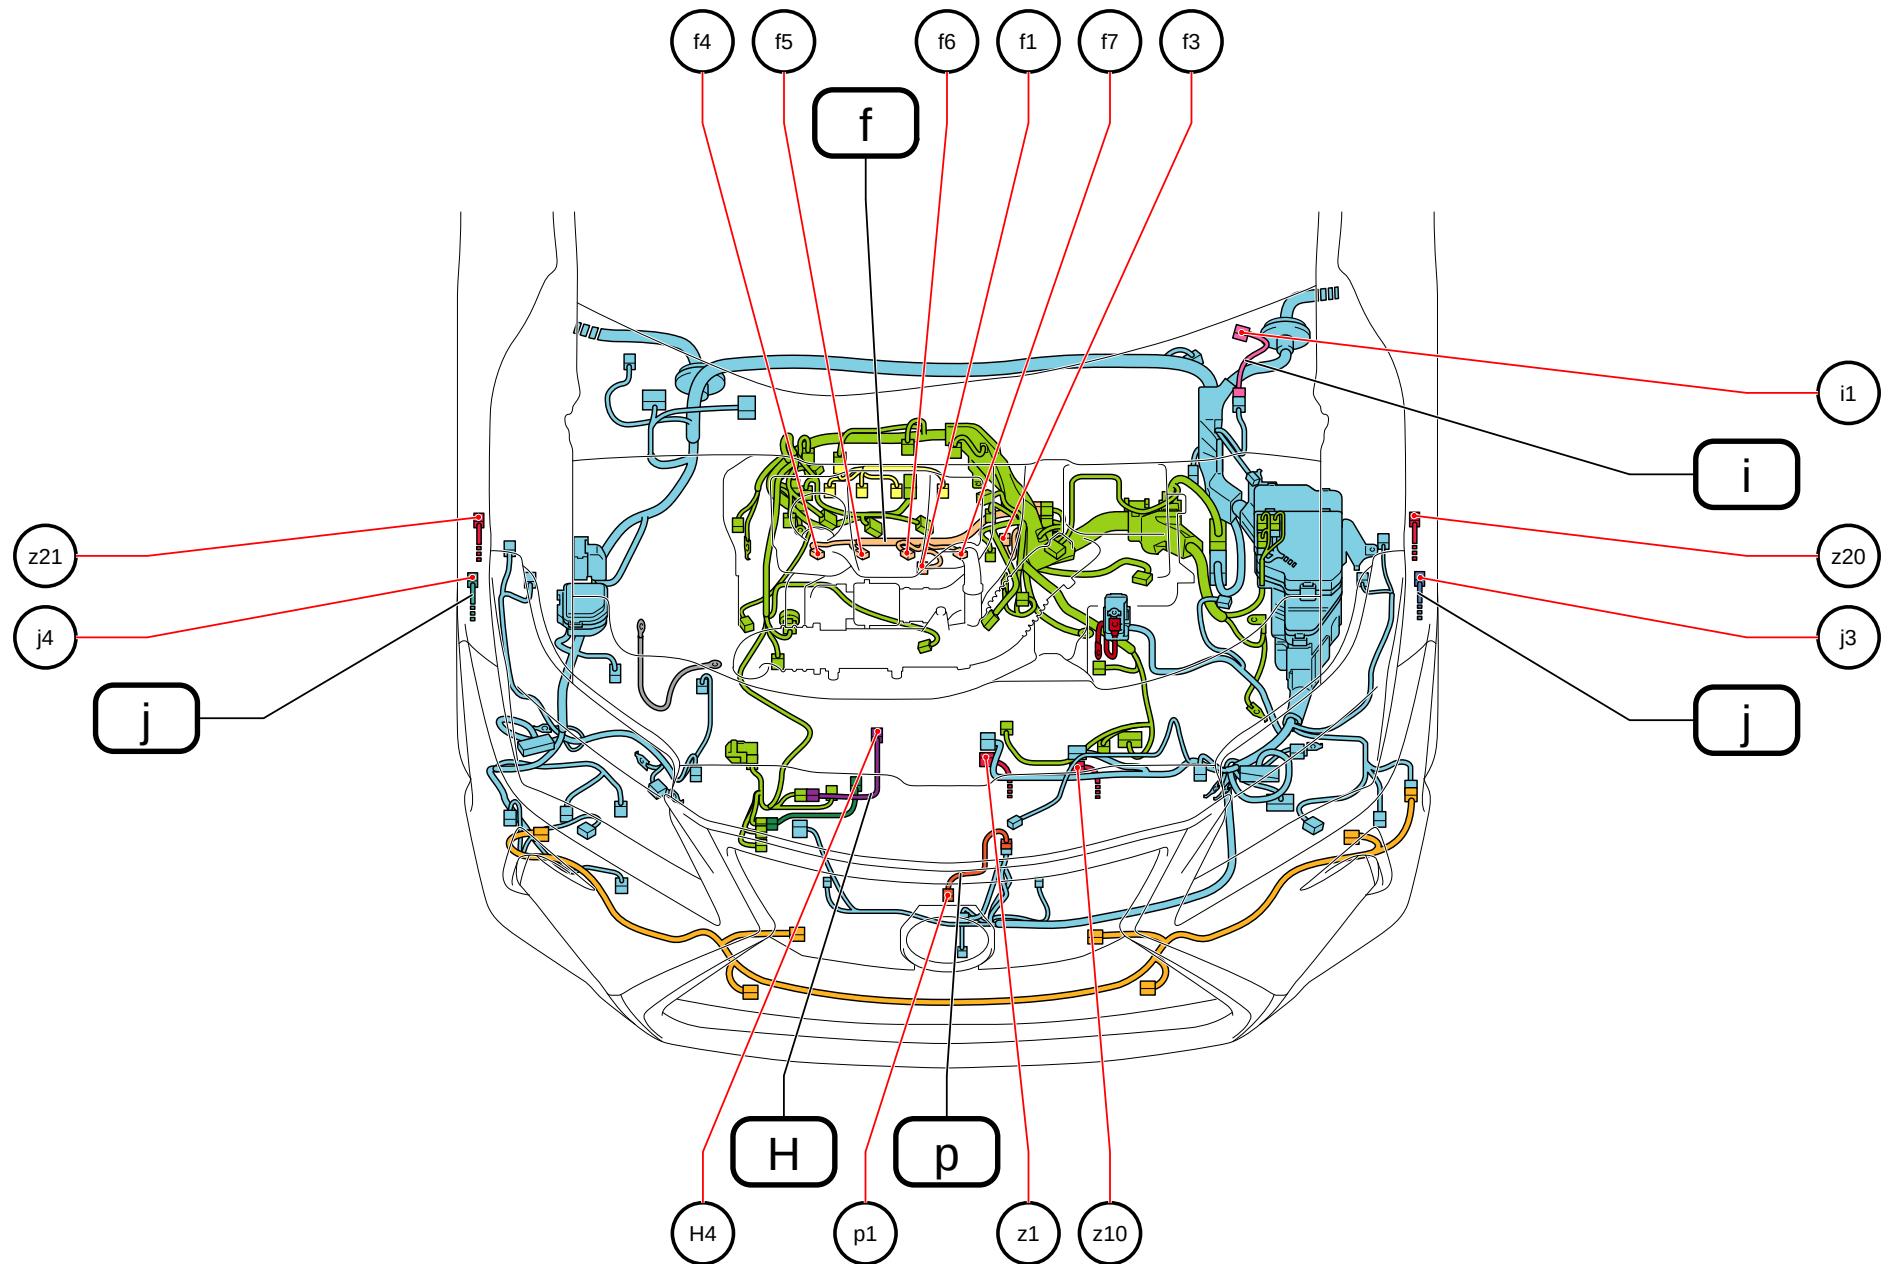


H4	Oil Pressure Switching Valve Assembly
f1	Knock Control Sensor (Bank 1)
f3	Fuel Pressure Sensor (High Pressure Side)
f4	Fuel Injector Assembly No. 1 (for Direct Injection)
f5	Fuel Injector Assembly No. 2 (for Direct Injection)
f6	Fuel Injector Assembly No. 3 (for Direct Injection)
f7	Fuel Injector Assembly No. 4 (for Direct Injection)
i1	Front Wiper Motor & Link Assembly
j3	Front Skid Control Sensor Wire LH , Front Shock Absorber Assembly LH
j4	Front Skid Control Sensor Wire RH , Front Shock Absorber Assembly RH
p1	Front Television Camera Assembly
z1	Cooling Fan Motor , Cooling Fan ECU
z10	No. 2 Cooling Fan ECU , No. 2 Cooling Fan Motor
z20	Front Speed Sensor LH , Front Skid Control Sensor Wire LH
z21	Front Speed Sensor RH , Front Skid Control Sensor Wire RH


Position of Parts in Engine Compartment (LHD 8AR-FTS)

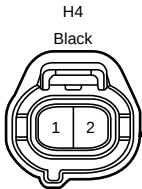


90980-12B06

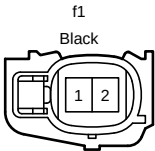


90980-11875

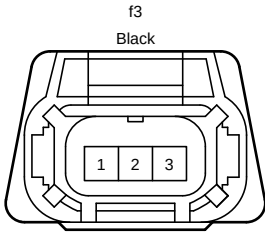


90980-12A19

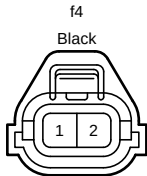


90980-12117

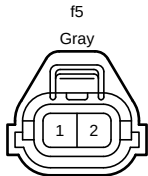


90980-12117

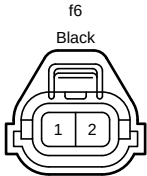


90980-12117

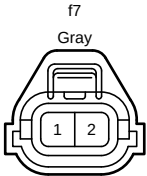


90980-12117

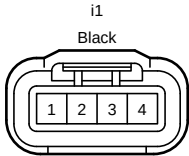


90980-11885

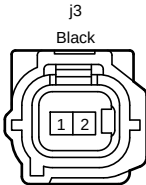


90980-12416

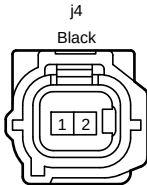


90980-12416

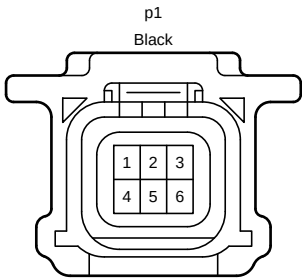


90980-12A59

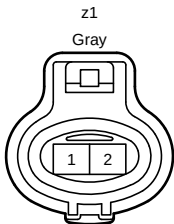


90980-10928

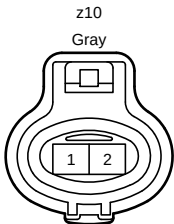

90980-10928

 

90980-11448

 

90980-11448