



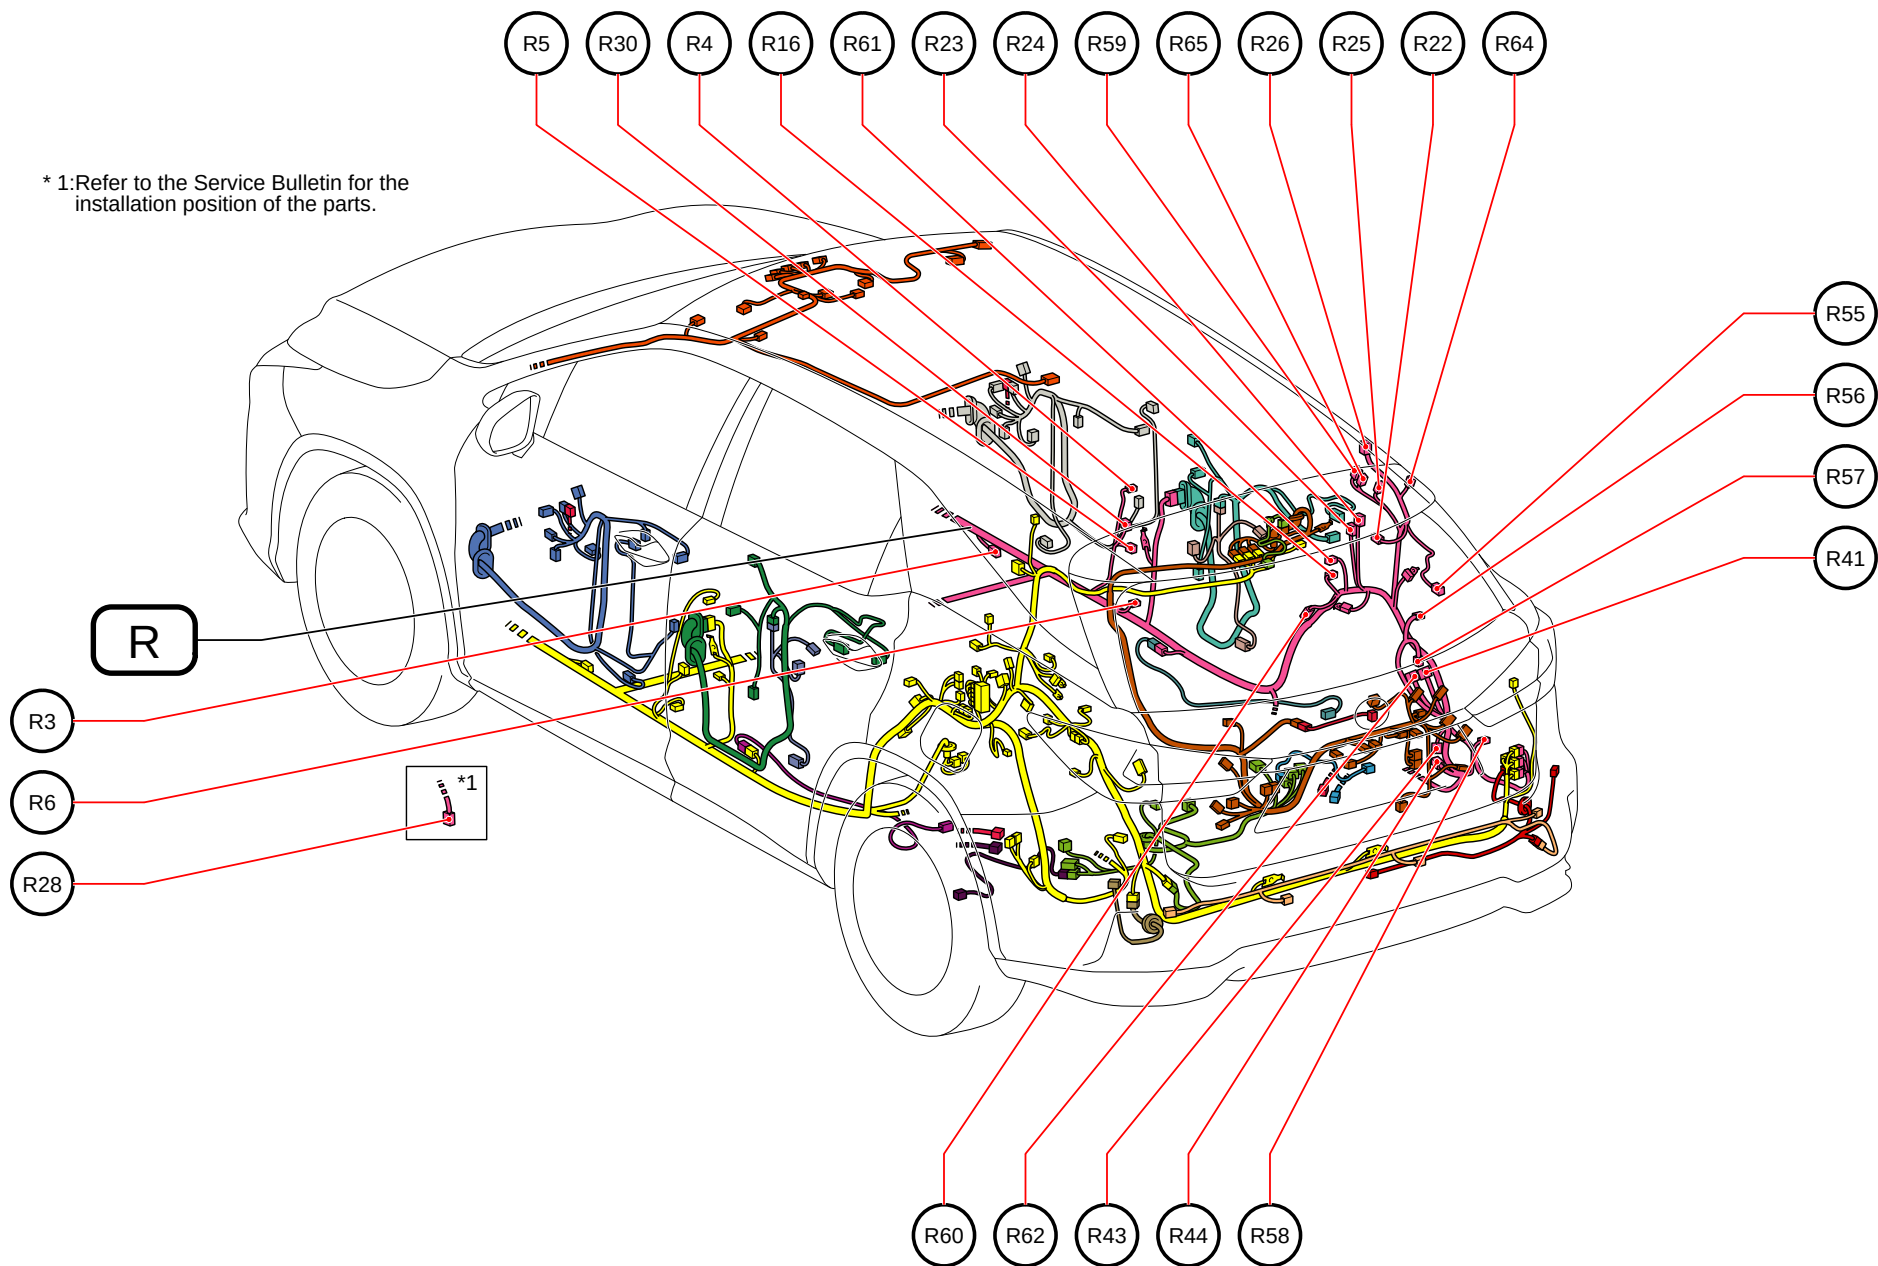

R3	Front Scuff Plate Light RH (Front Door Scuff Plate RH)
R4	Front Door Courtesy Light Switch Assembly RH
R5	Front Seat Outer Belt Assembly RH
R6	Front Seat Outer Belt Assembly RH
R16	Rear Door Courtesy Light Switch Assembly RH
R22	Rear No. 1 Seat Outer Belt Assembly RH
R23	Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly)
R24	Door Control Receiver Assembly
R25	Quarter Side Speaker Assembly RH
R26	Curtain Shield Airbag Assembly RH
R28	Theft Warning Siren Assembly
R30	Side Airbag Sensor Assembly RH
R41	No. 9 CAN Junction Connector
R43	No. 22 Junction Connector
R44	No. 23 Junction Connector
R55	No. 1 Luggage Compartment Light Assembly RH
R56	Rear Blower Motor with Fan Sub-Assembly
R57	Blower Motor Control
R58	No. 2 Air Conditioning Harness Assembly
R59	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
R60	Rear Airbag Sensor RH
R61	Fold Seat Switch Assembly (Rear No. 2 Seat)
R62	USB Relay
R64	No. 6 Antenna Cord Sub-Assembly
R65	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)

 
Position of Parts in Body (LHD w/ Rear No. 2 Seat)

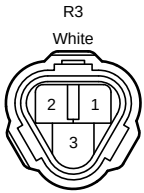

90980-11407



90980-10871




90980-12452




90980-12063



 
90980-10871




90980-12452

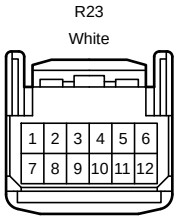


90980-12552

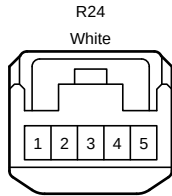


90980-12366

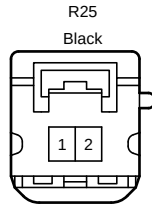


90980-12808

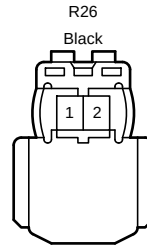


90980-12575

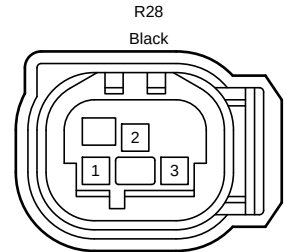


90080-98237

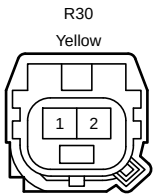


90980-12490

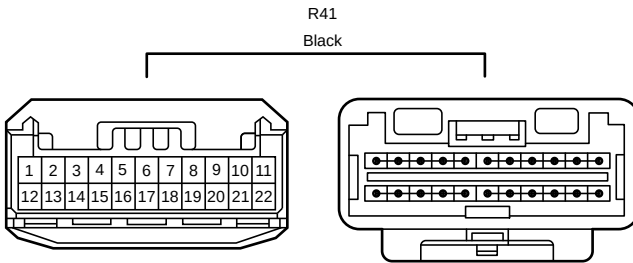


90980-12B54

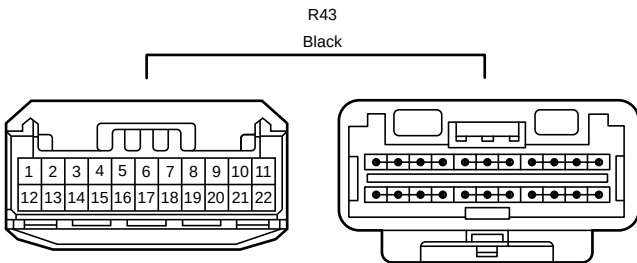


90980-12B54

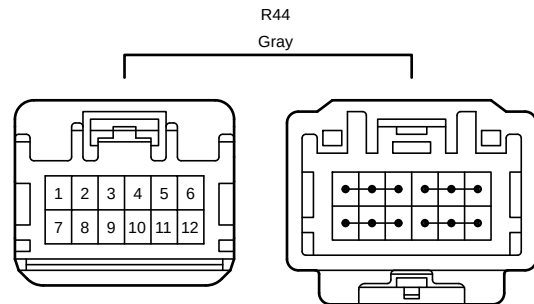


90980-12737

 


90980-11918

 


90980-10916

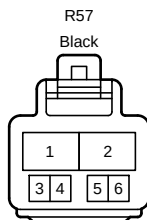

90980-10910

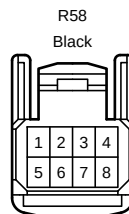

90980-12551

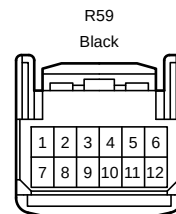

90980-12552

