






















Position of Parts in Body (LHD w/o Rear No. 2 Seat)

* 1: Refer to the Service Bulletin for the installation position of the parts.

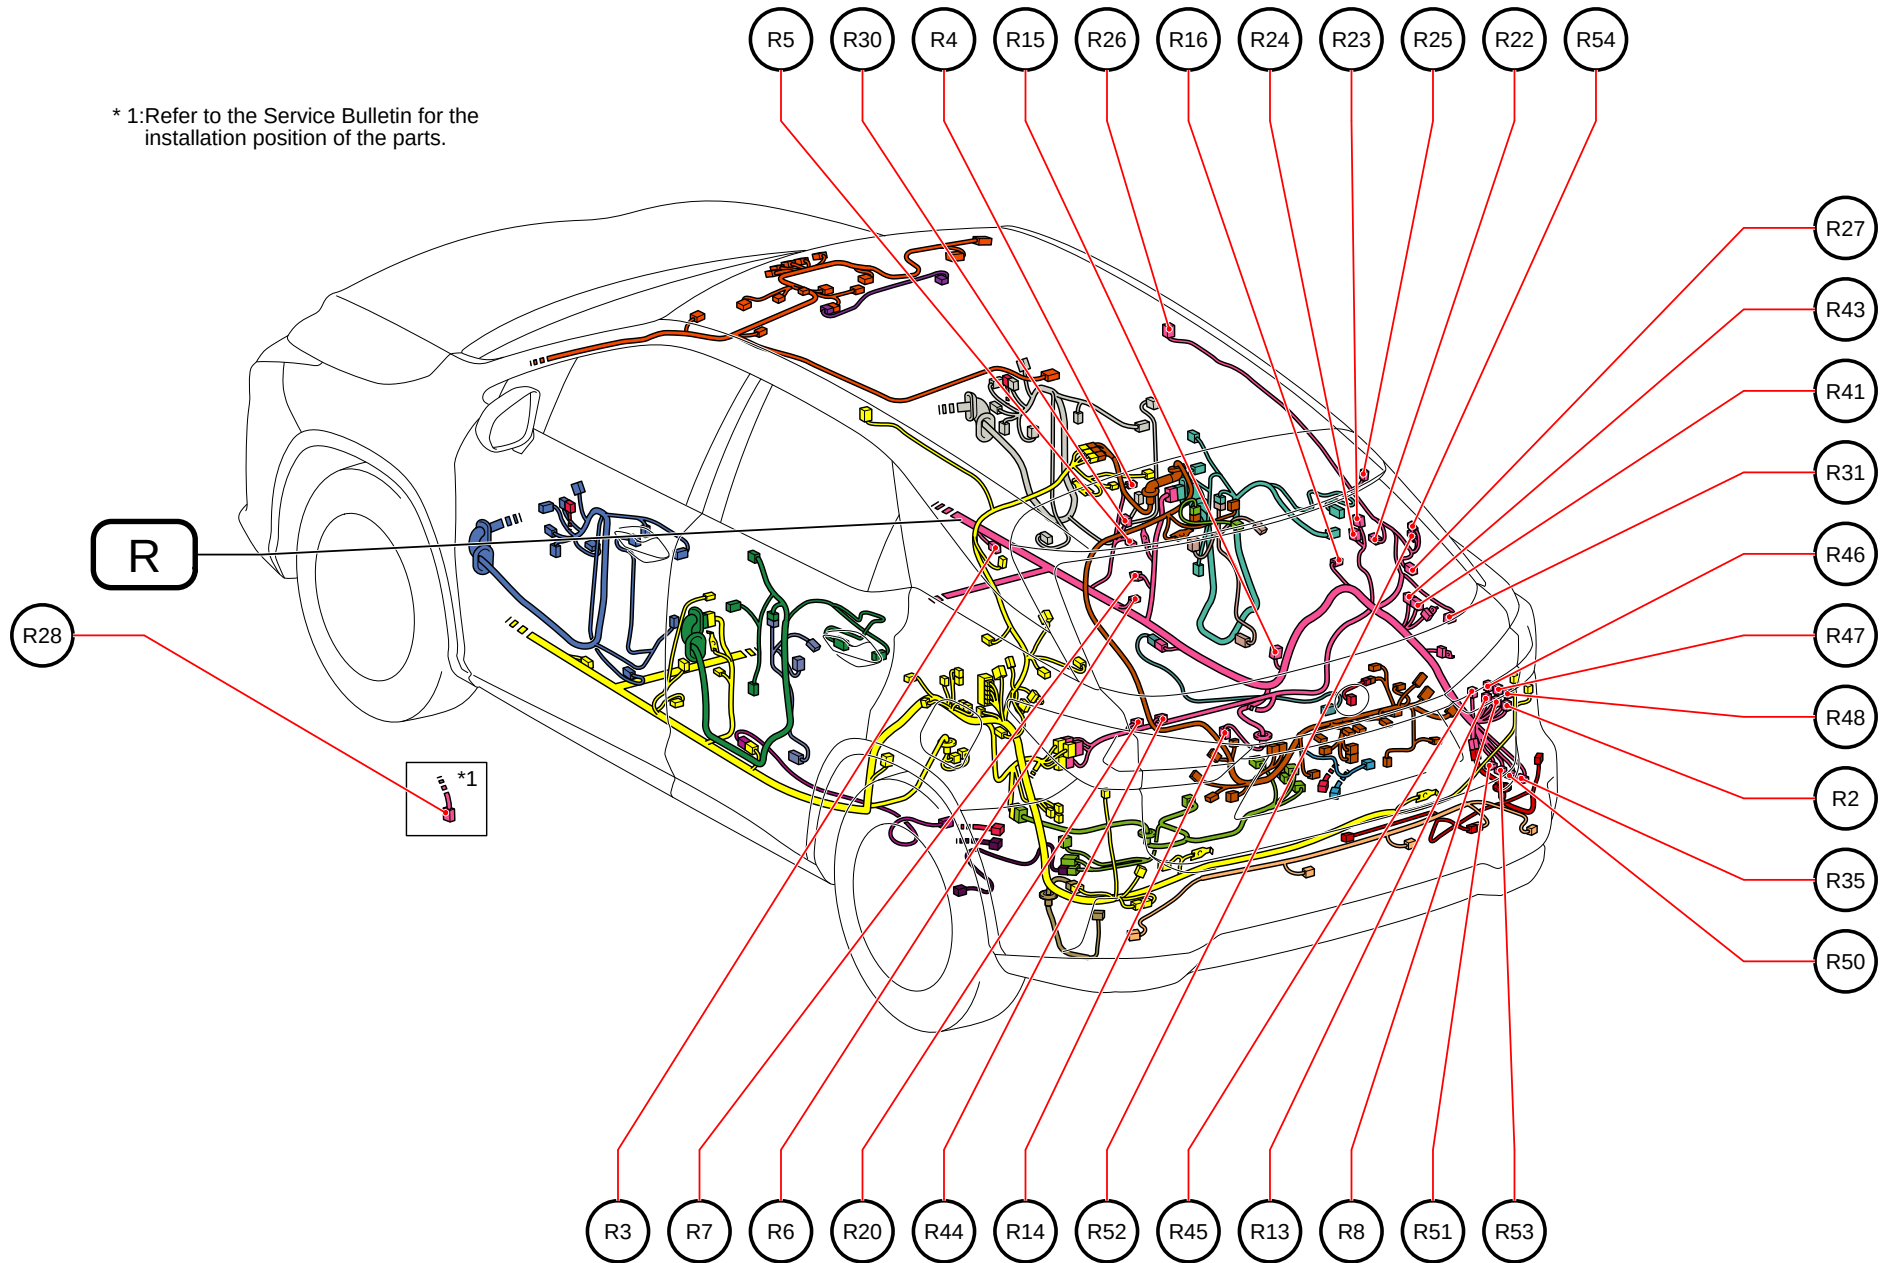

R2	Multi-Display Controller Sub-Assembly
R3	Front Scuff Plate Light RH (Front Door Scuff Plate RH)
R4	Front Door Courtesy Light Switch Assembly RH
R5	Front Seat Outer Belt Assembly RH
R6	Front Seat Outer Belt Assembly RH
R7	Front Seat Outer Belt Assembly RH
R8	Multi-Display Controller Sub-Assembly
R13	Multi-Display Controller Sub-Assembly
R14	Canister Pump Module
R15	Rear Airbag Sensor RH
R16	Rear Door Courtesy Light Switch Assembly RH
R20	No. 3 Indoor Electrical Key Antenna Assembly
R22	Rear No. 1 Seat Outer Belt Assembly RH
R23	Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly)
R24	Door Control Receiver Assembly
R25	Quarter Side Speaker Assembly RH
R26	Curtain Shield Airbag Assembly RH
R27	No. 1 Luggage Compartment Light Assembly RH
R28	Theft Warning Siren Assembly
R30	Side Airbag Sensor Assembly RH
R31	No. 2 Fold Seat Switch Assembly
R35	Option Connector (Extension Module)
R41	No. 9 CAN Junction Connector
R43	No. 22 Junction Connector
R44	No. 23 Junction Connector
R45	Multi-Display Controller Sub-Assembly
R46	Multi-Display Controller Sub-Assembly
R47	Multi-Display Controller Sub-Assembly
R48	Multi-Display Controller Sub-Assembly
R50	Navigation Computer
R51	Navigation Computer
R52	No. 6 Antenna Cord Sub-Assembly
R53	Navigation Computer
R54	No. 4 Antenna Cord Sub-Assembly

     Position of Parts in Body (LHD w/o Rear No. 2 Seat)

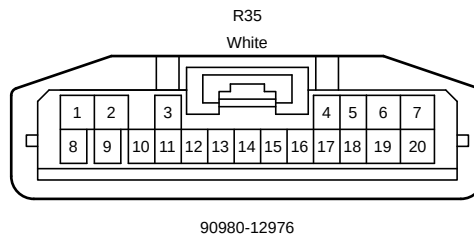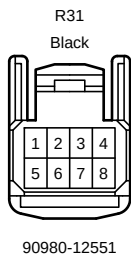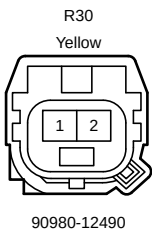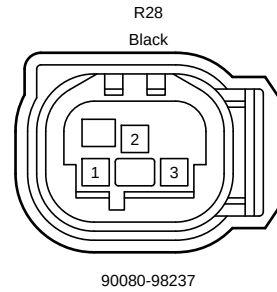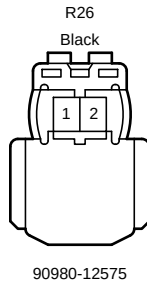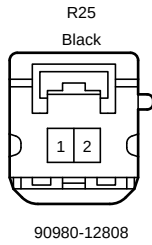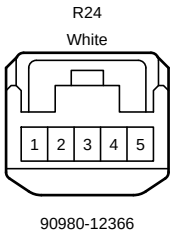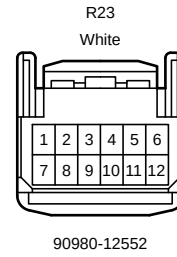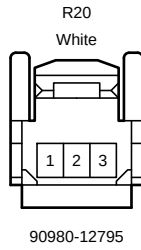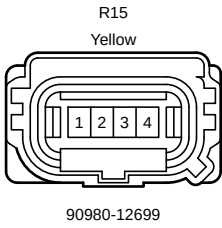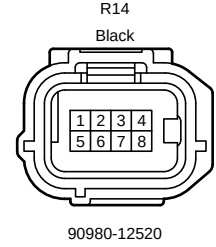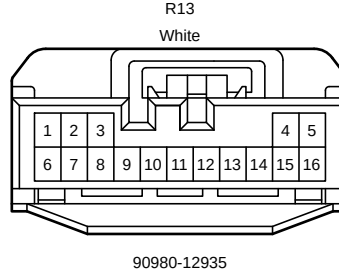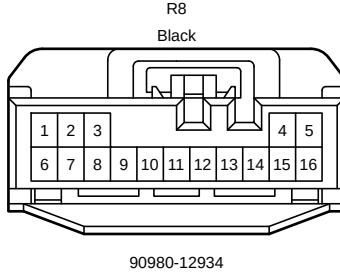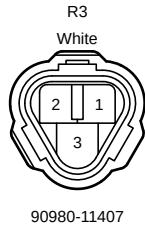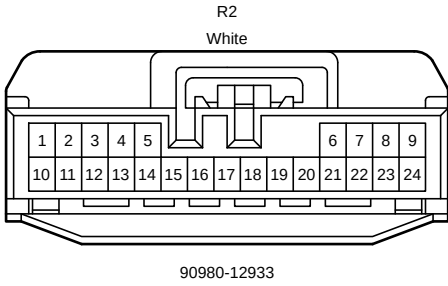

Position of Parts in Body (LHD w/o Rear No. 2 Seat)

