























Position of Parts in Engine Compartment (LHD)

* 3: From Feb. 2017 Production
 * 4: Before Feb. 2017 Production








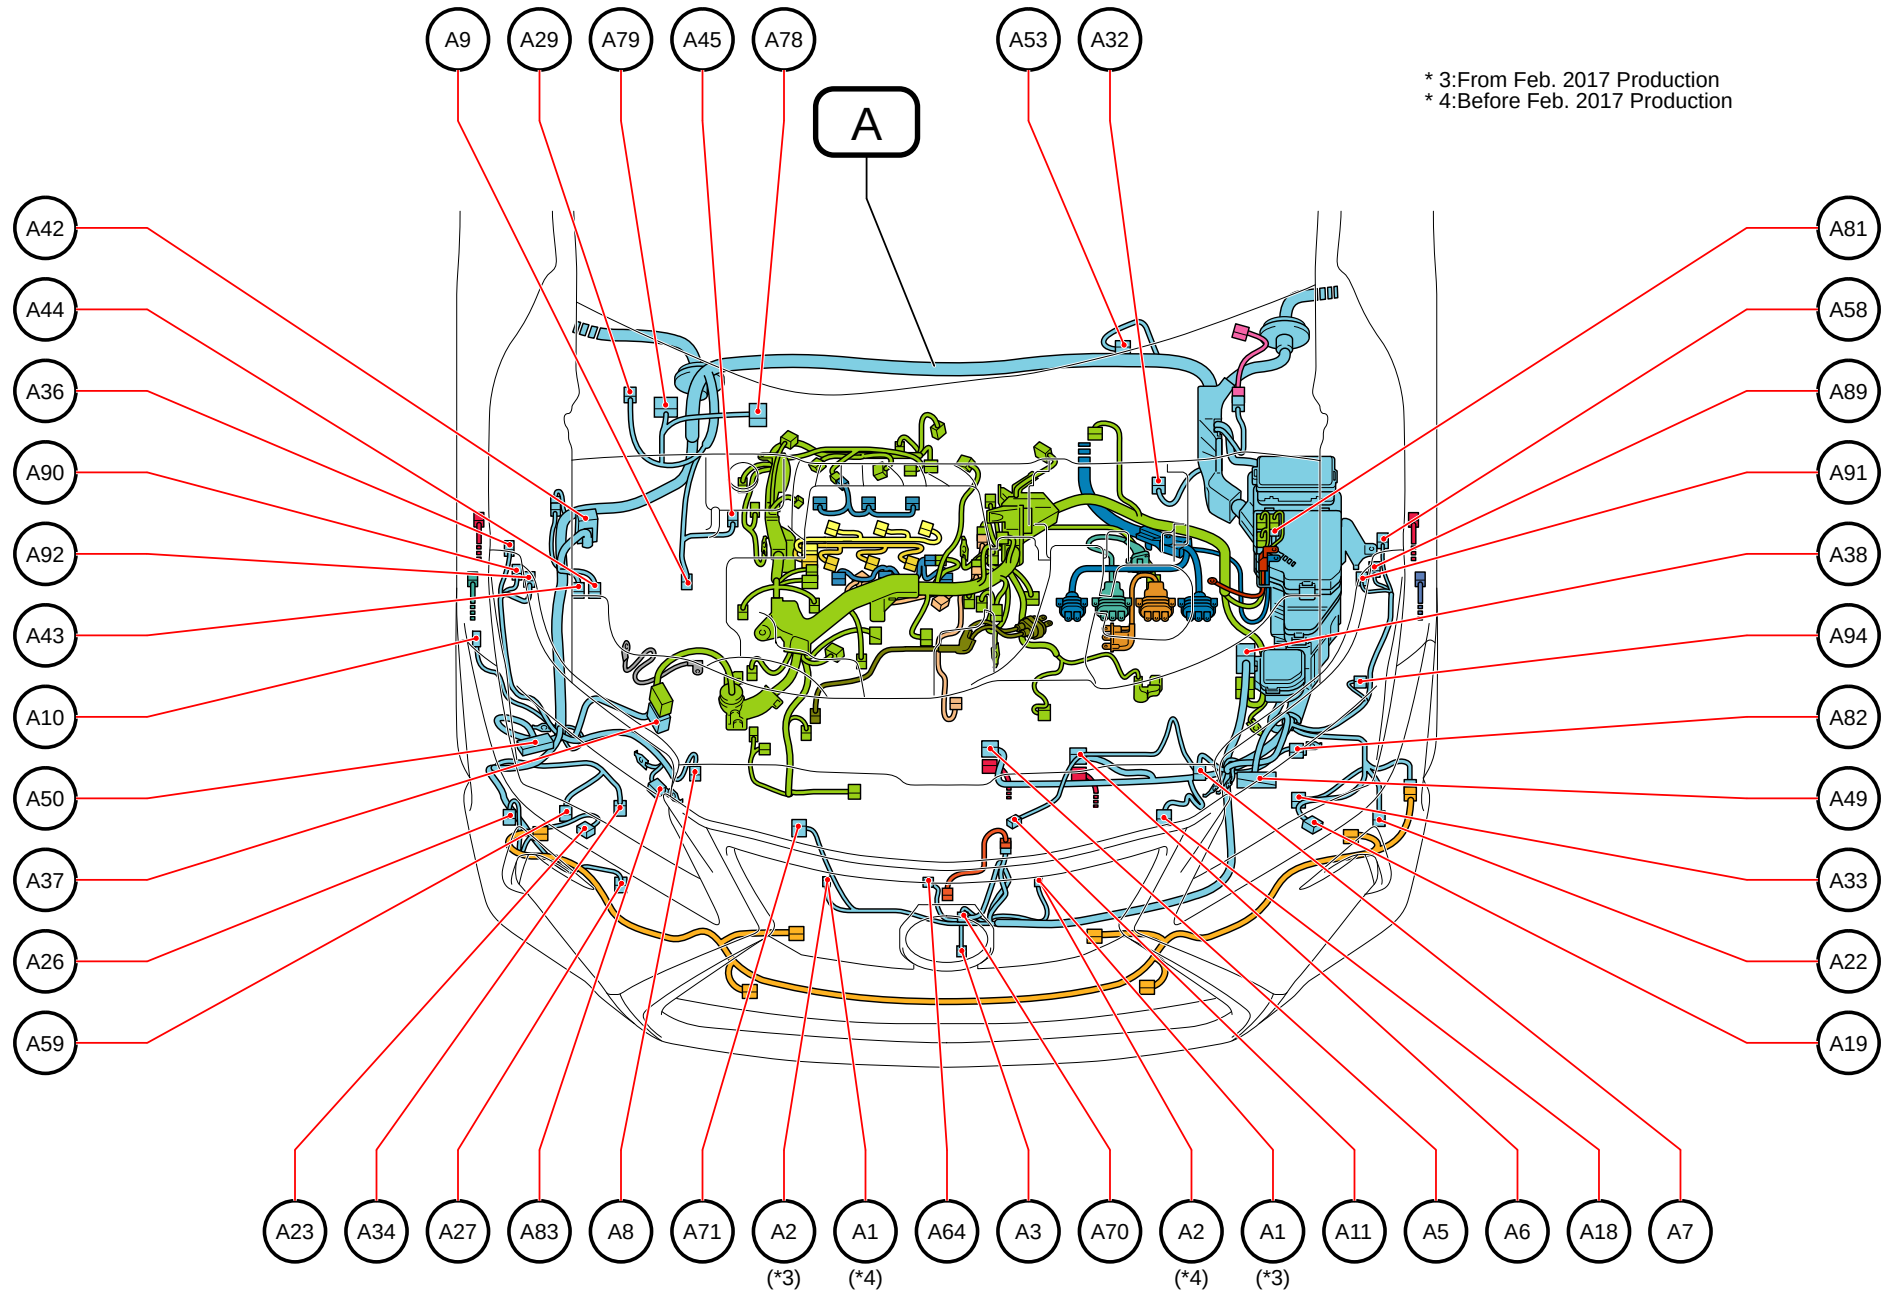


A1	Low Pitched Horn Assembly
A2	High Pitched Horn Assembly
A3	Cooler (Ambient Temperature Sensor) Thermistor
A5	No. 1 Cooling Fan ECU
A6	No. 2 Cooling Fan ECU
A7	Front Airbag Sensor LH
A8	Front Airbag Sensor RH
A9	A/C Pressure Sensor (A/C Tube & Accessory Assembly)
A10	Security Horn Assembly
A11	Hood Courtesy Switch (Hood Lock Assembly)
A18	Inverter Water Pump with Motor Assembly
A19	Cornering Light Assembly LH
A22	Fog Light Assembly LH
A23	Cornering Light Assembly RH
A26	Fog Light Assembly RH
A27	Headlight Cleaner Motor and Pump Assembly
A29	Front Wiper Deicer (Windshield Glass)
A32	Heater Accessory Assembly
A33	Oil Pump with Motor Assembly
A34	Washer Motor & Pump Assembly
A36	Washer Nozzle Sub-Assembly
A37	ECM
A38	Inverter with Converter Assembly
A42	Brake Actuator Assembly
A43	Brake Booster Pump Assembly
A44	Brake Booster Pump Assembly
A45	Brake Master Cylinder Reservoir Assembly
A49	Headlight ECU Sub-Assembly LH
A50	Headlight ECU Sub-Assembly RH
A53	Brake Stroke Simulator Cylinder Sub-Assembly
A58	Wireless Door Lock Buzzer
A59	Level Warning Switch Assembly
A64	Vehicle Approaching Speaker Assembly
A70	Millimeter Wave Radar Sensor Assembly
A71	Smog Ventilation Sensor
A78	Heated Windshield Defroster (Windshield Glass)
A79	Heated Windshield Defroster (Windshield Glass)
A81	No. 1 Junction Connector
A82	No. 1 Ground Junction Connector
A83	No. 2 Ground Junction Connector
A89	Front Speed Sensor LH
A90	Front Speed Sensor RH
A91	Front skid Control Sensor Wire LH
A92	Front skid Control Sensor Wire RH
A94	Front Tire Pressure Antenna LH

   
Position of Parts in Engine Compartment (LHD)

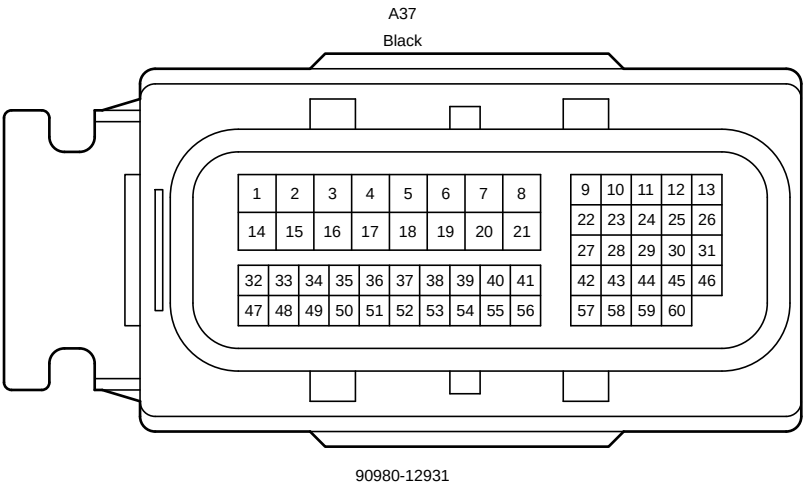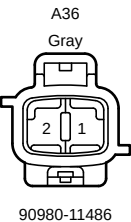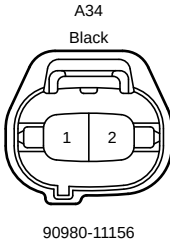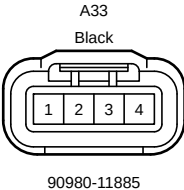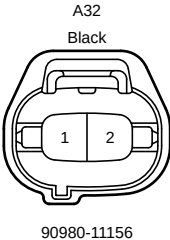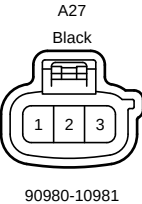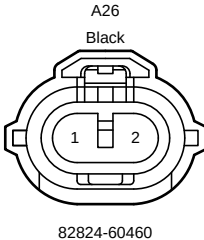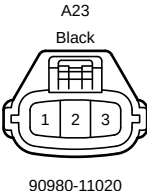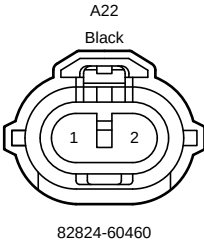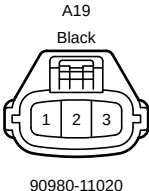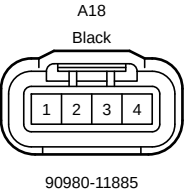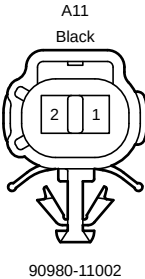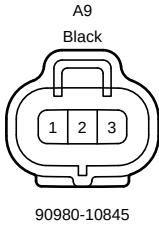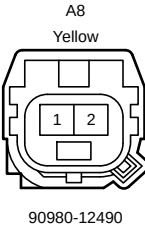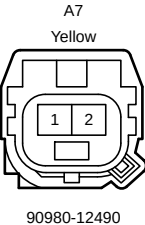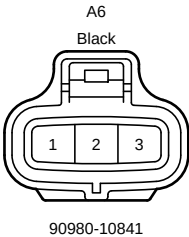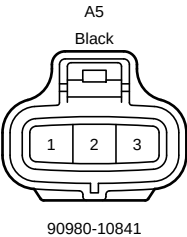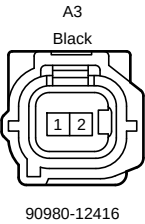


Position of Parts in Engine Compartment (LHD)

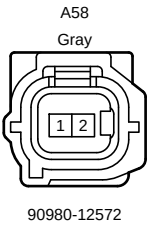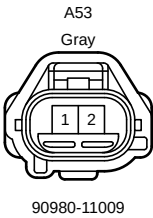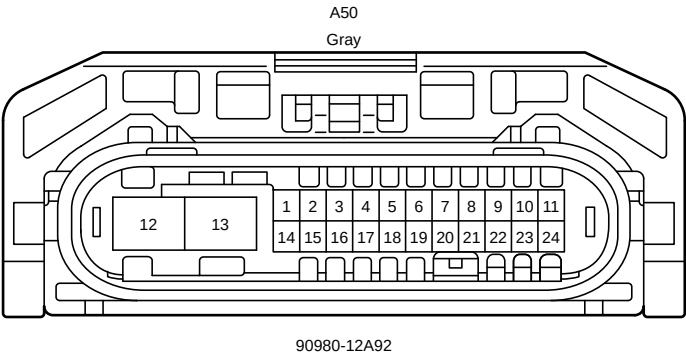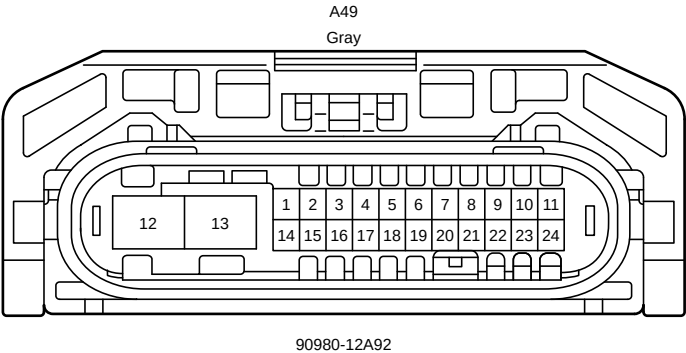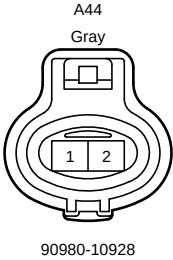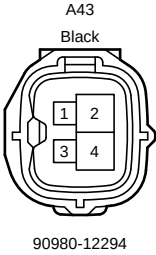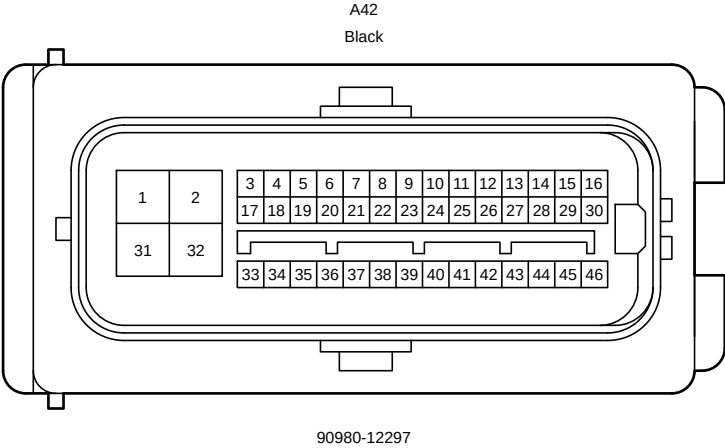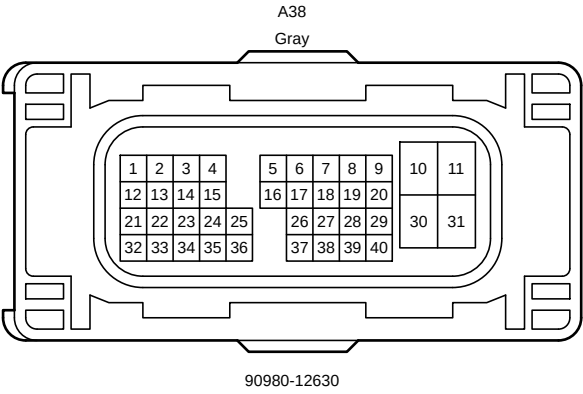


Position of Parts in Engine Compartment (LHD)

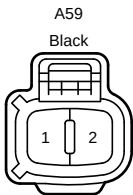

90980-11068

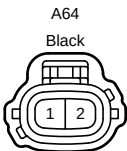


90980-11162

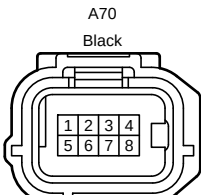


90980-12520




90980-11034

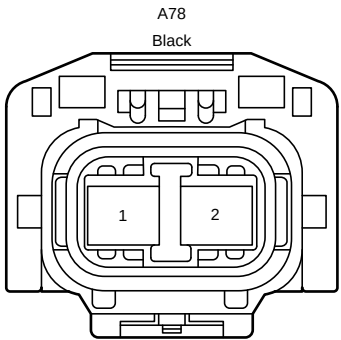


90980-12A32

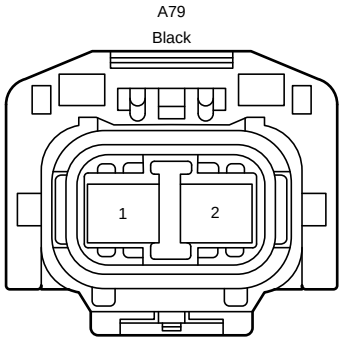


90980-12A32

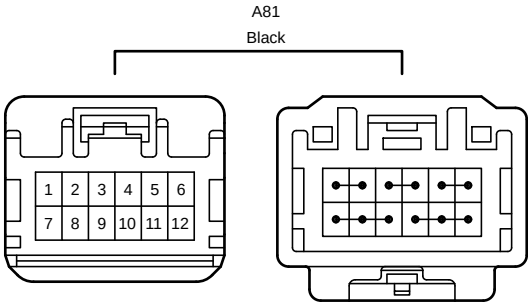


90980-12737

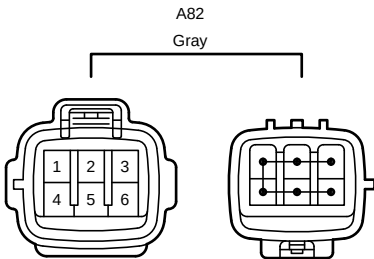


90980-11194

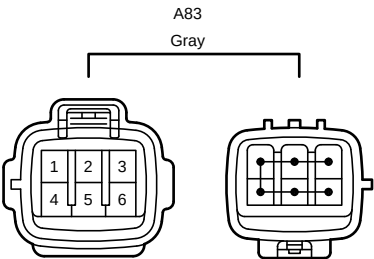

90980-11194

 

90980-12381

 


90980-12381



90980-12381



90980-12381

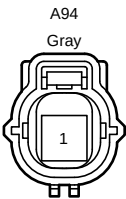

89775-24010