


Position of Parts in Seat (LHD Front Seat)

* 1:w/ Seat Position Memory
* 2:w/o Seat Position Memory

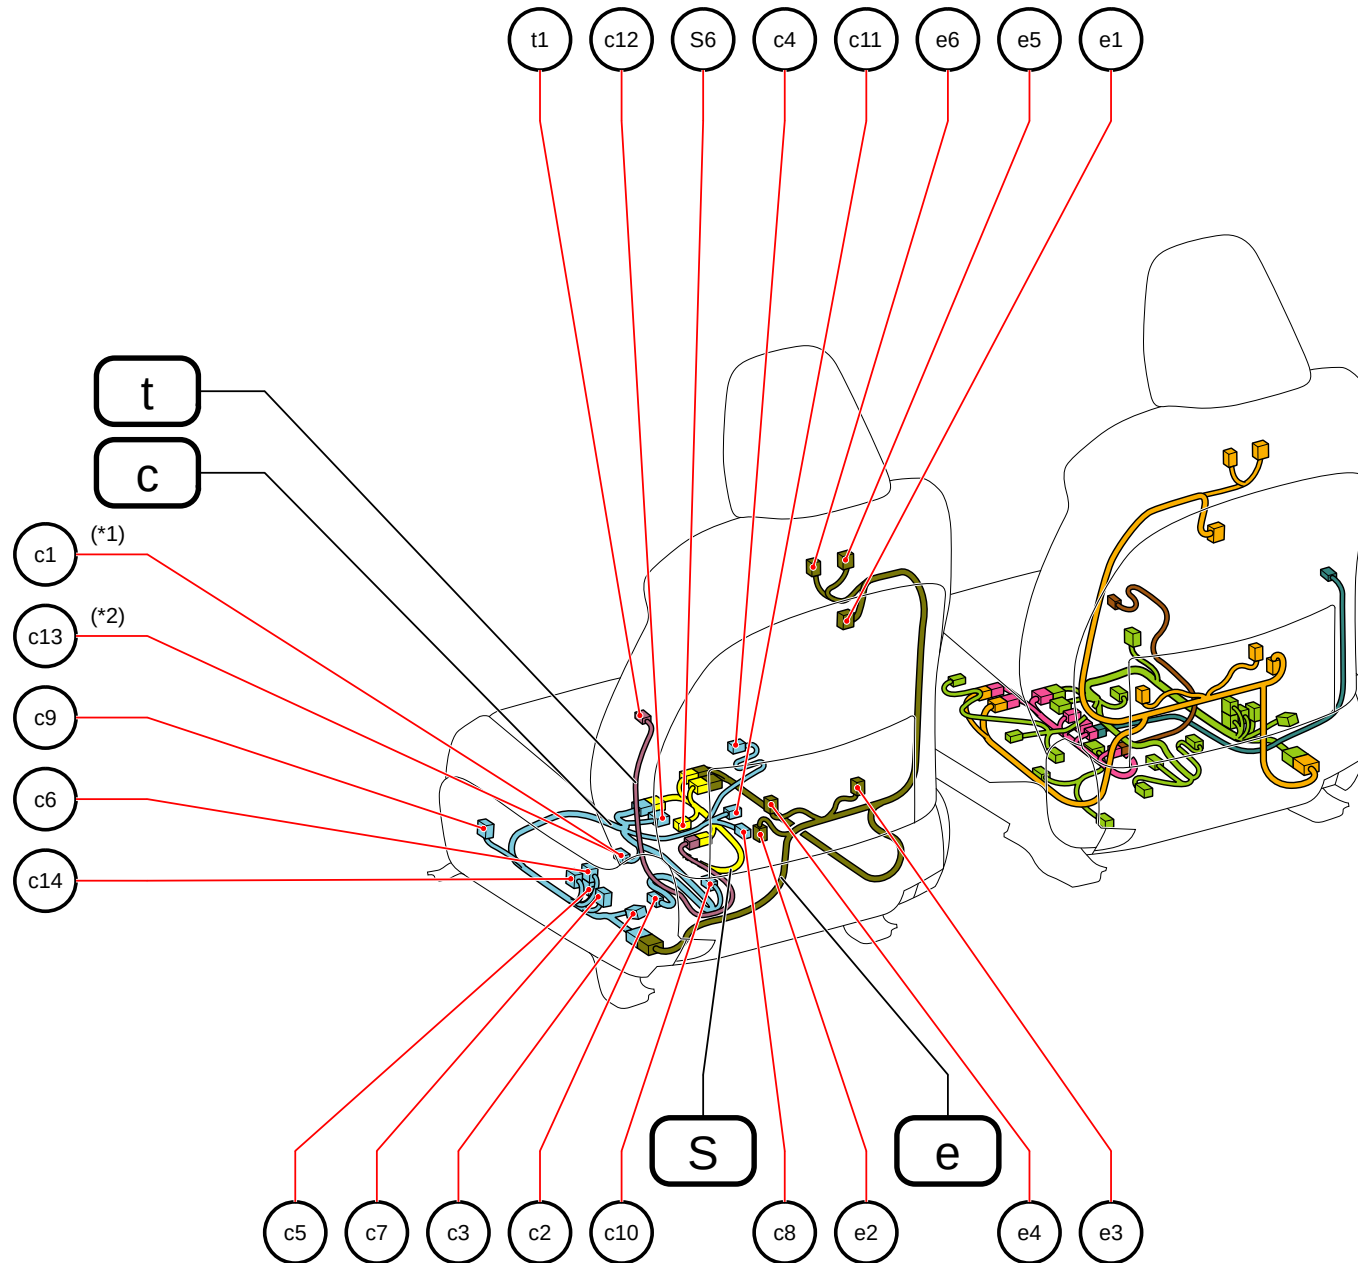

S6	Front Seat Inner Belt Assembly LH
c1	Front Power Seat Slide Position Motor LH (Separate Type Front Seat Cushion Spring Assembly LH)
c2	Front Power Seat Tilt Position Motor LH (Separate Type Front Seat Cushion Spring Assembly LH)
c3	Front Power Seat Lift Position Motor LH (Separate Type Front Seat Cushion Spring Assembly LH)
c4	Seat Variable Cushion Switch Motor LH (Front Seat Adjuster Assembly LH)
c5	Position Control ECU & Switch Assembly LH
c6	Position Control ECU & Switch Assembly LH
c7	Front Lumbar Power Seat Switch LH
c8	Front Seat Heater Control Sub-Assembly LH
c9	Seat Variable Cushion Switch LH
c10	Seat Cushion Climate Control Blower Assembly LH
c11	Front Seat Inner Belt Assembly LH
c12	No. 38 Junction Connector
c13	Front Power Seat Slide Position Motor LH (Separate Type Front Seat Cushion Spring Assembly LH)
c14	Front Power Seat Switch LH
e1	Seat Back Climate Control Blower LH
e2	Front Power Seat Reclining Position Motor LH (Front Seat Back Spring Assembly LH)
e3	Front Power Seat Lumbar Support Motor LH (Front Seat Back Spring Assembly LH)
e4	Front Power Seat Lumbar Support Motor LH (Front Seat Back Spring Assembly LH)
e5	Television Display Assembly LH
e6	Television Display Assembly LH
t1	Front Seat Airbag Assembly LH

Position of Parts in Seat (LHD Front Seat)

