


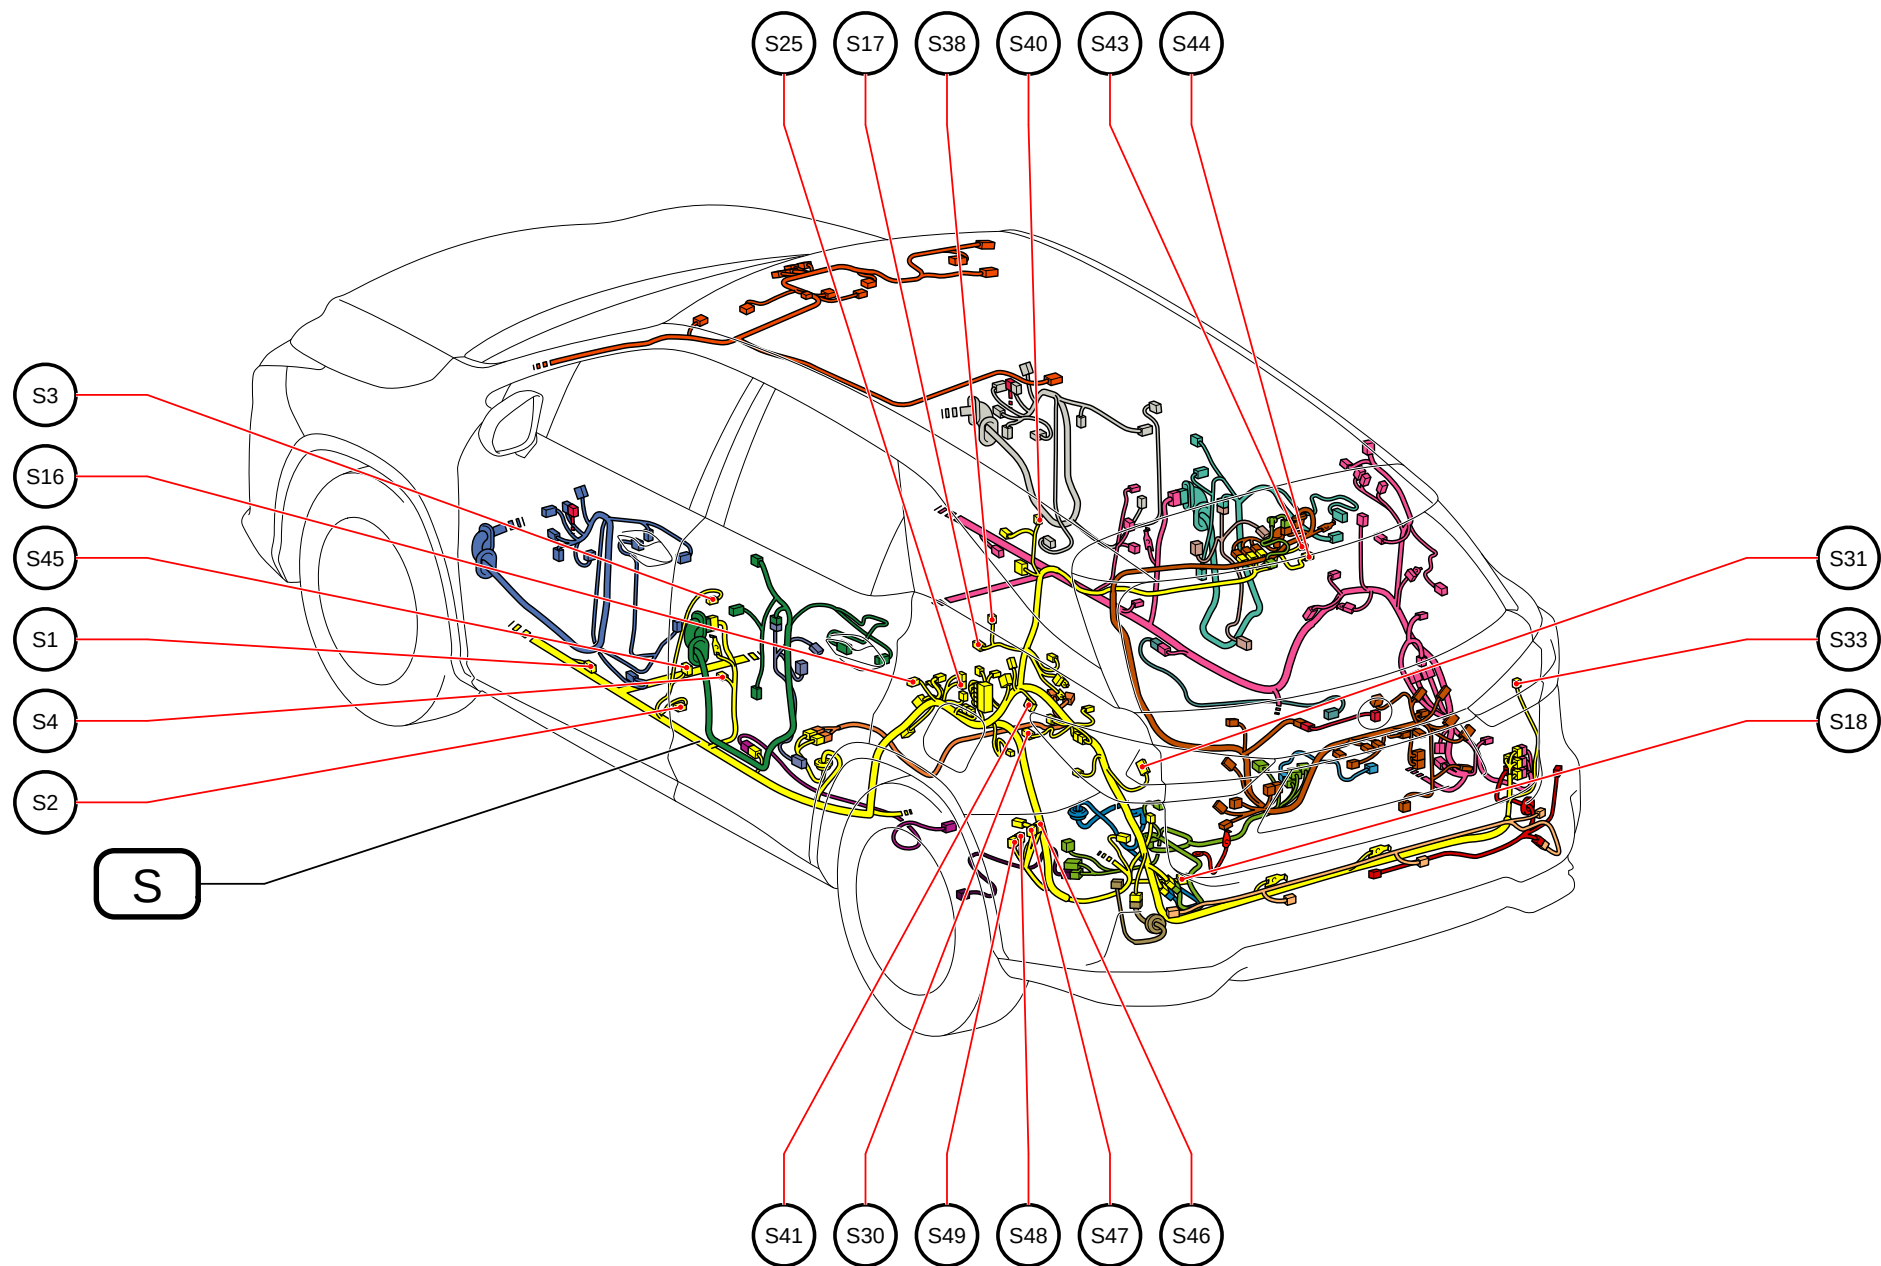

S1	Front Scuff Plate Light LH (Front Door Scuff Plate LH)
S2	Front Seat Outer Belt Assembly LH
S3	Front Door Courtesy Light Switch Assembly LH
S4	Front Seat Outer Belt Assembly LH
S16	Rear Door Courtesy Light Switch Assembly LH
S17	Rear No. 1 Seat Belt Assembly Outer LH
S18	Brake Control Power Supply Assembly
S25	Absorber Control ECU
S30	Fuel Lid Lock with Motor Assembly
S31	Rear Combination Light Assembly LH
S33	Rear Combination Light Assembly RH
S38	Quarter Side Speaker Assembly LH
S40	Curtain Shield Airbag Assembly LH
S41	Noise Filter
S43	Radio Setting Condenser
S44	Radio Setting Condenser
S45	Side Airbag Sensor Assembly LH
S46	Parking Brake ECU Assembly
S47	Parking Brake ECU Assembly
S48	Fuel Pump Control ECU Assembly
S49	Fuel Pump Control ECU Assembly

Position of Parts in Body (RHD w/ Rear No. 2 Seat)

