

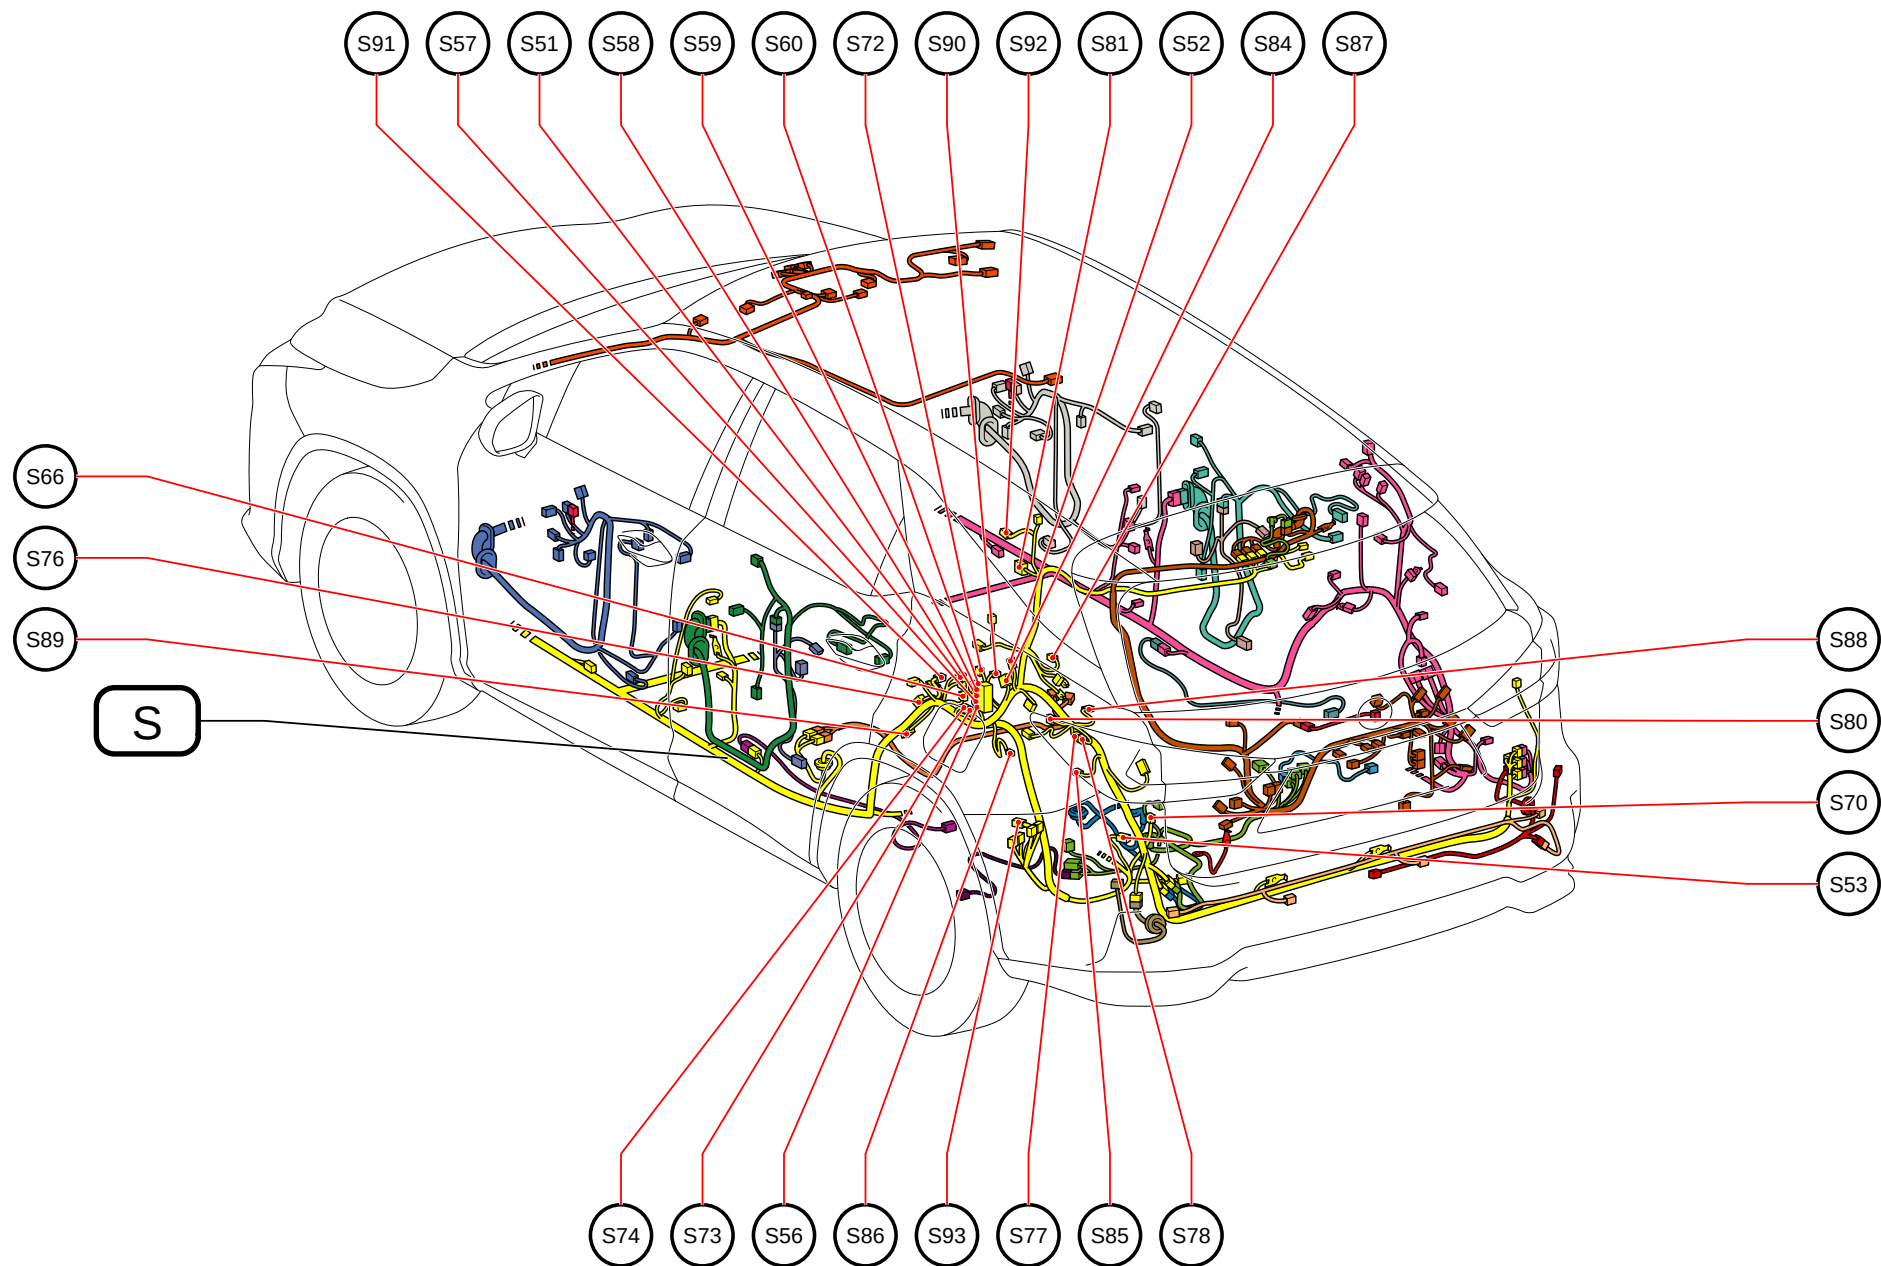
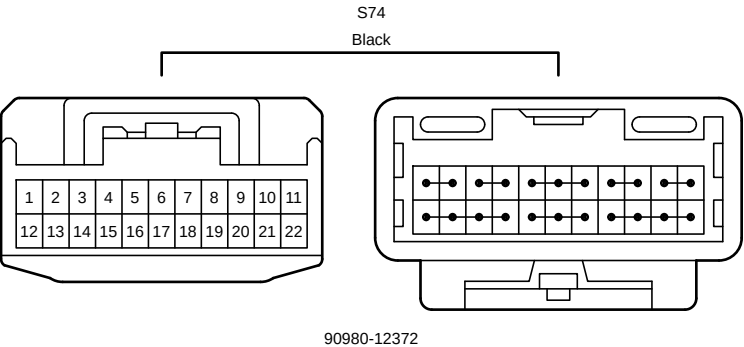
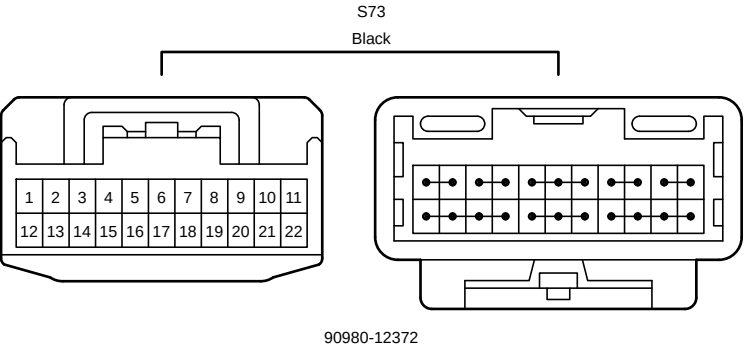
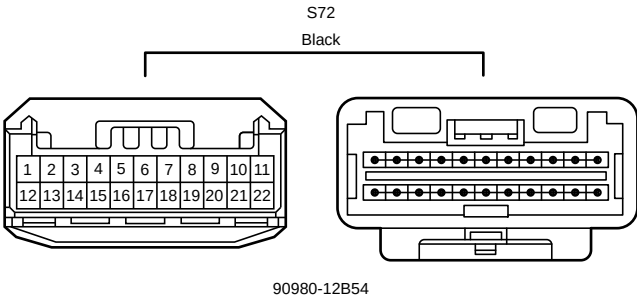
 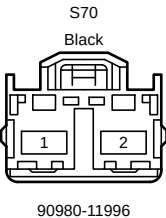
 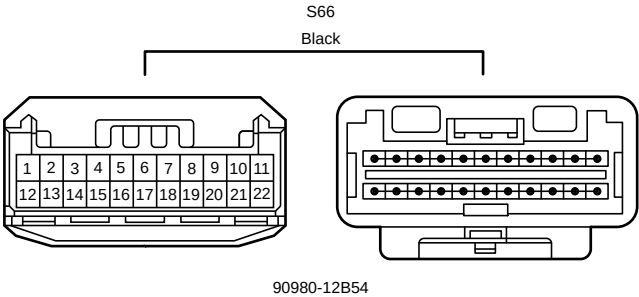
 
 
 

 
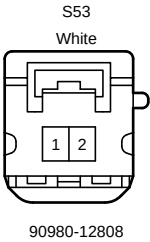


Position of Parts in Body (RHD w/ Rear No. 2 Seat)



S51	Absorber Control ECU
S52	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
S53	Rear No. 3 Speaker Assembly
S56	No. 10 CAN Junction Connector
S57	No. 10 CAN Junction Connector
S58	No. 10 CAN Junction Connector
S59	No. 10 CAN Junction Connector
S60	No. 10 CAN Junction Connector
S66	No. 12 CAN Junction Connector
S70	Fusible Link Block Assembly
S72	No. 26 Junction Connector
S73	No. 27 Junction Connector
S74	No. 27 Junction Connector
S76	No. 28 Junction Connector
S77	No. 29 Junction Connector
S78	No. 29 Junction Connector
S80	No. 30 Junction Connector
S81	No. 31 Junction Connector
S84	Rear Seat Heater Relay
S85	No. 1 Luggage Compartment Light Assembly LH
S86	Rear No. 1 Power Outlet Socket Assembly
S87	Cooler (No. 2 Room Temperature Sensor) Thermistor
S88	No. 1 Fold Seat Switch Assembly (Rear No. 2 Seat)
S89	Rear Airbag Sensor LH
S90	No. 2 Air Conditioning Control Assembly
S91	Fold Seat Switch Assembly (Rear No. 2 Seat)
S92	Glass Breakage Sensor Assembly LH
S93	Battery Thermometer Sensor (Thermistor Assembly)

Position of Parts in Body (RHD w/ Rear No. 2 Seat)

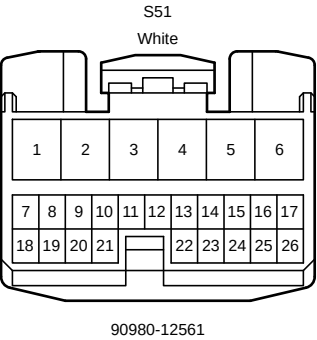

Position of Parts in Body (RHD w/ Rear No. 2 Seat)

