























Position of Parts in Body (RHD w/o Rear No. 2 Seat)

* 4: Before Apr. 2018 Production
* 5: From Apr. 2018 Production

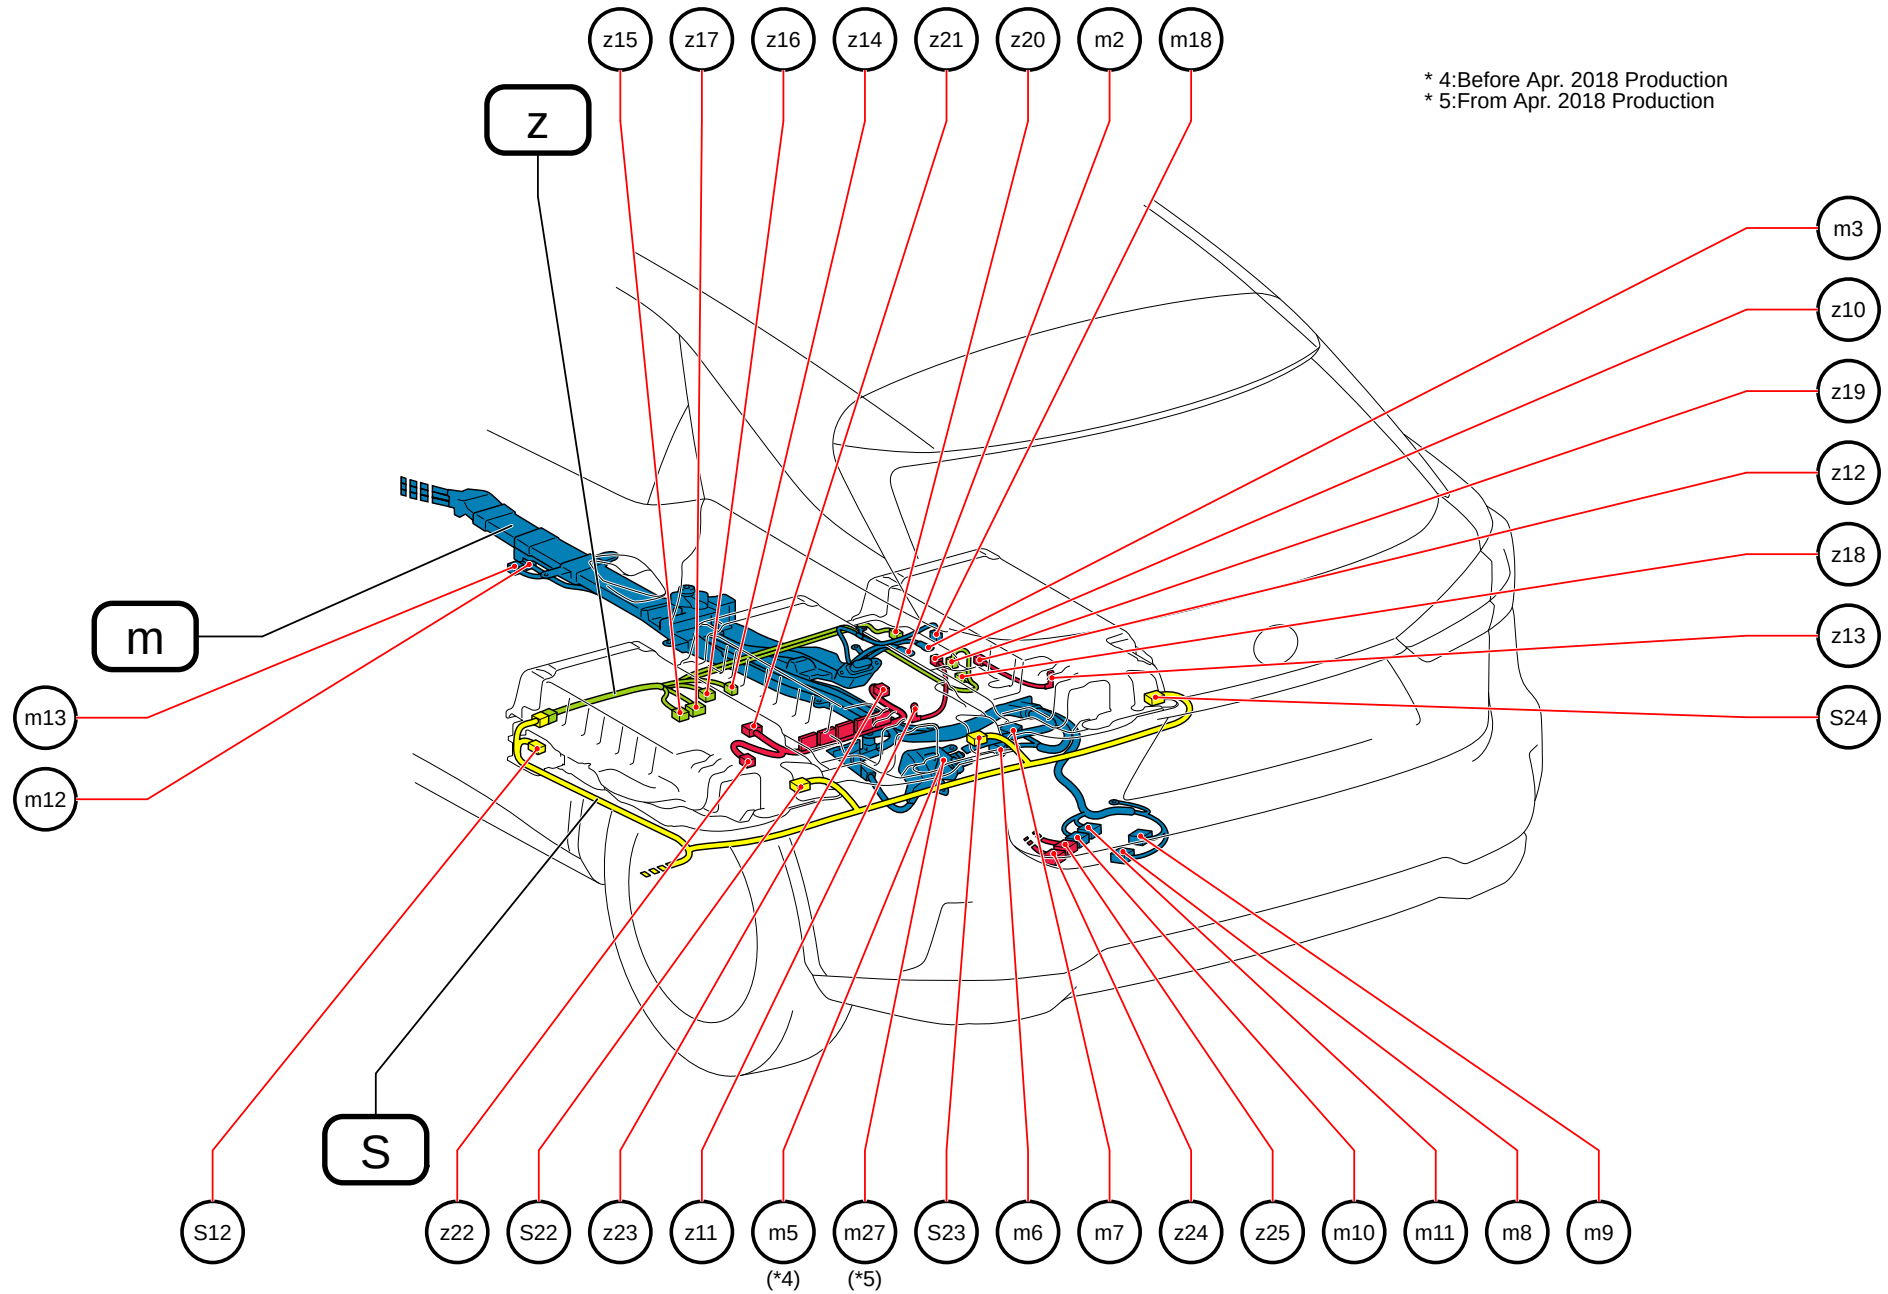

S12	Inter Lock Switch
S22	Battery Cooling Blower Assembly LH
S23	Battery Cooling Blower Assembly Center
S24	Battery Cooling Blower Assembly RH
m2	Hybrid Battery Junction Block Assembly
m3	Hybrid Battery Junction Block Assembly
m5	Rear Traction Motor with Transaxle Assembly
m6	Rear Traction Motor with Transaxle Assembly
m7	Rear Traction Motor with Transaxle Assembly
m8	Rear Active Stabilizer Control ECU Assembly
m9	Front Active Stabilizer Control ECU Assembly
m10	Front Active Stabilizer Control ECU Assembly
m11	Front Active Stabilizer Control ECU Assembly
m12	Front Active Stabilizer Control Actuator Assembly
m13	Front Active Stabilizer Control Actuator Assembly
m18	Hybrid Battery Junction Block Assembly
m27	Rear Traction Motor with Transaxle Assembly
z10	Hybrid Battery Junction Block Assembly
z11	HV Supply Battery Assembly
z12	Hybrid Battery Junction Block Assembly
z13	HV Supply Battery Assembly
z14	HV Supply Battery Assembly
z15	Battery Voltage Sensor
z16	HV Supply Battery Assembly
z17	Battery Voltage Sensor
z18	Hybrid Battery Junction Block Assembly
z19	Hybrid Battery Junction Block Assembly
z20	HV Supply Battery Assembly
z21	Battery Voltage Sensor
z22	HV Supply Battery Assembly
z23	HV Supply Battery Assembly
z24	Rear Active Stabilizer Control Actuator Assembly , Rear Active Stabilizer Control ECU Assembly
z25	Rear Active Stabilizer Control Actuator Assembly , Rear Active Stabilizer Control ECU Assembly

    Position of Parts in Body (RHD w/o Rear No. 2 Seat)

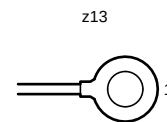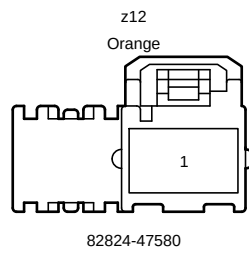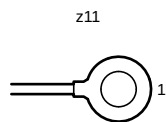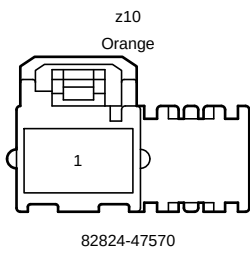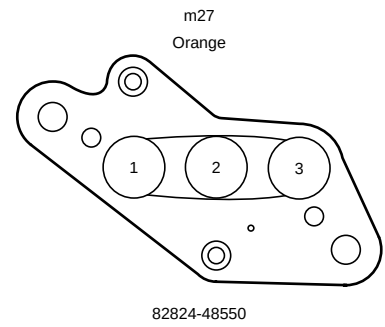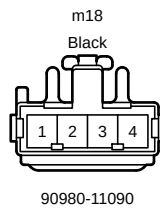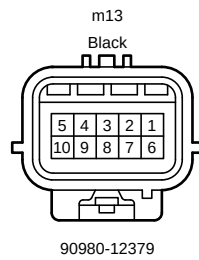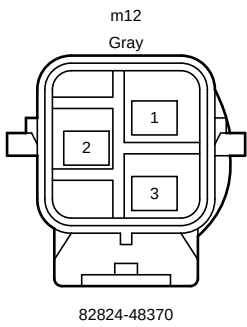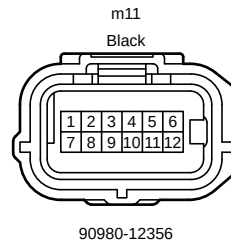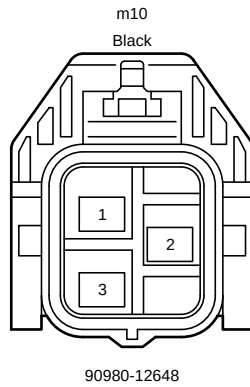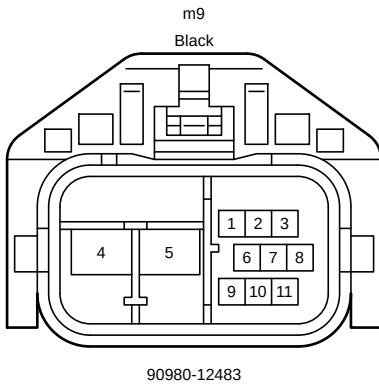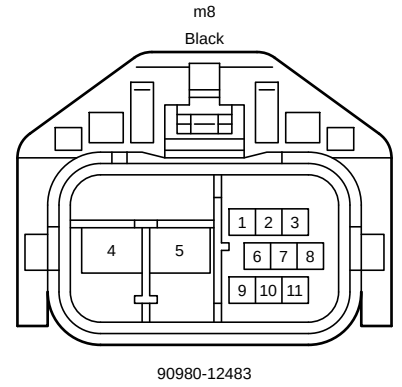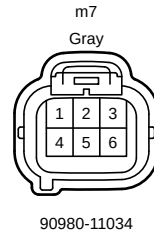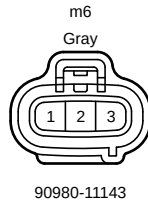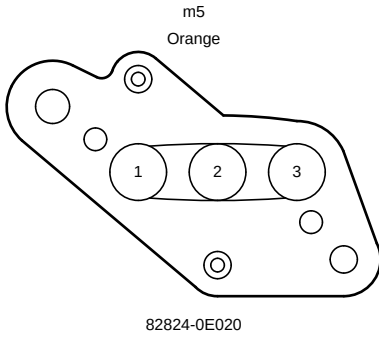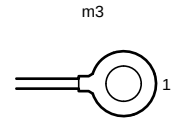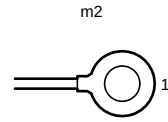

Position of Parts in Body (RHD w/o Rear No. 2 Seat)

