


Position of Parts in Instrument Panel (LHD)

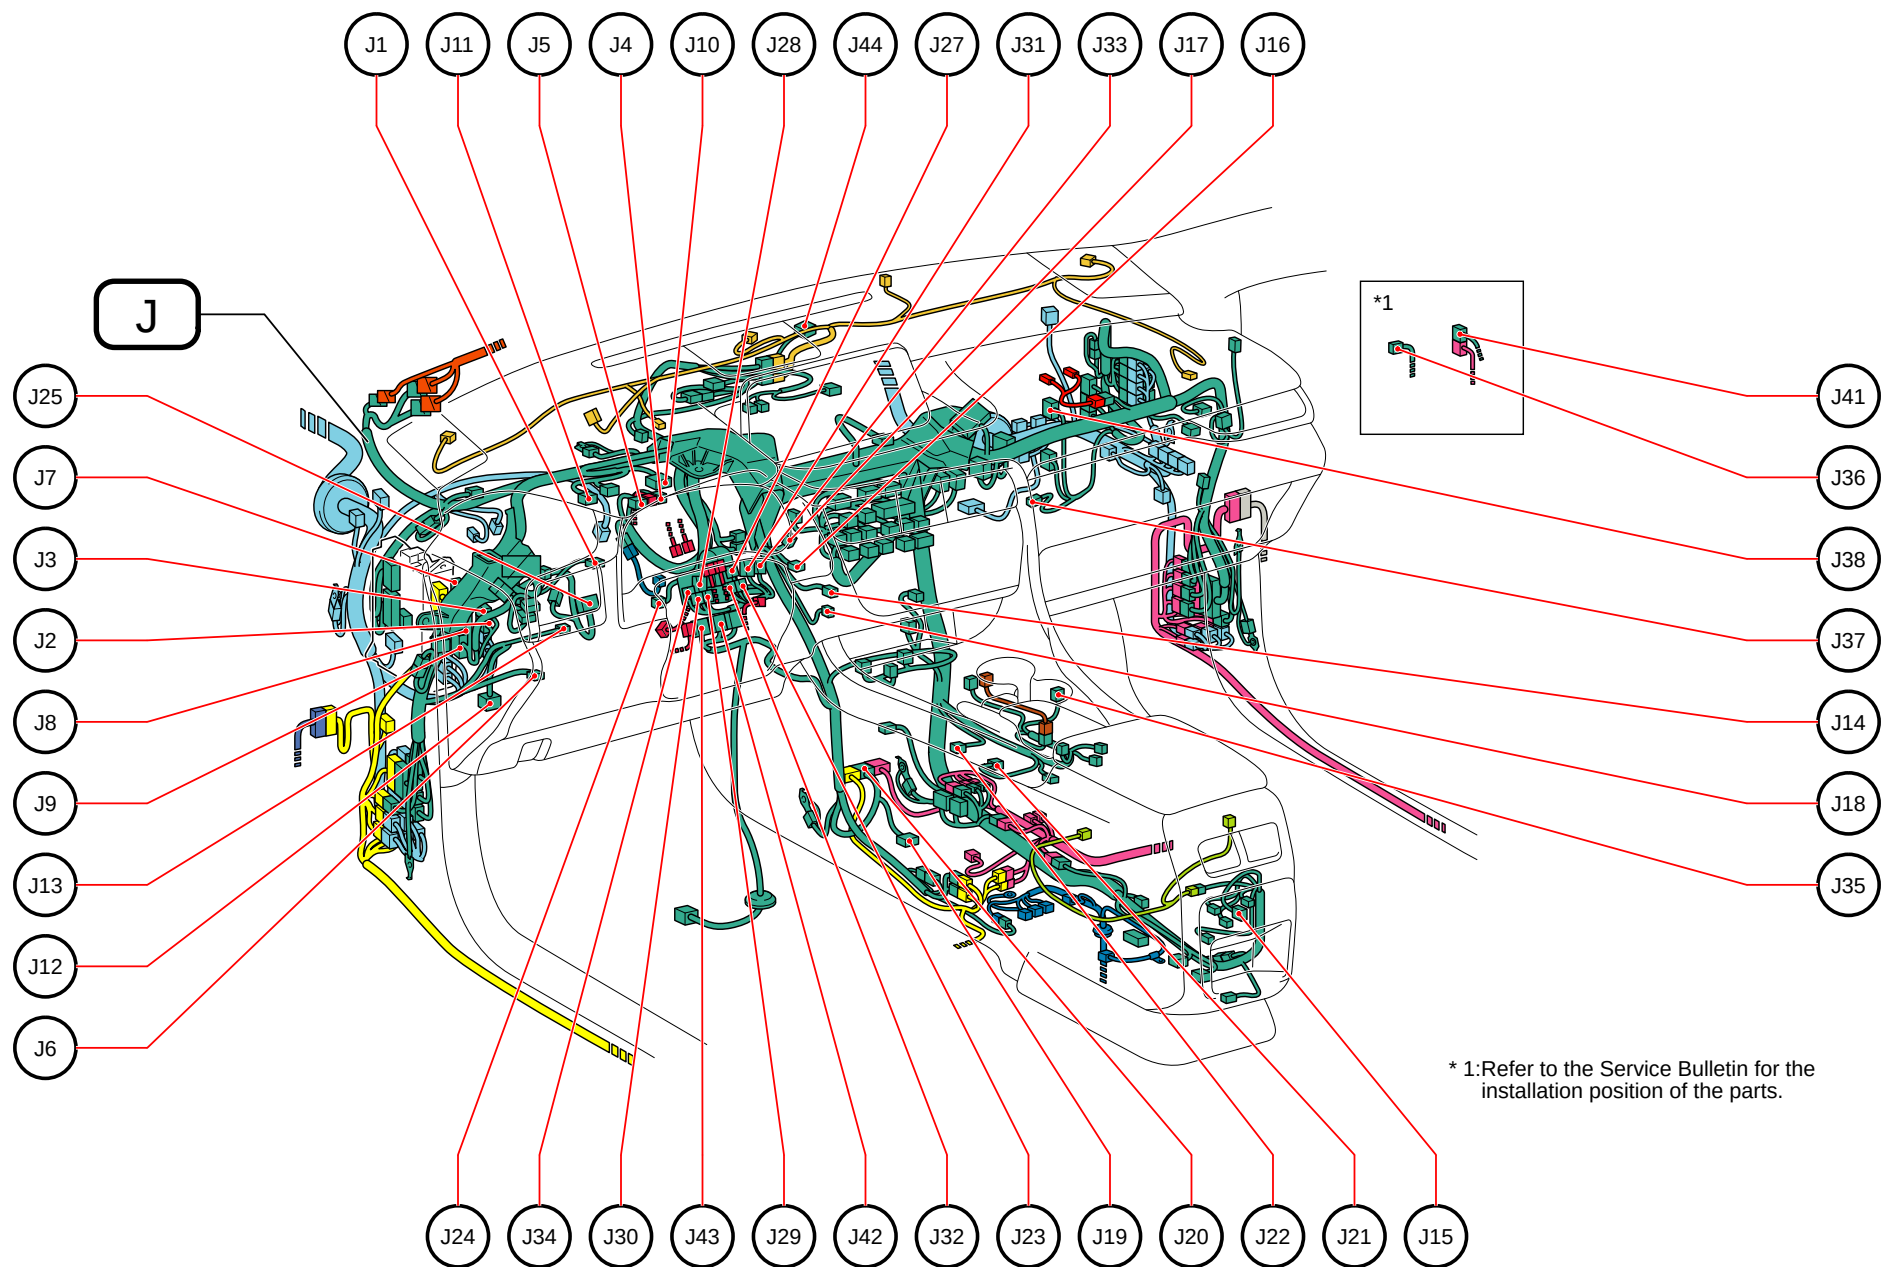


* 1: Refer to the Service Bulletin for the installation position of the parts.


Position of Parts in Instrument Panel (LHD)

J1	Trip Switch
J2	Hybrid Vehicle Control ECU
J3	Hybrid Vehicle Control ECU
J4	Power Steering ECU Assembly
J5	Power Steering ECU Assembly
J6	Lower No. 1 Instrument Panel Airbag Assembly
J7	Main Body ECU
J8	Main Body ECU
J9	Main Body ECU
J10	Combination Meter Assembly
J11	Combination Meter Assembly
J12	DLC3
J13	Front Foot Light LH (No. 1 Interior Illumination Light Assembly LH)
J14	Power Switch
J15	Rear Refreshing Seat Switch
J16	Cooler (Room Temperature Sensor) Thermistor
J17	No. 1 Clearance Warning Buzzer
J18	Center Box Light (No. 1 Interior Illumination Light Assembly)
J19	Yaw Rate Sensor Assembly
J20	Airbag Sensor Assembly
J21	Transmission Control Switch (Transmission Floor Shift Assembly)
J22	Shift Lock Control ECU (Transmission Floor Shift Assembly)
J23	Spiral Cable with Sensor Sub-Assembly
J24	Electric Power Steering Column Sub-Assembly
J25	Multiplex Tilt & Telescopic ECU
J27	Electric Power Steering Column Sub-Assembly
J28	Headlight Dimmer Switch Assembly
J29	Spiral Cable with Sensor Sub-Assembly
J30	Spiral Cable with Sensor Sub-Assembly
J31	Windshield Wiper Switch Assembly
J32	Steering Sensor
J33	Windshield Wiper Switch Assembly
J34	Tilt & Telescopic Switch
J35	Combination Switch Assembly
J36	ID Code Box
J37	Front Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
J38	Clearance Warning ECU Assembly
J41	Certification ECU
J42	A/C Amplifier Assembly
J43	A/C Amplifier Assembly
J44	Double Lock Door Control Relay Assembly


Position of Parts in Instrument Panel (LHD)

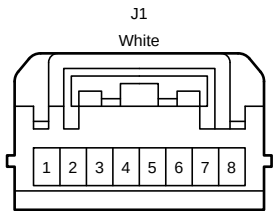


90980-12550

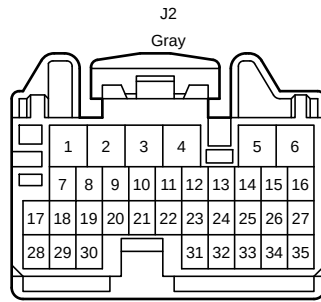


90980-12429

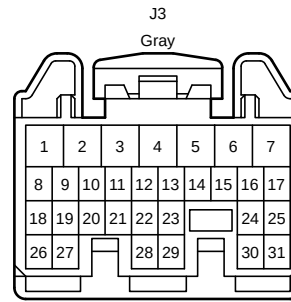


90980-12431

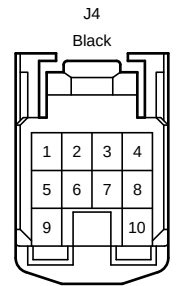


90980-12898

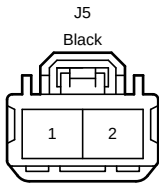


90980-12900

 


90980-12452

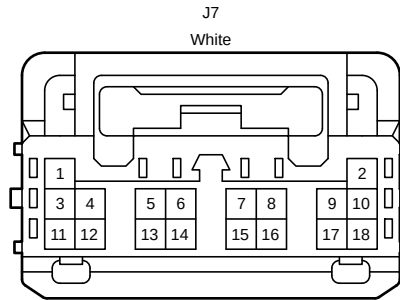


82824-33350

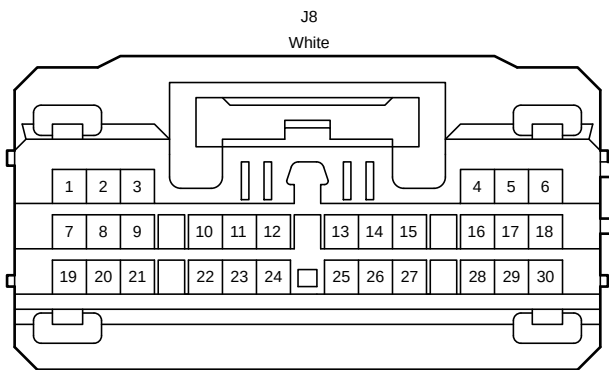


90980-12909

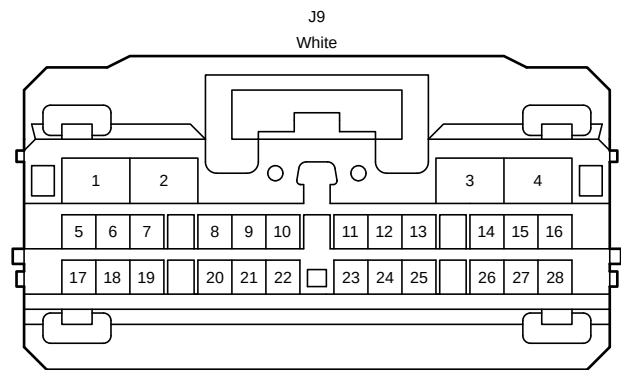

90980-12908




















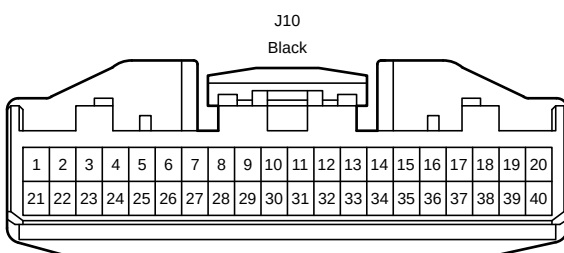


90980-12557

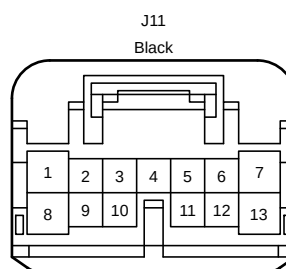


90980-12767

     
Position of Parts in Instrument Panel (LHD)

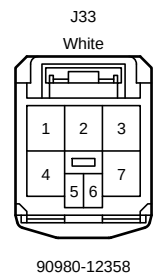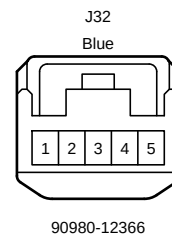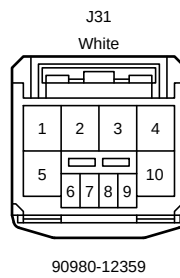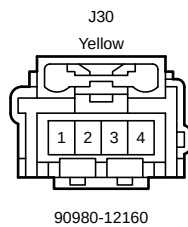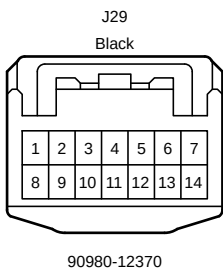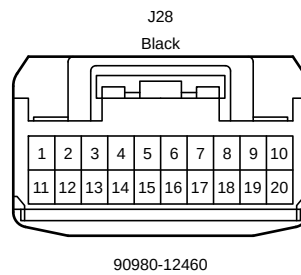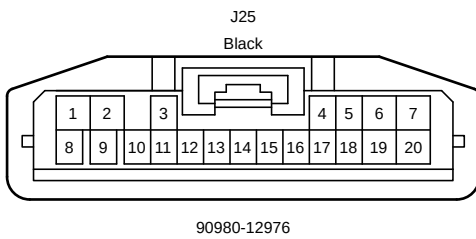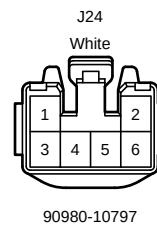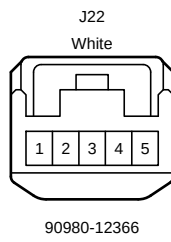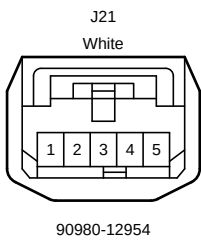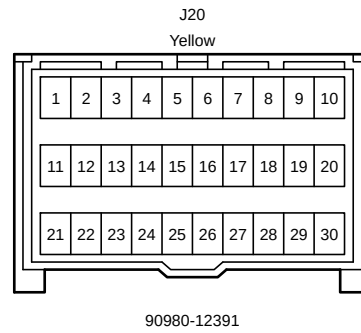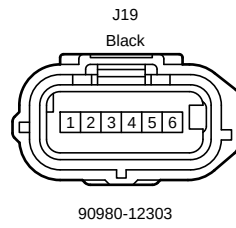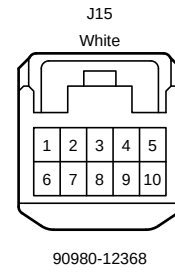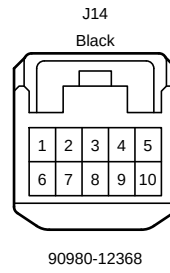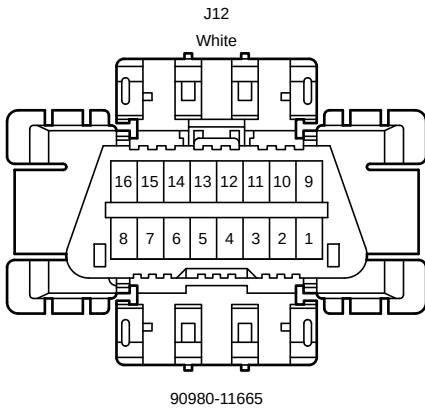


Position of Parts in Instrument Panel (LHD)

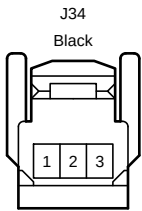


90980-12695

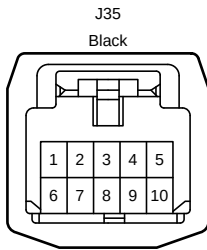


82824-78040

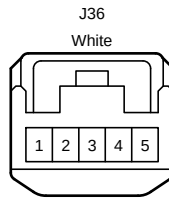


90980-12366

 


90980-12128

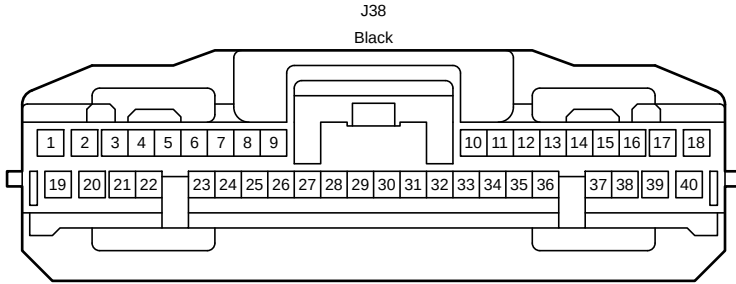


90980-12924

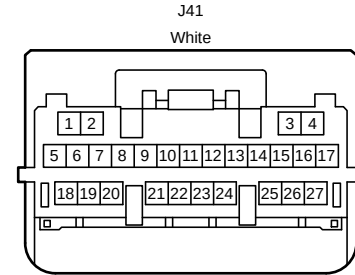


90980-12B78

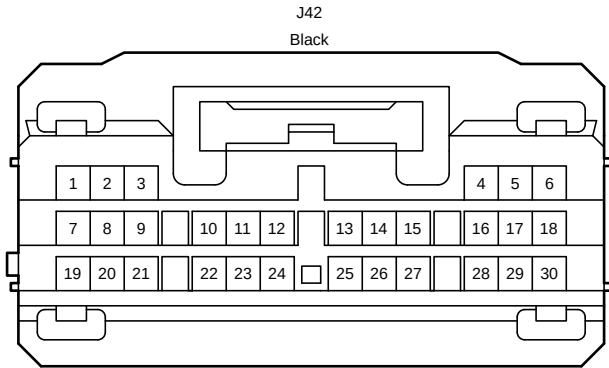

90980-12761

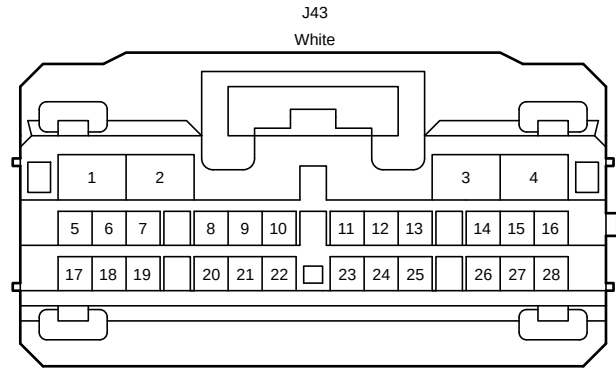

90980-12760

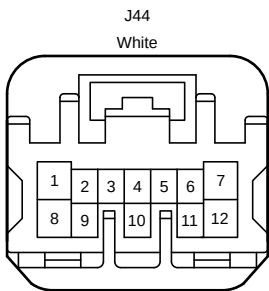

90980-12812