
 


Position of Parts in Instrument Panel (LHD)

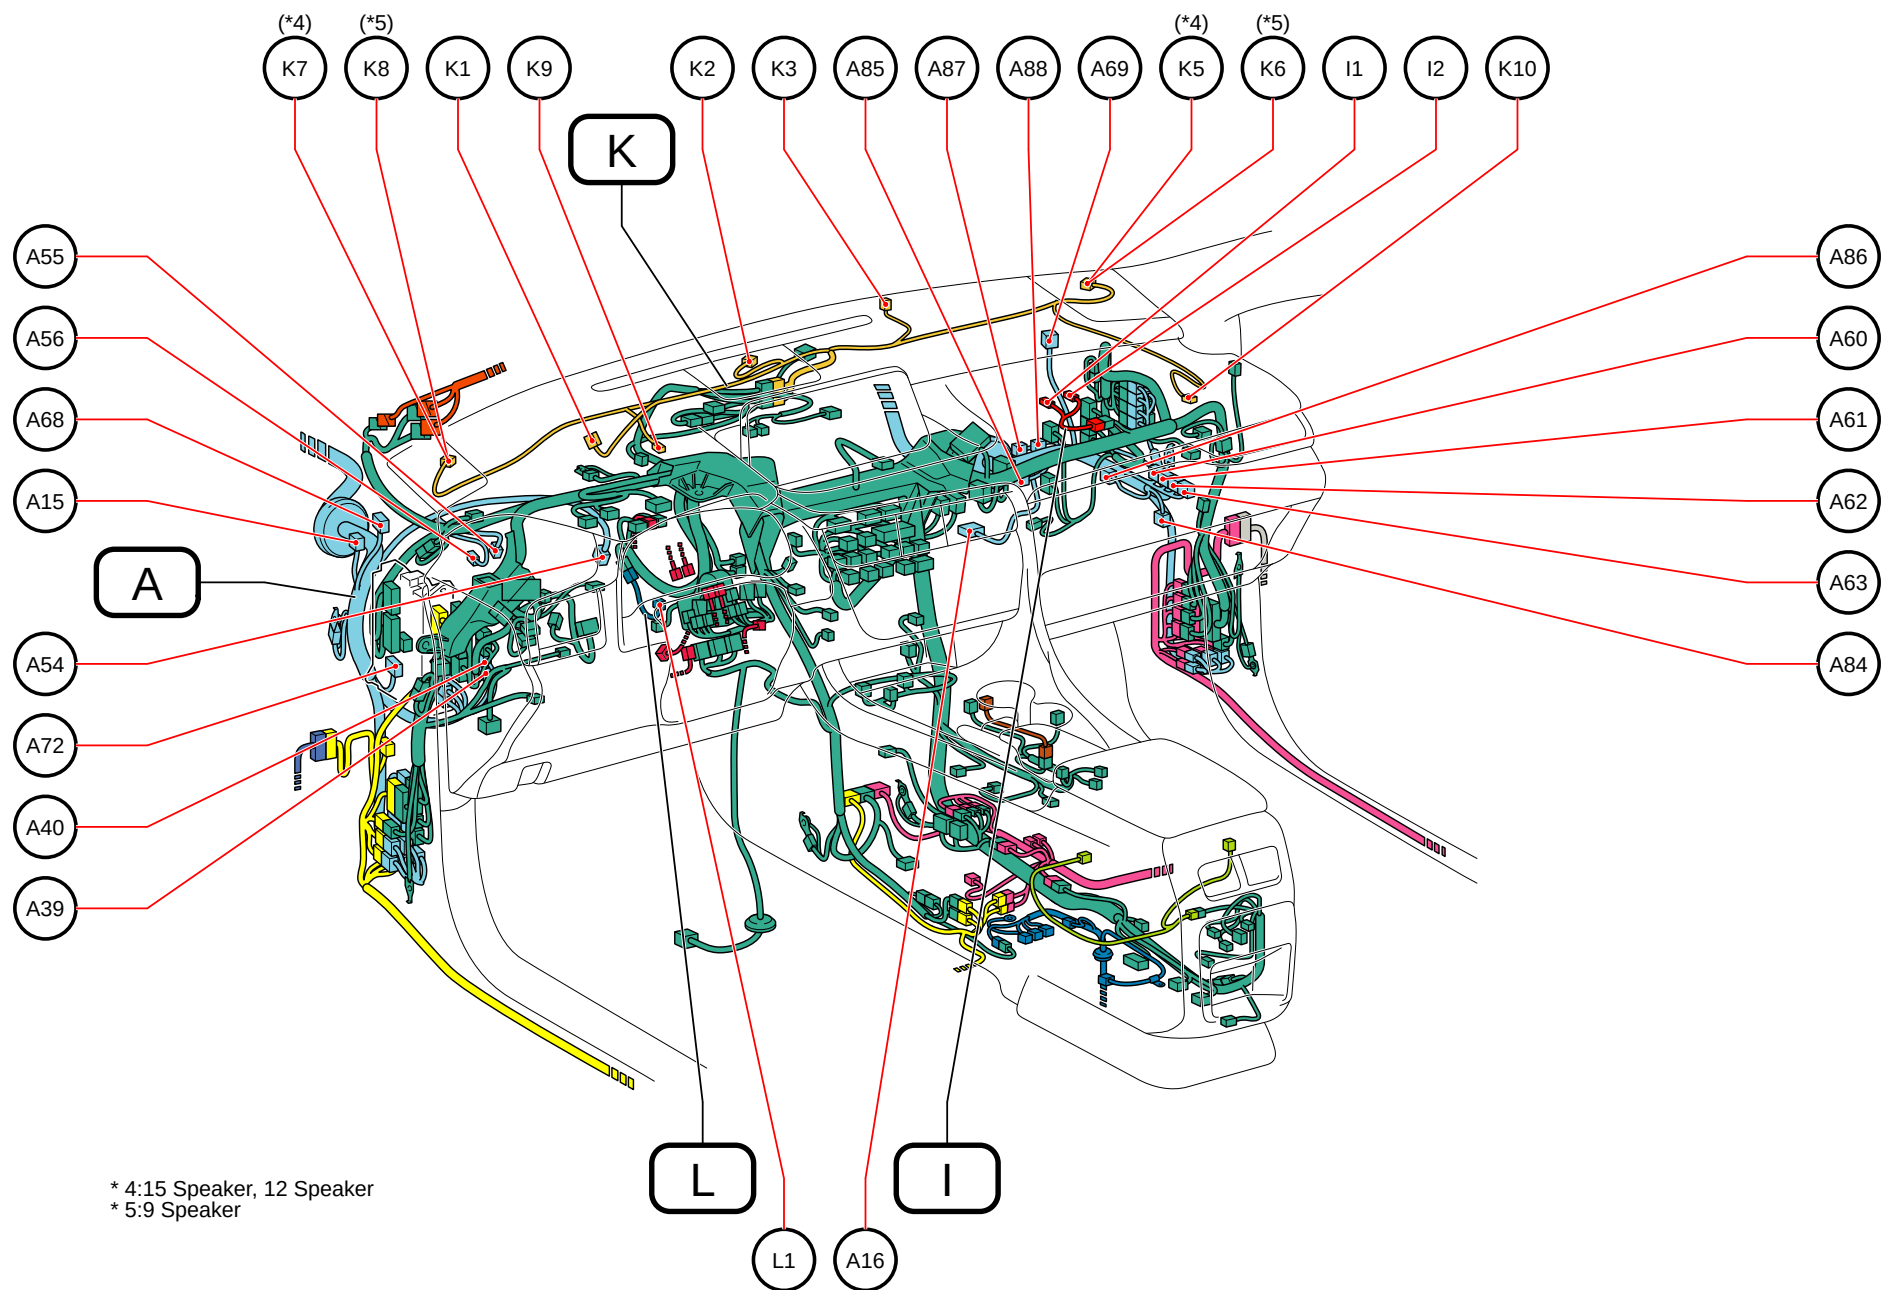


A15	Skid Control Buzzer Assembly
A16	Blower Motor with Fan Sub-Assembly
A39	Hybrid Vehicle Control ECU
A40	Hybrid Vehicle Control ECU
A54	Accelerator Pedal Sensor Assembly
A55	Stop Light Switch Assembly
A56	Brake Pedal Stroke Sensor Assembly
A60	Skid Control ECU Assembly
A61	Skid Control ECU Assembly
A62	Skid Control ECU Assembly
A63	Skid Control ECU Assembly
A68	Acceleration Sensor LH
A69	Acceleration Sensor RH
A72	Driving Support ECU Assembly
A84	No. 2 Junction Connector
A85	No. 3 Junction Connector
A86	No. 1 CAN Junction Connector
A87	No. 4 Junction Connector
A88	No. 5 Junction Connector
I1	Instrument Panel Passenger Airbag without Door Assembly
I2	Instrument Panel Passenger Airbag without Door Assembly
K1	Meter Mirror Sub-Assembly
K2	Front No. 3 Speaker Assembly
K3	Automatic Light Control Sensor
K5	Front No. 2 Speaker Assembly RH
K6	Front No. 2 Speaker Assembly RH
K7	Front No. 2 Speaker Assembly LH
K8	Front No. 2 Speaker Assembly LH
K9	Ion Generator Sub-Assembly
K10	Interior Illumination Light Sub-Assembly
L1	Steering Lock Actuator Assembly


Position of Parts in Instrument Panel (LHD)




90980-10860

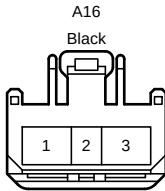


90980-11667

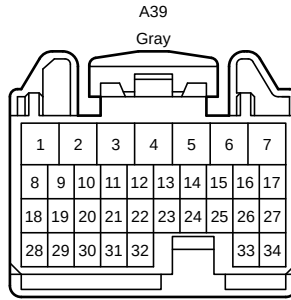


90980-12430

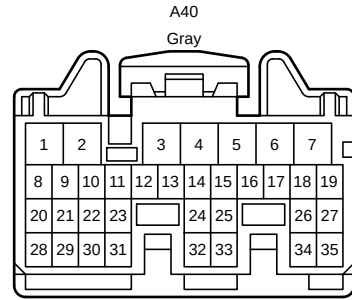


90980-12428

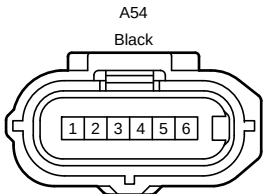


90980-12831

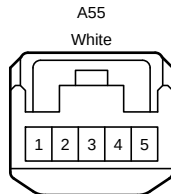


90980-12366

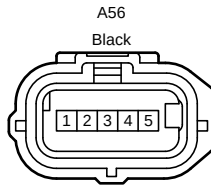


90980-12292

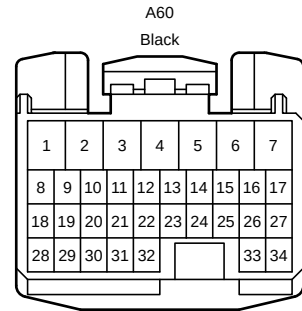


90980-12527

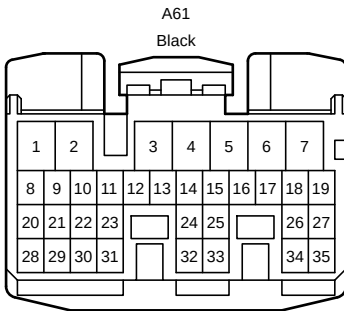


90980-12528

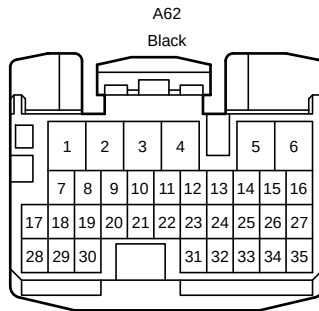


90980-12529

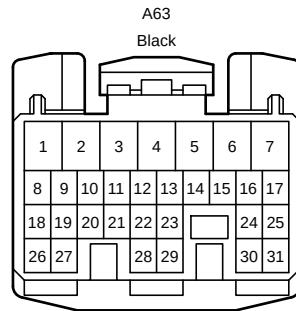


90980-12525

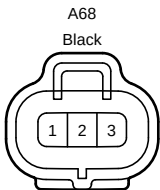

90980-10845

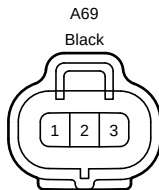


90980-10845

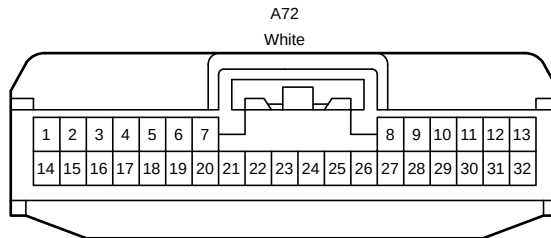


90980-12422


Position of Parts in Instrument Panel (LHD)

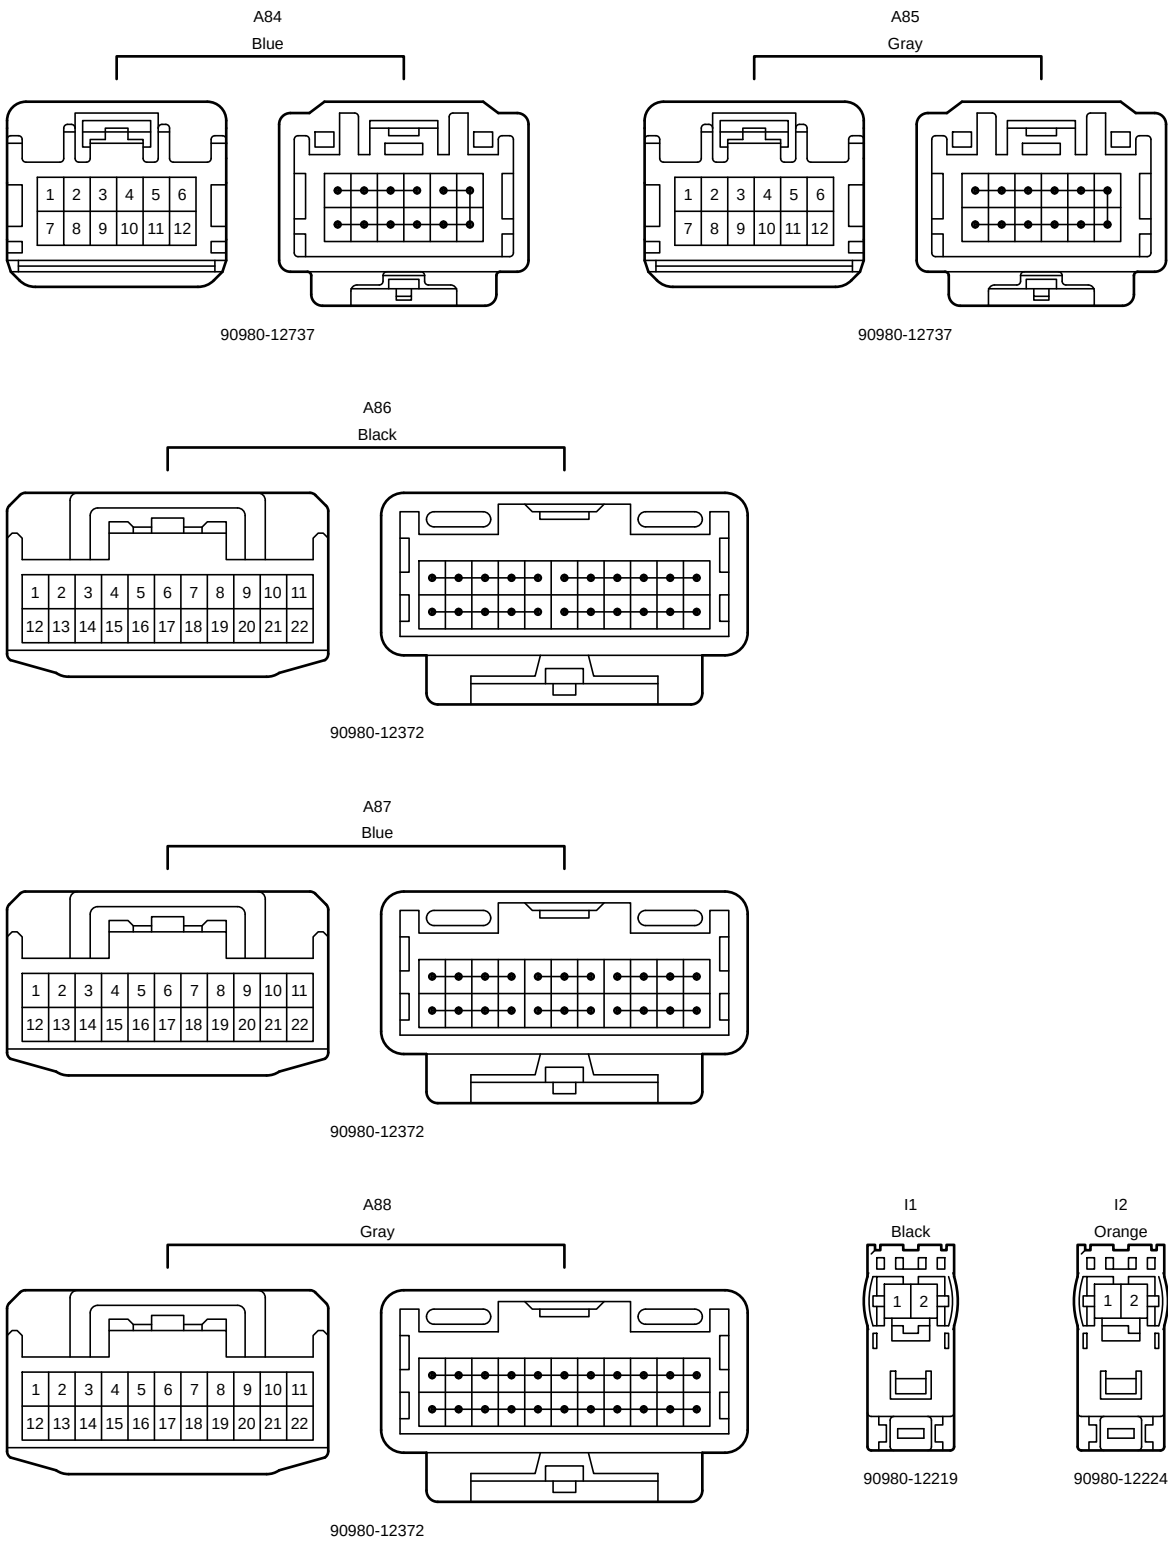


Position of Parts in Instrument Panel (LHD)

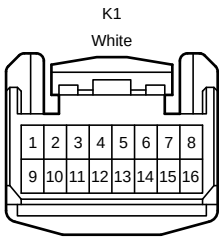


90980-12553

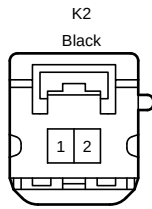


90980-12808

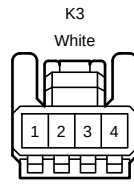


82824-50130

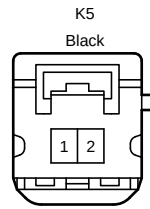


90980-12808

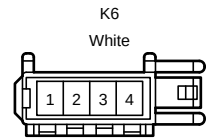


90980-12304

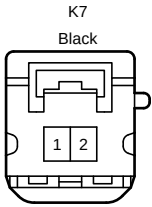

90980-12808

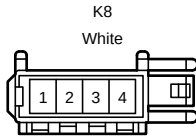


90980-12304

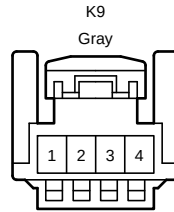

90980-12876



90980-12128

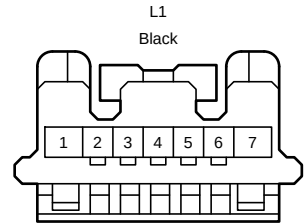

90980-12092