

INSTRUMENT PANEL SAFETY PAD

PRECAUTION

1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER

- (a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the SRS airbag NOTICE (See page [RS-1](#)).


2. WHEN DISCONNECTING BATTERY NEGATIVE TERMINAL

NOTICE:


When disconnecting the cable from the negative battery terminal, initialize the following systems after the cable is reconnected.

System Name	See procedure
Lighting System (Adaptive Front-Lighting System)	LI-17
Power Window Control System	WS-12
Power Back Door System	ED-33
Sliding Roof System (for Standard)	RF-22
Sliding Roof System (for Multi-panel Moon Roof)	RF-4


COMPONENTS

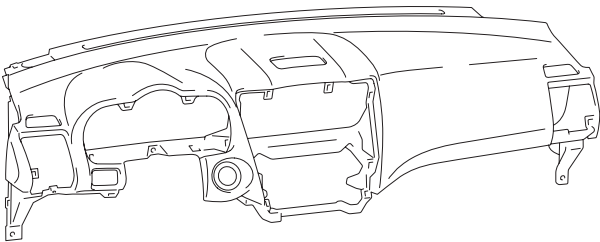


w/ Navigation System:

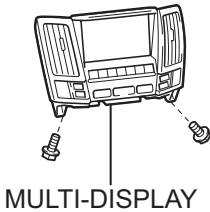

w/o Navigation System:

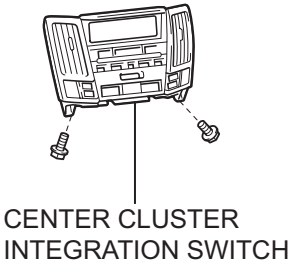

RADIO RECEIVER

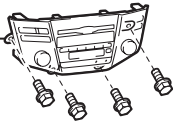

INSTRUMENT PANEL FINISH PANEL LOWER





SHIFT LEVER KNOB SUB-ASSEMBLY



CONSOLE PANEL UPPER FRONT

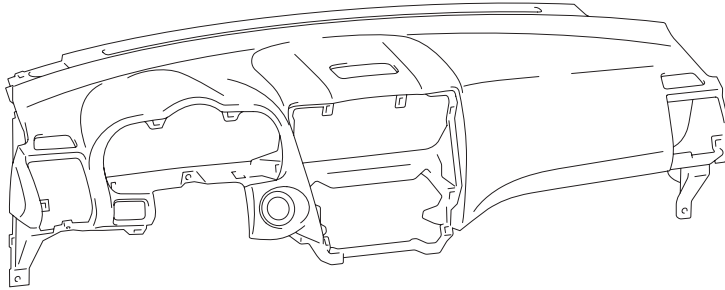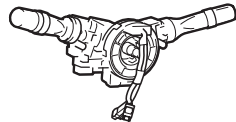


TURN SIGNAL SWITCH ASSEMBLY
WITH SPIRAL CABLE SUB-ASSEMBLY

w/ Power Tilt and Power Telescopic:



TILT AND TELESCOPIC SWITCH

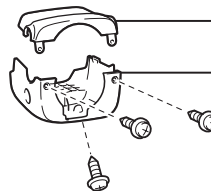


STEERING COLUMN COVER

STEERING WHEEL NO.2 COVER LOWER

STEERING WHEEL ASSEMBLY

STEERING WHEEL NO.3 COVER LOWER

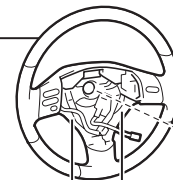

50 (510, 37)


8.8 (90, 78 in.*lbf)



STEERING PAD

N*m (kgf*cm, ft.*lbf) : Specified torque

IP

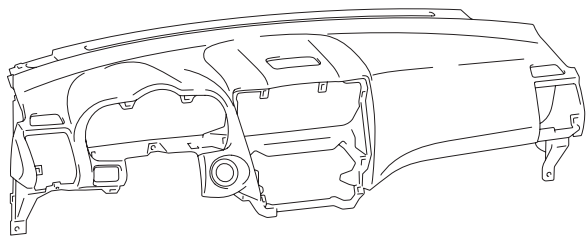

COWL SIDE TRIM SUB-ASSEMBLY RH





COWL SIDE TRIM SUB-ASSEMBLY LH

FRONT DOOR SCUFF PLATE RH




FRONT DOOR SCUFF PLATE LH

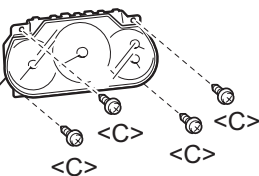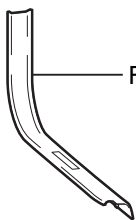


COMBINATION METER ASSEMBLY




INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

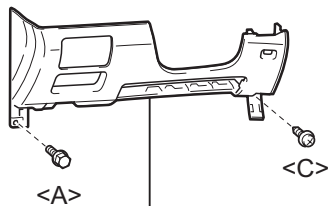


INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER

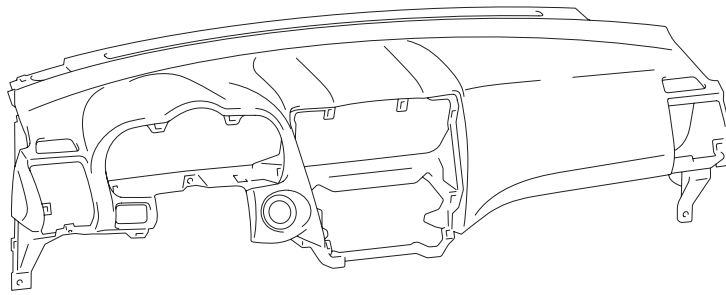


DRIVER SIDE KNEE AIRBAG
ASSEMBLY

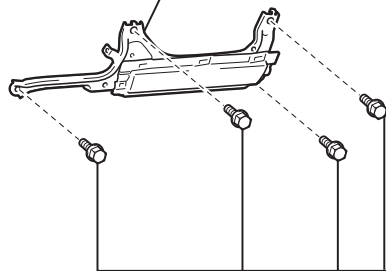


7.6 (77, 67 in.*lbf)

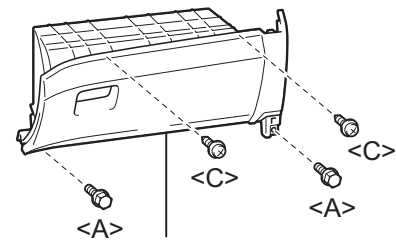


GLOVE COMPARTMENT DOOR ASSEMBLY

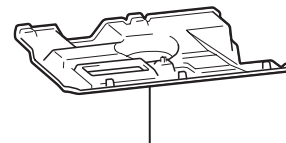


INSTRUMENT PANEL NO.2 UNDER COVER SUB-ASSEMBLY

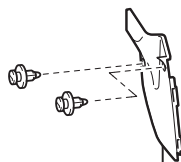

FLOOR CARPET COVER CENTER LH

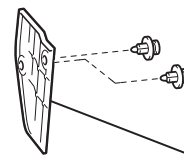


FLOOR CARPET COVER CENTER RH

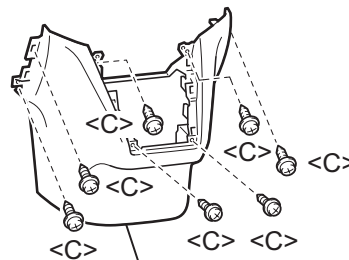

INSTRUMENT PANEL FINISH PANEL
LOWER CENTER




N*m (kgf*cm, ft.*lbf) : Specified torque


IP

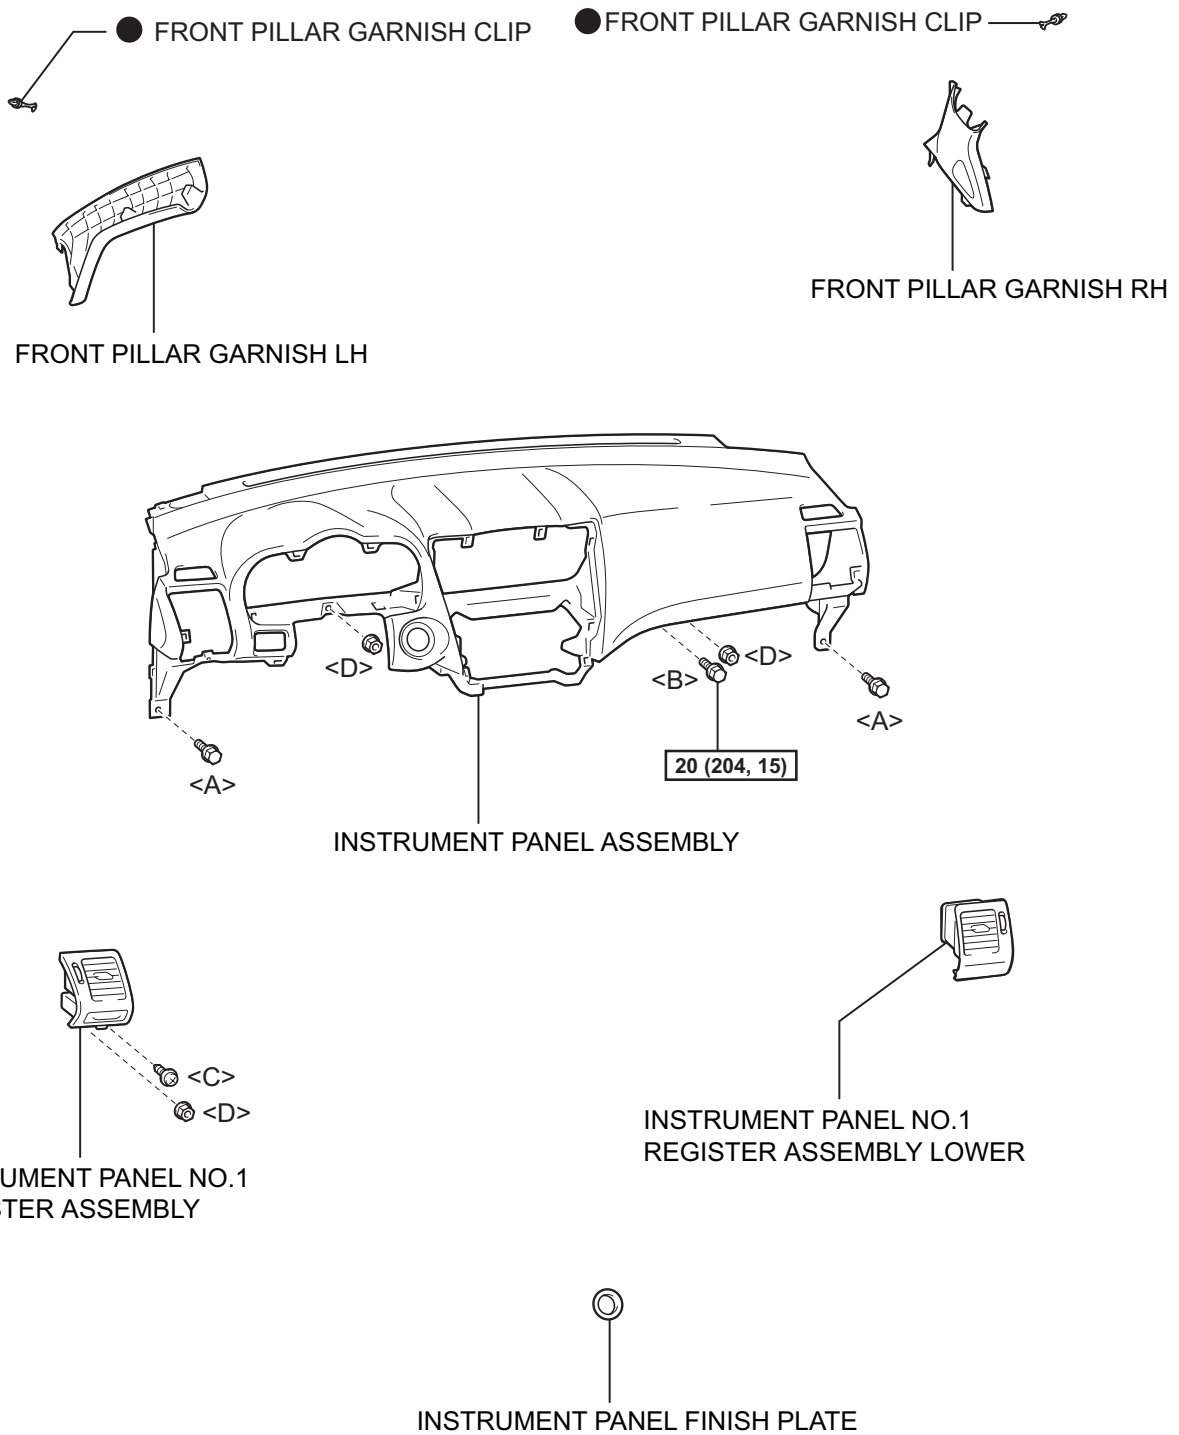

$\boxed{\text{N*m (kgf*cm, ft.*lbf)}}$: Specified torque

 ● Non-reusable part

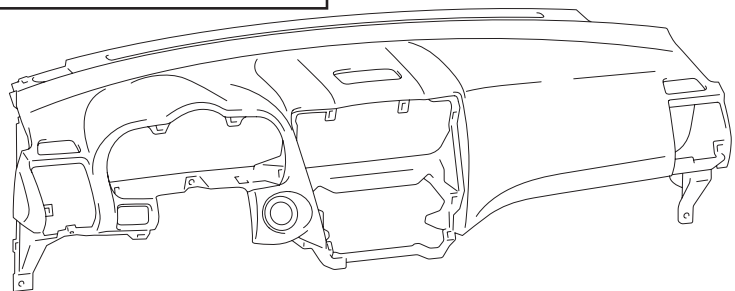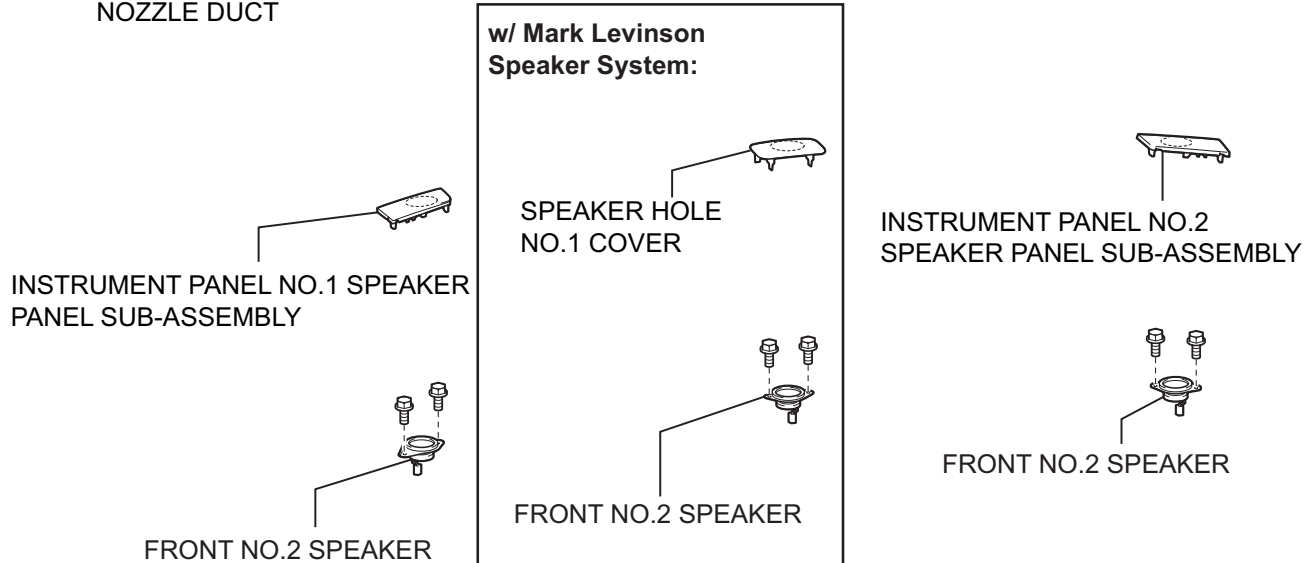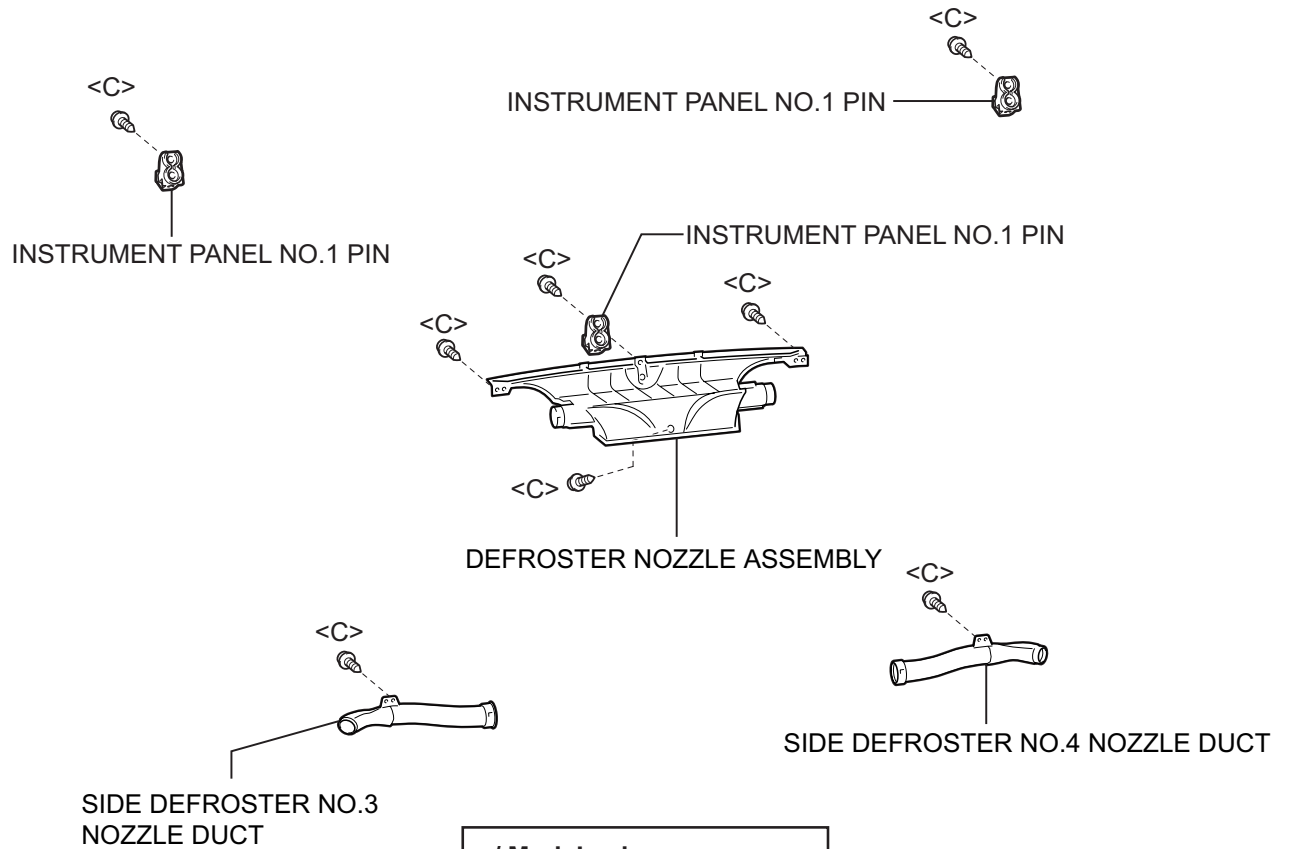




DEFROSTER NOZZLE NO.1 GARNISH




SIDE DEFROSTER NO.2 NOZZLE DUCT




SIDE DEFROSTER NO.1 NOZZLE DUCT

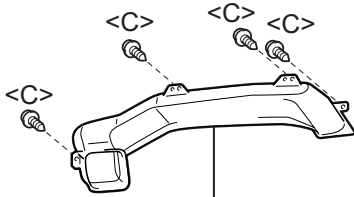


HEATER TO REGISTER NO.1 DUCT

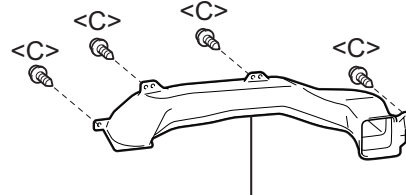

HEATER TO REGISTER NO.4 DUCT

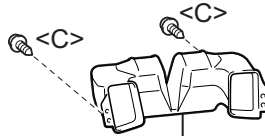


HEATER TO REGISTER CENTER SUB DUCT

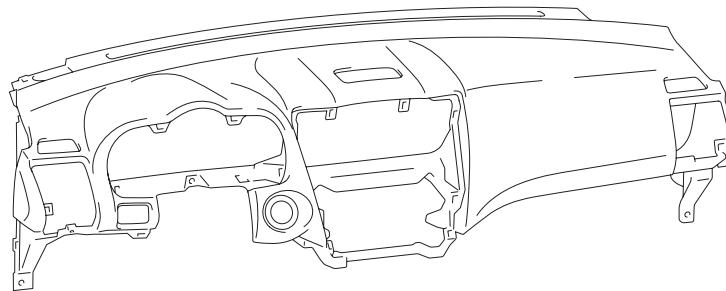


SIDE DEFROSTER NO.2 NOZZLE



SIDE DEFROSTER NO.1 NOZZLE

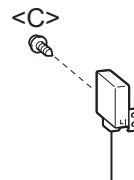


NETWORK GATEWAY ECU

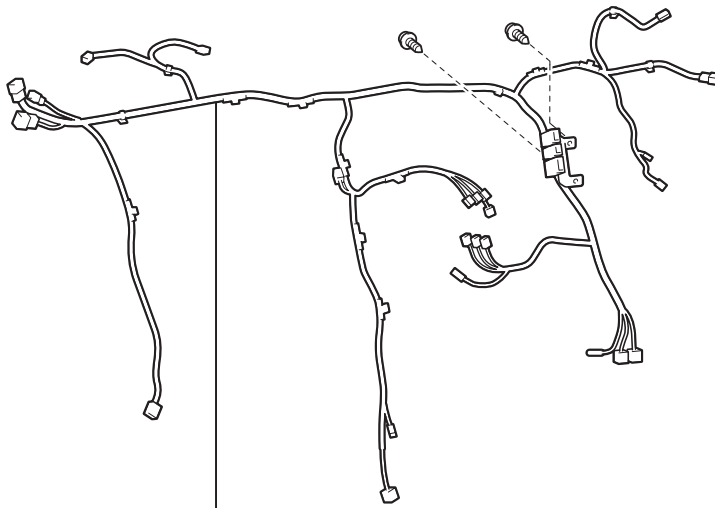

INSTRUMENT PANEL NO.2 WIRE




AUTOMATIC LIGHT CONTROL SENSOR

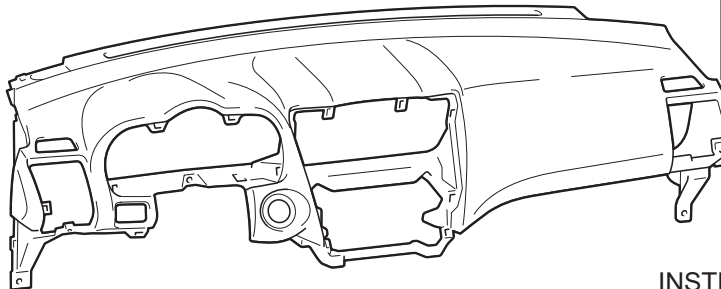


INSTRUMENT PANEL SAFETY PAD

w/o Navigation System:

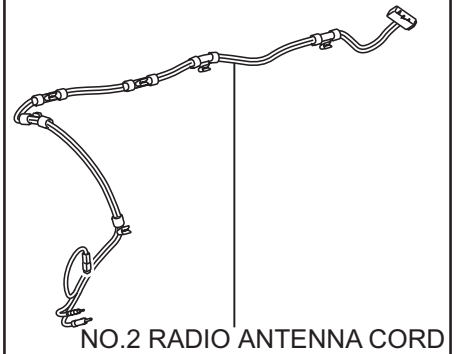


NO.2 RADIO ANTENNA CORD

w/ Navigation System:

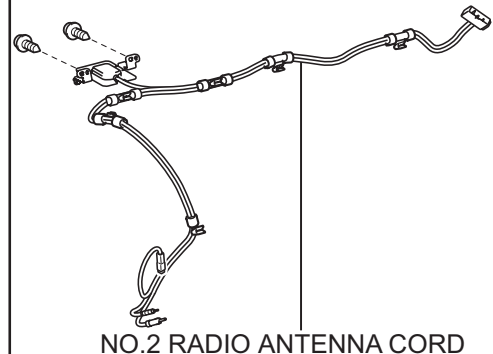

NO.2 RADIO ANTENNA CORD


FRONT PASSENGER AIRBAG ASSEMBLY

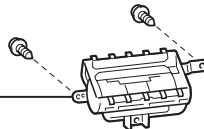

GLOVE BOX LIGHT ASSEMBLY



 INSTRUMENT PANEL BRACKET
SUB-ASSEMBLY CENTER







REMOVAL

1. BOLT, SCREW AND NUT TABLE

HINT:
The bolts, screws and nuts, necessary for installation and removal of the instrument panel, are shown in the illustration below with alphabet code.

  mm (in.) (L=Length)

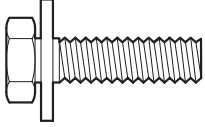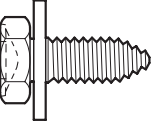Code	Shape	Code	Shape	Code	Shape
<A>	 $\varphi=6$ (0.24) L=25 (0.98) 91635-60625		 $\varphi=8$ (0.31) L=20 (0.79) 91635 - 60820	<C>	 $\varphi=5$ (0.20) L=16 (0.63) B50922 93567-55016
<D>	 $\varphi=6$ (0.24) B51347 90179-06200				

P


B108505E01

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:
Wait for 90 seconds after disconnecting the cable to prevent the airbag working (See page RS-1).


3. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY

- (a) Turn the shift lever knob counterclockwise and remove the shift lever knob sub-assembly.

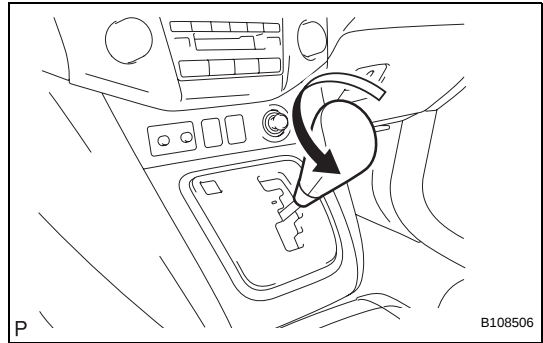


P

B108506

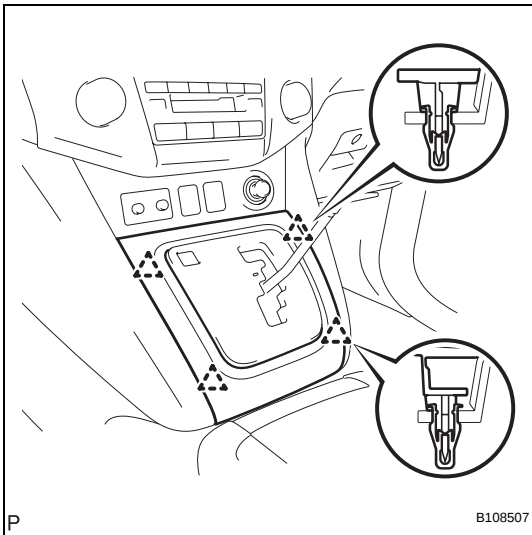
**4. REMOVE CONSOLE PANEL UPPER FRONT**

- (a) Disengage the 4 clips and remove the console panel upper front.

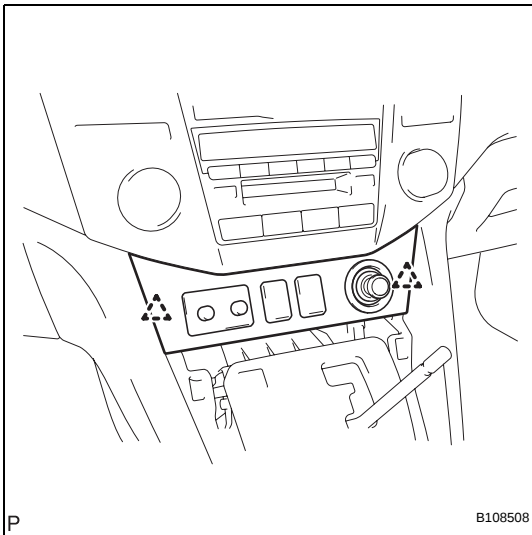**5. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER**


- (a) Disengage the 2 clips.
(b) Disconnect the connectors and remove the instrument panel finish panel lower.

6. REMOVE RADIO RECEIVER (See page [AV-232](#))**7. REMOVE CENTER CLUSTER INTEGRATION SWITCH (w/o Navigation System) (See page [AC-186](#))****8. REMOVE MULTI-DISPLAY (w/ Navigation System) (See page [AV-235](#))****9. REMOVE STEERING WHEEL NO.2 COVER LOWER (See page [RS-387](#))****10. REMOVE STEERING WHEEL NO.3 COVER LOWER (See page [RS-387](#))****11. REMOVE STEERING PAD (See page [RS-388](#))****12. REMOVE STEERING WHEEL ASSEMBLY (See page [SR-40](#))****13. REMOVE STEERING COLUMN COVER (See page [SR-40](#))****14. REMOVE TILT AND TELESCOPIC SWITCH (for Power Tilt and Power Telescopic) (See page [SR-51](#))****15. REMOVE TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY****16. REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-6](#))**

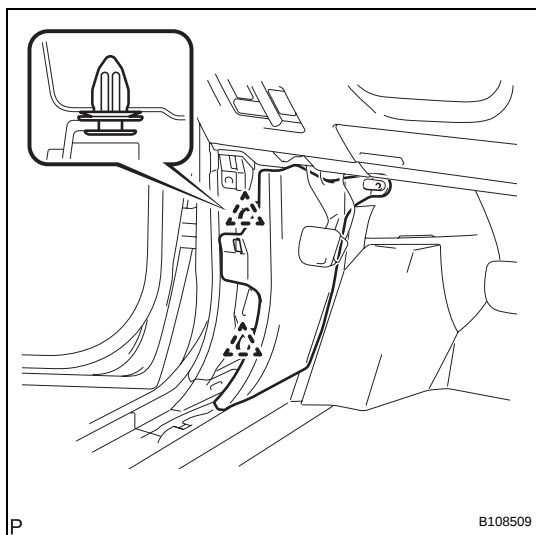

17. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH


- (a) Remove the 2 clips and the cowl side trim sub-assembly LH.

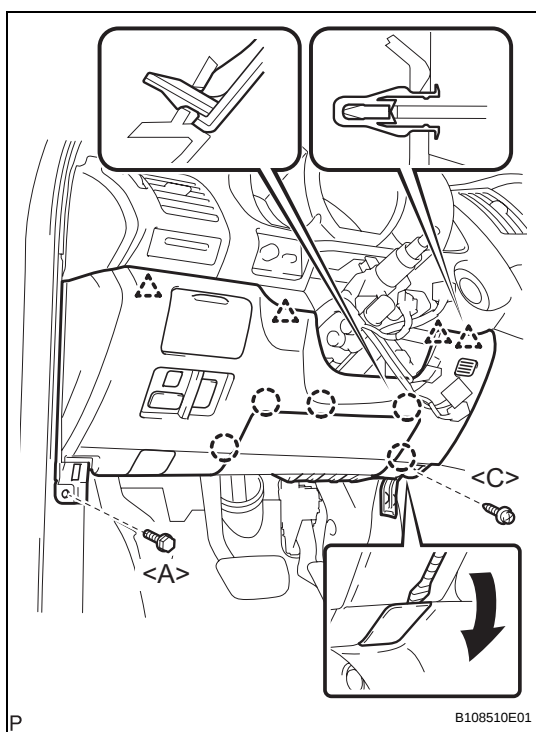

18. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER


- (a) Using a screwdriver, open the instrument panel finish panel sub-assembly lower cover.
HINT:
Tape the screwdriver tip before use.
- (b) Remove the bolt <A> and the screw <C>.
- (c) Disconnect the hood lock control cable assembly.
- (d) Disengage the 5 claws and the 4 clips.
- (e) Disconnect the connectors and remove the instrument panel finish panel sub-assembly lower.

19. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY (See page [RS-403](#))

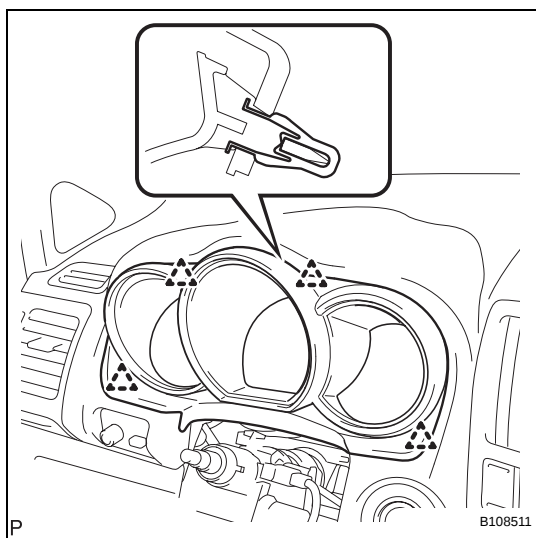

20. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

- (a) Disengage the 4 clips and remove the instrument cluster finish panel sub-assembly.

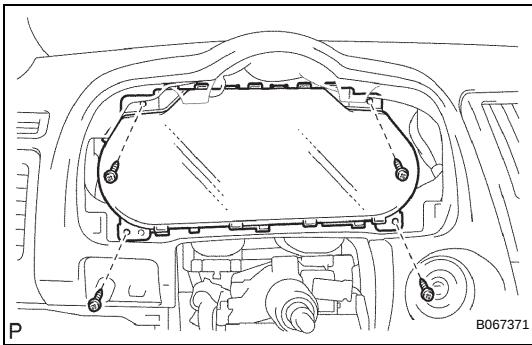**21. REMOVE COMBINATION METER ASSEMBLY**

- (a) Remove the 4 screws <C>.
- (b) Pull out the combination meter assembly, then disconnect the connectors.

22. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures for the RH side and the LH side.

23. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

Use the same procedures for the RH side and the LH side.

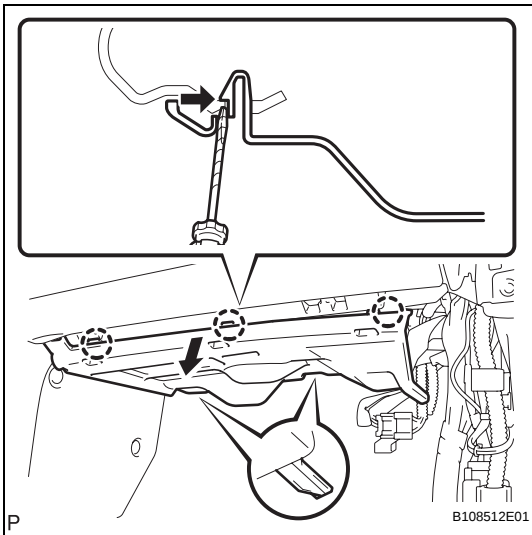
**24. REMOVE INSTRUMENT PANEL NO.2 UNDER COVER SUB-ASSEMBLY**

- (a) Using a screwdriver, push the 3 claws in the direction indicated by the arrow to disengage and remove the guide on the front of the vehicle.


HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connectors and remove the instrument panel No.2 under cover sub-assembly.

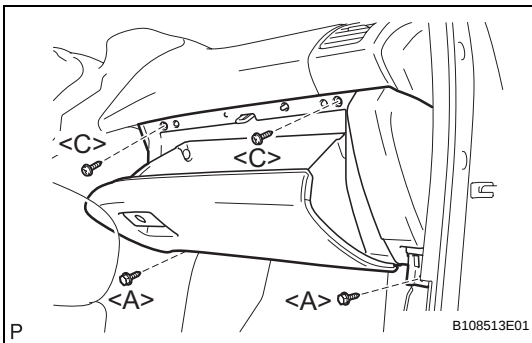**25. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY**

- (a) Remove the 2 bolts <A> and the 2 screws <C>.
- (b) Pull the glove compartment door assembly to the rear to remove it.
- (c) Disconnect the connector.

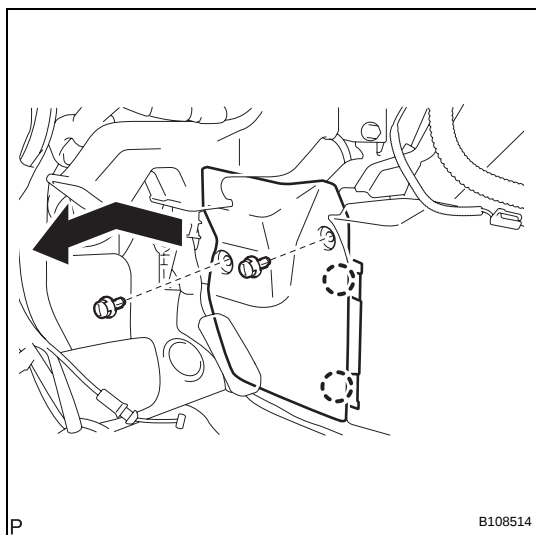

P

B108514


26. REMOVE FLOOR CARPET COVER CENTER LH

- (a) Remove the 2 clips from the floor carpet cover center LH.
- (b) Depress the edge of the floor carpet cover center LH around the claws to disengage the 2 claws below the floor carpet cover center LH.
- (c) Slide the floor carpet cover center LH to the front of the vehicle, and disengage the 2 claws from the instrument panel finish panel lower center at the floor carpet cover center LH.
- (d) Remove the floor carpet cover center LH.

27. REMOVE FLOOR CARPET COVER CENTER RH

HINT:

Use the same procedures for RH side and the LH side.

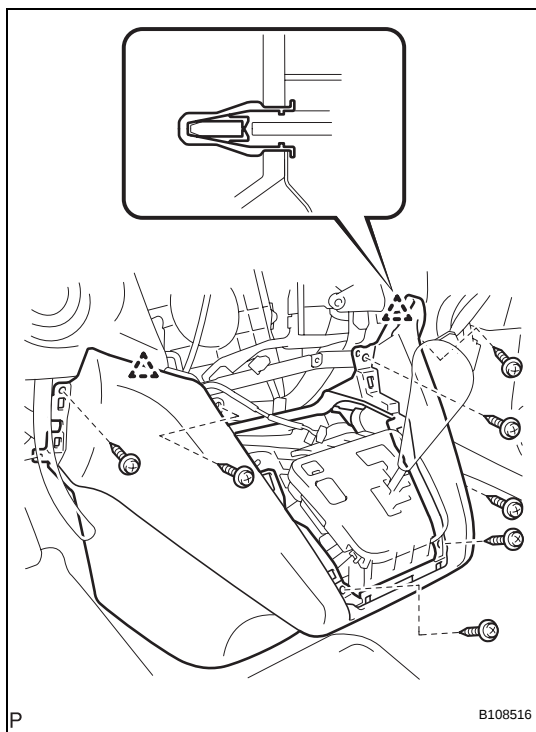

P

B108516

28. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER


- (a) Remove the 7 screws <C>.
- (b) Disengage the 2 clips and remove the instrument panel finish panel lower center.

29. REMOVE FRONT PILLAR GARNISH LH (See page [IR-7](#))**30. REMOVE FRONT PILLAR GARNISH RH**

HINT:


Use the same procedures for the RH side and the LH side.

31. REMOVE INSTRUMENT PANEL FINISH PLATE

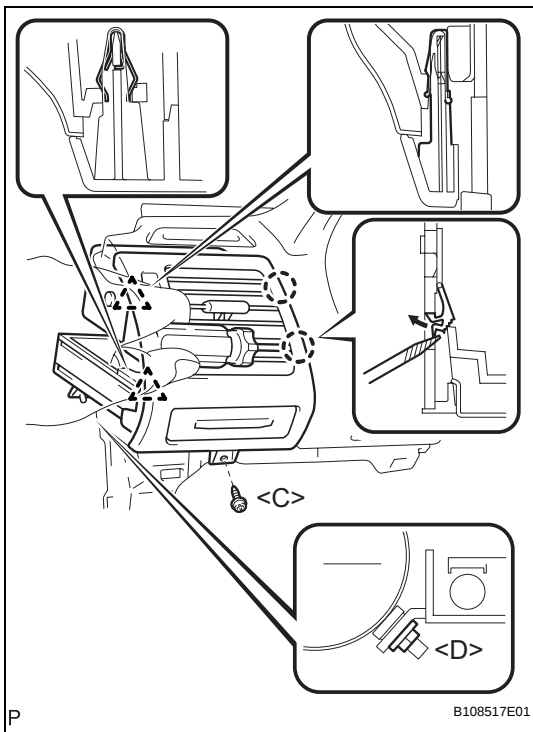

32. REMOVE INSTRUMENT PANEL NO.1 REGISTER ASSEMBLY

- (a) Remove the screw <C> and nut <D>.
- (b) Using a screwdriver, lever up the 2 claws on the body from inside of the register.
HINT:
Tape the screwdriver tip before use.
- (c) Disengage the 2 clips and remove the instrument panel No.1 register assembly.

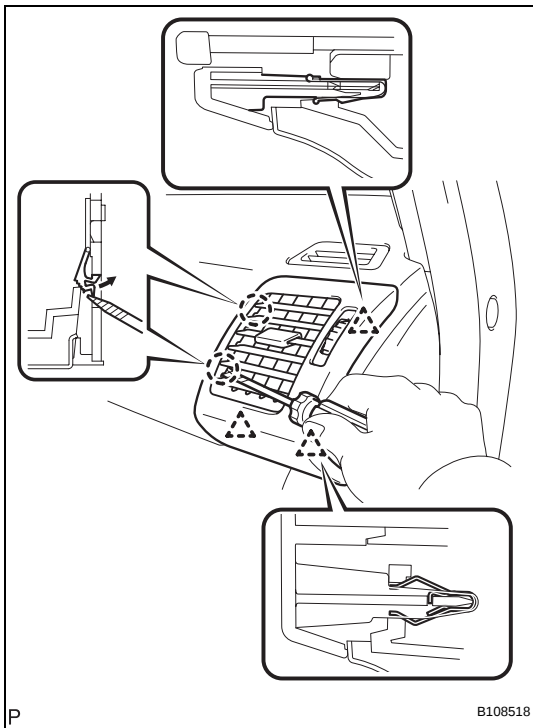


33. REMOVE INSTRUMENT PANEL NO.1 REGISTER ASSEMBLY LOWER


- (a) Using a screwdriver, lever up the 2 claws on the body from inside of the register.
HINT:
Tape the screwdriver tip before use.
- (b) Disengage the 3 clips and remove the instrument panel No.1 register assembly lower.

34. REMOVE INSTRUMENT PANEL ASSEMBLY

- Remove the 2 bolts <A>, bolt and 2 nuts <D> as shown in the illustration.
- Disconnect each of the clamps and the connectors.


- (c) Pull the instrument panel assembly to the rear and check that none of the wire harness is stuck in the body.

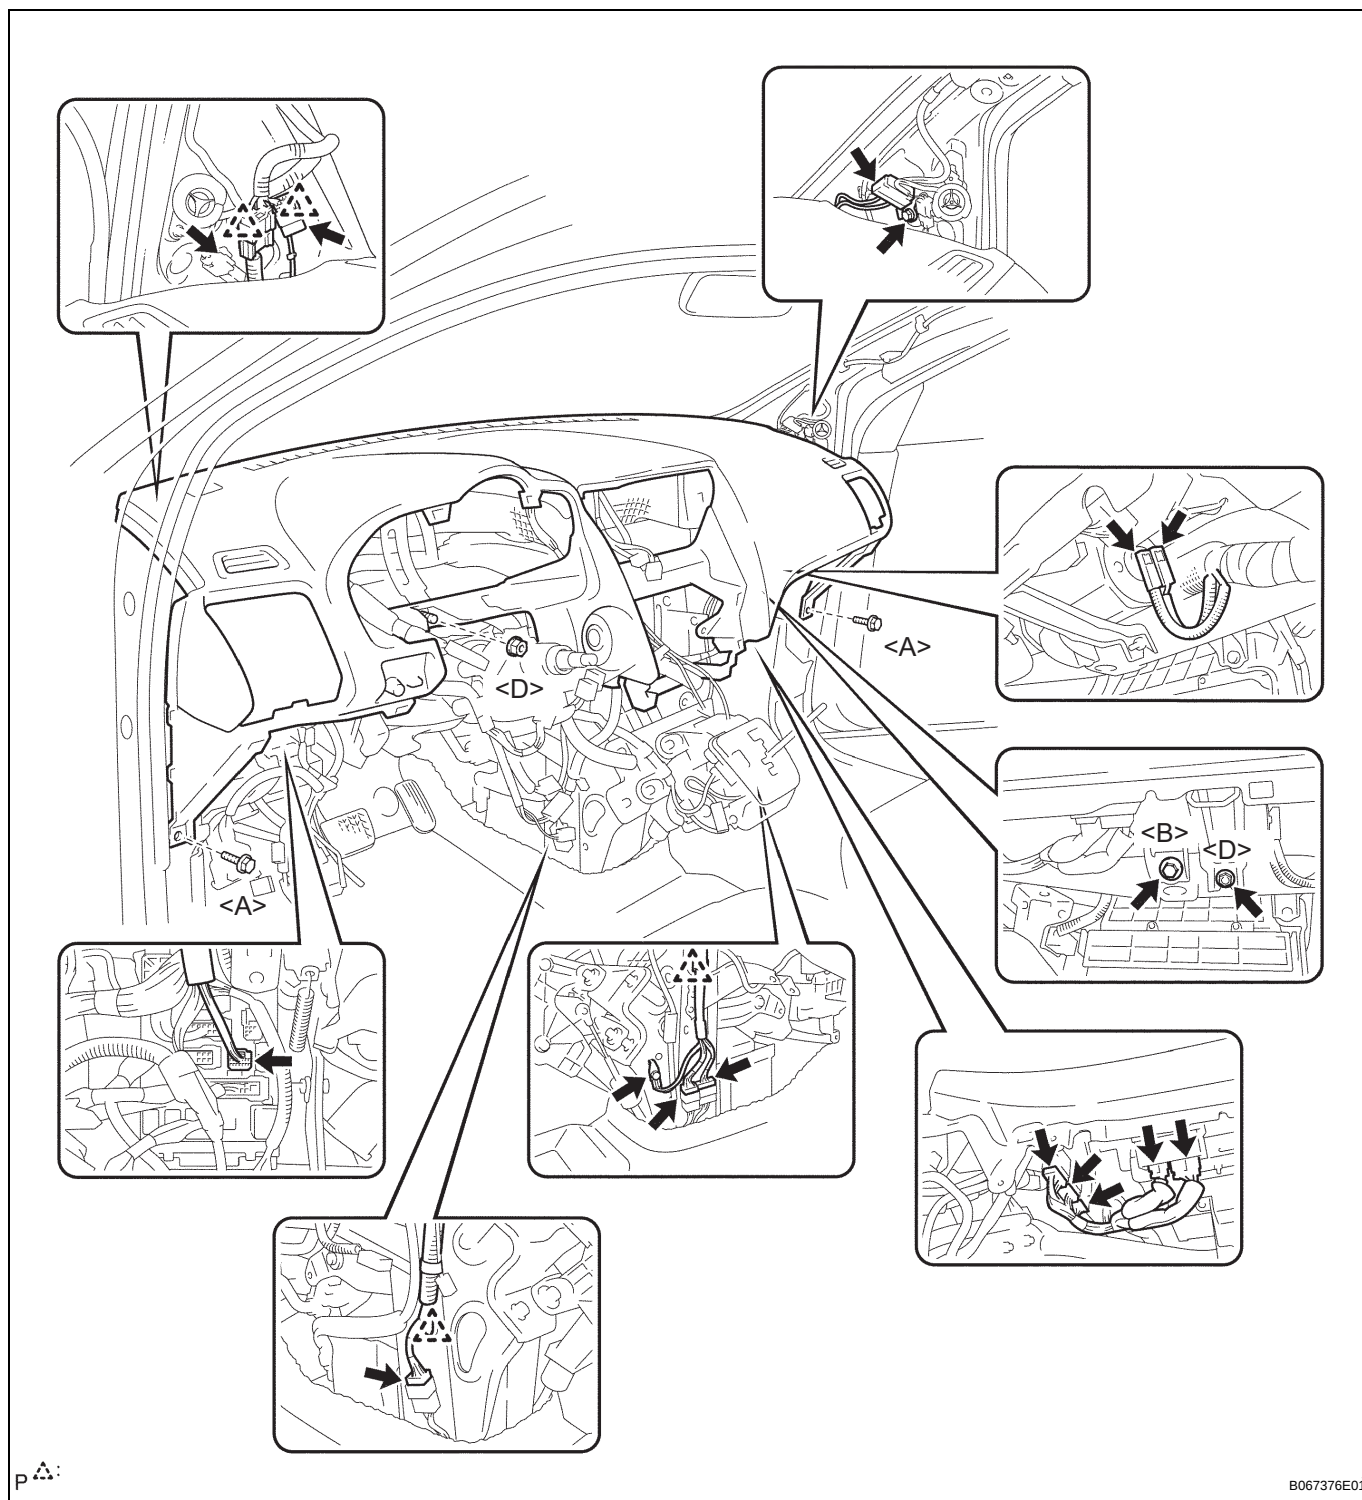

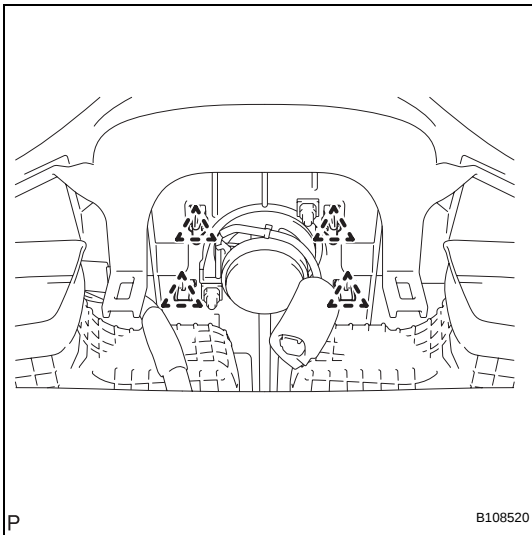

DISASSEMBLY

1. **REMOVE SPEAKER HOLE NO.1 COVER (w/ Mark Levinson Speaker System)**
 - (a) Disengage the 4 clips and remove the speaker hole No.1 cover.

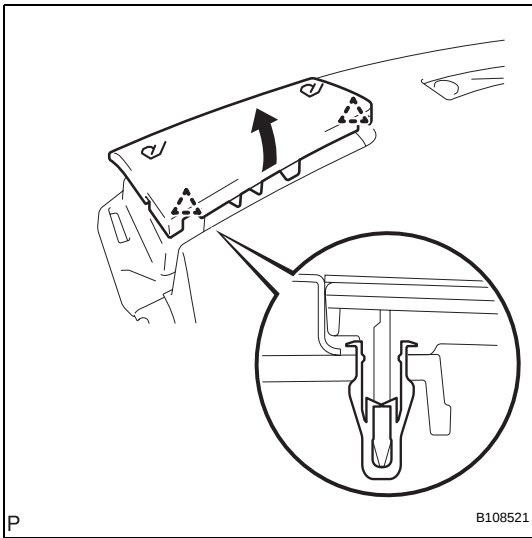



2. **REMOVE INSTRUMENT PANEL NO.1 SPEAKER PANEL SUB-ASSEMBLY**
 - (a) Disengage the 2 clips and remove the instrument panel No.1 speaker panel sub-assembly.
3. **REMOVE INSTRUMENT PANEL NO.2 SPEAKER PANEL SUB-ASSEMBLY**

HINT:
Use the same procedures for the instrument panel No.2 speaker panel sub-assembly and the instrument panel No.1 speaker panel sub-assembly.
4. **REMOVE FRONT NO.2 SPEAKER (w/ Mark Levinson Speaker System) (See page [AV-244](#))**
5. **REMOVE FRONT NO.2 SPEAKER (for Driver Side) (See page [AV-245](#))**
6. **REMOVE FRONT NO.2 SPEAKER (for Front Passenger Side)**

HINT:
Use the same procedures for the driver side and passenger side.
7. **REMOVE SIDE DEFROSTER NO.3 NOZZLE DUCT**
 - (a) Remove the screw <C> and the side defroster No.3 nozzle duct.
8. **REMOVE SIDE DEFROSTER NO.4 NOZZLE DUCT**


HINT:
Use the same procedures for the side defroster No.4 nozzle duct and the side defroster No.3 nozzle duct.

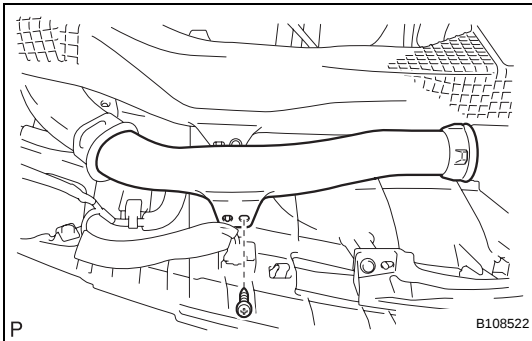

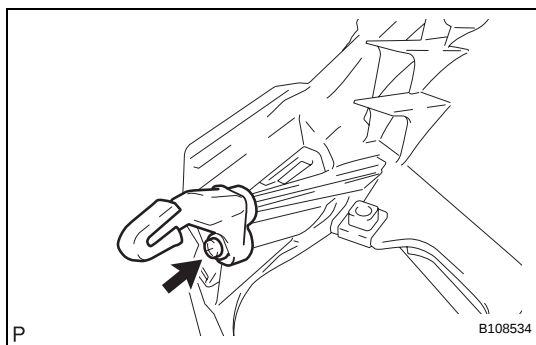


9. REMOVE INSTRUMENT PANEL NO.1 PIN

- (a) Remove the screw <C> and the instrument panel No.1 pin.

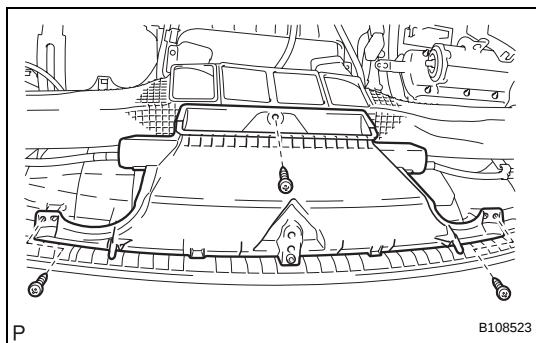

10. REMOVE DEFROSTER NOZZLE ASSEMBLY

- (a) Remove the 3 screws <C> and the defroster nozzle assembly.

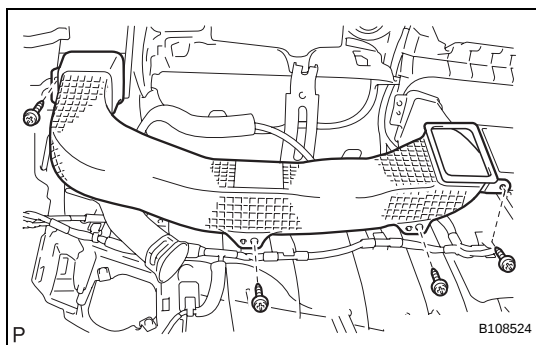


11. REMOVE HEATER TO REGISTER NO.1 DUCT

- (a) Remove the 4 screws <C> and the heater to register No.1 duct.

12. REMOVE HEATER TO REGISTER NO.4 DUCT


HINT:

Use the same procedures for the heater to register No.4 duct and the heater to register No.1 duct.

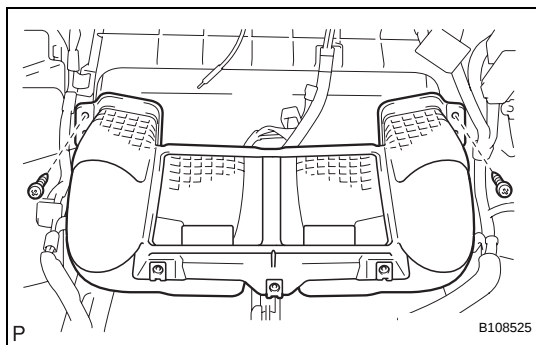

13. REMOVE HEATER TO REGISTER CENTER SUB DUCT

- (a) Remove the 2 screws <C> and the heater to register center sub duct.

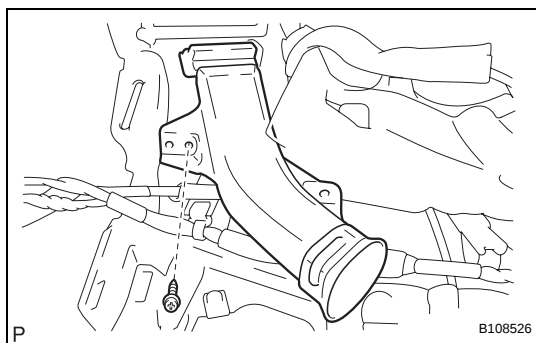


14. REMOVE SIDE DEFROSTER NO.1 NOZZLE DUCT

- (a) Remove the screw <C> and the side defroster No.1 nozzle duct.

15. REMOVE SIDE DEFROSTER NO.2 NOZZLE DUCT

HINT:

Use the same procedures for the side defroster No.2 nozzle duct and the side defroster No.1 nozzle duct.

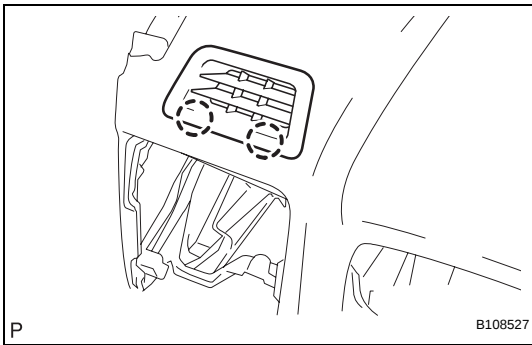**16. REMOVE SIDE DEFROSTER NO.1 NOZZLE**

- (a) Disengage the 2 claws and remove the side defroster No.1 nozzle.


17. REMOVE SIDE DEFROSTER NO.2 NOZZLE

HINT:


Use the same procedures for the side defroster No.2 nozzle and the side defroster No.1 nozzle.

18. REMOVE NETWORK GATEWAY ECU


- (a) Remove the screw <C> and the network gateway ECU.

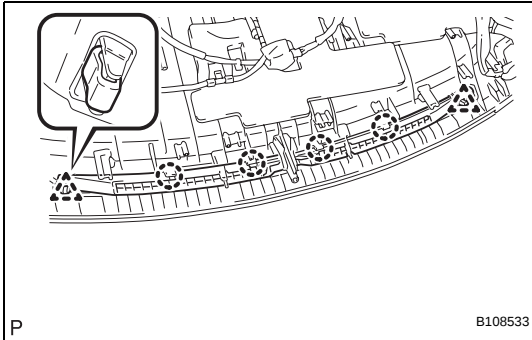**19. REMOVE DEFROSTER NOZZLE NO.1 GARNISH**

- (a) Disengage the 2 clips and 4 claws then remove the defroster nozzle No.1 garnish.

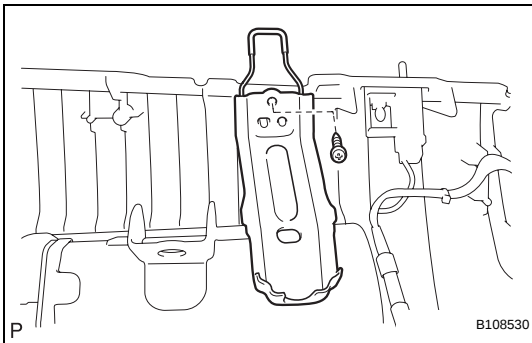**20. REMOVE INSTRUMENT PANEL BRACKET SUB-ASSEMBLY CENTER**

- (a) Remove the screw <C> and the instrument panel bracket sub-assembly center.

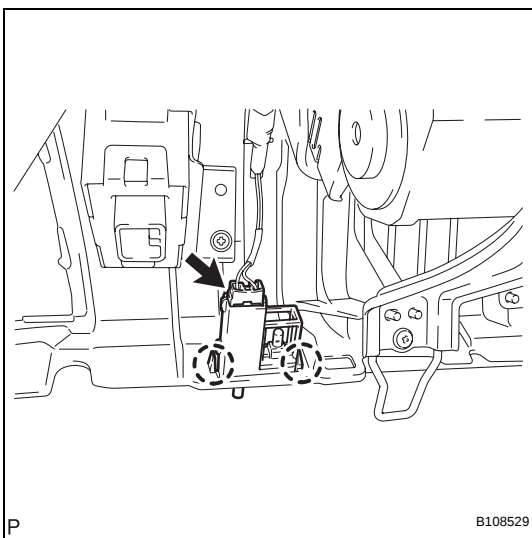
**21. REMOVE GLOVE BOX LIGHT ASSEMBLY**

- (a) Disconnect the connector.
(b) Disengage the 2 claws and remove the glove box light assembly.

22. REMOVE NO.2 RADIO ANTENNA CORD (w/o Navigation System) (See page [AV-269](#))**23. REMOVE NO.2 RADIO ANTENNA CORD (w/ Navigation System) (See page [AV-269](#))****24. REMOVE INSTRUMENT PANEL NO.2 WIRE**

- (a) Remove the 2 screws.


- (b) Disengage the 18 clamps and remove the instrument panel No.2 wire.

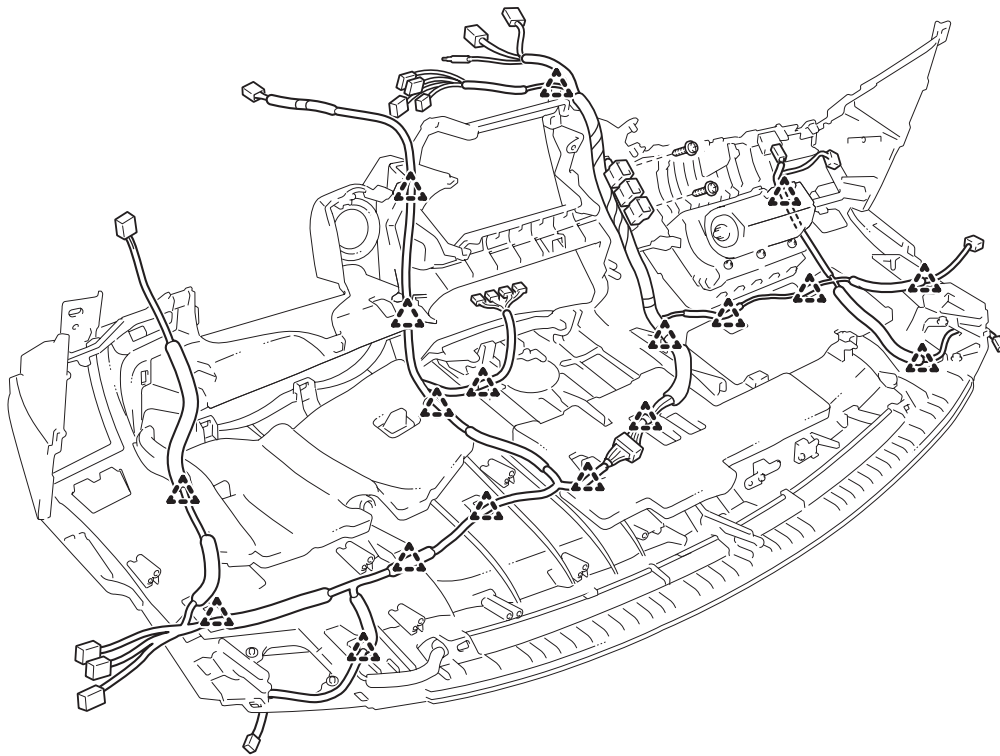

△: Clamp

P

B108531E01

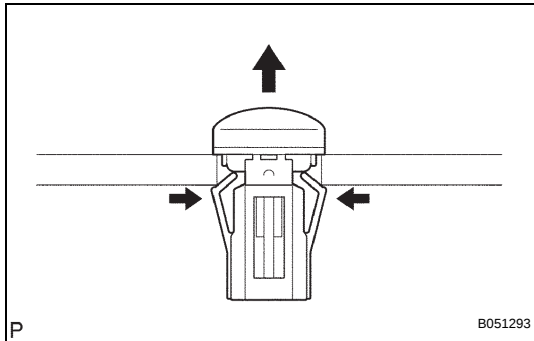

P

B051293

25. REMOVE AUTOMATIC LIGHT CONTROL SENSOR

- (a) Remove the automatic light control sensor.


NOTICE:

Do not pry the automatic light control sensor off from the upper position.

26. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page [RS-412](#))

REASSEMBLY

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY
2. INSTALL AUTOMATIC LIGHT CONTROL SENSOR
3. INSTALL INSTRUMENT PANEL NO.2 WIRE
 - (a) Engage the 18 clamps.
 - (b) Install the 2 screws and the instrument panel No.2 wire.

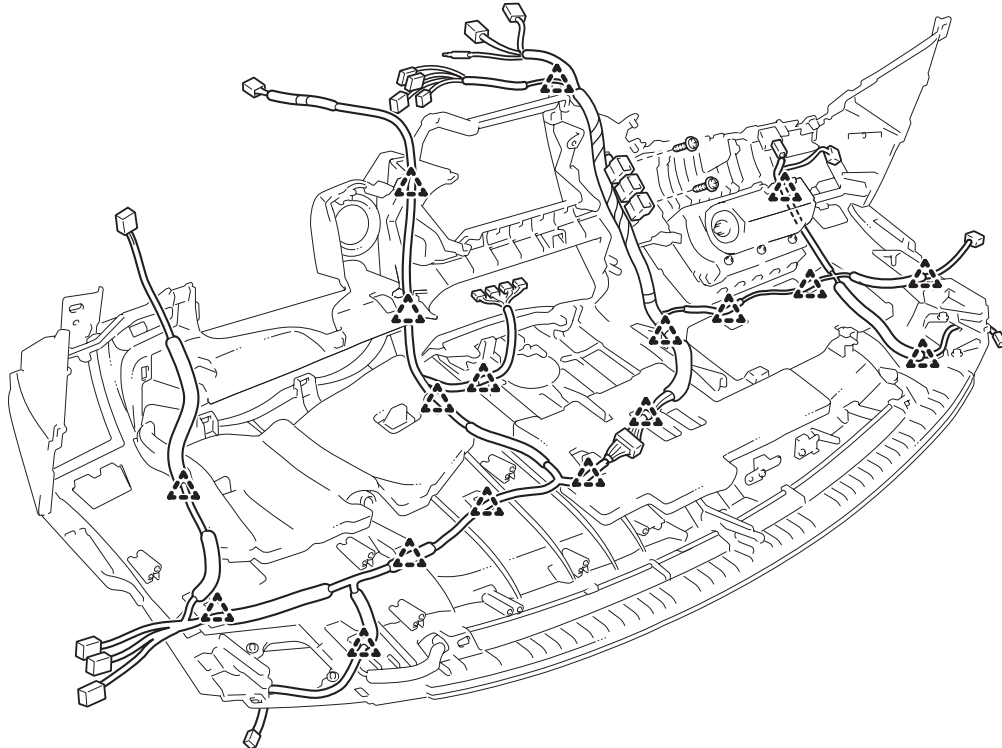


△ Clamp

P


B108531E01

4. INSTALL NO.2 RADIO ANTENNA CORD (w/ Navigation System) (See page [AV-278](#))
5. INSTALL NO.2 RADIO ANTENNA CORD (w/o Navigation System) (See page [AV-279](#))

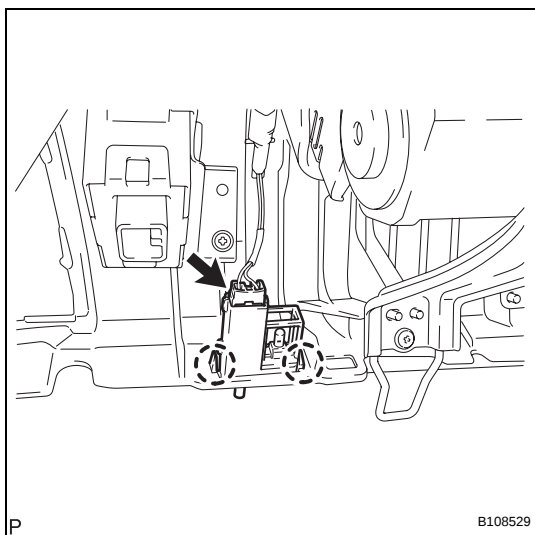


6. INSTALL GLOVE BOX LIGHT ASSEMBLY

- (a) Engage the 2 claws and install the glove box light assembly.
- (b) Connect the connector.

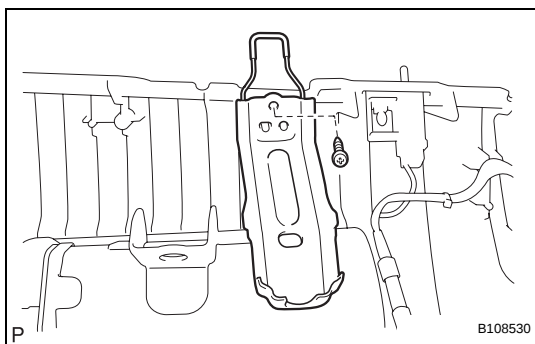

7. INSTALL INSTRUMENT PANEL BRACKET SUB-ASSEMBLY CENTER

- (a) Install the screw <C> and the instrument panel bracket sub-assembly center.

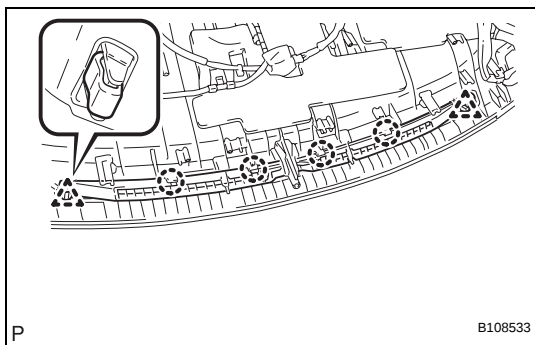


8. INSTALL DEFROSTER NOZZLE NO.1 GARNISH

- (a) Engage the 2 clips and 4 claws then install the defroster nozzle No.1 garnish.

9. INSTALL NETWORK GATEWAY ECU

- (a) Install the screw <C> and the network gateway ECU.

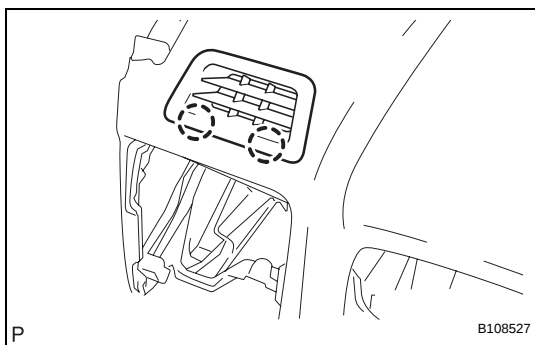


10. INSTALL SIDE DEFROSTER NO.1 NOZZLE

- (a) Engage the 2 claws and install the side defroster No.1 nozzle.

11. INSTALL SIDE DEFROSTER NO.2 NOZZLE


HINT:

Use the same procedures for the side defroster No.2 nozzle and the side defroster No.1 nozzle

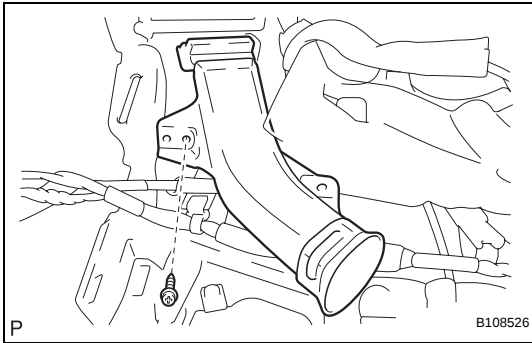


- 12. INSTALL SIDE DEFROSTER NO.1 NOZZLE DUCT**
 (a) Install the screw <C> and the side defroster No.1 nozzle duct.


- 13. INSTALL SIDE DEFROSTER NO.2 NOZZLE DUCT**
HINT:
 Use the same procedures for the side defroster No.2 nozzle duct and the side defroster No.1 nozzle duct.

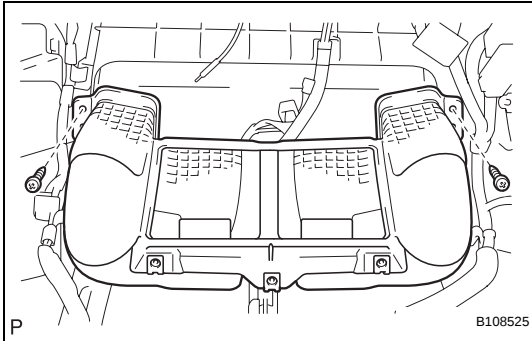


- 14. INSTALL HEATER TO REGISTER CENTER SUB DUCT**
 (a) Install the 2 screws <C> and the heater to register center sub duct.

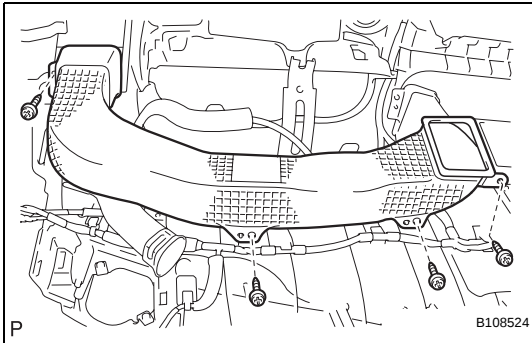


- 15. INSTALL HEATER TO REGISTER NO.1 DUCT**
 (a) Install the 4 screws <C> and the heater to register No.1 duct.
- 16. INSTALL HEATER TO REGISTER NO.4 DUCT**
HINT:
 Use the same procedures for the heater to register No.4 duct and the heater to register No.1 duct.

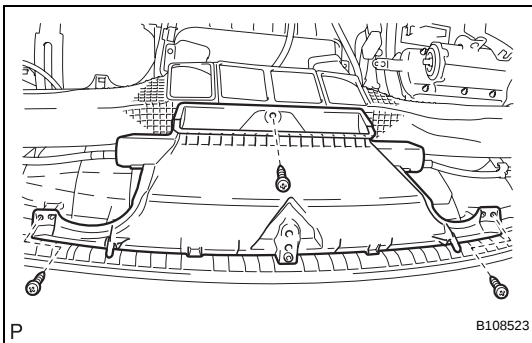

- 17. INSTALL DEFROSTER NOZZLE ASSEMBLY**
 (a) Install the 3 screws <C> and the defroster nozzle assembly.

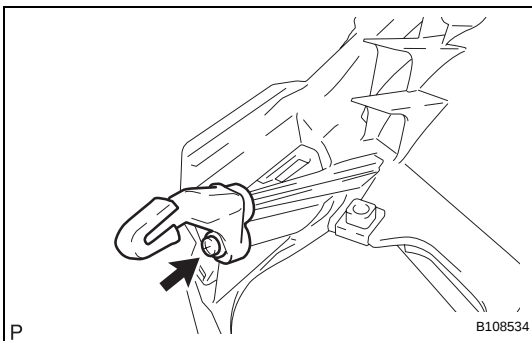

- 18. INSTALL INSTRUMENT PANEL NO.1 PIN**
 (a) Install the screw <C> and the instrument panel No.1 pin.

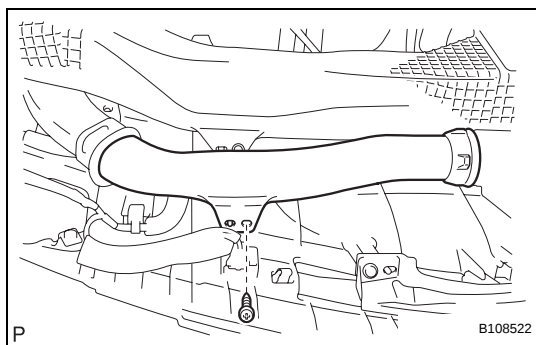

- 19. INSTALL SIDE DEFROSTER NO.3 NOZZLE DUCT**
 (a) Install the screw <C> and the side defroster No.3 nozzle duct.

- 20. INSTALL SIDE DEFROSTER NO.4 NOZZLE DUCT**
 HINT:

Use the same procedures for the side defroster No.4 nozzle duct and the side defroster No.3 nozzle duct.

- 21. INSTALL FRONT NO.2 SPEAKER (for Driver Side)**
 (See page [AV-246](#))

- 22. INSTALL FRONT NO.2 SPEAKER (for Front Passenger Side)**

HINT:

Use the same procedures for the driver side and passenger side.

- 23. INSTALL FRONT NO.2 SPEAKER (w/ Mark Levinson Speaker System) (See page [AV-244](#))**


- 24. INSTALL INSTRUMENT PANEL NO.1 SPEAKER PANEL SUB-ASSEMBLY**

- (a) Engage the 2 clips and install the instrument panel No.1 speaker panel sub-assembly.

- 25. INSTALL INSTRUMENT PANEL NO.2 SPEAKER PANEL SUB-ASSEMBLY**


HINT:

Use the same procedures for the instrument panel No.2 speaker panel sub-assembly and the instrument panel No.1 speaker panel sub-assembly.

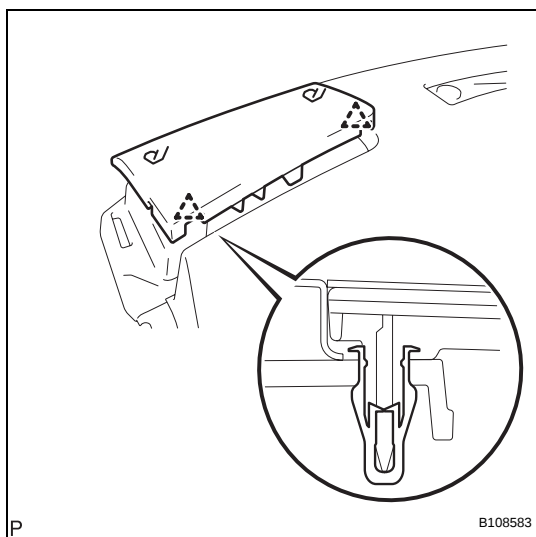

- 26. INSTALL SPEAKER HOLE NO.1 COVER (w/ Mark Levinson Speaker System)**


- (a) Engage the 4 clips and install the speaker hole No.1 cover.

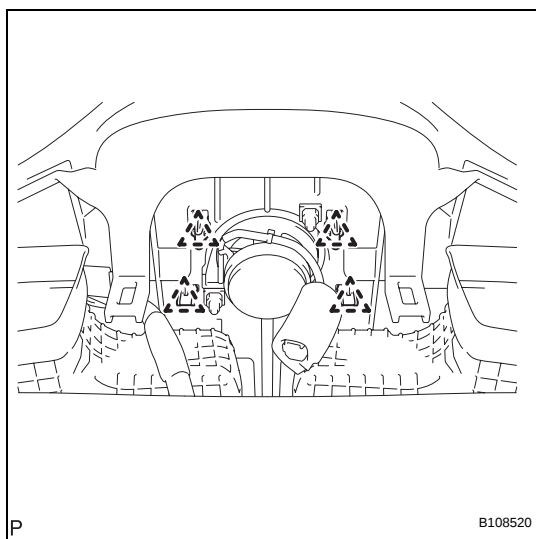


INSTALLATION

1. INSTALL INSTRUMENT PANEL ASSEMBLY

- (a) Connect each of the clamps and connectors.
- (b) Install the 2 bolts <A>, bolt and 2 nuts <D> as shown in the illustration below, then install the instrument panel assembly.

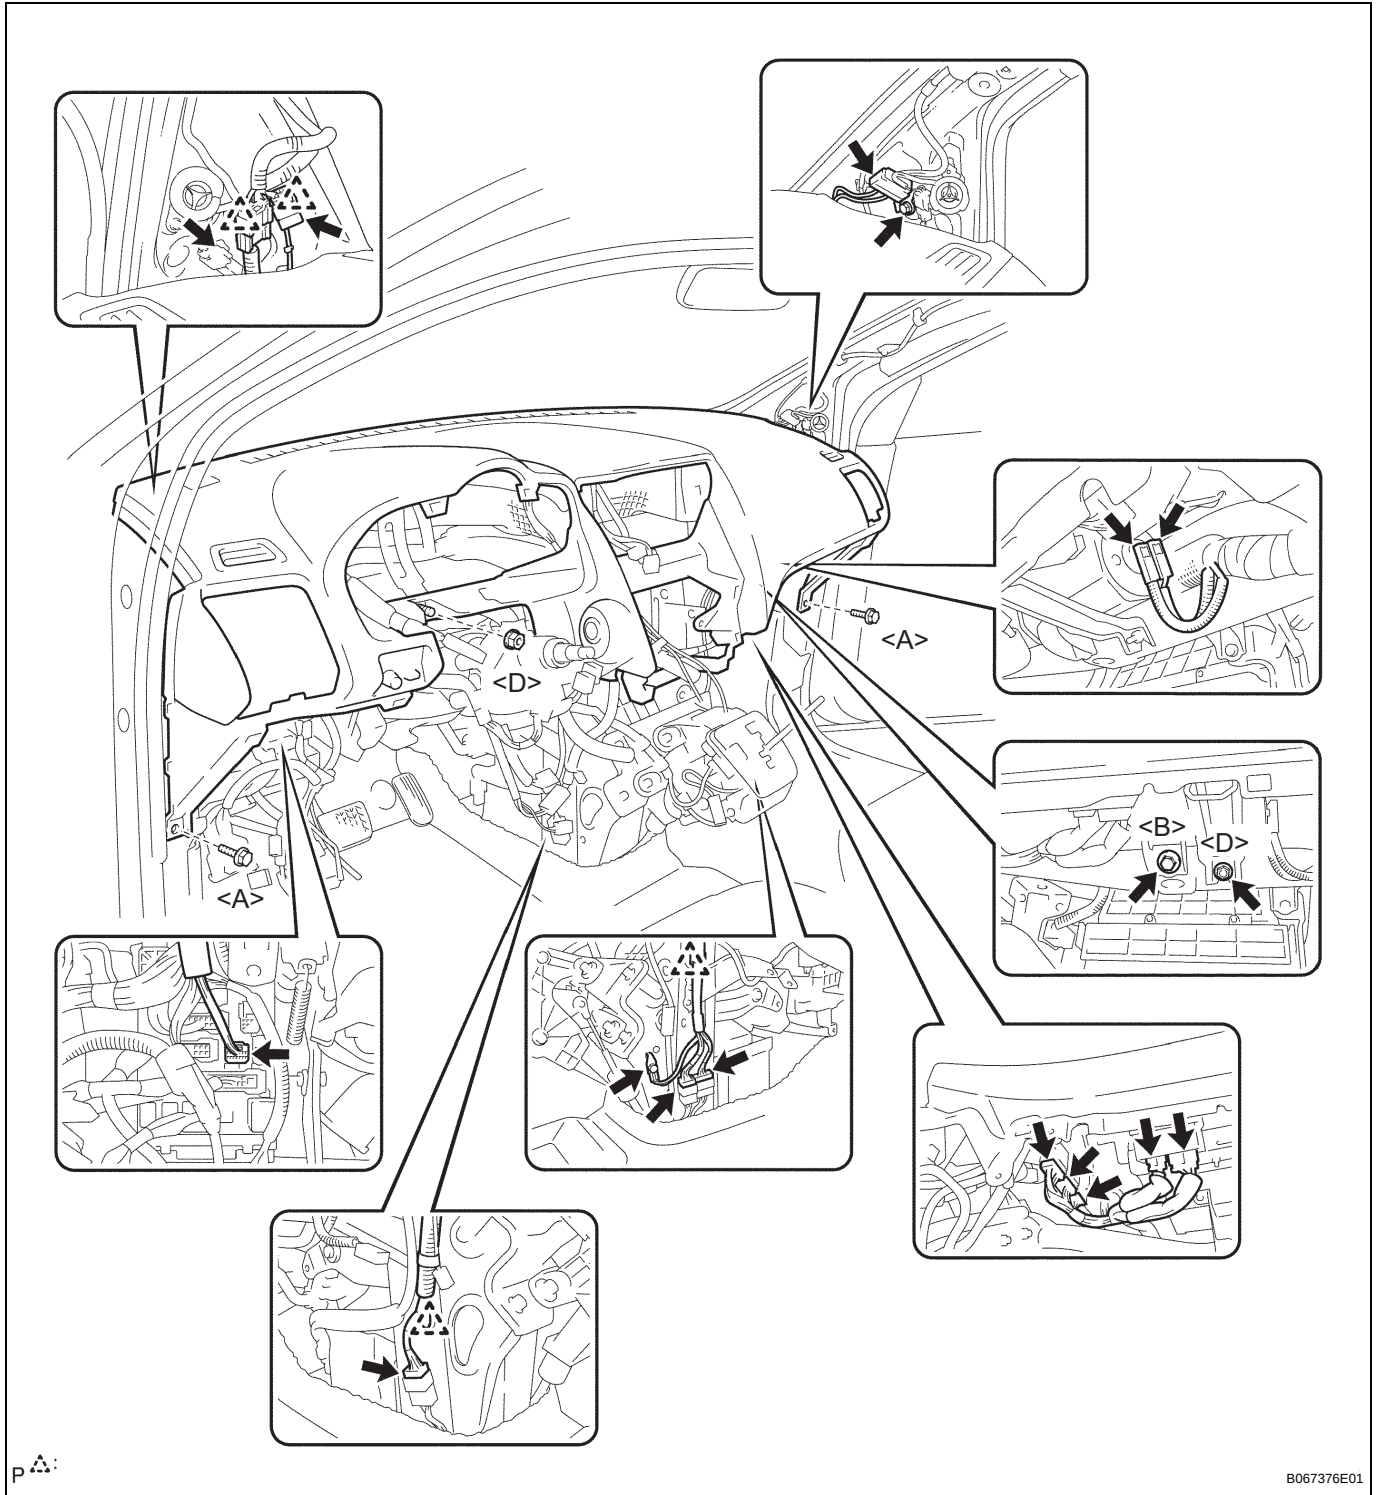


Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf) (Bolt)

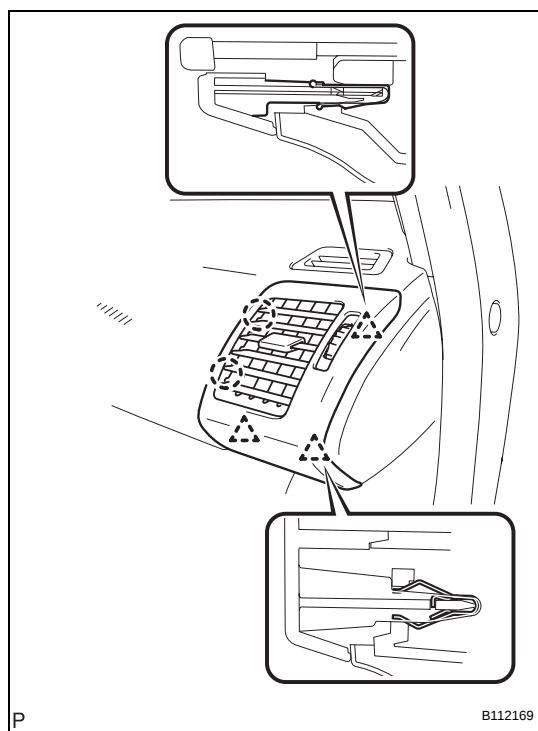

2. INSTALL INSTRUMENT PANEL NO.1 REGISTER ASSEMBLY LOWER

- (a) Engage the 3 clips and 2 claws, and install the instrument panel No.1 register assembly lower.

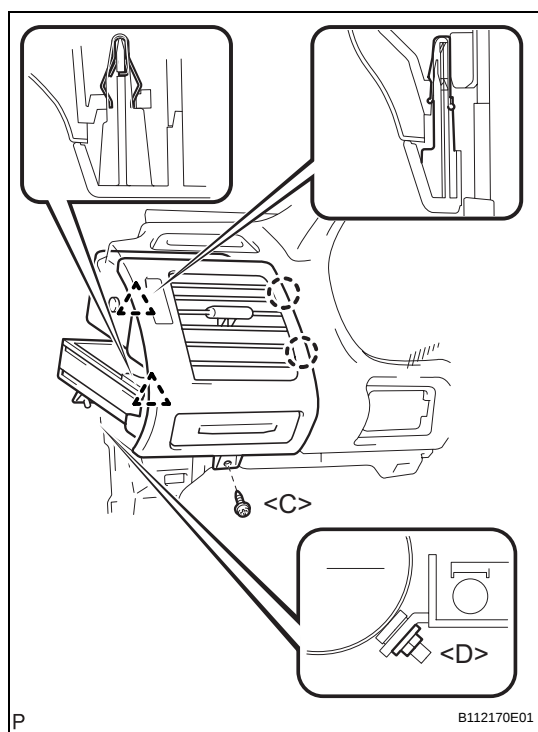


3. INSTALL INSTRUMENT PANEL NO.1 REGISTER ASSEMBLY

- (a) Engage the 2 clips and 2 claws.
 (b) Install the screw <C>, nut <D>, and the instrument panel No.1 register assembly.

4. INSTALL INSTRUMENT PANEL FINISH PLATE


5. INSTALL FRONT PILLAR GARNISH LH

6. INSTALL FRONT PILLAR GARNISH RH

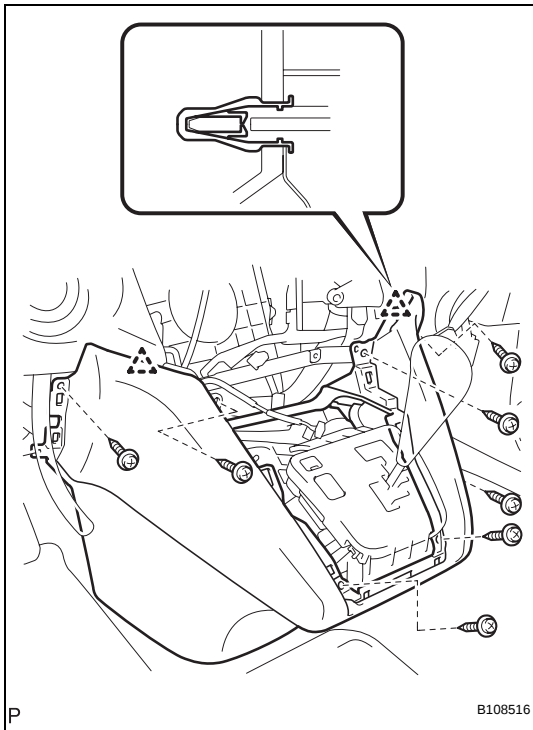

7. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER

- Engage the 2 clips.
- Install the 7 screws <C> and the instrument panel finish panel lower center.

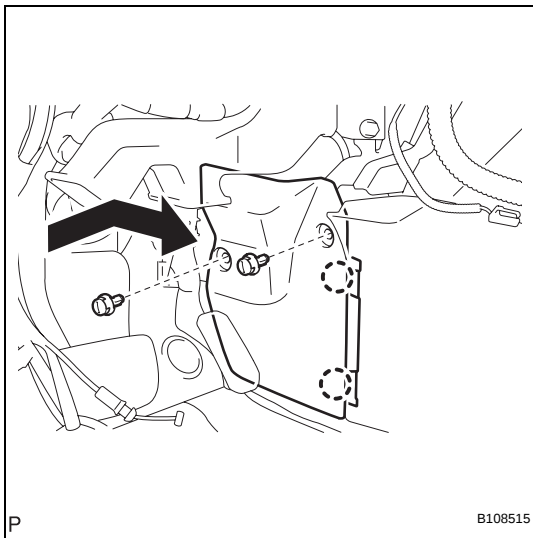


8. INSTALL FLOOR CARPET COVER CENTER LH

- Slide the floor carpet cover center LH to the rear of the vehicle, and engage the 2 claws to the instrument panel finish panel lower center at the floor carpet cover center LH.
- Install the 2 clips and the floor carpet cover center LH.

9. INSTALL FLOOR CARPET COVER CENTER RH


HINT:

Use the same procedures for the RH side and the LH side.

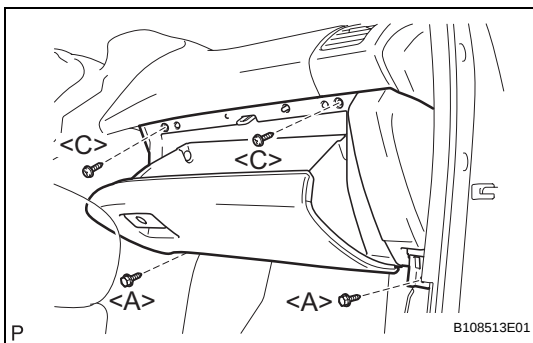

10. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY

- Connect the connector.
- Install the 2 bolts <A>, the 2 screws <C>, and the glove compartment door assembly.

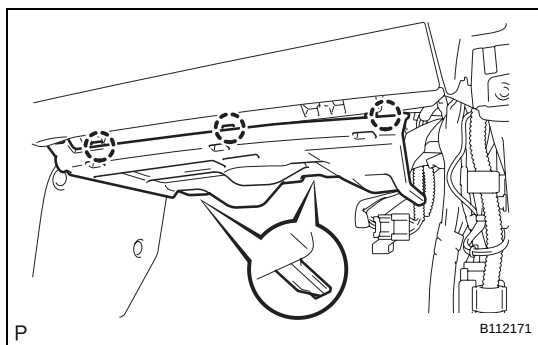**11. INSTALL INSTRUMENT PANEL NO.2 UNDER COVER SUB-ASSEMBLY**

- (a) Connect the connectors.
- (b) Engage the 3 claws and install the instrument panel No.2 under cover sub-assembly.

12. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH


HINT:

Use the same procedures for the RH side and the LH side.


13. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures for the RH side and the LH side.

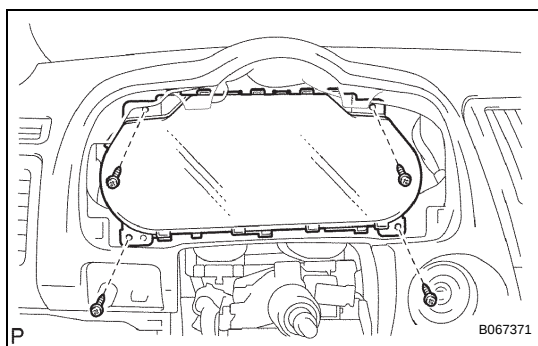
**14. INSTALL COMBINATION METER ASSEMBLY**

- (a) Connect the connectors.
- (b) Install the 4 screws <C> and the combination meter assembly.

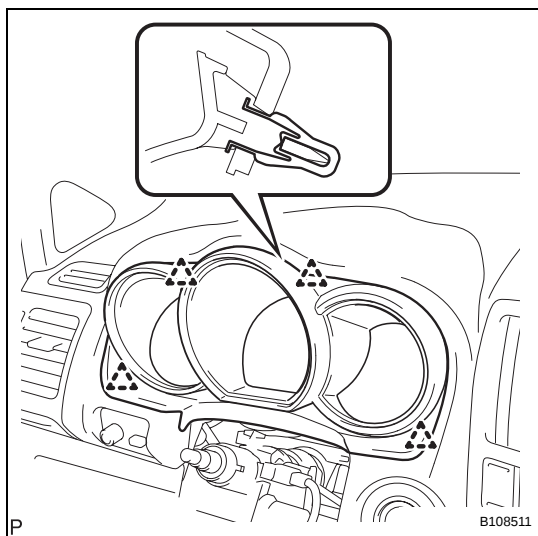**15. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY**


- (a) Engage the 4 clips and install the instrument cluster finish panel sub-assembly.

**16. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY
(See page [RS-403](#))**

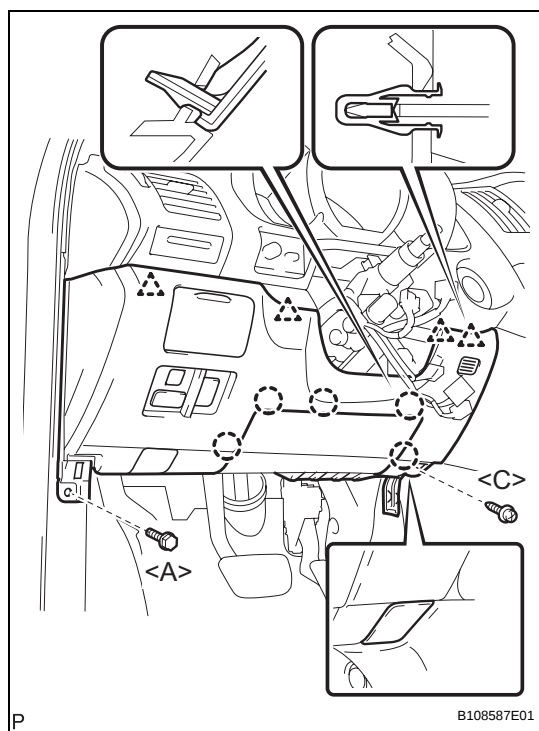

17. INSTALL INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER

- Connect the connectors.
- Engage the 5 claws and the 4 clips.
- Connect the hood lock control cable assembly.
- Install the bolt <A>, the screw <C>, and the instrument panel finish panel sub-assembly lower.

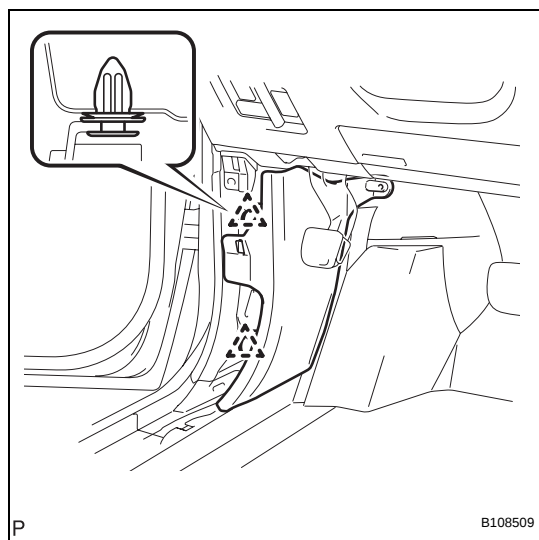

18. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH

- Install the 2 clips and the cowl side trim sub-assembly LH.

19. INSTALL FRONT DOOR SCUFF PLATE LH

20. INSTALL TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY

21. INSTALL TILT AND TELESCOPIC SWITCH (for Power Tilt and Power Telescopic)

22. INSTALL STEERING COLUMN COVER (See page [SR-45](#))

23. CENTER SPIRAL CABLE (See page [SR-45](#))

24. INSTALL STEERING WHEEL ASSEMBLY (See page [SR-45](#))

25. INSTALL STEERING PAD (See page [RS-388](#))


26. INSTALL STEERING WHEEL NO.3 COVER LOWER (See page [RS-389](#))

27. INSTALL STEERING WHEEL NO.2 COVER LOWER (See page [RS-389](#))


28. INSTALL MULTI-DISPLAY (w/ Navigation System) (See page [AV-235](#))

29. INSTALL CENTER CLUSTER INTEGRATION SWITCH (w/o Navigation System) (See page [AC-188](#))

30. INSTALL RADIO RECEIVER (See page [AV-232](#))

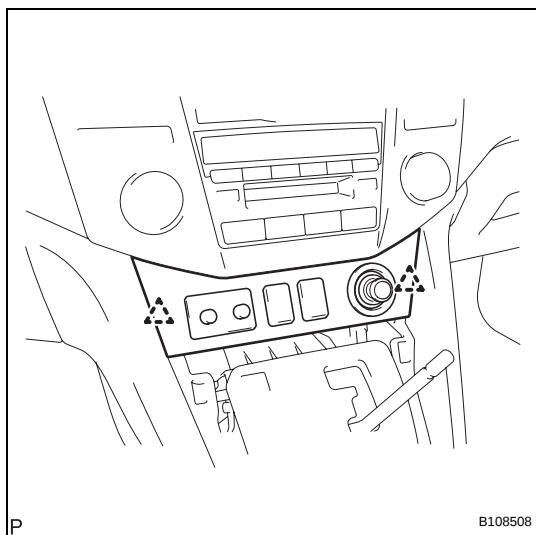**31. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER**

- (a) Connect the connectors.
- (b) Engage the 2 clips and install the instrument panel finish panel lower.

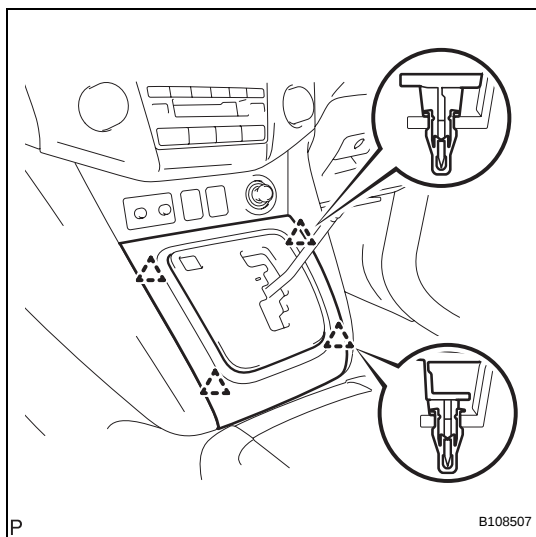**32. INSTALL CONSOLE PANEL UPPER FRONT**

- (a) Engage the 4 clips and install the console panel upper front.

33. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY**34. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL****35. PERFORM INITIALIZATION****NOTICE:**


Some systems need initialization when disconnecting the cable from the negative battery terminal.

 
36. INSPECT STEERING PAD (See page [RS-389](#))**37. INSPECT SRS WARNING LIGHT****HINT:**

(See page [RS-25](#))


REAR CONSOLE BOX

COMPONENTS

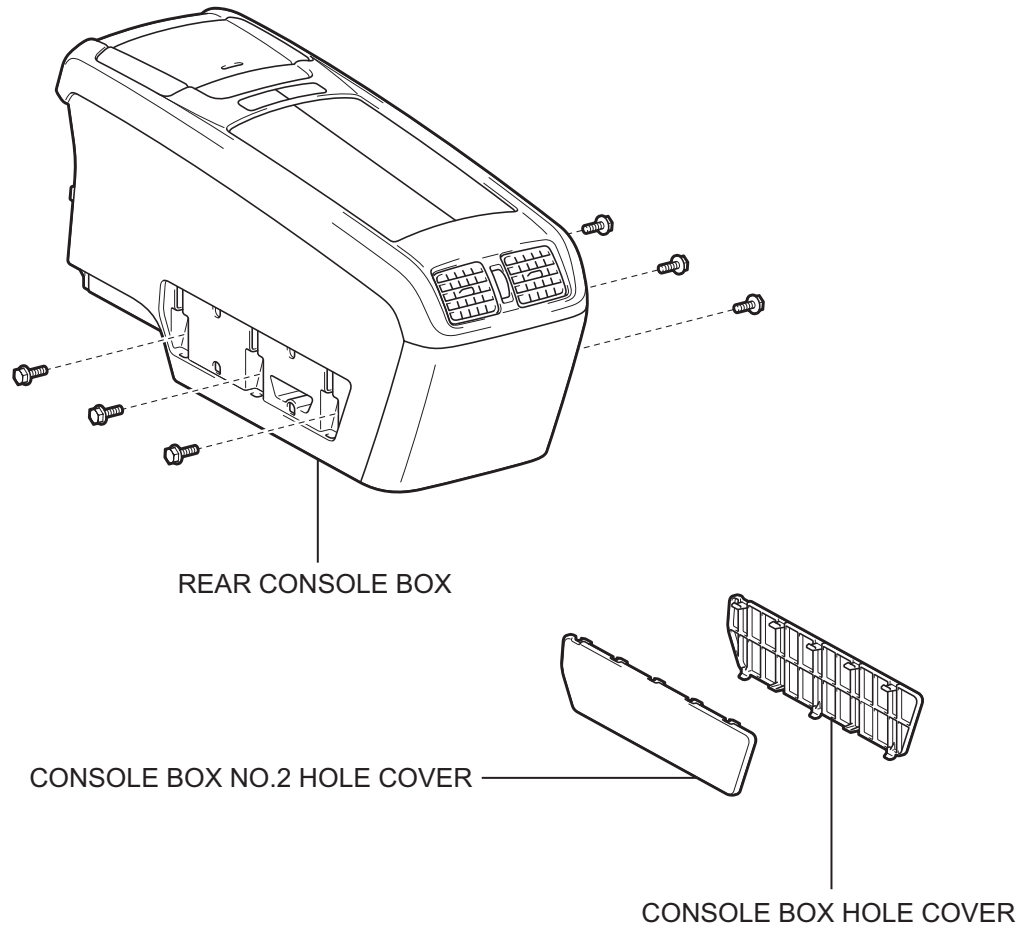




CONSOLE UPPER PANEL GARNISH FRONT

 


CONSOLE UPPER PANEL GARNISH REAR




CONSOLE BOX CUP HOLDER

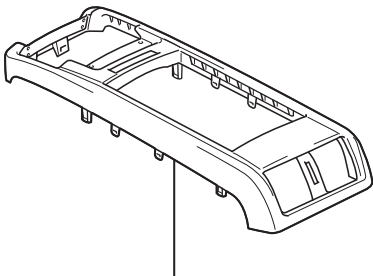


REAR CONSOLE PANEL UPPER

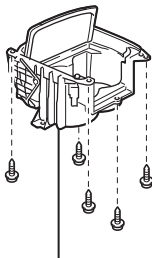


REAR CONSOLE BOX
HOLDER CUP

 


CONSOLE COMPARTMENT
DOOR LOCK

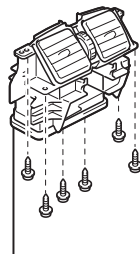


CONSOLE BOX REGISTER
ASSEMBLY

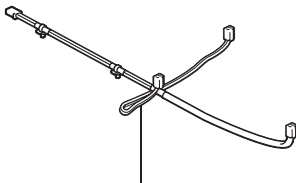


CONSOLE BOX LIGHT
SUB-ASSEMBLY

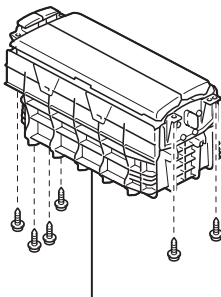

CONSOLE BOX SUB-ASSEMBLY UPPER

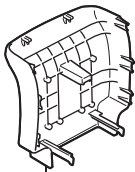

BOX NO.1 SIDE PANEL

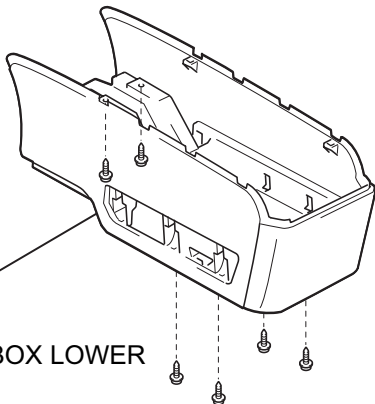

REAR CONSOLE BOX LOWER

REMOVAL


1. REMOVE CONSOLE BOX HOLE COVER

- Slide the front seat assemblies RH and LH forward.
- Slide the console box assembly fully to the back end and remove the console box hole cover.

2. REMOVE CONSOLE BOX NO.2 HOLE COVER



HINT:

Use the same procedures for the console box No.2 hole cover and the console box hole cover.

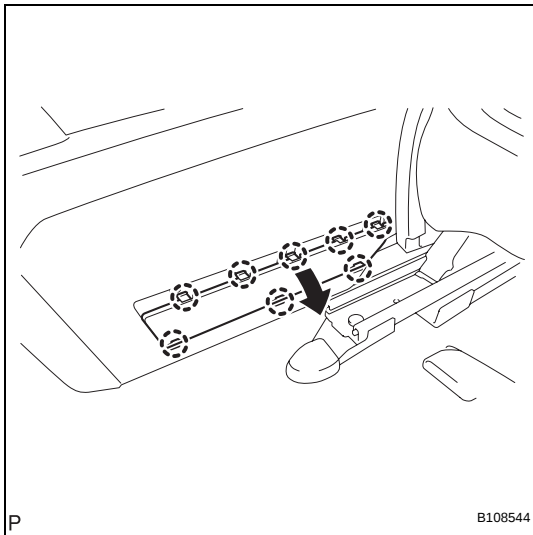


3. REMOVE REAR CONSOLE BOX

- Separate the console box lock control cable assembly from the rear console box.

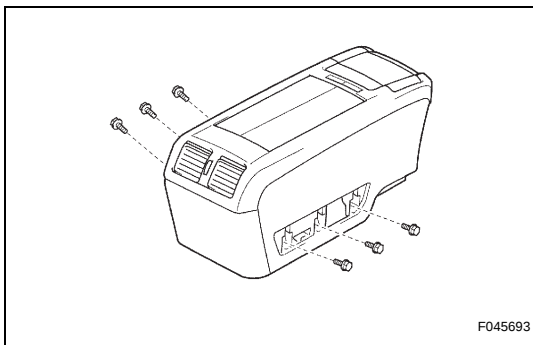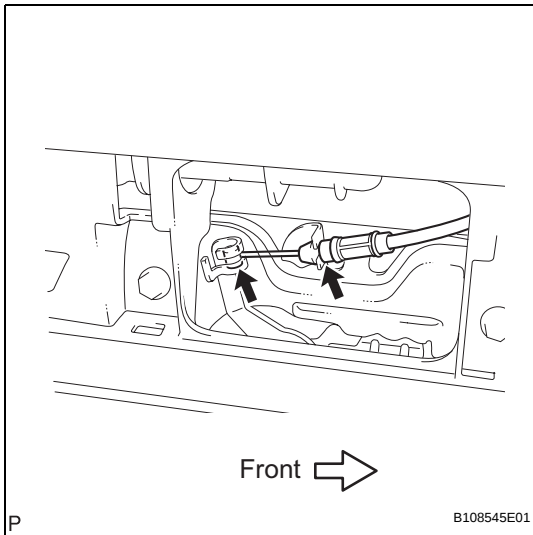

- Keeping the rear console box pulled in the rear direction of the vehicle, remove the 6 bolts from the left and right sides.

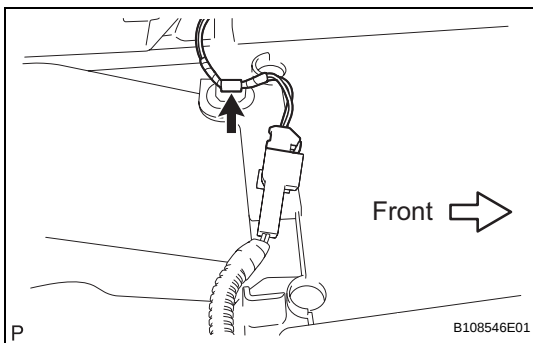


- Disconnect each of the clamp and connector.
- Remove the rear console box.

DISASSEMBLY


1. REMOVE CONSOLE BOX CUP HOLDER

- (a) Remove the console box cup holder.

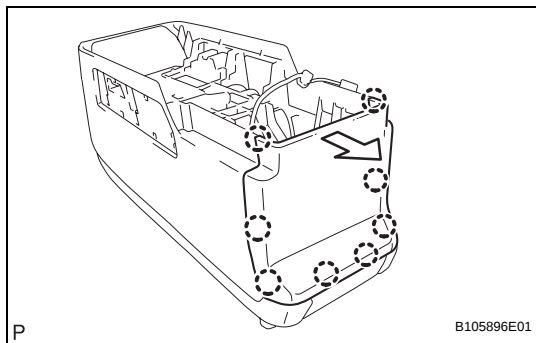

2. REMOVE BOX NO.1 SIDE PANEL

- (a) Disengage the 8 claws and remove the box No.1 side panel.

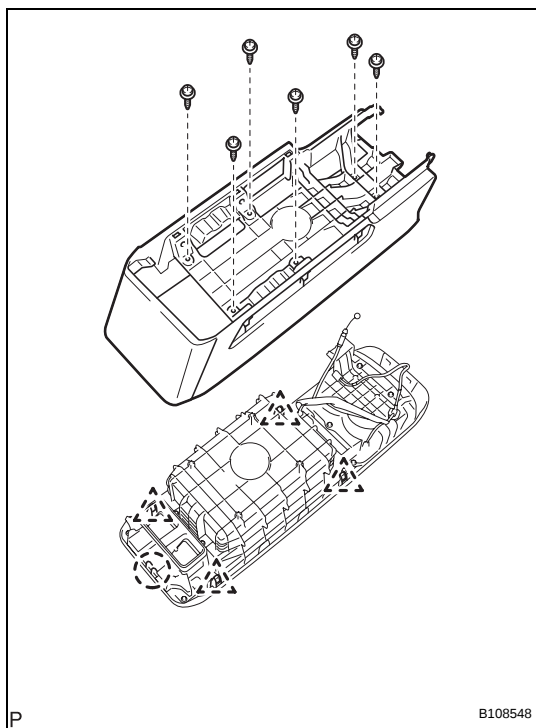



3. REMOVE REAR CONSOLE BOX LOWER

- (a) Remove the 6 screws.
(b) Disengage the 4 clips and the claw, and remove the rear console box lower.


4. REMOVE CONSOLE BOX LIGHT SUB-ASSEMBLY

- (a) Disconnect each of the clamp and connectors, and remove the console box light sub-assembly.

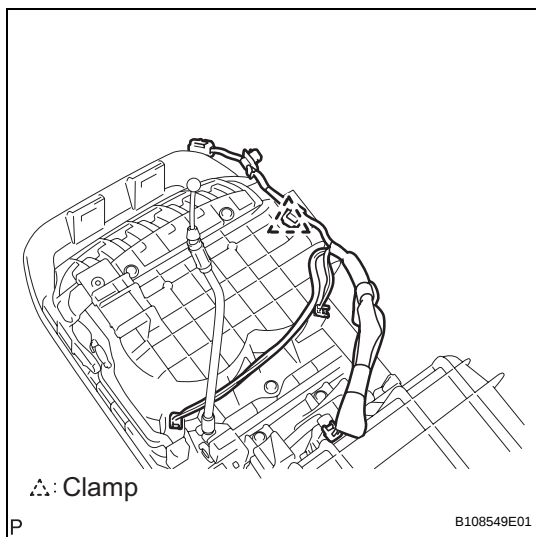


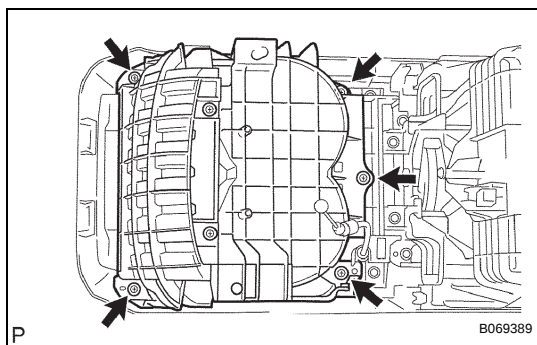**5. REMOVE REAR CONSOLE BOX HOLDER CUP**


- (a) Remove the 5 screws and the rear console box holder cup.

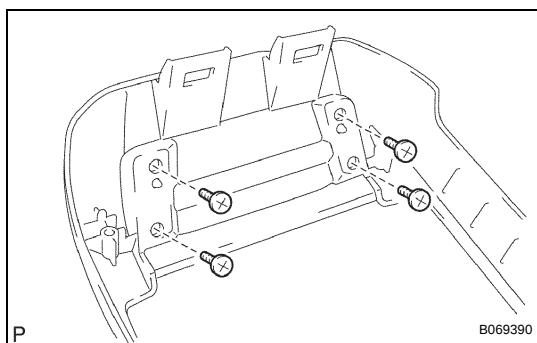**6. REMOVE CONSOLE UPPER PANEL GARNISH FRONT**


- (a) Remove the 4 screws and the console upper panel garnish front.

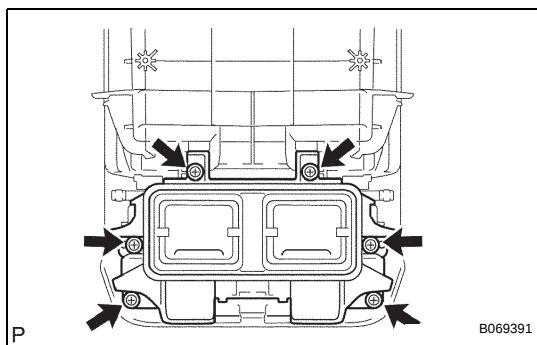**7. REMOVE CONSOLE BOX REGISTER ASSEMBLY**


- (a) Remove the 6 screws and the console box register assembly.

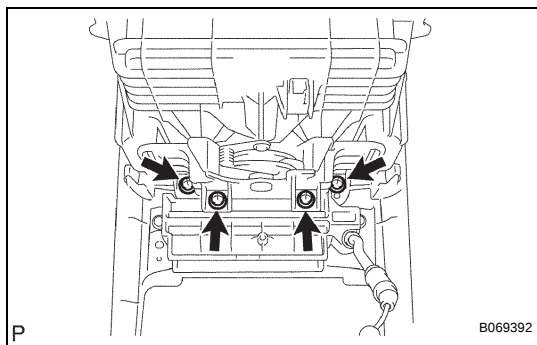**8. REMOVE CONSOLE BOX SUB-ASSEMBLY UPPER**


- (a) Remove the 4 screws.

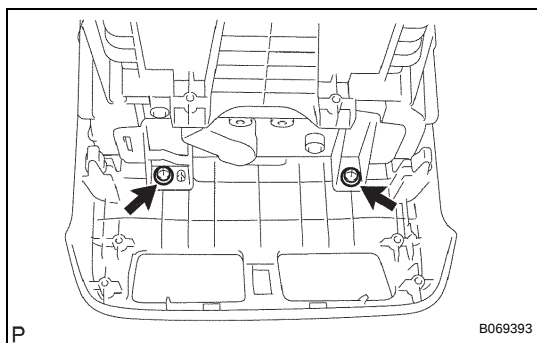


- (b) Remove the 2 screws.

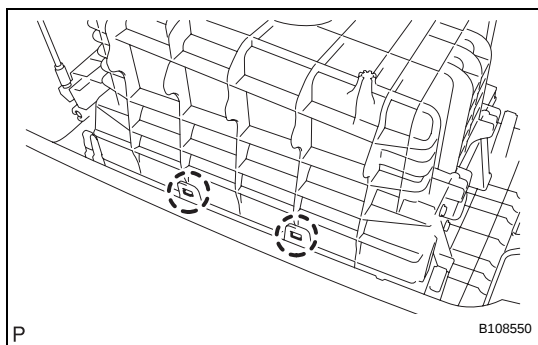

(c) Disengage the 2 claws.

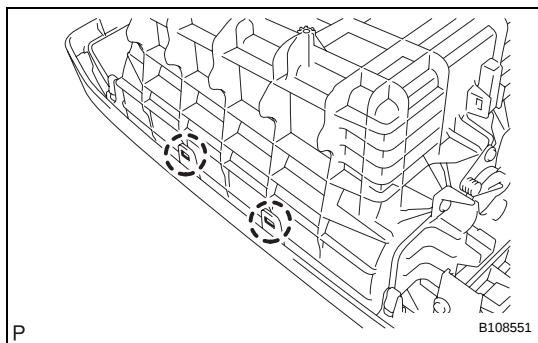


(d) Disengage the 2 claws and remove the console box sub-assembly upper.

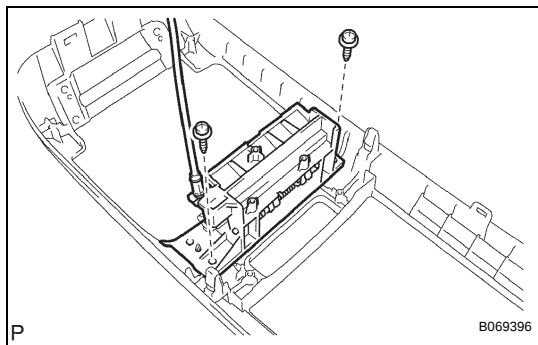


9. REMOVE CONSOLE COMPARTMENT DOOR LOCK

(a) Remove the 2 screws and the console compartment door lock.

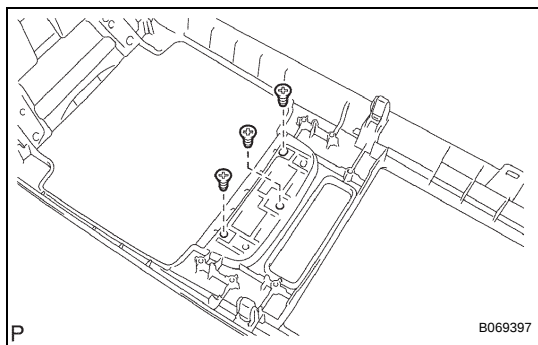

10. REMOVE CONSOLE UPPER PANEL GARNISH REAR


(a) Remove the 3 screws and the console upper panel garnish rear.

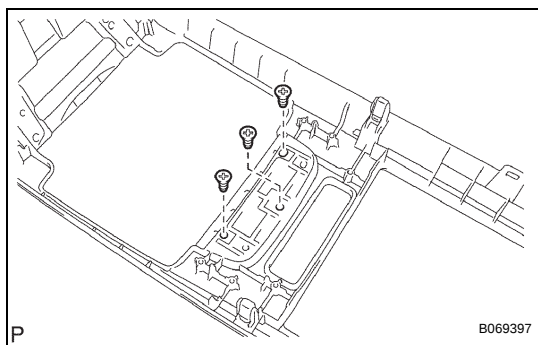


REASSEMBLY

1. INSTALL CONSOLE UPPER PANEL GARNISH REAR


(a) Install the 3 screws and the console upper panel garnish rear.

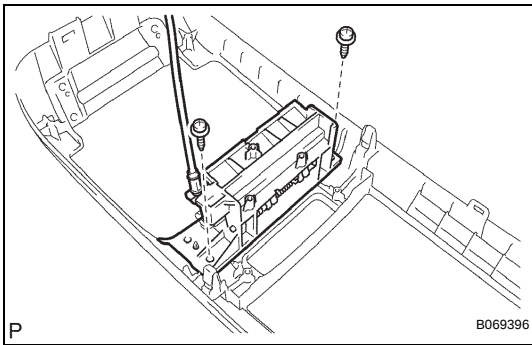**2. INSTALL CONSOLE COMPARTMENT DOOR LOCK**


- (a) Install the 2 screws and the console compartment door lock.

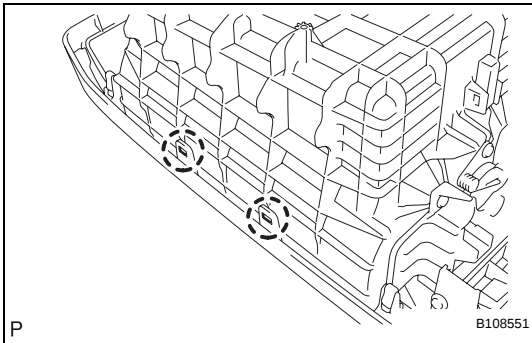**3. INSTALL CONSOLE BOX SUB-ASSEMBLY UPPER**


- (a) Engage the 2 claws.

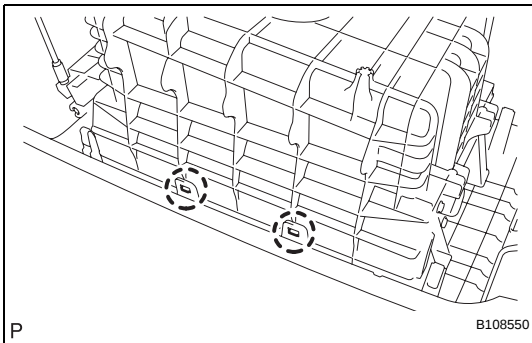


- (b) Engage the 2 claws.

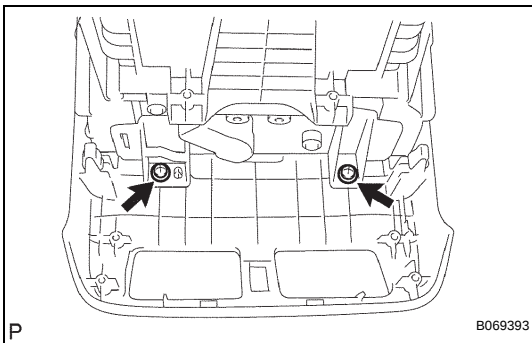


- (c) Install the 2 screws.

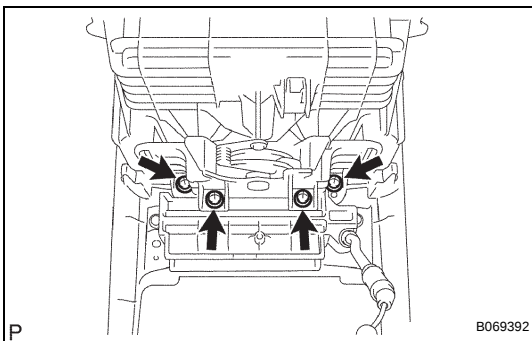


- (d) Install the 4 screws and the console box sub-assembly upper.

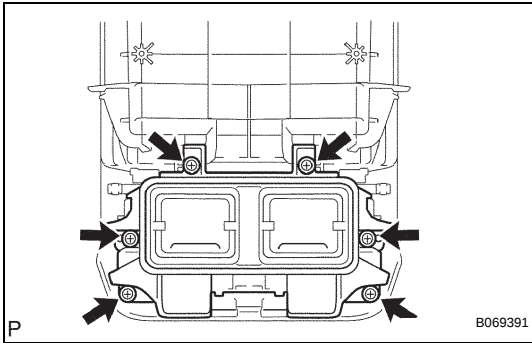


- 4. INSTALL CONSOLE BOX REGISTER ASSEMBLY**
 (a) Install the 6 screws and the console box register assembly.

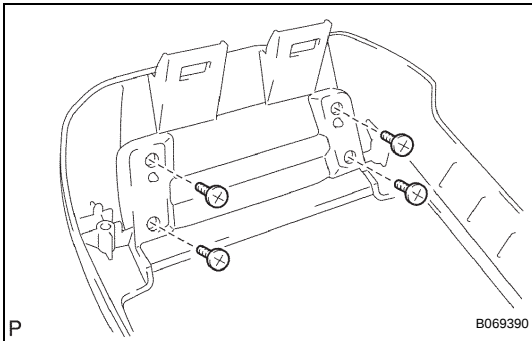


- 5. INSTALL CONSOLE UPPER PANEL GARNISH FRONT**
 (a) Install the 4 screws and the console upper panel garnish front.

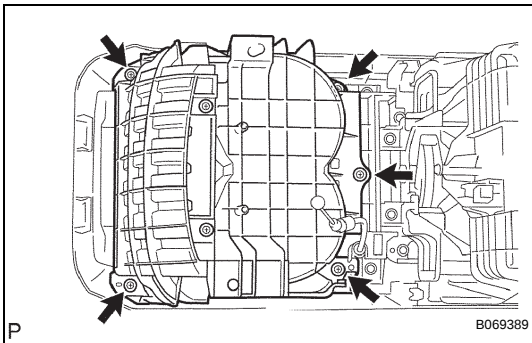


- 6. INSTALL REAR CONSOLE BOX HOLDER CUP**
 (a) Install the 5 screws and the rear console box holder cup.

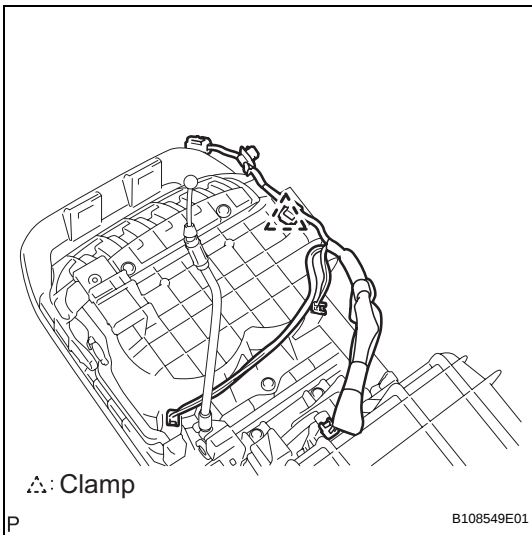

- 7. INSTALL CONSOLE BOX LIGHT SUB-ASSEMBLY**
 (a) Connect each of the clamp and connectors, and install the console box light sub-assembly.

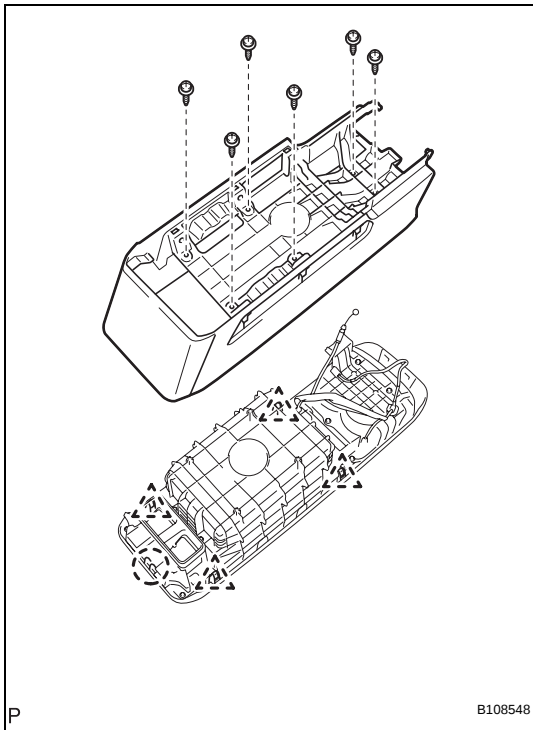**8. INSTALL REAR CONSOLE BOX LOWER**


- (a) Engage the 4 clips and the claw.
- (b) Install the 6 screws and the rear console box lower.

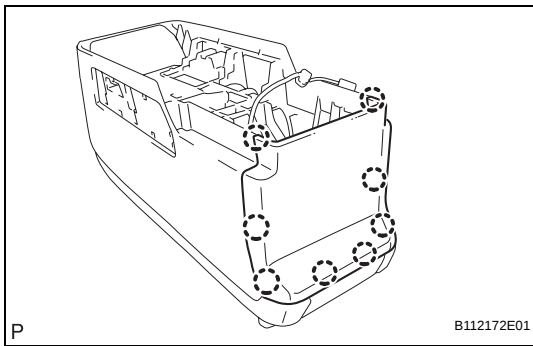**9. INSTALL BOX NO.1 SIDE PANEL**


- (a) Engage the 8 claws and install the box No.1 side panel.

10. INSTALL CONSOLE BOX CUP HOLDER


- (a) Install the console box cup holder.

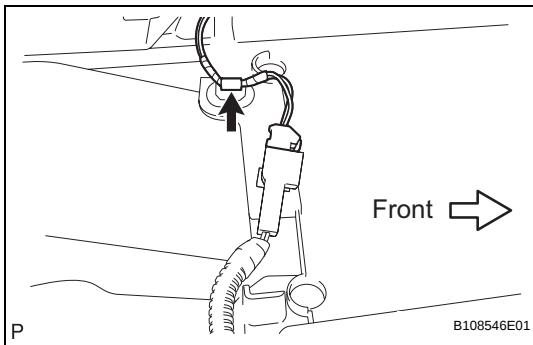**INSTALLATION****1. INSTALL REAR CONSOLE BOX**


- (a) Connect each of the clamp and the connector.

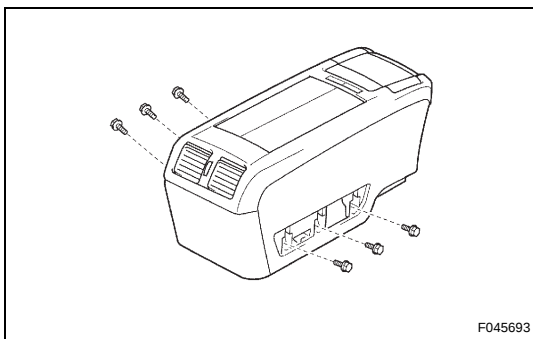

- (b) Keeping the rear console box pulled in the rear direction of the vehicle, install the 6 bolts to the left and right sides.

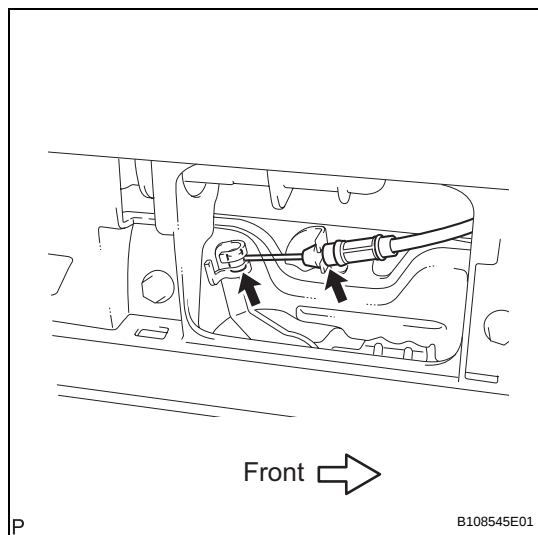

- (c) Connect the console box lock control cable assembly and install the rear console box.

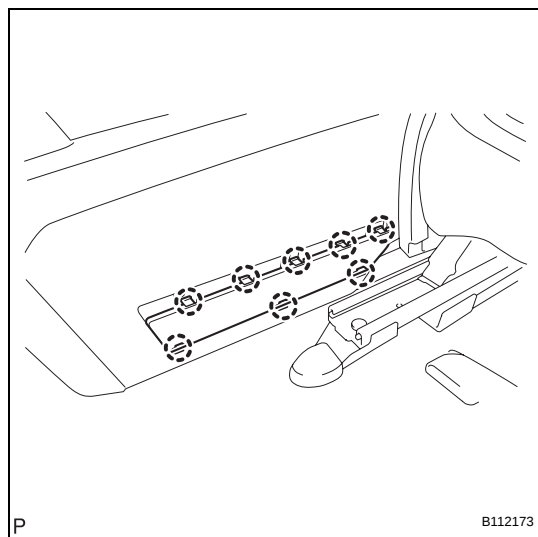

2. INSTALL CONSOLE BOX HOLE COVER

- (a) Slide the front seat assemblies RH and LH forward.
(b) Slide the rear console box fully to the back end and install the console box hole cover.

3. INSTALL CONSOLE BOX NO.2 HOLE COVER

HINT:

Use the same procedures for the console box No.2 hole cover and the console box hole cover.