


Position of Parts in Body <LHD>

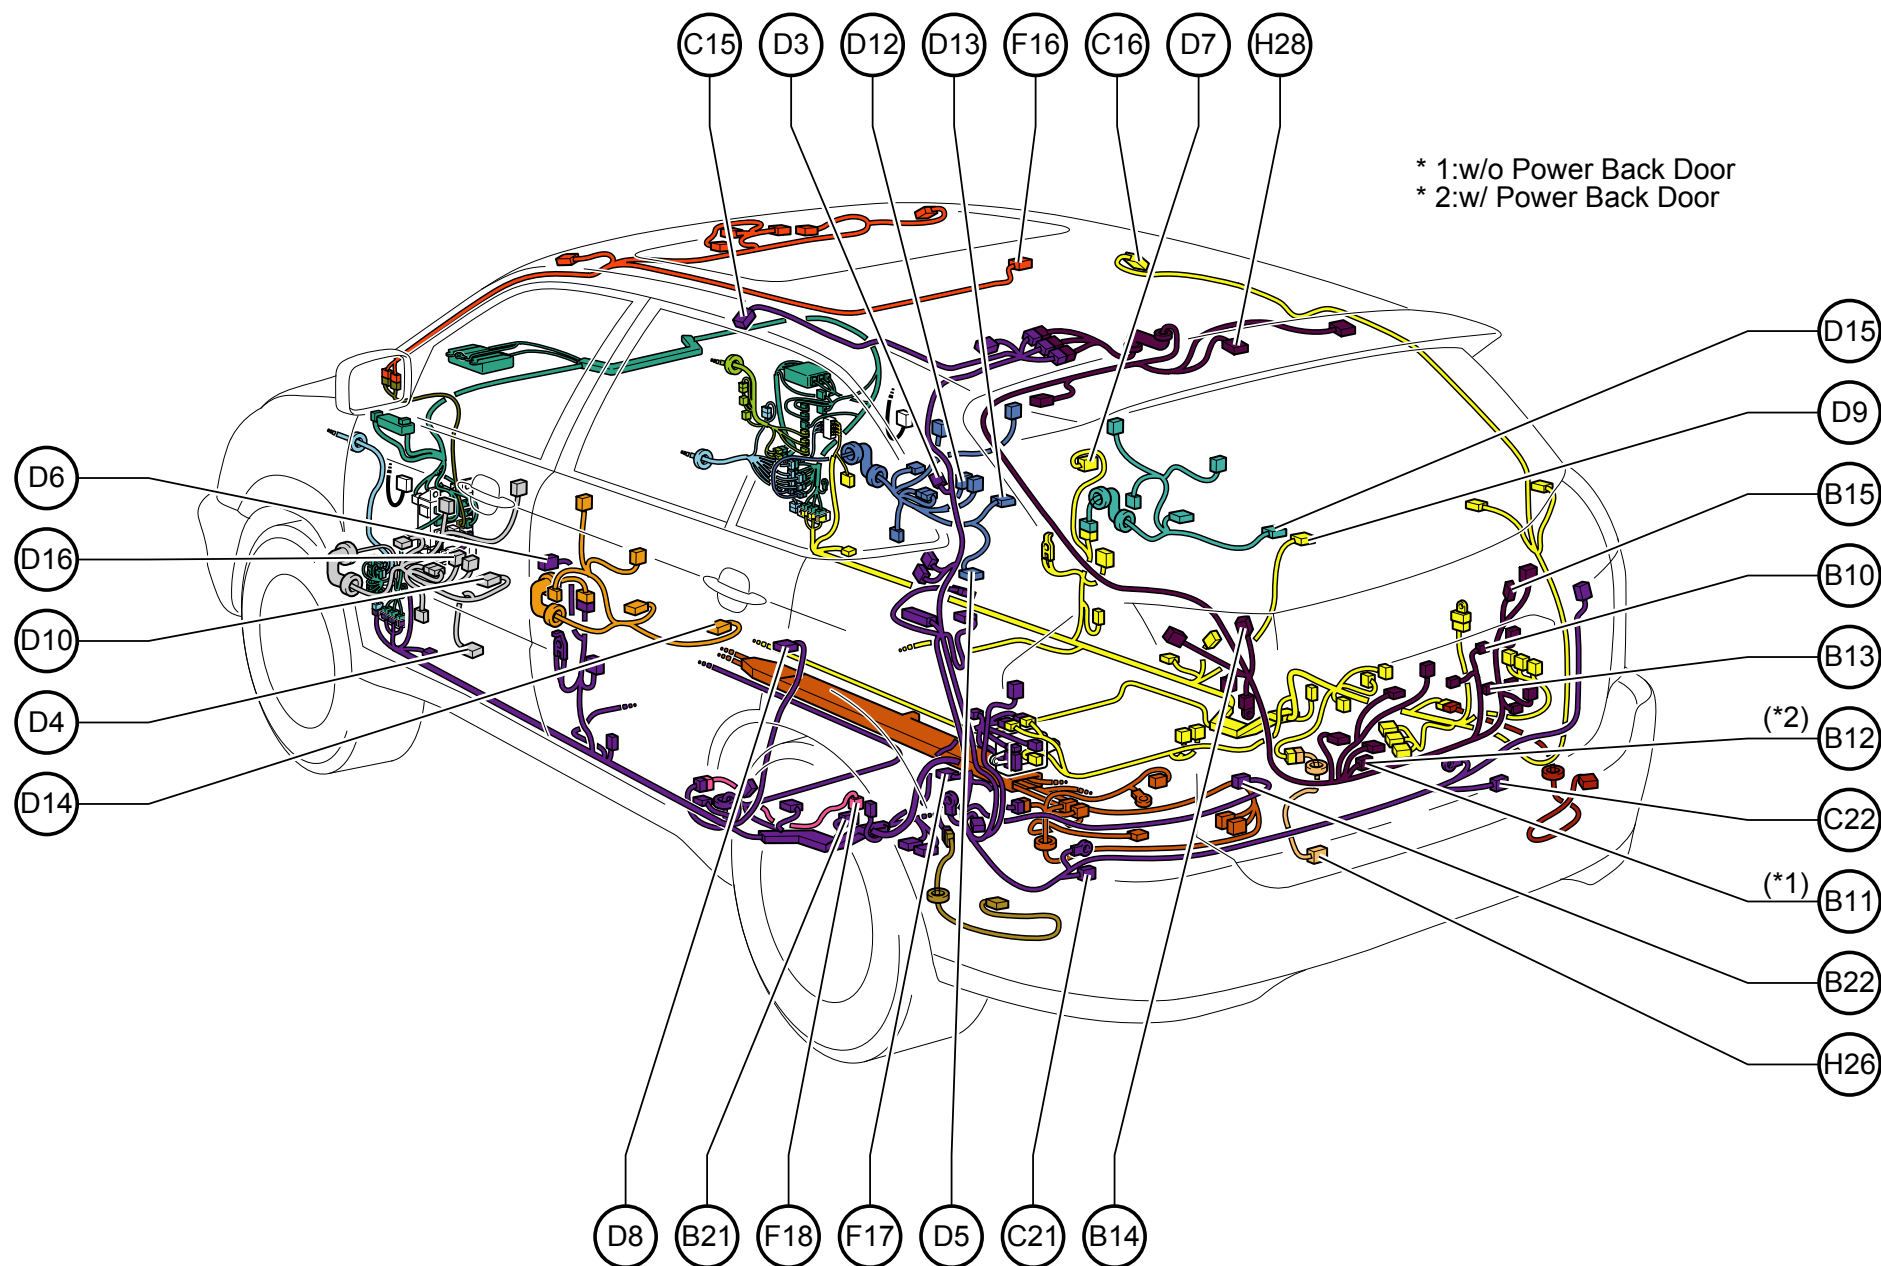

- B 10 Back Door Courtesy Light
- B 11 Back Door Courtesy SW , Back Door Opener Motor
- B 12 Back Door Lock Assembly
- B 13 Back Door Opener SW
- B 14 Back-Up Light LH
- B 15 Back-Up Light RH
- B 21 Battery Blower Motor (LH)
- B 22 Brake Control Power Supply Assembly

- C 15 Curtain Shield Airbag Squib LH
- C 16 Curtain Shield Airbag Squib RH
- C 21 Circuit Breaker Sensor (Rear LH)
- C 22 Circuit Breaker Sensor (Rear RH)

- D 3 Door Control Receiver
- D 4 Door Courtesy Light Front LH
- D 5 Door Courtesy Light Front RH
- D 6 Door Courtesy SW Front LH
- D 7 Door Courtesy SW Front RH
- D 8 Door Courtesy SW Rear LH
- D 9 Door Courtesy SW Rear RH
- D 10 Door Key Lock and Unlock SW (Driver's Side) , Door Lock Motor (Driver's Side) , Door Unlock Detection SW (Driver's Side) , Double Lock Motor (Driver's Side) , Double Lock Position SW (Driver's Side)
- D 12 Door Lock Control SW Front RH
- D 13 Door Lock Motor (Front Passenger's Side) , Door Unlock Detection SW (Front Passenger's Side), Double Lock Motor (Front Passenger's Side) , Double Lock Position SW (Front Passenger's Side)
- D 14 Door Lock Motor Rear LH , Door Unlock Detection SW Rear LH, Double Lock Motor Rear LH , Double Lock Position SW Rear LH
- D 15 Door Lock Motor Rear RH , Door Unlock Detection SW Rear RH, Double Lock Motor Rear RH , Double Lock Position SW Rear RH
- D 16 Driving Position Memory SW

- F 16 Front Interior Light
- F 17 Fuel Lid Opener Motor
- F 18 Fuel Pump , Fuel Sender (Main)

- H 26 Height Control Sensor Rear RH
- H 28 High Mounted Stop Light

Position of Parts in Body <LHD>

