


Position of Parts in Body <RHD>



 
 



 
 
 








 





 
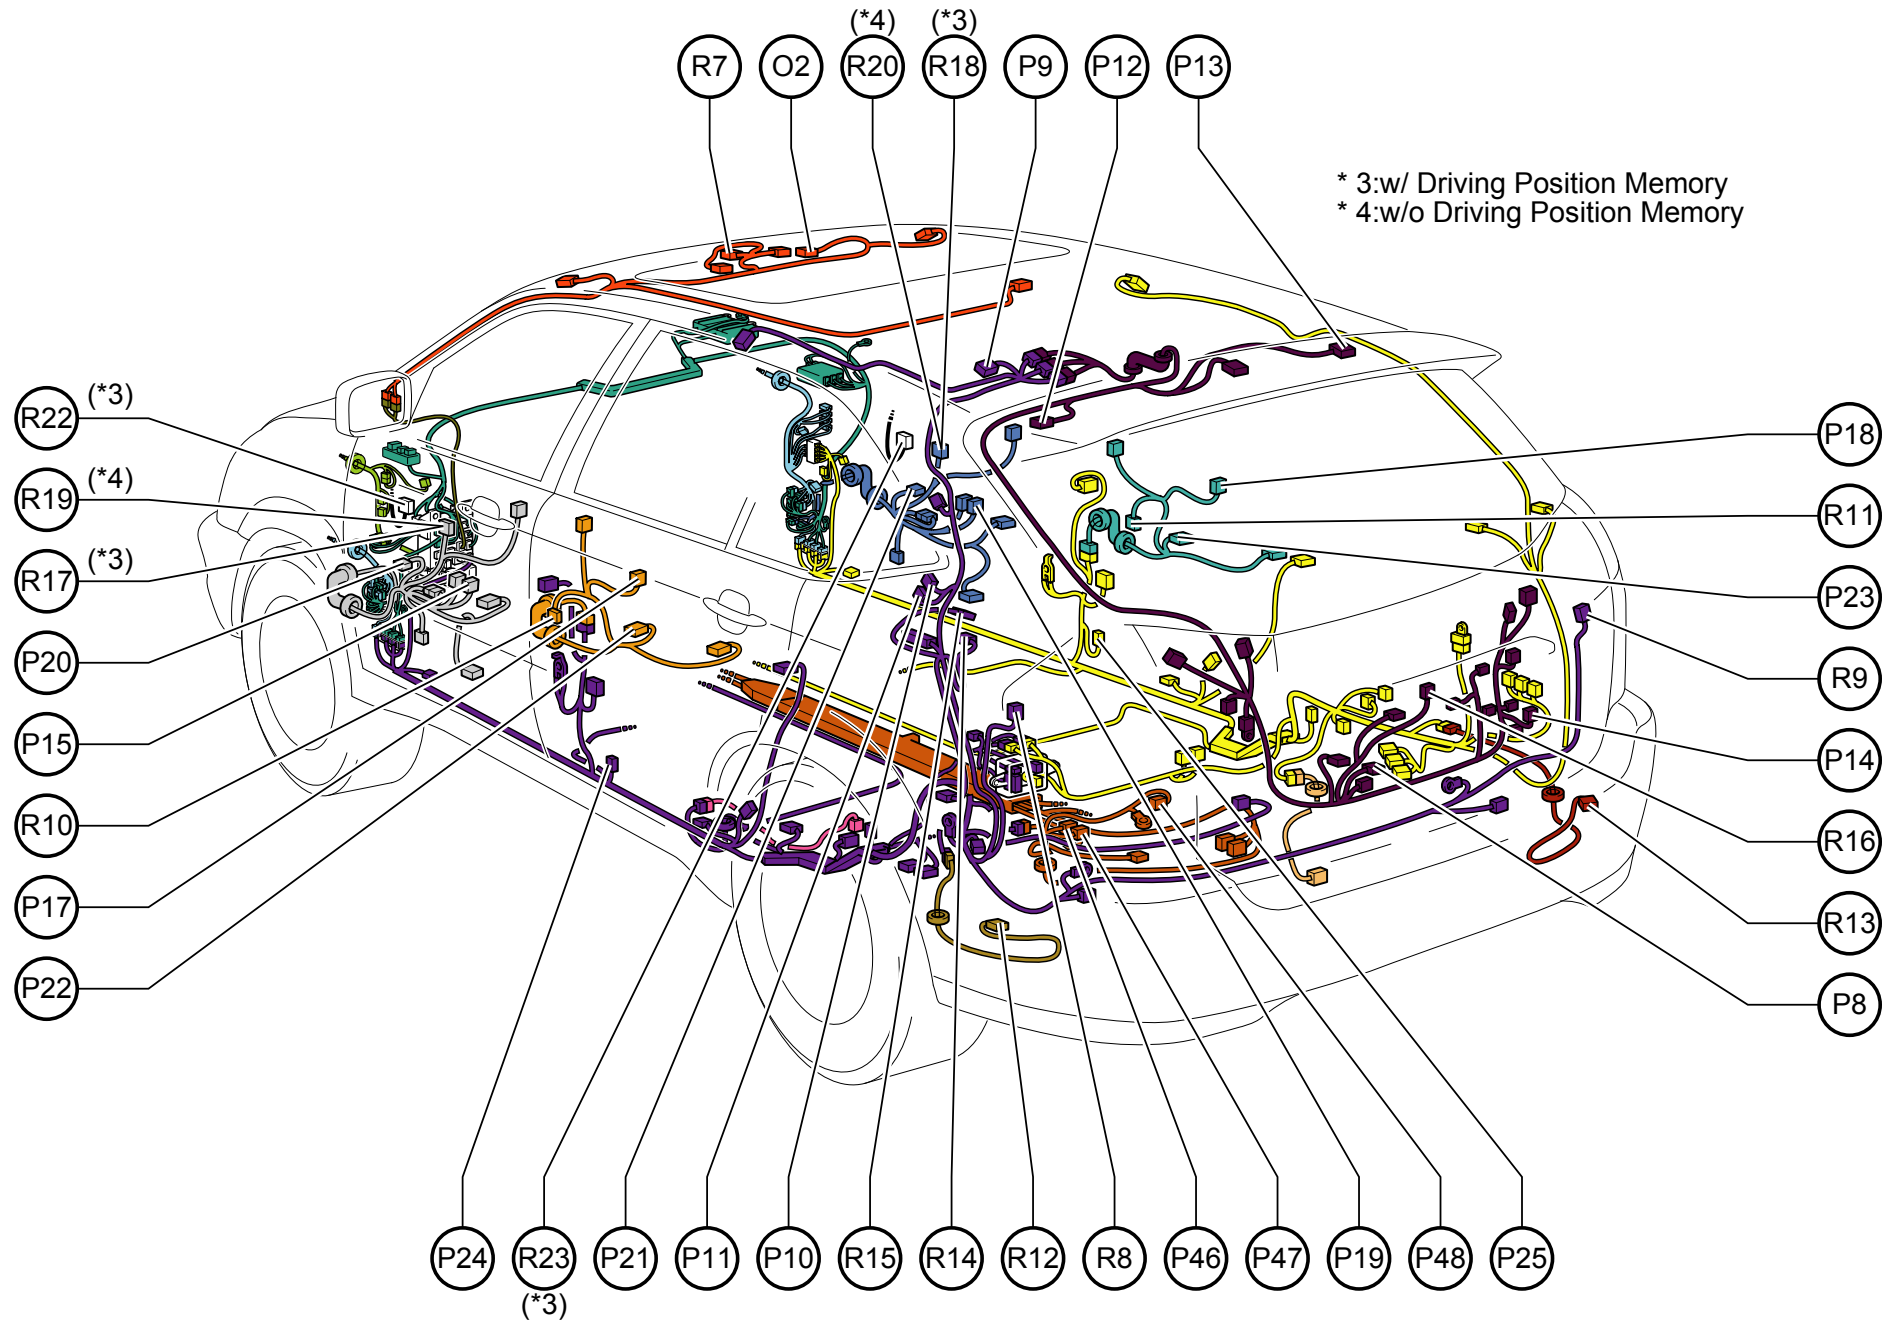


O 2 Overhead J/B

- P 8 Power Back Door Closer SW
- P 9 Power Back Door Drive Unit
- P 10 Power Back Door ECU
- P 11 Power Back Door ECU
- P 12 Power Back Door Touch Sensor LH
- P 13 Power Back Door Touch Sensor RH
- P 14 Power Back Door Warning Buzzer
- P 15 Power Window Control SW Front LH
- P 17 Power Window Control SW Rear LH
- P 18 Power Window Control SW Rear RH
- P 19 Power Window Master SW
- P 20 Power Window Motor Front LH
- P 21 Power Window Motor Front RH
- P 22 Power Window Motor Rear LH
- P 23 Power Window Motor Rear RH
- P 24 Pretensioner LH
- P 25 Pretensioner RH
- P 46 Power Steering Converter
- P 47 Power Steering Converter
- P 48 Power Steering Converter

- R 7 Rain Sensor
- R 8 Rear Combination Light LH
- R 9 Rear Combination Light RH
- R 10 Rear Door Speaker LH
- R 11 Rear Door Speaker RH
- R 12 Rear Fog Light LH
- R 13 Rear Fog Light RH
- R 14 Rear Interior Light
- R 15 Rear Power Outlet
- R 16 Rear Wiper Motor and Relay
- R 17 Remote Control Mirror ECU LH
- R 18 Remote Control Mirror ECU RH
- R 19 Remote Control Mirror LH (w/o Driving Position Memory)
- R 20 Remote Control Mirror RH (w/o Driving Position Memory)
- R 22 Remote Control Mirror ECU LH , Remote Control Mirror LH (w/ Driving Position Memory)
- R 23 Remote Control Mirror ECU RH , Remote Control Mirror RH (w/ Driving Position Memory)

Position of Parts in Body <RHD>

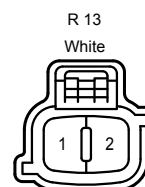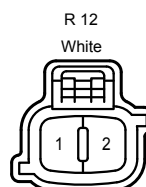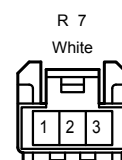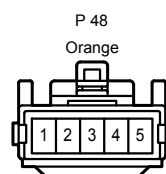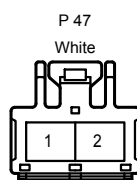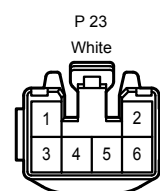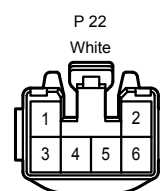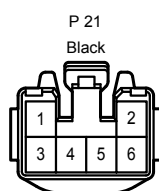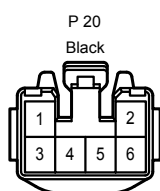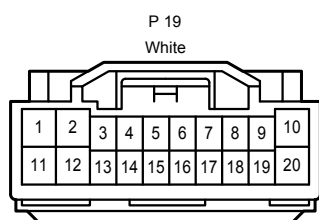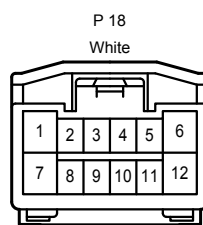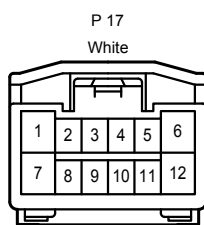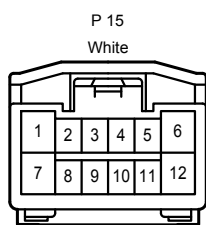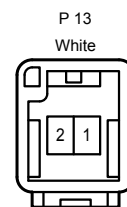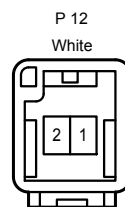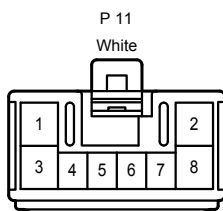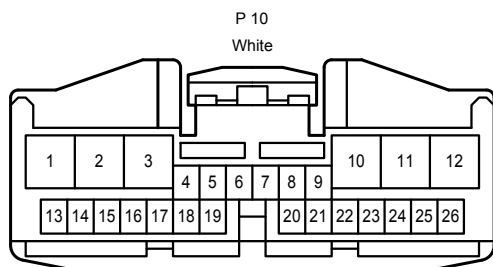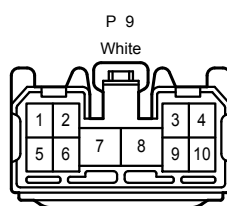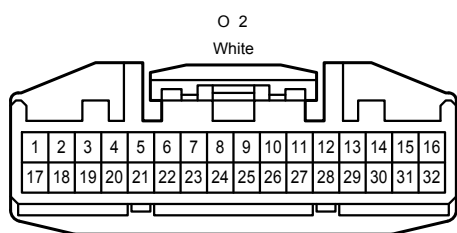

Position of Parts in Body <RHD>

