


Position of Parts in Engine Compartment <RHD>

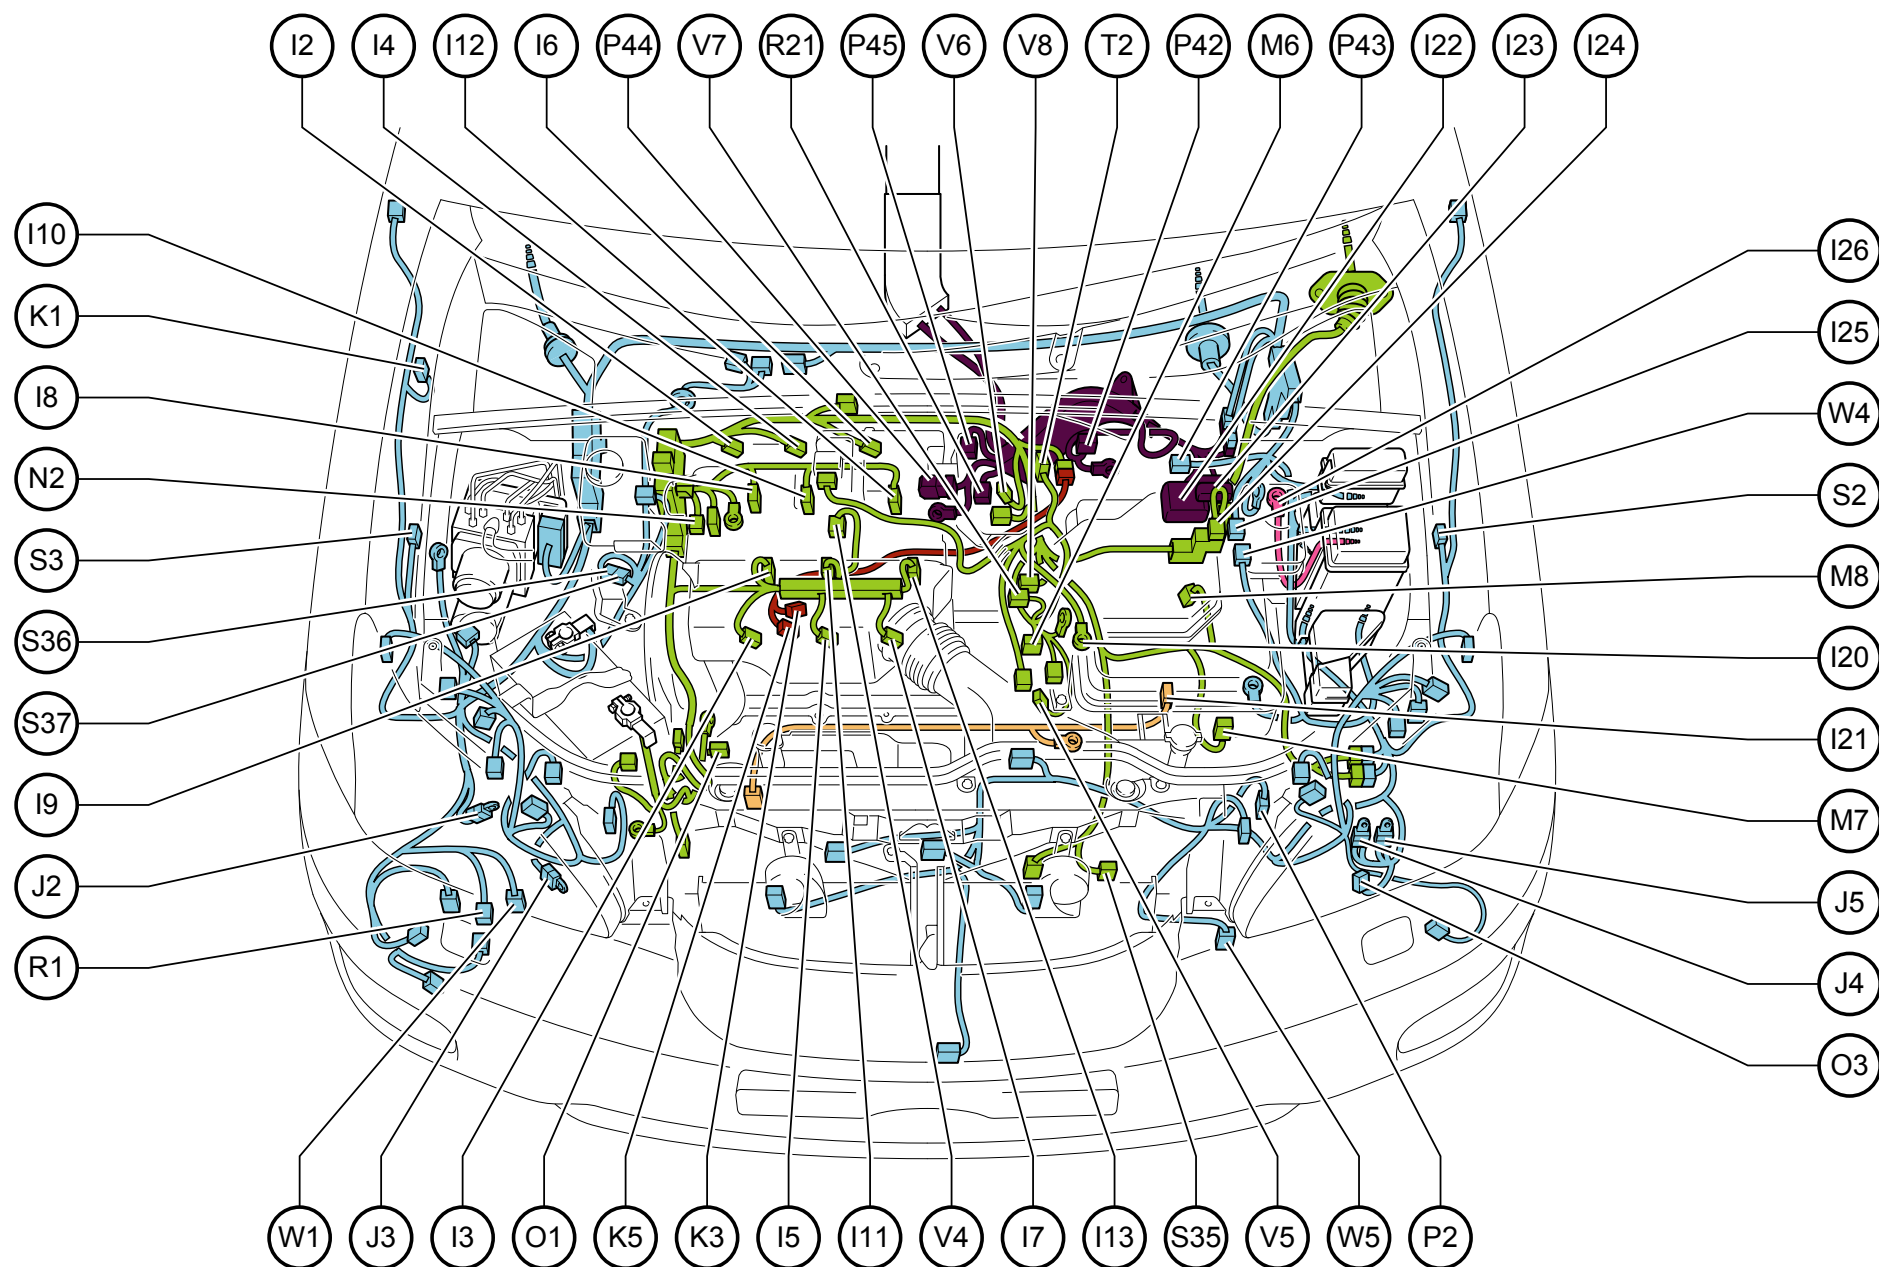

I	2	Ignition Coil and Igniter No.1
I	3	Ignition Coil and Igniter No.2
I	4	Ignition Coil and Igniter No.3
I	5	Ignition Coil and Igniter No.4
I	6	Ignition Coil and Igniter No.5
I	7	Ignition Coil and Igniter No.6
I	8	Injector No.1
I	9	Injector No.2
I	10	Injector No.3
I	11	Injector No.4
I	12	Injector No.5
I	13	Injector No.6
I	20	Inverter
I	21	Inverter
I	22	Inverter
I	23	Inverter
I	24	Inverter
I	25	Inverter
I	26	Inverter
J	2	Junction Connector
J	3	Junction Connector
J	4	Junction Connector
J	5	Junction Connector
K	1	Keyless Buzzer
K	3	Knock Sensor (Bank 1)
K	5	Knock Sensor (Bank 2)
M	6	Motor Generator No.1 (Front)
M	7	Motor Generator No.2 (Front)
M	8	Motor Generator No.2 (Front)
N	2	Noise Filter
O	1	Oil Pressure SW
O	3	Oil Pump Motor (Transaxle)
P	2	Pressure SW
P	42	Power Steering ECU
P	43	Power Steering ECU
P	44	Power Steering Motor
P	45	Power Steering Torque Sensor
R	1	Rear Washer Motor
R	21	Rotation Angle Sensor
S	2	Speed Sensor Front LH
S	3	Speed Sensor Front RH
S	35	Shift Lever Position Sensor (Park/Neutral Position SW)
S	36	Short Connector
S	37	Short Connector
T	2	Throttle Position Sensor and Motor
V	4	VSV (EVAP)
V	5	VVT Sensor LH
V	6	VVT Sensor RH
V	7	VVT Solenoid LH

- V 8 VVT Solenoid RH
- W 1 Washer Level Warning SW
- W 4 Water Pump Motor (A/C)
- W 5 Water Pump Motor (Inverter)

Position of Parts in Engine Compartment <RHD>

