


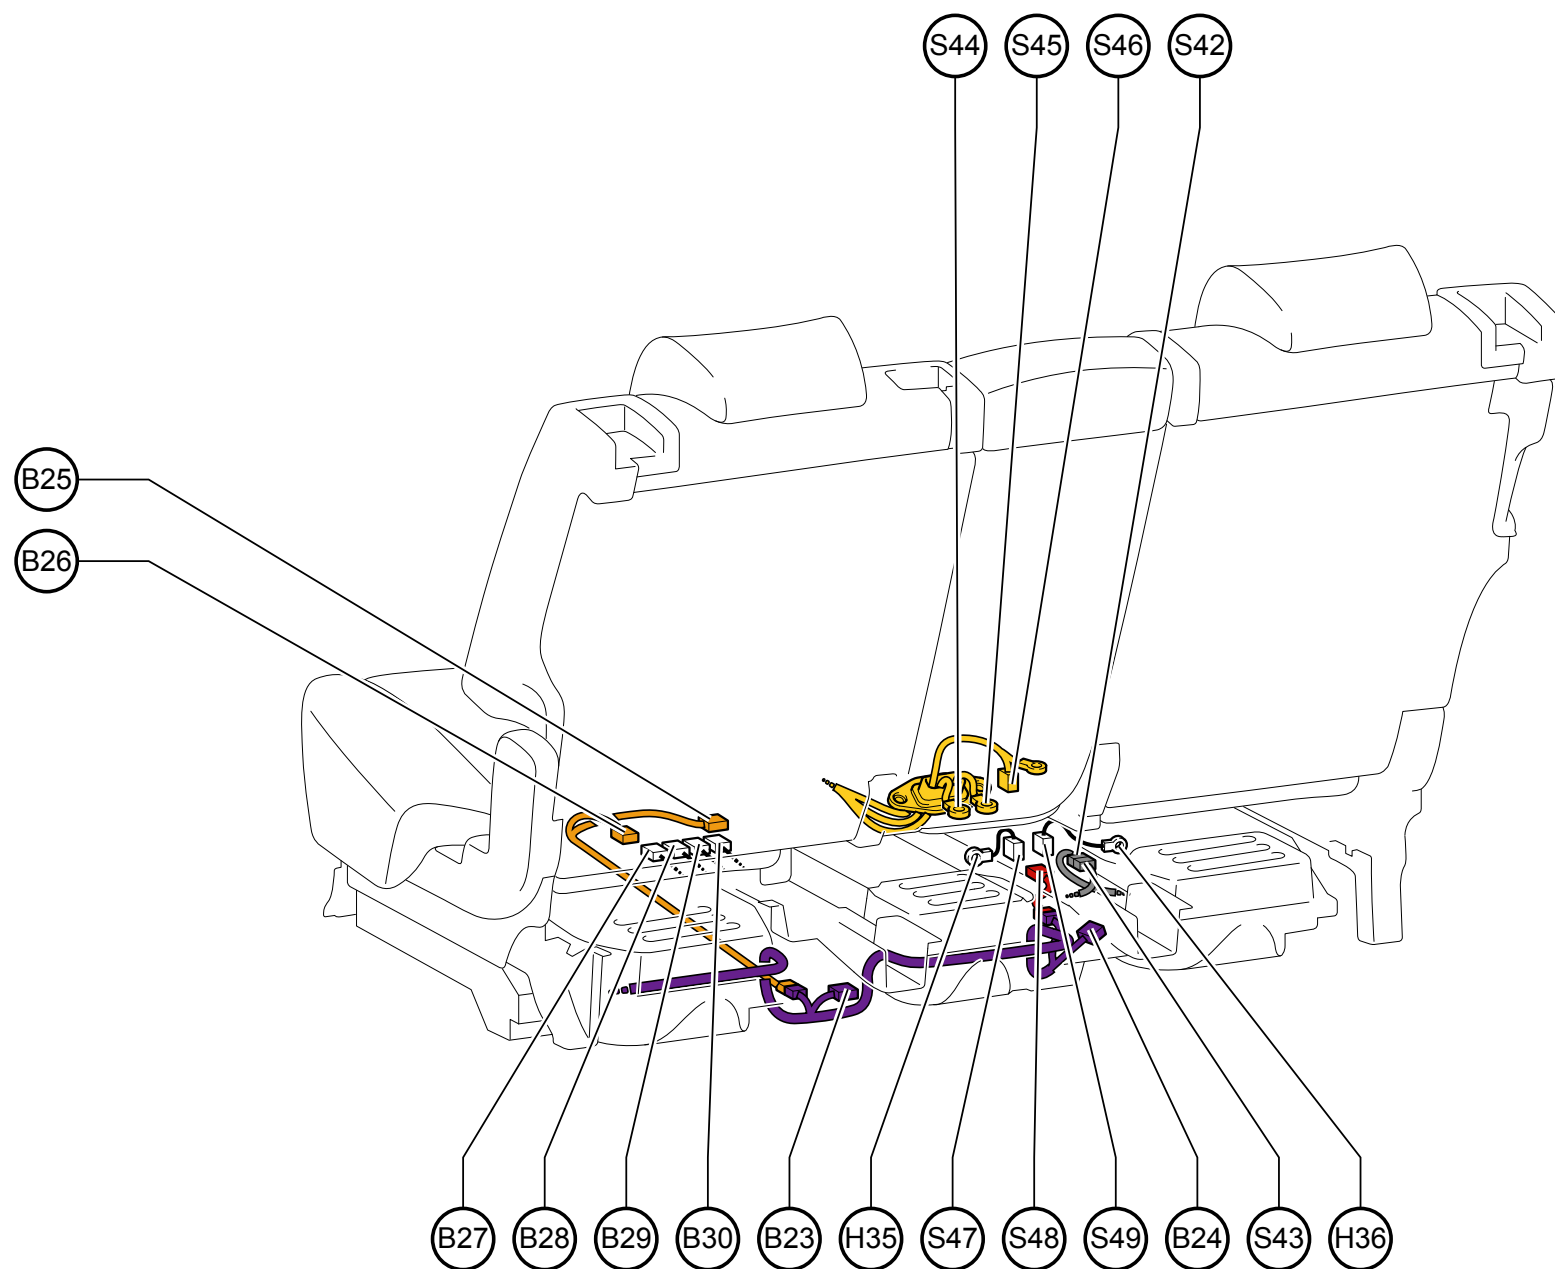

B 23 Battery Blower Motor (Center)
B 24 Battery Blower Motor (RH)
B 25 Battery Current Sensor , Hybrid Vehicle Battery
B 26 Battery Voltage Sensor , Hybrid Vehicle Battery
B 27 Battery Voltage Sensor , Hybrid Vehicle Battery
B 28 Battery Voltage Sensor , Hybrid Vehicle Battery
B 29 Battery Voltage Sensor , Hybrid Vehicle Battery
B 30 Battery Voltage Sensor , Hybrid Vehicle Battery

H 35 Hybrid Vehicle Battery
H 36 Hybrid Vehicle Battery

S 42 Short Connector , Hybrid Vehicle Battery
S 43 Short Connector , Hybrid Vehicle Battery
S 44 System Main Relay
S 45 System Main Relay
S 46 System Main Relay
S 47 System Main Relay
S 48 System Main Relay
S 49 System Main Relay

Position of Parts in Seat <LHD:Rear Seat>

