


Position of Parts in Instrument Panel <LHD>

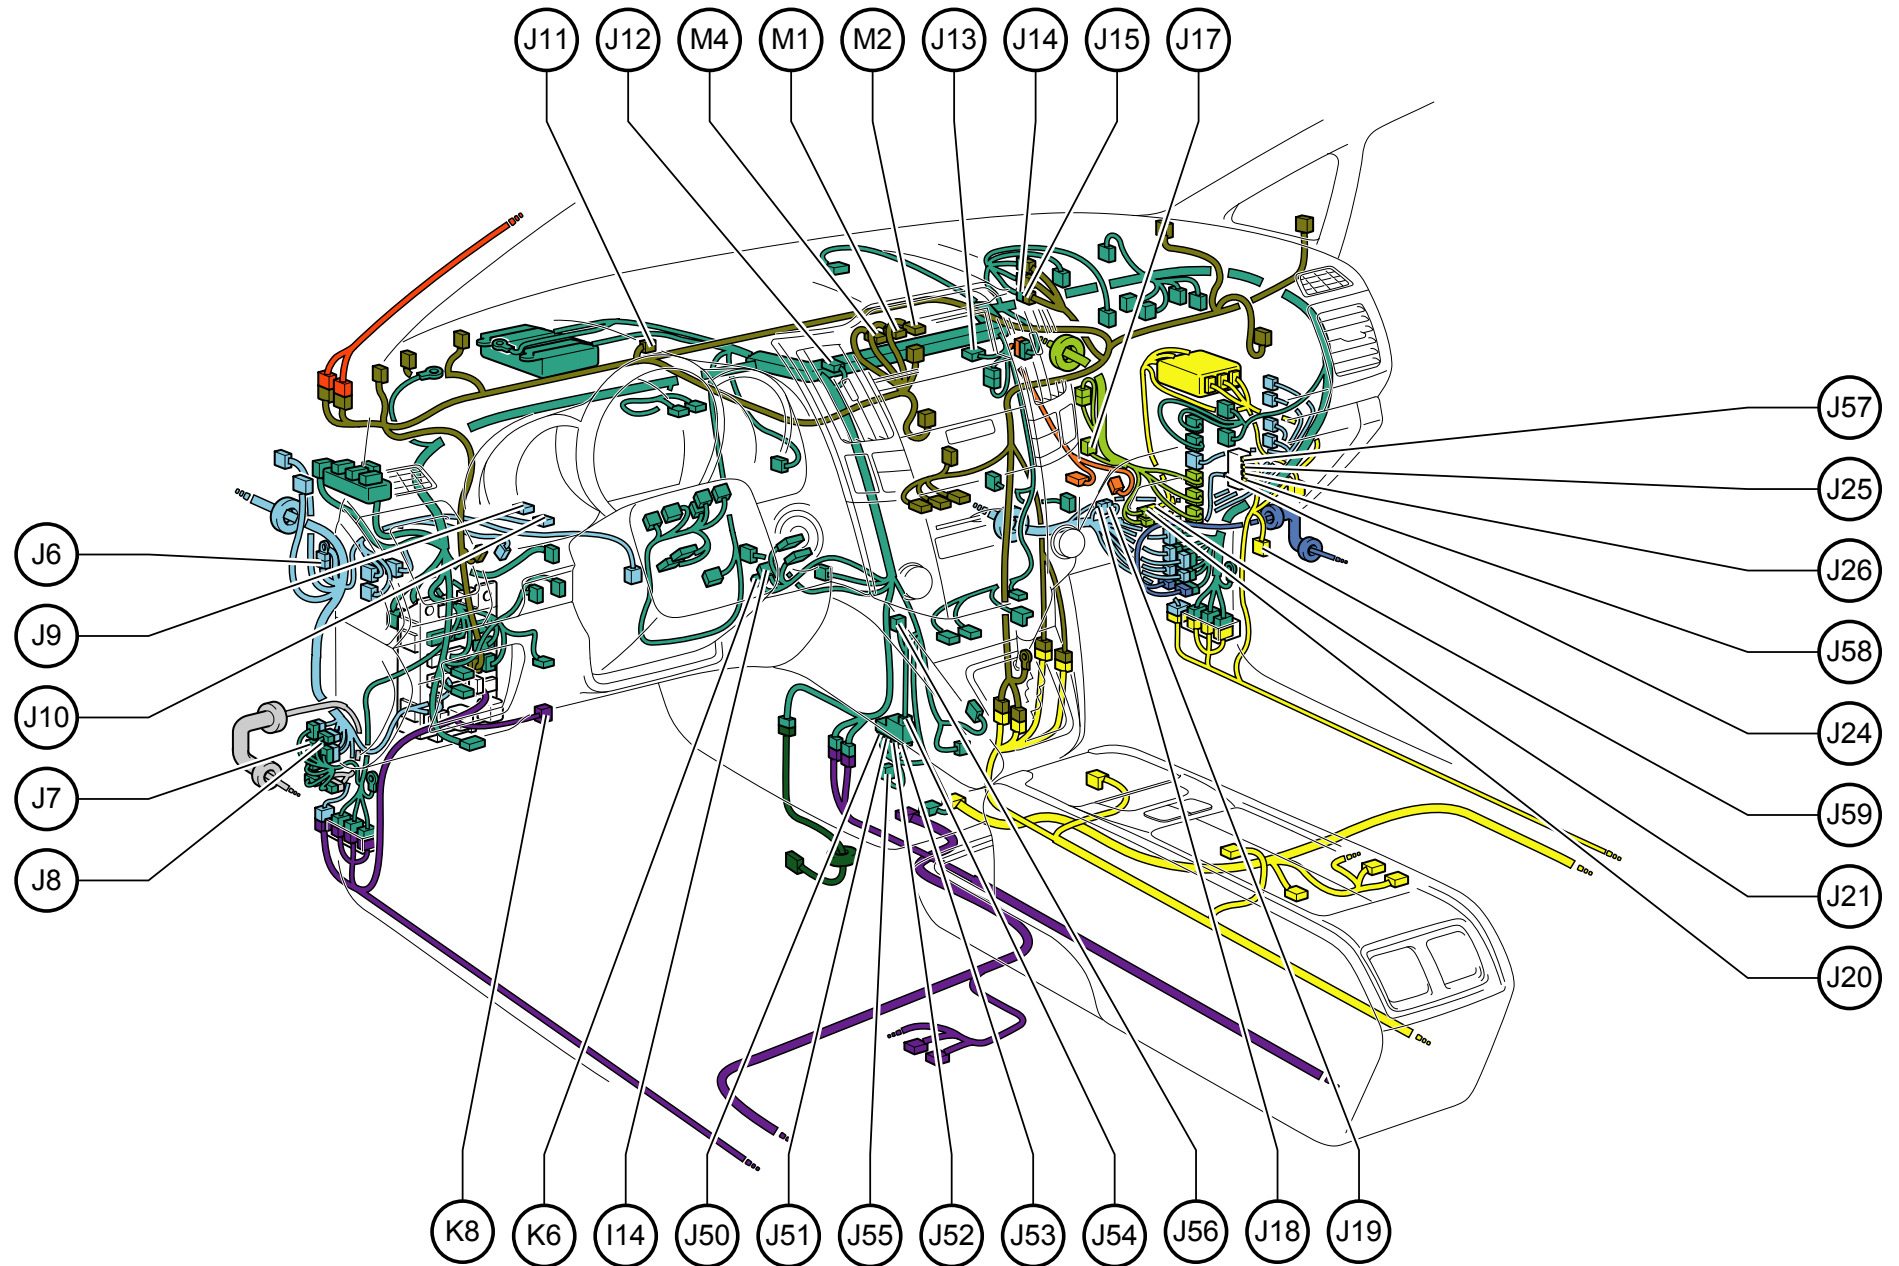



















- I 14 Ignition SW

- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 9 Junction Connector
- J 10 Junction Connector
- J 11 Junction Connector
- J 12 Junction Connector
- J 13 Junction Connector
- J 14 Junction Connector
- J 15 Junction Connector
- J 17 Junction Connector
- J 18 Junction Connector
- J 19 Junction Connector
- J 20 Junction Connector
- J 21 Junction Connector
- J 24 Junction Connector
- J 25 Junction Connector
- J 26 Junction Connector
- J 50 Junction Connector
- J 51 Junction Connector
- J 52 Junction Connector
- J 53 Junction Connector
- J 54 Junction Connector
- J 55 Junction Connector
- J 56 Junction Connector
- J 57 Junction Connector
- J 58 Junction Connector
- J 59 Junction Connector

- K 6 Key Interlock Solenoid , Unlock Warning SW
- K 8 Knee Airbag Squib

- M 1 Multi Display
- M 2 Multi Display
- M 4 Multi Display

Position of Parts in Instrument Panel <LHD>

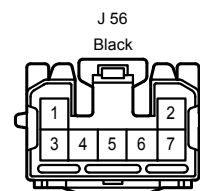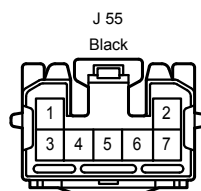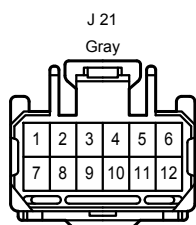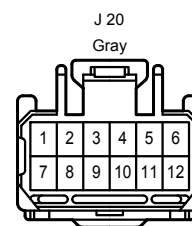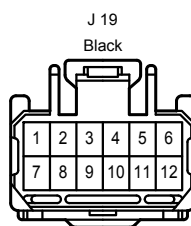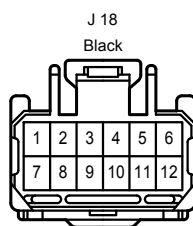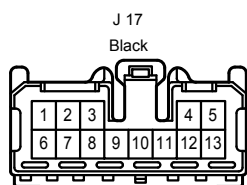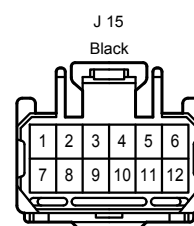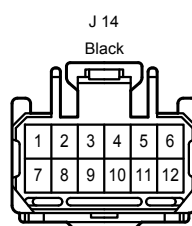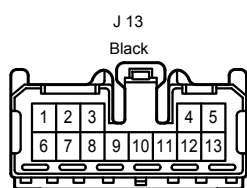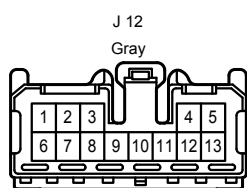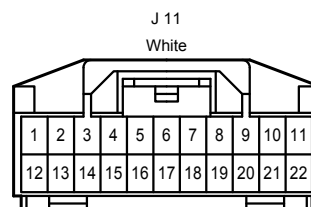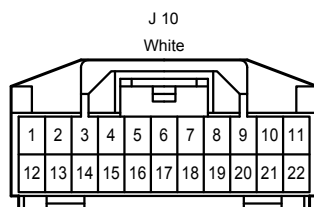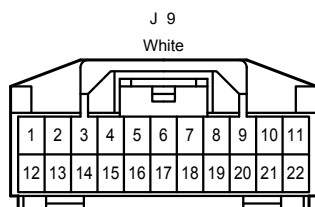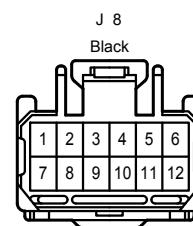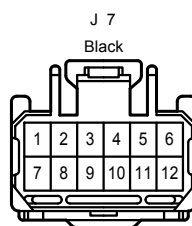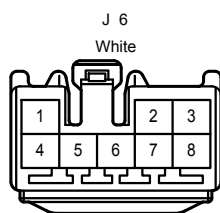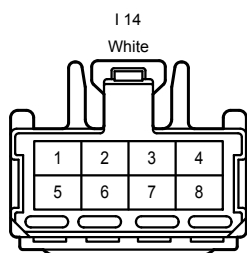

Position of Parts in Instrument Panel <LHD>

