


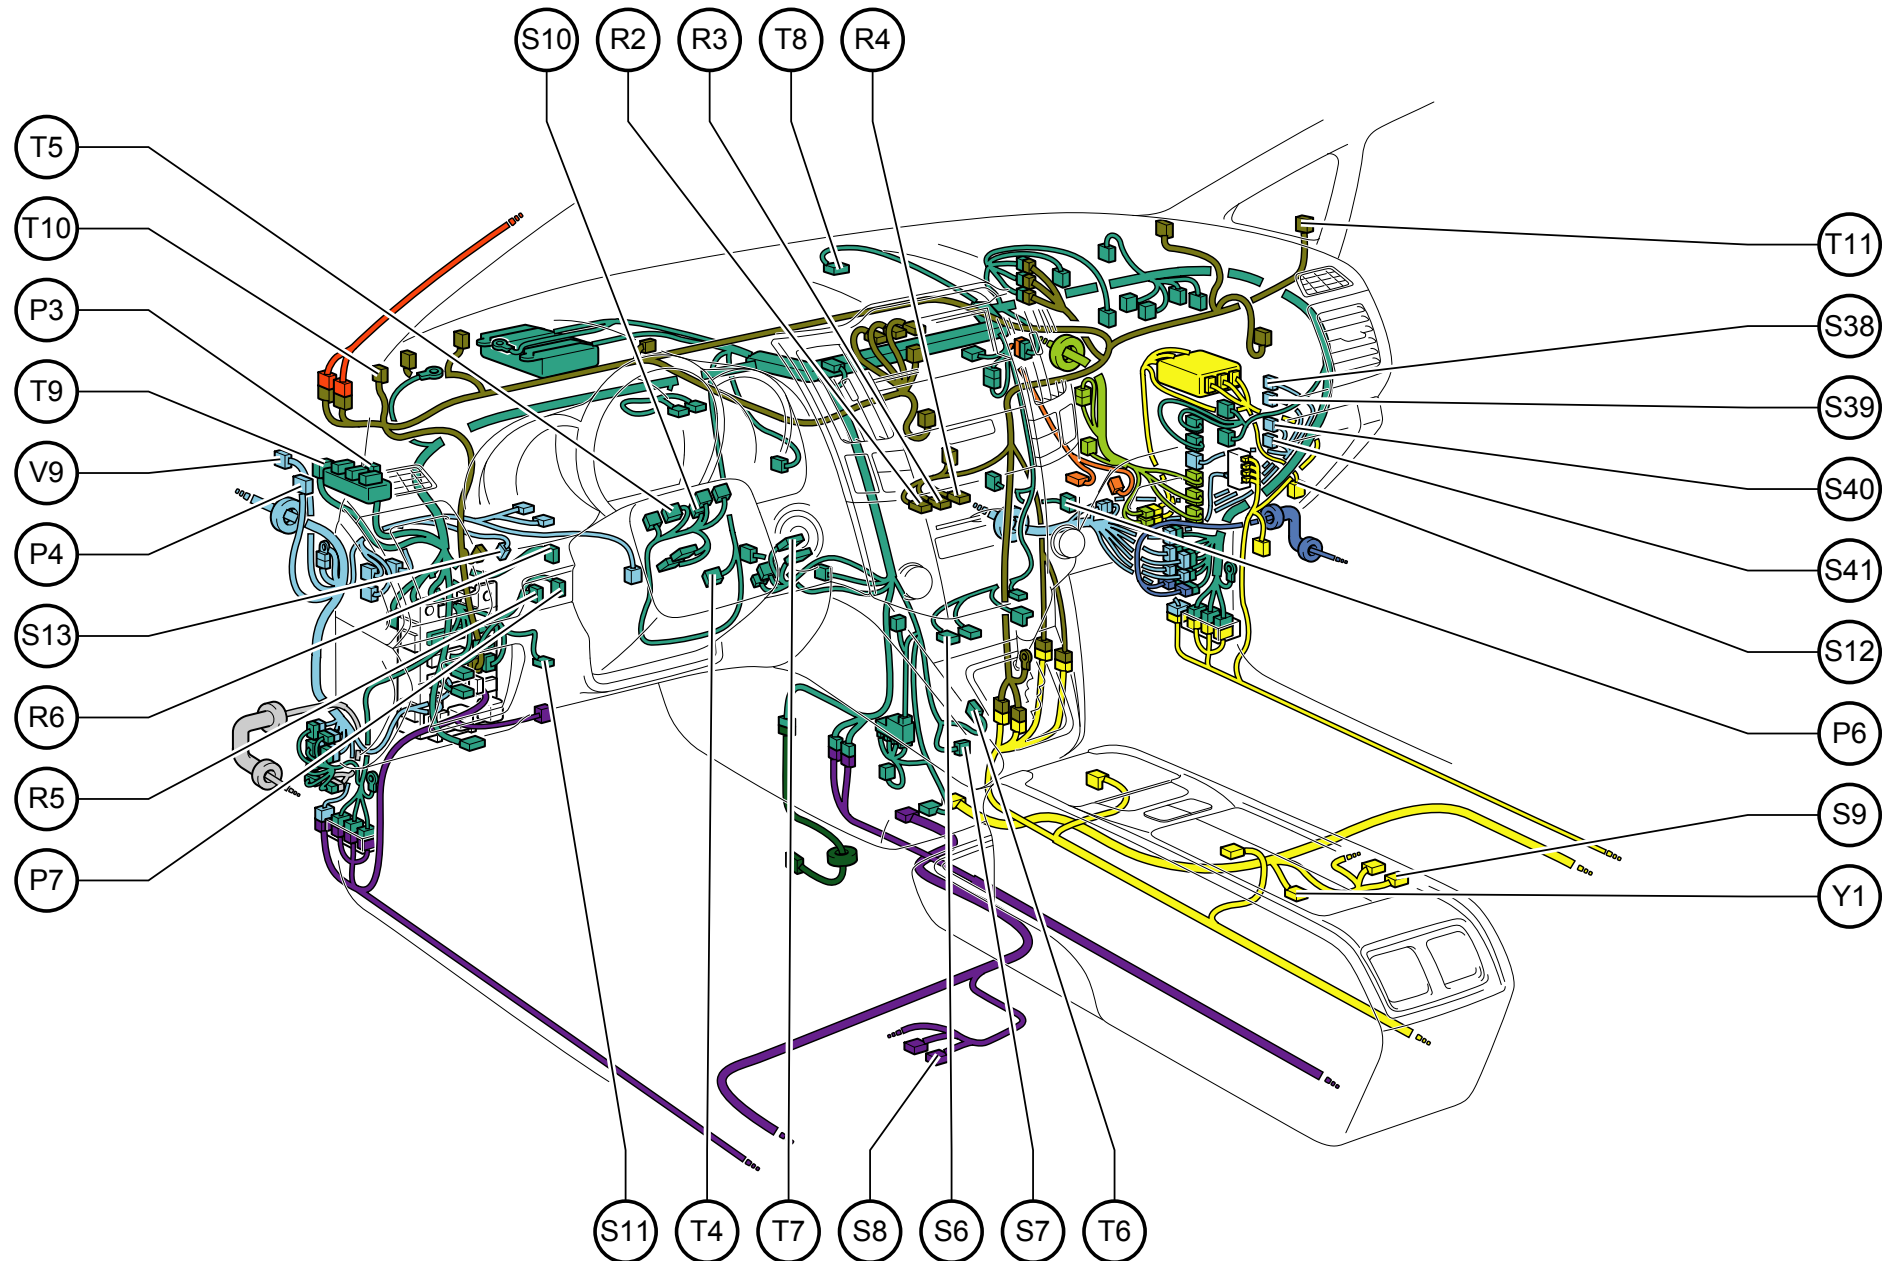

- P 3 Panel Relay
- P 4 Parking Brake SW
- P 6 Power Back Door Off SW
- P 7 Power Back Door Opener/Closer SW

- R 2 Radio and Player
- R 3 Radio and Player
- R 4 Radio and Player
- R 5 Remote Control Mirror SW (w/o Driving Position Memory)
- R 5 Remote Control Mirror SW (w/ Driving Position Memory)
- R 6 Rheostat , Trip SW




















 

- S 6 Seat Heater SW
- S 7 Shift Lock ECU
- S 8 Side Airbag Squib LH
- S 9 Side Airbag Squib RH
- S 10 Steering Angle Sensor
- S 11 Step Light LH
- S 12 Step Light RH
- S 13 Stop Light SW
- S 38 Skid Control ECU
- S 39 Skid Control ECU
- S 40 Skid Control ECU
- S 41 Skid Control ECU

- T 4 Tilt and Telescopic ECU
- T 5 Tilt Motor
- T 6 Transmission Control SW
- T 7 Transponder Key Amplifier
- T 8 Transponder Key Computer
- T 9 Turn Signal Flasher
- T 10 Tweeter LH
- T 11 Tweeter RH

- V 9 VSC Warning Buzzer


- Y 1 Yaw Rate Sensor

Position of Parts in Instrument Panel <LHD>

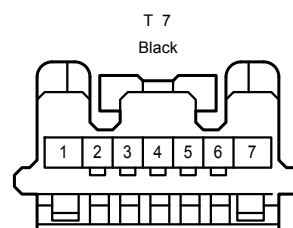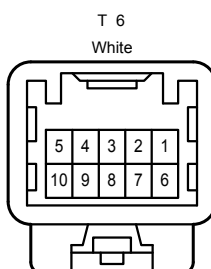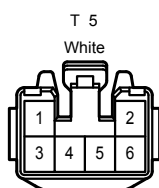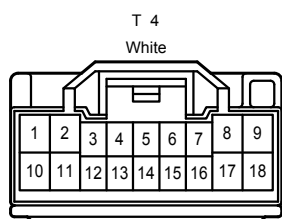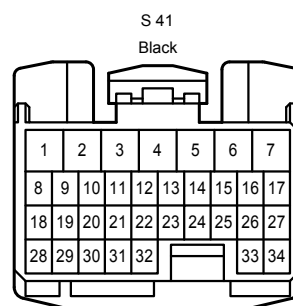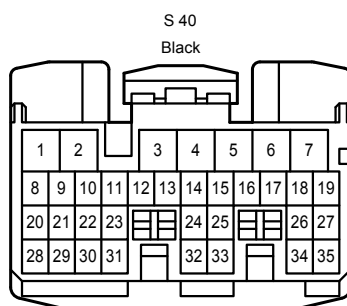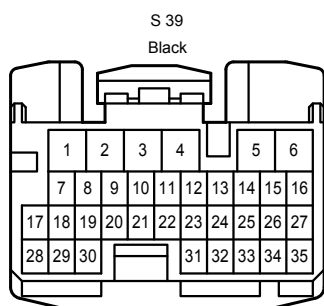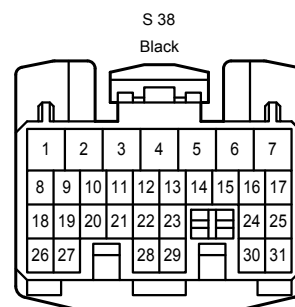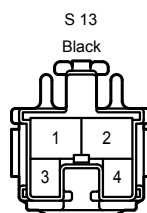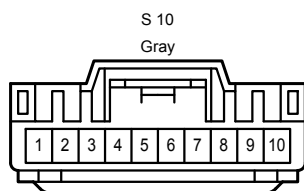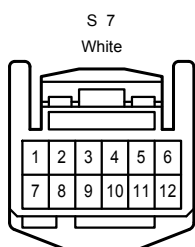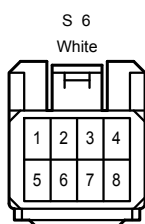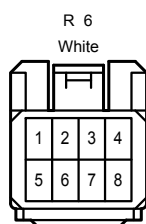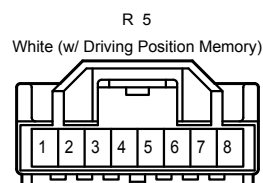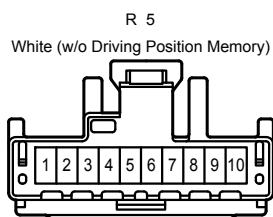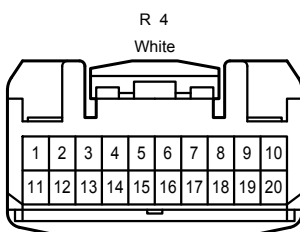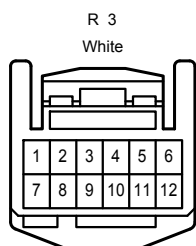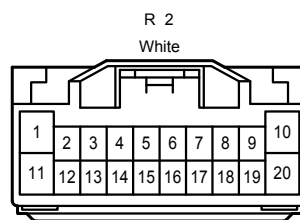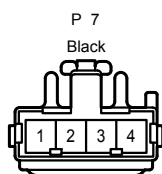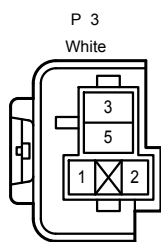

Position of Parts in Instrument Panel <LHD>


T 8
White

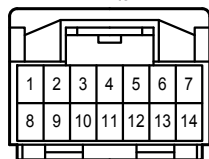


T 9
White



 
T 10
White



T 11
White

 

V 9
Black

 

Y 1
Black

