


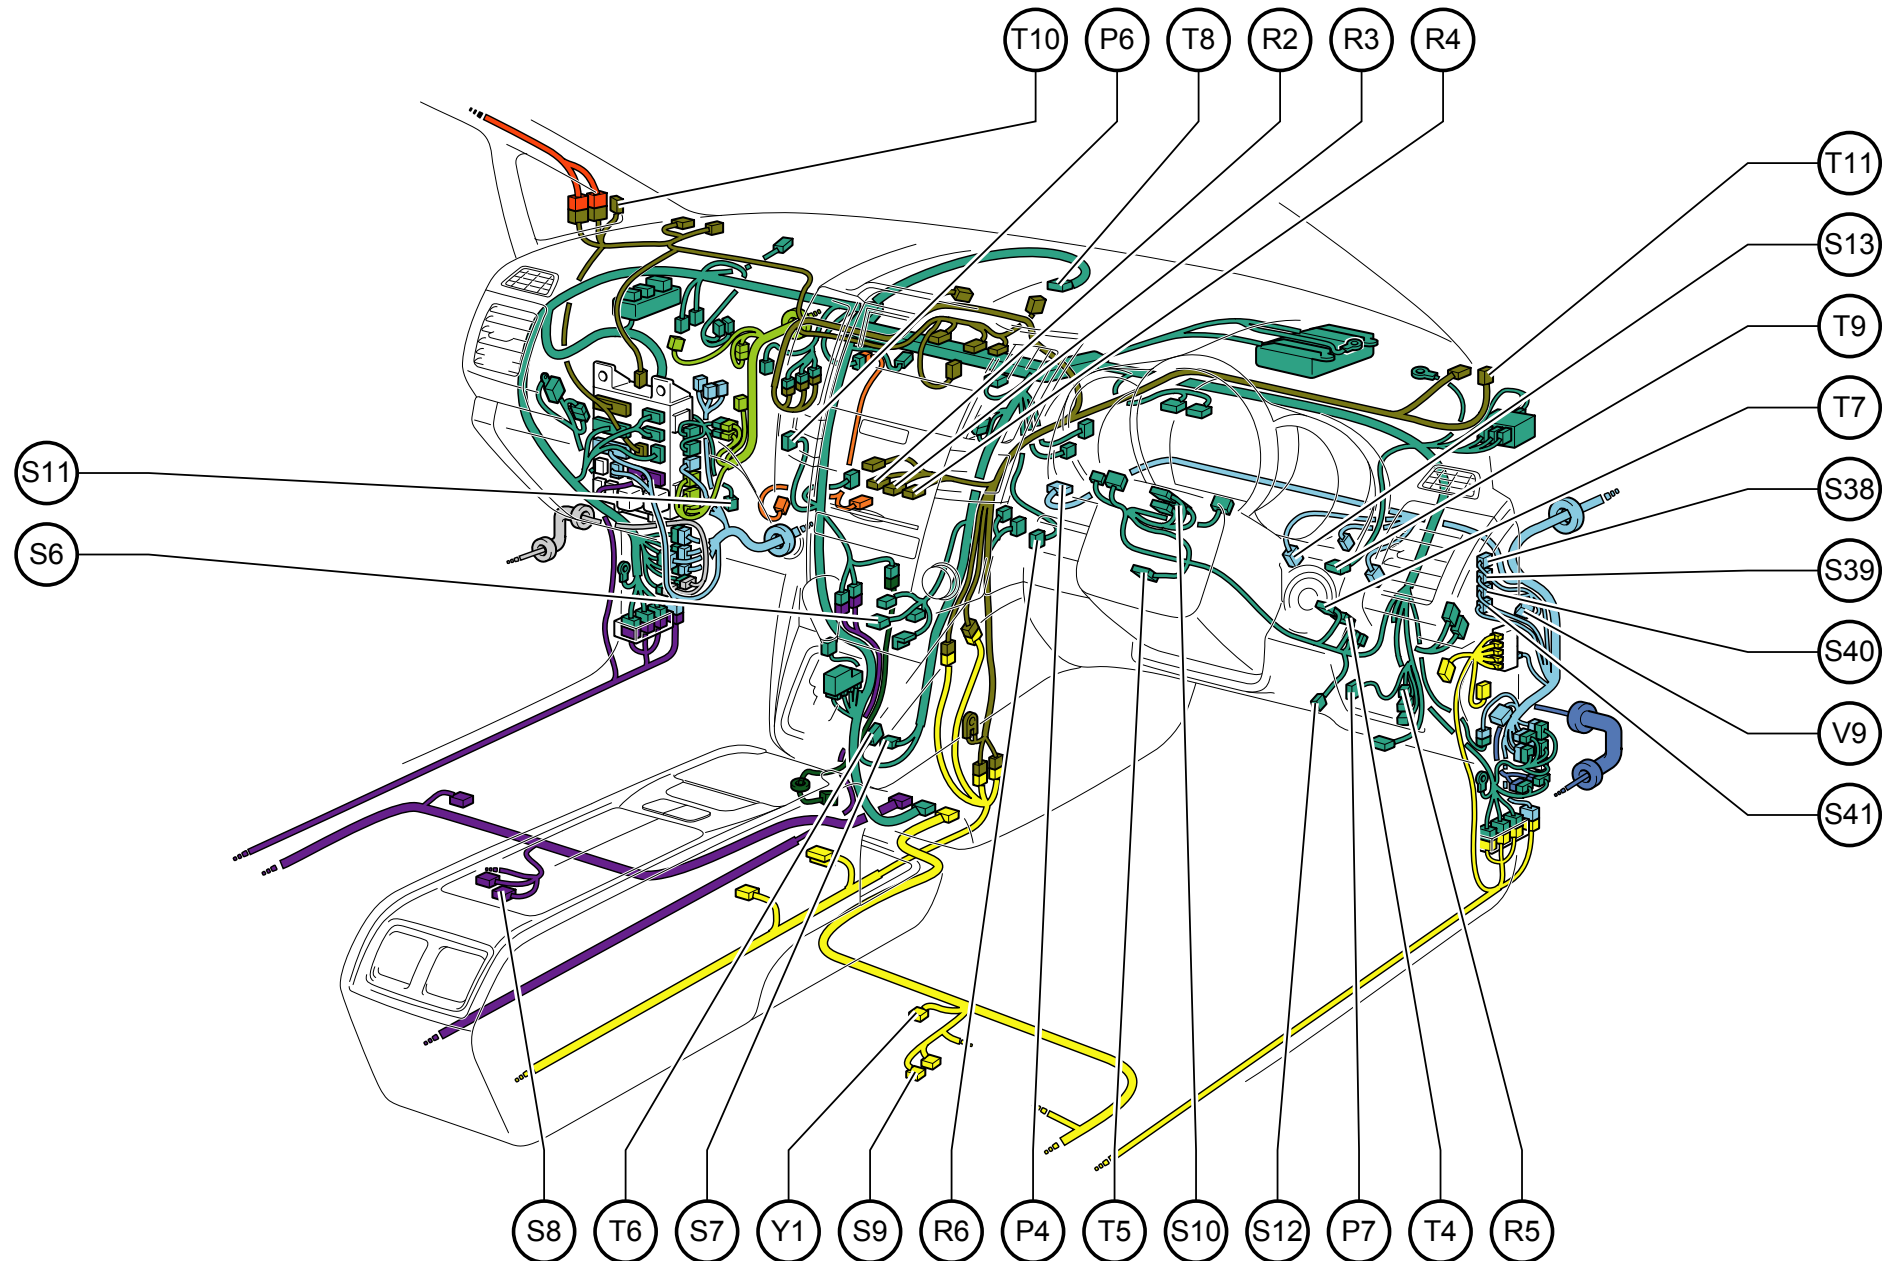

P 4 Parking Brake SW
P 6 Power Back Door Off SW
P 7 Power Back Door Opener/Closer SW

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Remote Control Mirror SW (w/ Driving Position Memory)
R 5 Remote Control Mirror SW (w/o Driving Position Memory)
R 6 Rheostat , Trip SW

S 6 Seat Heater SW
S 7 Shift Lock ECU
S 8 Side Airbag Squib LH
S 9 Side Airbag Squib RH
S 10 Steering Angle Sensor
S 11 Step Light LH
S 12 Step Light RH
S 13 Stop Light SW
S 38 Skid Control ECU
S 39 Skid Control ECU
S 40 Skid Control ECU
S 41 Skid Control ECU

T 4 Tilt and Telescopic ECU
T 5 Tilt Motor
T 6 Transmission Control SW
T 7 Transponder Key Amplifier
T 8 Transponder Key Computer
T 9 Turn Signal Flasher
T 10 Tweeter LH
T 11 Tweeter RH

V 9 VSC Warning Buzzer

Y 1 Yaw Rate Sensor

Position of Parts in Instrument Panel <RHD>

