


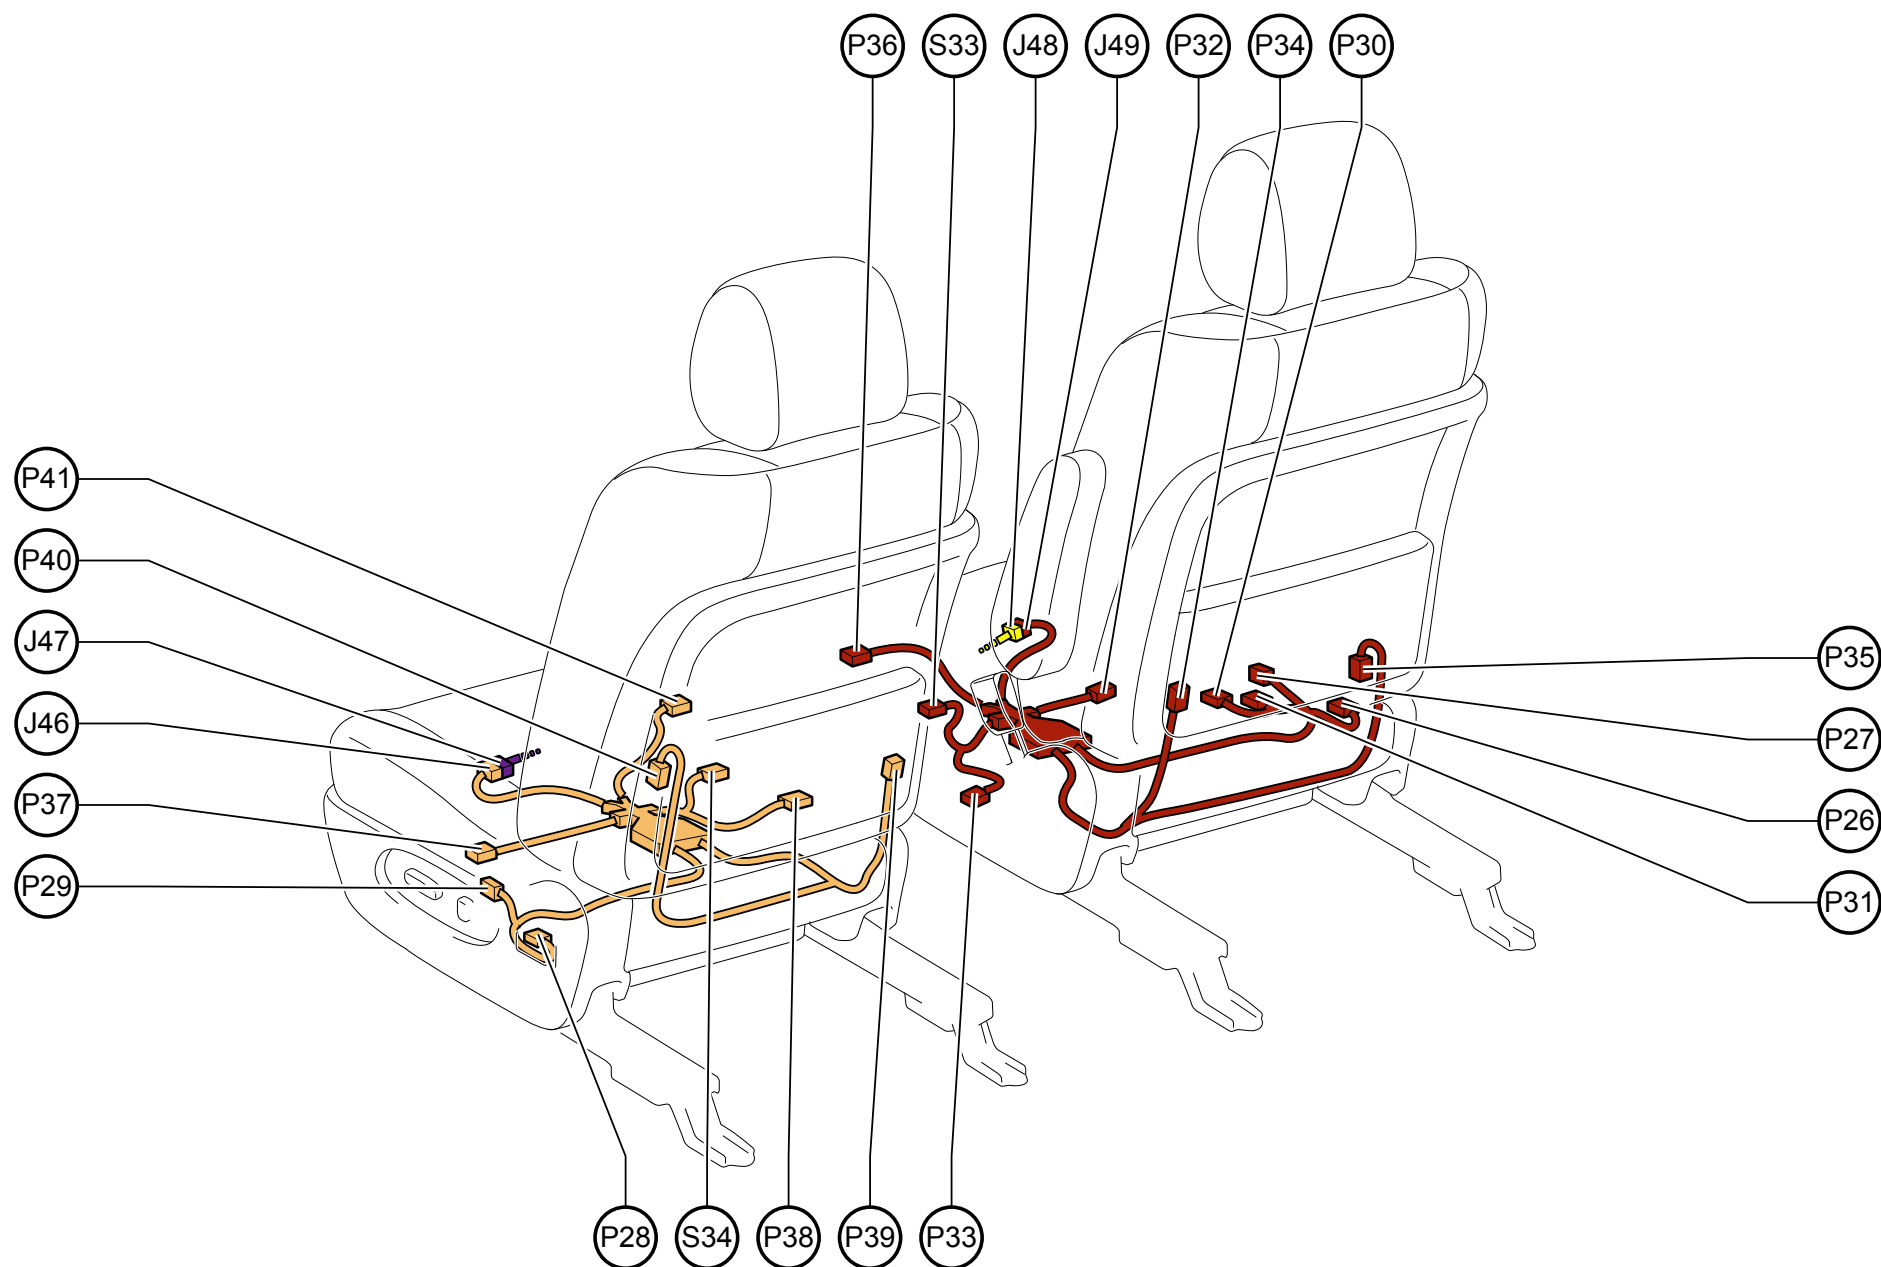

- J 46 Junction Connector
- J 47 Junction Connector
- J 48 Junction Connector
- J 49 Junction Connector

- P 26 Power Seat Control SW (Driver's Seat Lumbar Support Control)
- P 27 Power Seat Control SW (Driver's Seat)
- P 28 Power Seat Control SW (Front Passenger's Seat Lumbar Support Control)
- P 29 Power Seat Control SW (Front Passenger's Seat)
- P 30 Power Seat Control SW and ECU (Driver's Seat)
- P 31 Power Seat Control SW and ECU (Driver's Seat)
- P 32 Power Seat Motor (Driver's Seat Front Vertical Control)
- P 33 Power Seat Motor (Driver's Seat Lifter Control)
- P 34 Power Seat Motor (Driver's Seat Lumbar Support Control)
- P 35 Power Seat Motor (Driver's Seat Reclining Control)
- P 36 Power Seat Motor (Driver's Seat Slide Control)
- P 37 Power Seat Motor (Front Passenger's Seat Front Vertical Control)
- P 38 Power Seat Motor (Front Passenger's Seat Lifter Control)
- P 39 Power Seat Motor (Front Passenger's Seat Lumbar Support Control)
- P 40 Power Seat Motor (Front Passenger's Seat Reclining Control)
- P 41 Power Seat Motor (Front Passenger's Seat Slide Control)

- S 33 Seat Heater (Driver's Seat)
- S 34 Seat Heater (Front Passenger's Seat)

Position of Parts in Seat <RHD:Front Seat>

