


■ AUTOMATIC LIGHT CONTROL SYSTEM

- When the light control switch at the AUTO position, the automatic light control sensor detects the ambient light and automatically turns the headlights and taillights ON or OFF accordingly.
- The automatic light control sensor is integrated with the solar sensor that is used in the automatic air conditioning system.
- This system is controlled by the Body ECU.

► System Diagram ◀

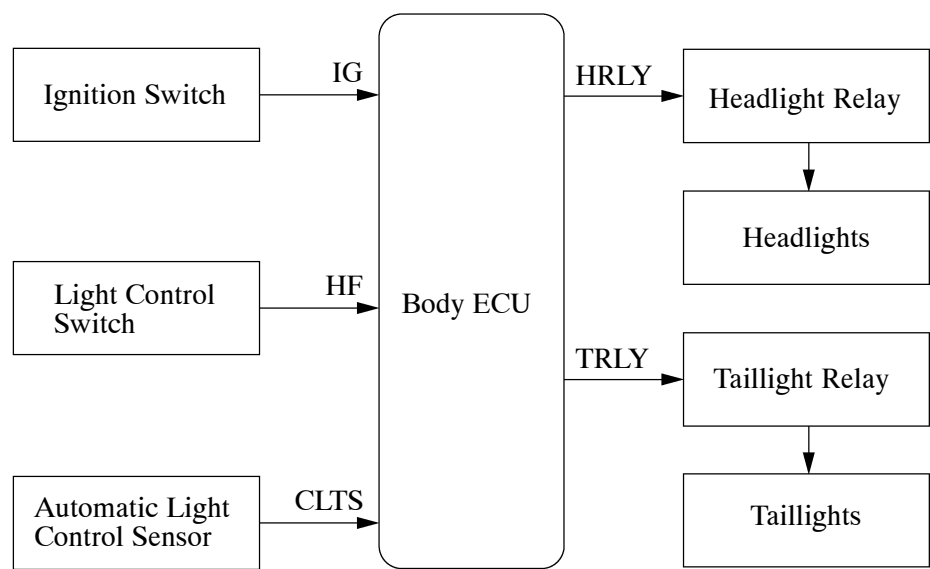

277BE19

■ LIGHT AUTO TURN-OFF SYSTEM

The operation of the light auto turn-off system varies by light control switch position as shown in the table below. This system is controlled by the Body ECU.

Switch Position			Outline
TAIL	HEAD	AUTO	
—	—	○	While the lights (headlights, front fog lights, rear fog lights, and taillights) are turned ON, this system automatically turns them OFF when the ignition switch is turned OFF and the driver's door is opened.
○	○	—	While the lights (headlights, front fog lights, rear fog lights, and taillights) are turned ON, this system automatically turns OFF only the headlights and the front fog lights when the ignition switch is turned OFF.