

■ JAM PROTECTION FUNCTION


1. General

- A jam protection function automatically stops the power window and moves it downward if a foreign object gets jammed in the door window during one-touch auto-up operation.
- On the previous model, the jamming of the power window was detected by the limit switch and pulse sensor. On the new model, this has been changed to the two hall ICs that are integrated in the all door's power window motor.
- The activation of the jam protection function is described below.

Door Window Position from Full Close	Operation of Jam Protection Function
200 mm (7.87 in.) or more	Down operation of 50 mm (1.97 in.) or 1 sec.
200 mm (7.87 in.) or less	Down operation until door window opening of 200 mm (7.87 in.) is reached or 5 sec.

2. Jammed Window Detection Mechanism


- The jammed window detection mechanism consists of a magnet that is provided on the worm gear of the power window motor assembly and the two Hall IC that are provided on the connector.

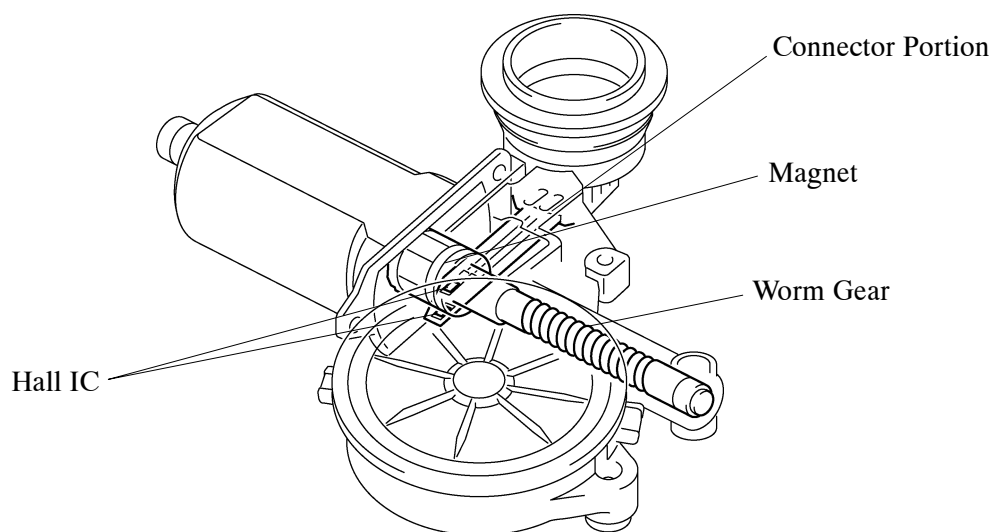

Power Window Motor Assembly


- The Hall IC converts the changes in the magnetic flux that occur through the rotation of the worm gear into pulse signals and outputs them to the power window master switch/power window switch.
- To control the jam protection function, the power window master switch/power window switch determines the amount of movement and the jamming of the window glass from the pulse signals from the Hall IC1; and the moving direction of the window glass from the phase difference between the pulses from the Hall IC1 and Hall IC2.

► Judgment of Amount of Movement and Jamming of Window Glass ◀

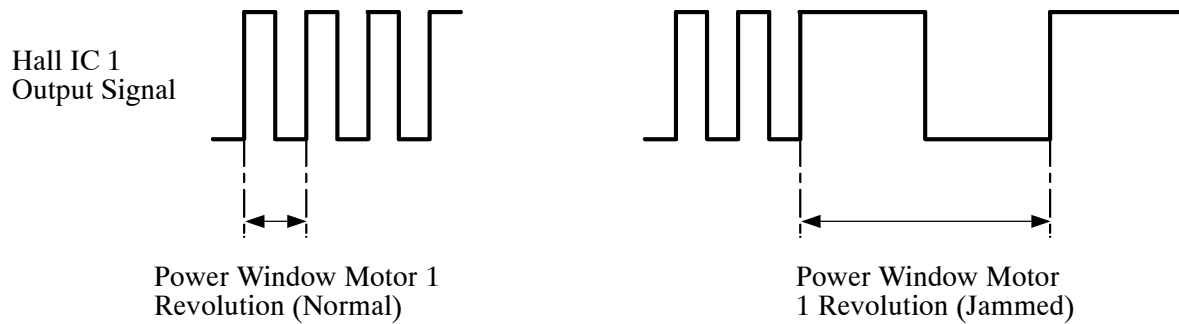

232BE34

► Judgment of Window Glass Moving Direction ◀

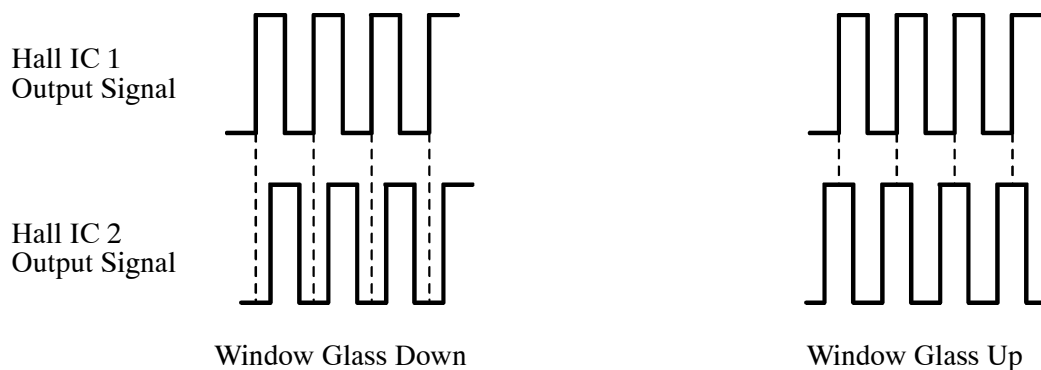

232BE35

Service Tip

The power window master switch and each power window switch memorize the initial position of the each door window. This data will be lost if a battery terminal, fuse, or each power window switch is disconnected, allowing only a manual operation. Therefore, after reconnecting the battery terminal, fuse, or each power window switch initialize the system by performing the steps described below.

- (1) Open the door window a minimum of 1/4.
- (2) Pull and hold the power window switch UP. By keeping the switch pulled UP for approximately 1 second after the door window is fully closed, the power window master switch memorizes the initial position of the door window.

For details, refer to the LEXUS RX400h Repair Manual (Pub. No. RM1139E).