


SEAT BELT REMINDER SYSTEM

DESCRIPTION

- A seat belt reminder system is used. If the seat belt is not buckled, the reminder light flashes and the buzzer sounds.
- When the ignition switch is turned ON, this system determines whether or not the seat belt is buckled depending on whether the signal from the switch in the seat belt buckle is ON or OFF.
- The occupant detection sensor provided in the seat cushion of the front passenger seat determines whether or not an occupant is seated in the front passenger seat.
- On the new RX400h, the ON/OFF setting of the buzzer can be changed by operating the multi-information display in the combination meter.


System Diagram

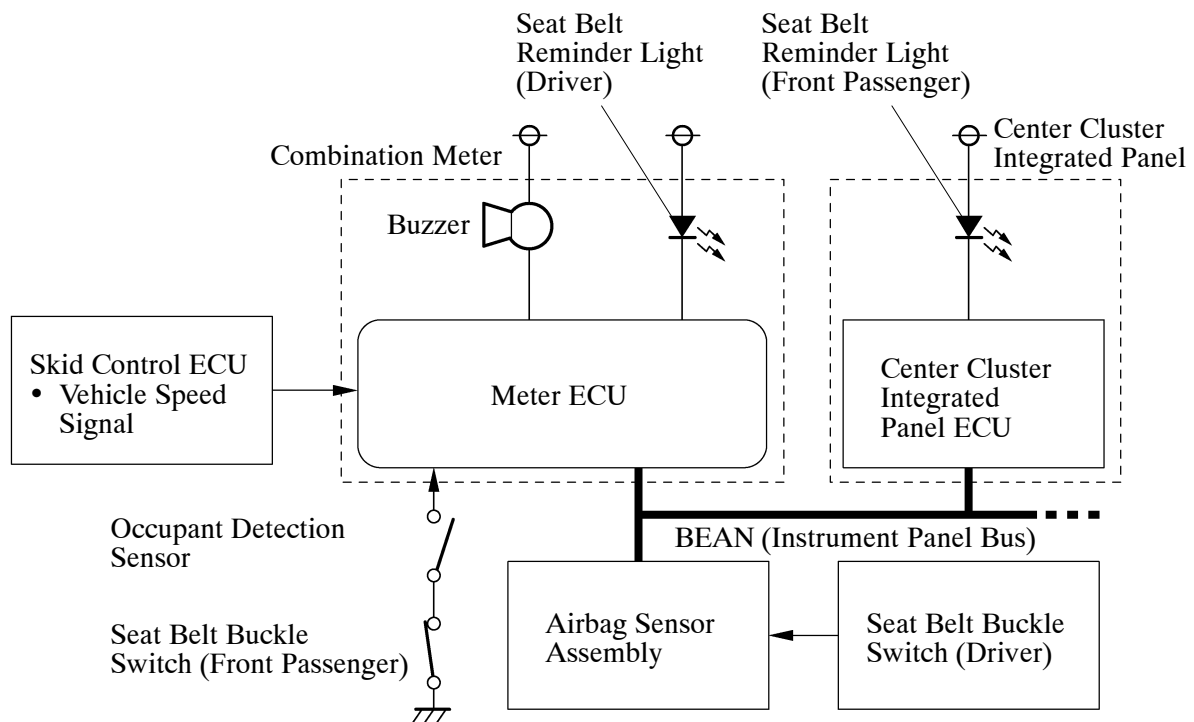

Service Tip

On the new RX400h, the ON/OFF setting of the buzzer of the seat belt reminder system can be changed by operating the multi-information display in the combination meter, as indicated below.

- 1) Within 6 seconds after turning the ignition switch ON, press and hold the ODO/TRIP switch for a minimum of 10 seconds.
- 2) The buzzer proceeds to the cancel mode when the driver seat belt or the passenger seat belt is buckled (seat belt buckle switch OFF) within 10 seconds while performing the above step. The setting of the buzzer differs depending on whether the driver seat belt or the passenger seat belt is operated this time.
 - Operating the driver seat belt:
Enables the buzzer sound to be set for both the driver and passenger.
 - Operating the passenger seat belt:
Enables the buzzer sound to be set only for the passenger. The seat belt must be operated while an occupant is seated in the passenger seat.
- 3) “SEAT BELT BUZZER ON” appears on the multi-information display.
- 4) Release the ODO/TRIP switch to turn it OFF, and “SEAT BELT BUZZER OFF” appears on the multi-information display.
- 5) The indication on the multi-information display changes when the ODO/TRIP switch is turned ON or OFF. When approximately 10 seconds elapse after the buzzer is set ON or OFF and the ignition switch is turned OFF, the buzzer cancel mode ends. This completes the setting of the buzzer in the seat belt reminder system.

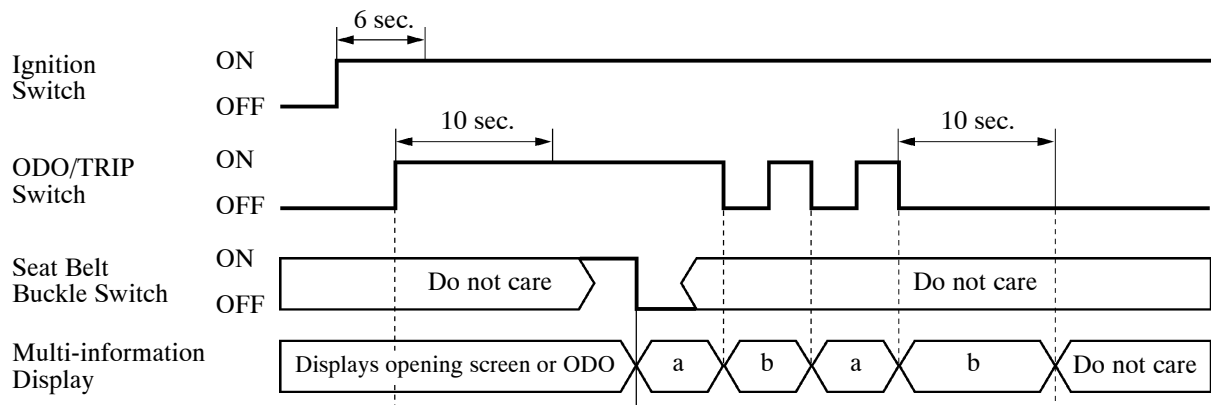

278BE37

**a****b**

278BE38

Multi-information Display