

PARTS INDEX

A

A/C MAIN RELAY U- 67
 ACCELERATOR CABLE F2- 37
 ACTUATOR (AAS) R- 34
 ACTUATOR T- 77
 AIR CONTROL VALVE F1-67, 68
 AIR CONTROL VALVE F2-63, 64
 AIR PUMP F1-65, 66
 AIR PUMP F2- 61
 AIR SUPPLY VALVE F2- 39
 AIRFLOW METER F1- 82
 AIRFLOW METER F2- 80
 ALTERNATOR G-6, 12, 17
 ANTI-LOCK BRAKES (ABS) P- 52
 APEX SEAL C- 44
 AUDIO COMPONENT ASSEMBLY T-92, 108
 AUTOMATIC TRANSMISSION K-47, 50, 134, 149

B

BACK-UP LIGHT AND 5TH SWITCH F1- 86
 BACK-UP LIGHT AND 5TH SWITCH F2- 84
 BACK-UP LIGHT T-54, 58
 BATTERY G- 5
 BLOWER MOTOR U- 31
 BLOWER UNIT U- 30
 BRAKE PEDAL P-10, 11
 BYPASS AIR CONTROL VALVE F1- 41
 BYPASS AIR CONTROL VALVE F2- 39

C

CARGO ROOM LAMP T- 65
 CHARCOAL CANISTER F1- 70
 CHARCOAL CANISTER F2- 66
 CHECK-AND-CUT VALVE F1-69, 70
 CHECK-AND-CUT VALVE F2-65, 66
 CHECK VALVE F2- 37
 CIRCUIT OPENING RELAY F1- 57
 CIRCUIT OPENING RELAY F2- 53
 CLUSTER SWITCH. T-17, 18, 19, 23, 24, 25, 26
 CLUTCH COVER H-14, 16
 CLUTCH DISC H-14, 17
 CLUTCH MASTER CYLINDER H-7, 8, 9
 CLUTCH PEDAL H-5, 6
 CLUTCH RELEASE CYLINDER H-8, 11, 12
 CLUTCH SWITCH F1- 86
 CLUTCH SWITCH F2- 84
 CLUTCH SWITCH T- 77
 COIL WITH IGNITER G-28, 30
 COMPRESSOR U-46, 47, 56, 63
 CONDENSER U-64, 65
 CONTROL LINK R- 28
 CONVERTIBLE TOP S-74, 77, 80, 89, 102

COOLING FAN E-6, 7
 COOLING UNIT U-43, 44
 CORNER SEAL C- 45
 CPU T- 32
 CRANK ANGLE SENSOR G- 32
 CRUISE CONTROL SWITCH T-17, 18
 CRUISE CONTROL UNIT T-75, 76

D

DASHPOT F1- 72
 DASHPOT F2- 68
 DAYTIME RUNNING LIGHTS T-52, 61
 DIFFERENTIAL M-18, 19, 20, 21, 24
 DIMMER RELAY T- 51
 DOOR S-43, 46
 DOOR KEY CYLINDER SWITCH T- 83
 DOOR LOCK CYLINDER LIGHT T- 54
 DOOR LOCK SWITCH T- 83
 DOOR SWITCH T- 83
 DOOR WOOFER AMPLIFIER T-111, 112
 DOOR WOOFER SPEAKER T-110
 DRIVE BELT C- 5
 DRIVESHAFT M-14, 15
 DUTY SOLENOID VALVE F2- 41

E

EC-AT CONTROL UNIT K- 42
 ECCENTRIC SHAFT C-46, 52
 ECCENTRIC SHAFT BYPASS VALVE D- 15
 ECCENTRIC SHAFT PULLEY C-69, 76
 ECPS CONTROL UNIT N- 27
 ELECTRIC COOLING FAN E- 13
 ENGINE CONTROL UNIT F1- 78
 ENGINE CONTROL UNIT F2- 76
 ENGINE C-11, 21, 39, 47, 80
 EVAPORATOR U- 45
 EX-HI RELAY U- 32
 EXHAUST DEVICES F1- 59
 EXHAUST DEVICES F2- 55
 EXPANSION VALVE U- 44

F

FAN RELAY E- 13
 FLYWHEEL H-14, 17
 FRONT AXLE M-6, 8
 FRONT BUMPER S- 24
 FRONT DISC BRAKES P-35, 38
 FRONT FOG LIGHT T- 61
 FRONT FOG LIGHT RELAY T- 52
 FRONT FOG LIGHT SWITCH T- 27
 FRONT HOUSING C-39, 50
 FRONT LOWER ARM R- 14

PARTS INDEX

FRONT ROTOR..... C-42, 52
 FRONT ROTOR HOUSING..... C-42, 53
 FRONT SHOCK ABSORBER..... R-11, 12
 FRONT SPEAKER..... T-110
 FRONT STABILIZER..... R- 17
 FRONT STATIONARY..... C- 40
 FUEL LID OPENER..... S- 28
 FUEL PUMP RESISTOR RELAY..... F1- 57
 FUEL PUMP RESISTOR RELAY..... F2- 53
 FUEL PUMP..... F1-52, 53
 FUEL PUMP..... F2-48, 49
 FUEL TANK..... F1- 51
 FUEL TANK..... F2- 47
 FUSE BOX..... T- 15

H

HEADLIGHT..... T-55, 56, 57
 HEADLIGHT RELAY..... T- 51
 HEADLINER AND GARNISH..... S- 21
 HEADREST SPEAKER..... T-109, 110
 HEADREST SPEAKER AMPLIFIER..... T-112
 HEADREST SPEAKER SWITCH..... T-112
 HEADREST SPEAKER SWITCH..... T-112, 113
 HEAT HAZARD SENSOR..... F1- 85
 HEAT HAZARD SENSOR..... F2- 83
 HEATER CORE..... U- 35
 HEATER RELAY..... U- 32
 HEATER UNIT..... U- 34
 HIGH-MOUNT STOPLIGHT..... T- 58
 HIGH-TENSION LEADS..... G- 27
 HOLD SWITCH..... K- 39
 HOOD AND HOOD LOCK..... S-22, 23
 HOOD SWITCH..... T- 83
 HORN..... S- 65
 HYDRAULIC UNIT..... P-63, 65

I

IGN RELAY..... U- 32
 IGNITION KEY CYLINDER LAMP..... T- 63
 IGNITION SWITCH AND
 KEY REMINDER SWITCH..... T- 17
 IGNITION SWITCH..... T- 17
 INDICATOR PANEL..... K-164
 INHIBITOR SWITCH..... K-39, 40
 INJECTOR (PRIMARY)..... F2-50, 51, 52
 INJECTOR (SECONDARY)..... F2-50, 51, 52
 INJECTOR..... F1-54, 55, 56
 INJECTOR..... F2-50, 52
 INNER OIL SEAL..... C- 43
 INSTRUMENT CLUSTER..... T-35, 36, 38
 INSTRUMENT PANEL..... S-8, 10
 INTAKE AIR THERMOSENSOR..... F1- 82
 INTAKE AIR THERMOSENSOR..... F2- 80
 INTERLOCK CABLE..... K-162, 163

INTERLOCK SWITCH..... G- 26
 INTERMEDIATE HOUSING..... C-39, 54

K

KNOCK SENSOR..... F2-72, 82

L

LATERAL LINK..... R- 26
 LICENCE LIGHT..... T- 58
 LOCKUP CONTROL SOLENOID VALVE... K- 41
 LOGICON SWITCH..... U-21, 22, 23

M

MAIN FUSE BLOCK..... T- 15
 MAIN RELAY..... F1- 85
 MAIN RELAY..... P- 71
 MASTER CYLINDER..... P-13, 15, 17, 21
 METERING OIL PUMP..... D- 17
 MILEAGE SENSOR..... F1- 86
 MODE CONTROL ACTUATOR..... U- 35
 MOLDING, PROTECTOR, AND GARNISH S- 63
 MOLDING..... S- 63

N

NEUTRAL SWITCH..... F1- 85
 NEUTRAL SWITCH..... F2- 84

O

OIL COOLER(S)..... K-154
 OIL COOLER..... D- 14
 OIL FILTER..... D- 6
 OIL NOZZLES..... D- 19
 OIL PAN..... D-7, 8
 OIL PRESSURE CONTROL VALVE..... D- 15
 OIL PRESSURE SWITCH..... F1- 86
 OIL PUMP..... D-9, 10, 11, 12
 OIL PUMP (ECPS)..... N-22, 23
 OIL PUMP (ESPS)..... N-14, 15
 OUTER OIL SEAL..... C- 43
 OXYGEN SENSOR..... F1-83, 84
 OXYGEN SENSOR..... F2-81, 82

P

P RANGE SWITCH..... K-157
 P/S PRESSURE SWITCH..... F1- 86
 P/S PRESSURE SWITCH..... F2- 84

PARTS INDEX

PARKING BRAKE CABLE..... P- 51
 PARKING BRAKE LEVER..... P-49, 50
 POWER ANTENNA RELAY S-104, 106
 POWER ANTENNA T-104, 106
 POWER BRAKE UNIT .. P-24, 26, 27, 28, 30, 32
 POWER TRANSISTOR U- 33
 PRESSURE REGULATOR F1- 53
 PRESSURE REGURATOR..... F2- 49
 PRESSURE SENSOR..... F1- 84
 PRESSURE SENSOR..... F2- 82
 PROPELLER SHAFT L- 2
 PROPORTIONING BYPASS VALVE
 (PBV) P-33, 34

R

RADIATOR..... E- 7
 RADIATOR CAP E- 6
 REAR AXLE..... M-10, 12
 REAR BUMPER S-26, 27
 REAR COMBINATION LIGHT LENS..... T- 60
 REAR DEFROSTER RELAY T- 24
 REAR DISC BRAKES..... P-43, 46
 REAR HATCH S-28, 30
 REAR HATCH GLASS..... S- 59
 REAR HATCH KEY CYLINDER SWITCH... T- 83
 REAR HATCH SWITCH..... T- 83
 REAR HOUSING..... C-39, 56
 REAR ROTOR C- 42
 REAR ROTOR HOUSING C- 42
 REAR SHOCK ABSORBER R-20, 21
 REAR SIDE MAKER LIGHT..... T- 58
 REAR SPEAKER..... T-110, 111
 REAR STABILIZER..... R- 29
 REAR STATIONARY GEAR..... C- 40
 REAR WINDOW DEFROSTER T-67, 68
 REAR WINDOW DEFROSTER RELAY..... T- 24
 REAR WINDOW DEFROSTER SWITCH T-17, 67
 REAR WIPER AND WASHER S-28, 40
 REC/FRESH SELECT ACTUATOR U- 31
 RECEIVER/DRIER..... U-65, 66
 REFRIGERANT PRESSURE SWITCH..... U- 66
 RELEASE BEARING..... H-14, 16
 RELEASE FORK..... H-14, 16
 REMOTE CONTROL MIRROR..... S-31, 32
 ROOM LAMP..... T- 65

S

SEAT..... S-11, 12
 SEAT BELT..... S-14, 17, 18, 20
 SECURITY LAMP..... T- 84
 SELECTOR KNOB K-162, 164
 SELECTOR LEVER..... K-158, 159, 161, 165
 SELECTOR LEVER..... K-162, 163, 165
 SHIFT-LOCK ACTUATOR K-157

SIDE SEAL..... C- 45
 SLIDING SUNROOF S-67, 68, 70, 71
 SOLENOID VALVE (6PI)..... F1- 44
 SOLENOID VALVE
 (ACCELERATED WARM-UP SYSTEM)... F1- 41
 SOLENOID VALVE (PRC) F1- 58
 SOLENOID VALVE (PRC) F2- 54
 SOLENOID VALVE (RELIEF) F1- 64
 SOLENOID VALVE (RELIEF) F2- 59
 SOLENOID VALVE (SWITCH)..... F1- 63
 SOLENOID VALVE (SWITCH)..... F2- 60
 SOLENOID VALVE (VDI) F1- 47
 SOLENOID VALVES..... K- 41
 SPARK PLUGS..... G- 27
 SPEED SENSOR..... K- 41
 SPEED SENSOR..... T- 36
 SPEED SENSOR AND ROTOR P-67, 68, 70
 STARTER..... G-18, 19, 24, 25
 STEERING GEAR AND LINKAGE
 (ECPS)..... N-12, 13
 STEERING GEAR AND LINKAGE (ESPS) N-12, 13
 STEERING LOCK ASSEMBLY N- 11
 STEERING SHAFT N- 11
 STEERING WHEEL N- 10
 STOP AND ROOM LAMP..... T- 64
 STOP AND TAILLIGHT..... T-52, 58
 STOPLIGHT SWITCH..... T- 52
 STOPLIGHT SWITCH..... T- 77
 SUBFRAME R- 31
 SUBLINK R- 28

T

TEMPERATURE CONTROL ACTUATOR... U- 36
 THEFT-DETERRENT CONTROL UNIT T- 80
 THERMOSTAT E- 12
 THERMOSWITCH U- 45
 THROTTLE BODY F2-35, 36
 THROTTLE SENSOR F1- 83
 THROTTLE SENSOR F2- 81
 TIE-ROD END..... N- 6
 TRAILING ARM R- 23
 TRANSMISSION
 (NON-TURBO)..... J1-9, 11, 21, 24, 43
 TRANSMISSION (TURBO)..... J2-10, 12, 23, 26
 TRIM..... S- 21
 TRUNK LID..... S-34, 35
 TRUNK ROOM LAMP..... T- 65
 TURBINE SENSOR..... K- 40
 TURN AND HAZARD LIGHT..... T- 53
 TURN CANCEL AND ANGLE SENSOR T-29, 30

W

WARNING AND CLOCK T-43, 45
 WATER PUMP E- 8

PARTS INDEX

WATER THERMOSENSOR..... F1- 83
WATER THERMOSENSOR..... F2- 81
WATER THERMOVALVE..... F2- 36
WHEELS AND TIRES Q- 4
WINDSHIELD ANTENNA T-107
WINDSHIELD WIPER AND
WASHER..... S-36, 37, 38, 40
WINDSHIELD S-55, 56