

A

A/C Switch.....	55A-266	Auto A/C	
A/C system.....	13A-1081	Diagnosis.....	55B-4
A/C system.....	13B-1134	Auto-cruise Control.....	17-9
A/T Control Component.....	23A-364	Auto-cruise Control.....	17-74
A/T Faulty Operation Prevention Mechanism		Auto-cruise Control Switch	
Diagnosis.....	23A-353	Check.....	17-71
A/T Key Interlock and Shift Lock Mechanism.....	23A-385	Auto-cruise Control System	
ABS		Circuit Diagram.....	90-216
Actuator Test.....	35B-94	Component Check.....	17-73
ECU, Check at Terminal.....	35B-95	Diagnosis.....	17-10
Accelerator Pedal.....	17-9	Automatic Transaxle	
Accessory Socket.....	54A-131	A/T Key Interlock and Shift Lock Mechanism.....	23A-385
Accessory Socket		Adhesive.....	23B-90
Circuit Diagram.....	90-202	Adjusting Plate, Snap Ring and Spacers.....	23B-88
Adhesive		Diagnosis.....	23A-14
Automatic Transaxle.....	23B-90	Fluid Level Check.....	00-53
Body.....	42-85	Sealant.....	23B-90
Engine <3.8L Engine>.....	11C-58	Transaxle Assembly.....	23A-387
Engine <2.4L Engine>.....	11A-68	Transaxle Control.....	23A-380
Engine Cooling.....	14-28	Valve Body Spring Identification.....	23B-87
Engine Lubrication.....	12-7	Automatic Transaxle Control Component	
Engine Overhaul <2.4L Engine>.....	11B-73	Check.....	23A-374
Engine Overhaul <3.8L Engine>.....	11D-65	Automatic Transaxle Fluid	
Exterior.....	51-45	Level Check.....	00-53
Intake and Exhaust.....	15-24	Auto-tensioner	
MFI <2.4L Engine>.....	13A-1142	Check.....	11A-8
MFI <3.8L Engine>.....	13B-1193		
Steering.....	37-67		
Adhesive Table.....	00-68		
Air Bag Module		B	
Disposal Procedures.....	52B-388	Backup Light	
Air Bag Module(s).....	52B-369	Circuit Diagram.....	90-120
Air Cleaner.....	15-4	Ball Joint Dust Cover	
Air Cleaner Element		Inspection <Rear suspension>.....	34-8
Replace.....	00-43	Inspection <Front suspension>.....	33-8
Air Conditioning		Replacement <Rear suspension>.....	34-15
Actuator Test.....	55A-252	Replacement <Front suspension>.....	33-17
Automatic, Circuit Diagram.....	90-28	Ball Joint Dust Cover Inspection	
Charging.....	55A-260	Steering.....	37-24
Compressor Drive Belt Adjustment.....	55A-260	Ball Joint Seals	
Compressor Noise Check.....	55A-262	Check.....	00-59
Condenser and Condenser Fan Motor.....	55A-283	Barometric Pressure Sensor	
ECU Terminal Check.....	55B-22	Check.....	17-88
ECU Terminal Check		Basic Brake System	
LOW TYPE.....	55A-253	Diagnosis.....	35A-3
MIDDLE TYPE.....	55A-255	Battery	
Idle-up Operation Check.....	55A-264	Charging.....	54A-6
Manual, Circuit Diagram		Check.....	54A-5
LOW.....	90-152	Handling.....	00E-12
MIDDLE.....	90-162	Remedy for a Discharged Battery.....	35B-104
Outside Air Temperature Sensor.....	55A-276	Test.....	54A-6
Performance Test.....	55A-261	Belt, Timing	
Power Relay Check.....	55A-263	Replace.....	00-45
Refrigerant Leak Repair.....	55A-262	BJ Boot	
Refrigerant Line.....	55A-285	Replacement.....	26-26
Sensors (Full-auto A/C).....	55B-25	Bleeding	
Sight Glass Refrigerant Level Test.....	55A-259	Brakes (Basic).....	35A-16
Amplifier.....	54A-210	Power Steering.....	37-21
Antenna.....	54A-212	Blower.....	55A-272
Anti-Lock Braking System (ABS)		Blower Assembly.....	55A-269
Circuit Diagram		Blower Assembly.....	55A-267
VEHICLES WITH TRACTION CONTROL (TCL).....	90-230	Body	
VEHICLES WITHOUT TRACTION CONTROL (TCL).....	90-224	Adhesive.....	42-85
Diagnosis.....	35B-4	Diagnosis.....	42-4
Audio System		Sealant.....	42-85
Circuit Diagram		Boots	
VEHICLES WITH AUDIO AMPLIFIER.....	90-196	Driveshaft, Check.....	00-59
VEHICLES WITHOUT AUDIO AMPLIFIER.....	90-192	Brake Booster.....	35A-26
		Brake Booster	
		Operating Check.....	35A-14
		Removal and Installation.....	35A-26

Brake Disc			
Pad Wear Check	00-58		
Brake Fluid Level Sensor Check	35A-18		
Brake Hoses			
Check	00-59		
Brake Pad			
Wear Check	00-58		
Brake Pedal	35A-24		
Brake Pedal			
Check and Adjustment	35A-13		
Brake Rotor			
Disc, Check	35A-20		
Bumper			
Front	51-2		
Rear	51-4		
C			
Camshaft <2.4L Engine>	11A-28		
Camshaft <3.8L Engine>	11C-27		
Camshaft			
Overhaul <2.4L Engine>	11B-30		
Overhaul <3.8L Engine>	11D-24		
Camshaft Oil Seal	11C-24		
Camshaft Position Sensor	16-42		
Camshaft Position Sensor			
2.4L ENGINE	16-42		
3.8L ENGINE	16-42		
Check	16-39		
Canister			
Evaporative Emission	17-95		
Catalytic Converter	17-96		
Caution Labels	55A-5		
Centermember	32-7		
Central Door Locking System	54B-132		
Central Door Locking System			
Circuit Diagram	90-138		
Diagnosis	42-23		
Centralized Junction			
Circuit Diagram	90-15		
Charging System	16-3		
Charging System			
Circuit Diagram	90-34		
Diagnosis	16-4		
Check Valve			
Operating Check	35A-15		
Clearance Around Hood			
Adjustment	42-6		
Clock Spring	52B-369		
Column Switch	54A-128		
Column Switch			
Removal and Installation	54A-128		
Combination Meters	54A-49		
Combination Meters	54A-106		
Combination Meters			
Diagnosis	54A-49		
Compass			
Calibration			
MIDDLE GRADE TYPE	54A-275		
Compression Pressure			
Check <2.4L Engine>	11A-16		
Check <3.8L Engine>	11C-11		
Compressor (A/C)			
Noise Check	55A-262		
Compressor Assembly	55A-277		
Connecting Rod			
Overhaul <3.8L Engine>	11D-44		
Overhaul <2.4L Engine>	11B-52		
Connector Inspection	00E-2		
Control Relay			
Check	23A-375		
Control Unit Location	70-15		
Controller Area Network (CAN)			
Circuit Diagram	90-274		
Coolant			
Engine, Change	00-56		
Coolant Hoses			
Heater Hose Inspect	00-58		
Radiator Hose Inspect	00-58		
Cooling System			
Circuit Diagram	90-56		
Crankcase Ventilation System			
Check	17-82		
Crankshaft			
Overhaul <2.4L Engine>	11B-61		
Overhaul <3.8L Engine>	11D-53		
Crankshaft Front Oil Seal	11C-40		
Crankshaft Oil Seal <3.8L Engine>	11C-40		
Crankshaft Oil Seal <2.4L Engine>	11A-40		
Crankshaft Position Sensor	16-43		
Crankshaft Position Sensor			
2.4L ENGINE	16-43		
3.8L ENGINE	16-44		
Check	17-92		
Check	23A-374		
Crankshaft Pulley	11A-27		
Crankshaft Rear Oil Seal	11C-42		
Crossmember	32-10		
Crossmember	34-23		
Crossmember			
Inspection	32-19		
Cylinder Block			
Overhaul <2.4L Engine>	11B-61		
Overhaul <3.8L Engine>	11D-53		
Cylinder Block Heater Unit	11A-64		
Cylinder Head			
Overhaul <2.4L Engine>	11B-34		
Overhaul <3.8L Engine>	11D-30		
Cylinder Head Gasket <2.4L Engine>	11A-43		
Cylinder Head Gasket <3.8L Engine>	11C-44		
D			
Defogger	54A-213		
Defogger			
Circuit Diagram	90-188		
Diagnosis			
A/T Faulty Operation Prevention Mechanism	23A-353		
Anti-Lock Braking System (ABS)	35B-4		
Auto A/C	55B-4		
Auto-cruise Control System	17-10		
Automatic Transaxle	23A-14		
Basic Brake System	35A-3		
Body	424		
Central Door Locking System	42-23		
Charging System	164		
Combination Meters	54A-49		
Door	42-23		
Emission Control System	17-75		
Engine <3.8L Engine>	11C-3		
Engine <2.4L Engine>	11A-3		
Engine Control System	17-3		
Engine Cooling	143		
Equipment	54A-213		
Equipment	54A-130		
Equipment	54A-9		
Exterior	51-12		
Front Axle	263		
Front Suspension	33-2		

Fuel Pump Module			
Replacement	13C-7		
Fuel Pump Relay			
Continuity Check <3.8L Engine>	13B-1182		
Continuity Check <2.4L Engine>	13A-1130		
Fuel Pump System <3.8L Engine>.....	13B-1107		
Fuel Pump System <2.4L Engine>.....	13A-1054		
Fuel Supply			
Diagnosis	13C-2		
Fuel System			
Check for Leaks.....	00-42		
Fuel Tank.....	13C-10		
Fuel Tank			
Check for Leaks.....	00-42		
Fuel Tank Differential Pressure Sensor			
Check	17-88		
Fuel Tank Filler Tube			
Check for Leaks.....	00-42		
Fuel Tank Pressure Relief Valve	17-95		
Fuel Tank Pressure Relief Valve			
Inspection	17-96		
Fuse			
Check	00E-9		
Fuses Location.....	70-2		
Fusible Links Location.....	70-2		
G			
Garnishes.....	51-6		
Gauge			
Circuit Diagram	90-124		
Generator.....	11B-6		
Generator			
Assembly	16-15		
Output Current Test	16-9		
Output Line Voltage Drop Test.....	16-8		
Overhaul	11D-4		
Regulated Voltage Test.....	16-11		
Glass Sliding Mechanism			
Check and Adjustment	42-32		
Glove Box Light			
Circuit Diagram	90-110		
Ground Location.....	70-4		
Grounding Location.....	70-3		
H			
Hazard Warning Light			
Circuit Diagram	90-112		
Hazard Warning Switch.....	54A-126		
Headlight.....	54A-113		
Headlight.....	54A-107		
Headlight.....	54B-290		
Headlight			
Aiming.....	54A-107		
Circuit Diagram			
2-BULB TYPE.....	90-78		
4-BULB TYPE.....	90-84		
Headlining.....	52A-18		
Heated Door Mirror			
Diagnosis	51-25		
Heated Seat			
Circuit Diagram	90-252		
Heater Control Assembly.....	55A-266		
Heater Core.....	55A-267		
Heater Unit.....	55A-267		
High-Mounted Stoplight.....	54A-123		
Hood <Removal and Installation>.....	42-8		
Hood <Diagnosis>.....	42-4		
Hood			
Height Adjustment.....	42-7		
Hood Latch and Striker			
Alignment.....	42-6		
Horn.....	54A-130		
Horn			
Circuit Diagram.....	90-123		
Hose			
Vacuum, Routing	17-77		
Hoses			
Brake, Check	00-59		
Hub			
Front Axle	26-9		
Rear Axle.....	27-6		
Hub Bolt			
Replacement.....	27-5		
Replacement.....	26-8		
Hub End Play			
Check.....	26-8		
Hydraulic Unit	35B-105		
Hydraulic Unit Check			
ABS.....	35B-102		
I			
Idle Mixture			
Check <2.4L Engine>.....	11A-15		
Check <3.8L Engine>.....	11C-10		
Idle Speed			
Check <3.8L Engine>.....	11C-9		
Check <2.4L Engine>.....	11A-14		
Ignition Circuit System <2.4L Engine>	13A-1073		
Ignition Circuit System <3.8L Engine>	13B-1125		
Ignition Coil	16-40		
Ignition Coil			
Check.....	16-38		
Ignition Key Reminder Warning Buzzer			
Circuit Diagram.....	90-262		
Ignition Switch	54A-45		
Ignition Switch	54A-7		
Ignition system <2.4L Engine>	13A-1068		
Ignition system <3.8L Engine>	13B-1120		
Ignition System	11B-6		
Ignition System	16-36		
Ignition System			
Circuit Diagram			
2.4L ENGINE	90-30		
3.8L ENGINE	90-32		
Overhaul	11D-9		
Ignition Timing			
Check <3.8L Engine>.....	11C-8		
Check <2.4L Engine>.....	11A-12		
Immobilizer System			
Circuit Diagram.....	90-246		
Diagnosis.....	54A-9		
Injector <3.8L Engine>	13B-1188		
Injector <2.4L Engine>	13A-1136		
Injector			
Check <3.8L Engine>.....	13B-1186		
Check <2.4L Engine>.....	13A-1134		
Input Shaft	23B-60		
Input Shaft			
Disassembly and Assembly.....	23B-60		
Inside Rear View Mirror	52A-19		
Inspection Terminal Location	70-8		
Instrument Panel	52A-3		
Instrument Panel Inspection.....	00E-8		

Intake Air Temperature Sensor			
Check <3.8L Engine>	13B-1183		
Check	17-88		
Check <2.4L Engine>	13A-1130		
Intake and Exhaust			
Adhesive	15-24		
Diagnosis	15-2		
Sealant	15-24		
Intake Manifold	15-8		
Intake Manifold	11B-25		
Intake Manifold			
Overhaul	11D-18		
Intake Manifold Plenum	15-6		
Intake Manifold Plenum			
Overhaul	11D-6		
Interior Light	54B-414		
INVECS-II 4AT			
Circuit Diagram			
2.4L ENGINE	90-58		
3.8L ENGINE	90-68		
J			
Joint Connector	90-12		
Junction Block	90-10		
K			
Key Interlock Mechanism			
Check	23A-378		
Keyless Entry System	42-65		
Keyless Entry System	54B-213		
Keyless Entry System			
Diagnosis	42-66		
Inspection	42-68		
Secret Code Registration	42-71		
Transmitter Battery Replacement	42-68		
Keyless Entry System Timer			
Lock Function Inspection	42-69		
Knock Sensor	16-45		
Knock Sensor			
Check	16-37		
Knuckle			
Inspection	27-9		
Rear Axle	27-8		
L			
Lash Adjuster			
Check	11C-12		
Leveling Valve			
Check	13C-9		
License Plate Light	54A-122		
License Plate Light			
Circuit Diagram	90-90		
Lighting Monitor Buzzer			
Circuit Diagram	90-260		
Lighting System			
Diagnosis <Dome light>	54A-120		
Diagnosis <Rear combination light>	54A-119		
Diagnosis <Fog light>	54A-114		
Diagnosis <Hazard warning light>	54A-126		
Loose Panel	42-82		
Lower Arm	33-15		
Lower Arm	34-10		
Lower Arm			
Inspection	33-16		
Lower Arm Ball Joint			
End Play Check	33-8		
Lower Arm Bushing			
Replacement	33-18		
Lower Arm Pillow Ball Bushing			
End Play Check	34-8		
Low-Reverse Brake	23B-71		
Low-Reverse Brake			
Disassembly and Assembly	23B-71		
Luminous Intensity			
Measurement	54A-109		
M			
Main Muffler	15-20		
Maintenance			
Air Cleaner Element	00-43		
Automatic Transaxle Fluid	00-53		
Ball Joint and Steering Linkage Seals	00-59		
Brake Hoses	00-59		
Disc Brake Pads	00-58		
Driveshaft Boots	00-59		
Electrical System	00E-12		
Engine Coolant	00-56		
Engine Oil	00-51		
Engine Oil Filter	00-52		
Evaporative Emission Control System	00-43		
Exhaust System	00-51		
Fuel Hose	00-42		
Fuel System	00-42		
Spark Plug	00-43		
SRS	00-60		
Timing Belt	00-45		
Manifold Vacuum			
Check <3.8L Engine>	11C-12		
Check <2.4L Engine>	11A-17		
Manual A/C			
Diagnosis	55A-5		
Mark	51-23		
Mass Airflow Sensor			
Check	17-87		
Check	17-92		
Master Cylinder	35A-26		
Master Cylinder			
Function Check	35A-23		
Master Cylinder Assembly	35A-26		
Master Cylinder Assembly			
Disassembly and Assembly	35A-29		
Inspection	35A-29		
Meter			
Circuit Diagram	90-124		
MFI			
Adhesive <3.8L Engine>	13B-1193		
Adhesive <2.4L Engine>	13A-1142		
Sealant <2.4L Engine>	13A-1142		
Sealant <3.8L Engine>	13B-1193		
Tightening Specification(s) <2.4L Engine>	13A-1141		
Tightening Specification(s) <3.8L Engine>	13B-1192		
MFI System			
Circuit Diagram			
2.4L ENGINE	90-36		
3.8L ENGINE	90-46		
Mirror			
Door	51-25		
Door	51-41		
Remote Controlled, Circuit Diagram	90-191		
Moldings	51-6		
Motor	55A-273		
Mounting			
Engine	32-4		
Transaxle	32-5		
Mud Guard	51-10		

Multi Center Display			
Circuit Diagram			
LOW.....	90-204		
MIDDLE.....	90-206		
Multi-Center Display	54A-283		
Multi-Center Display	54A-215		
Multiport Fuel Injection			
Diagnosis <2.4L Engine>	13A-6		
Diagnosis <3.8L Engine>	13B-6		
Multiport Fuel Injection Relay			
Continuity Check <2.4L Engine>	13A-1129		
Continuity Check <3.8L Engine>	13B-1182		
O			
Oil			
Engine, Change.....	00-51		
Engine, Check.....	12-3		
Engine, Replacement	12-3		
Oil Cooler			
Flow Check.....	23A-371		
Oil Filter			
Engine, Replacement	12-4		
Oil Pan.....	11A-37		
Oil Pan			
Inspection	11A-39		
Overhaul <3.8L Engine>.....	11D-37		
Overhaul <2.4L Engine>.....	11B-41		
Oil Pan and Oil Screen.....	11C-36		
Oil Pressure			
Engine, Check	12-6		
Oil Pump.....	23B-59		
Oil Pump			
Disassembly and Assembly.....	23B-59		
Overhaul <3.8L Engine>.....	11D-37		
Overhaul <2.4L Engine>.....	11B-41		
Power Steering	37-55		
Power Steering, Pressure Test	37-22		
Oil seal			
Camshaft	11C-24		
Oil Seal			
Crankshaft <3.8L Engine>.....	11C-40		
Crankshaft <2.4L Engine>.....	11A-40		
Crankshaft Front.....	11C-40		
Crankshaft Rear	11C-42		
Other Parts.....	55B-27		
Output Shaft.....	23B-73		
Output Shaft			
Disassembly and Assembly.....	23B-73		
Outside Air Temperature Sensor.....	55A-276		
Outside Thermo Sensor	54A-285		
Overdrive Clutch.....	23B-62		
Overdrive Clutch			
Disassembly and Assembly.....	23B-62		
Oxygen Sensor			
Check <2.4L Engine>	13A-1131		
Check <3.8L Engine>	13B-1184		
P			
Parking Brake			
Cable	36-7		
Diagnosis	36-2		
Lever.....	36-6		
Lever Stroke Check and Adjustment	36-3		
Lining and Drum	36-8		
Lining Running-in.....	36-5		
Switch Check.....	36-5		
Parking Brake Lining			
Inspection	36-11		
PCV (Positive Crankcase Ventilation) System		17-81	
PCV (Positive Crankcase Ventilation) System			
Valve Check.....		17-83	
Piston			
Overhaul <3.8L Engine>.....		11D-44	
Overhaul <2.4L Engine>.....		11B-52	
Planetary Gear		23B-69	
Planetary Gear			
Disassembly and Assembly.....		23B-69	
Position Light.....		54A-107	
Position Light			
Circuit Diagram.....		90-90	
Power Distribution System			
Circuit Diagram.....		90-22	
Power Seat			
Circuit Diagram.....		90-250	
Power Steering			
Bleeding.....		37-21	
Diagnosis.....		37-4	
Drive Belt Tension Check.....		37-20	
Fluid Level Check		37-20	
Fluid Replacement.....		37-21	
Hoses.....		37-58	
Oil Pump Assembly		37-55	
Oil Pump Pressure Test.....		37-22	
Pressure Switch Check.....		37-23	
Power Steering Diagnosis		37-4	
Power Steering Gear Box		37-33	
Power Steering Gear Box Assembly			
Inspection (Disassembly and Assembly).....		37-54	
Power Steering Linkage.....		37-33	
Power Steering Oil Pump Assembly			
Inspection		37-57	
Power Window			
Check.....		42-34	
Circuit Breaker Inspection.....		42-34	
Circuit Diagram.....		90-134	
Diagnosis.....		42-23	
Operating Current Check.....		42-33	
Relay Check		42-33	
Timer Function Check.....		42-32	
Power Windows		54B-167	
Powertrain Control Module <2.4L Engine>		13A-1140	
Powertrain Control Module <3.8L Engine>.....		13B-1192	
Printed-Heater Lines			
Check.....		54A-214	
Proportioning Valve			
Function Test			
VEHICLES WITHOUT ABS		35A-16	
Purge Control System			
Check.....		17-86	
R			
Radiator		14-11	
Radiator Cap			
Pressure Check.....		14-6	
Radiator Fan Motor			
Check.....		14-10	
Radiator Fan Relay			
Check.....		14-9	
Radiator Grille.....		51-5	
Rear Axle			
Diagnosis.....		27-2	
Hub.....		27-6	
Knuckle.....		27-8	
Wheel Bearing End Play Check.....		27-4	
Rear Combination Light.....		54A-119	
Rear Hub Rotary-Sliding Resistance			
Check.....		27-5	

Rear Seat.....	52A-29	Camshaft Position.....	16-42
Rear Seat Belt.....	52A-33	Camshaft Position	
Rear Spoiler.....	51-9	2.4L ENGINE.....	16-42
Rear Suspension		3.8L ENGINE.....	16-42
Diagnosis.....	34-2	Camshaft Position, Check.....	16-39
Rear Suspension Crossmember.....	34-23	Crankangle, Check.....	16-40
Rear Wheel Alignment		Crankshaft Position.....	16-43
Check and Adjustment.....	34-6	Crankshaft Position	
Rear Window Defogger Switch.....	54A-215	2.4L ENGINE.....	16-43
Rear Window Glass.....	42-20	3.8L ENGINE.....	16-44
Relay		Crankshaft Position, Check.....	17-92
Check.....	00E-11	Crankshaft Position, Check.....	23A-374
Relay Location.....	70-6	Engine Coolant Temperature, Check.....	17-92
Remote Controlled Radio Switch.....	54A-207	Engine Coolant Temperature, Check <3.8L Engine>....	13B-1183
Replaceable Bulb		Engine Coolant Temperature, Check.....	17-88
Replacement.....	54A-116	Engine Coolant Temperature, Check <2.4L Engine>....	13A-1131
Replacement		Fuel Tank Differential Pressure, Check.....	17-88
EXCEPT FOR PROJECTOR TYPE.....	54A-110	Intake Air Temperature, Check <2.4L Engine>.....	13A-1130
PROJECTOR TYPE.....	54A-111	Intake Air Temperature, Check <3.8L Engine>.....	13B-1183
Reverse Clutch.....	23B-62	Intake Air Temperature, Check.....	17-88
Reverse Clutch		Knock.....	16-45
Disassembly and Assembly.....	23B-62	Knock, Check.....	16-37
Revolution Pickup Sensor.....	55A-276	Outside Air Temperature.....	55A-276
Rheostat.....	54A-124	Outside Thermo.....	54A-285
Rheostat		Oxygen, Check <2.4L Engine>.....	13A-1131
Circuit Diagram.....	90-273	Oxygen, Check <3.8L Engine>.....	13B-1184
RKE (Keyless Entry System).....	42-65	Transmission Fluid Temperature, Check.....	23A-374
RKE (Keyless Entry System)		Wheel Speed.....	35B-107
Secret Code Registration.....	42-71	Wheel Speed, Output Voltage Check.....	35B-100
Transmitter Battery Replacement.....	42-68	Sensor Location.....	70-8
Rocker Arm		Shift Lock Mechanism	
Overhaul <3.8L Engine>.....	11D-24	Check.....	23A-378
Overhaul <2.4L Engine>.....	11B-30	Shock Absorber.....	34-16
Roof Lid Glass		Shock Absorber Assembly	
Operation Check.....	42-74	Disassembly and Assembly.....	34-17
		Side Impact Sensor.....	52B-378
		Sight Glass (Refrigerant Level Test).....	55A-259
		Solenoid	
		Evaporative Emission Purge, Check <2.4L Engine>....	13A-1135
		Evaporative Emission Purge, Check <3.8L Engine>....	13B-1187
		Evaporative Emission Ventilation, Check <2.4L Engine>....	13A-1136
		Evaporative Emission Ventilation, Check <3.8L Engine>....	13B-1187
		Solenoid Location.....	70-19
		Solenoid Valve	
		Check.....	23A-376
		Solenoid Valve Location.....	70-19
		Spark Plug	
		Check and Adjustment.....	16-39
		Replace.....	00-43
		Test.....	16-39
		Speaker.....	54A-209
		Speaker	
		Test	
		VEHICLES WITH SEVEN SPEAKERS.....	54A-204
		Specifications.....	34-27
		Speedometer Check	
		Check.....	54A-102
		SRS	
		Circuit Diagram.....	90-236
		Maintenance.....	52B-348
		Maintenance.....	00-60
		SRS Air Bag	
		Diagnosis.....	52B-29
		SRS Control Unit (SRS-ECU).....	52B-366
		SRS Warning Light Check.....	52B-31
		Stabilizer Bar.....	33-20
		Stabilizer Bar.....	34-21
		Starter Motor	
		Assembly.....	16-26
		Starting System.....	16-24

S

Sealant			
Automatic Transaxle.....	23B-90		
Body.....	42-85		
Engine <3.8L Engine>.....	11C-58		
Engine <2.4L Engine>.....	11A-68		
Engine Cooling.....	14-28		
Engine Lubrication.....	12-7		
Engine Overhaul <2.4L Engine>.....	11B-73		
Engine Overhaul <3.8L Engine>.....	11D-65		
Exterior.....	51-45		
Intake and Exhaust.....	15-24		
MFI <2.4L Engine>.....	13A-1142		
MFI <3.8L Engine>.....	13B-1193		
Steering.....	37-67		
Sealant Table.....	00-68		
Seat Belt			
Diagnosis.....	52A-2		
Seat Belt Pre-Tensioner			
Disposal Procedures.....	52B-388		
Seat Belt Tone Alarm			
Circuit Diagram.....	90-264		
Seat Belts With Pre-Tensioner.....	52B-380		
Seat Belts With Pre-Tensioner			
Check.....	52B-384		
Second Brake.....	23B-72		
Second Brake			
Disassembly and Assembly.....	23B-72		
Selector Lever.....	23A-382		
Selector Lever			
Operation Check.....	23A-377		
Sensor			
Barometric Pressure, Check.....	17-88		

Starting System			
Circuit Diagram	90-28		
Diagnosis	16-25		
Steering			
Adhesive	37-67		
Ball Joint Dust Cover Inspection.....	37-24		
Removal and Installation	37-26		
Sealant	37-67		
Steering Column Shaft Assembly Shock Absorbing Mechanism			
Check	37-24		
Steering Linkage Seals			
Check	00-59		
Steering Shaft.....	37-28		
Steering Wheel.....	37-26		
Steering Wheel			
Free Play Check	37-17		
Stationary Steering Effort Check.....	37-19		
Steering Angle Check	37-18		
Steering Wheel Return to Center Check	37-20		
Stop Light Switch			
Check	23A-375		
Stoplight			
Circuit Diagram	90-122		
Strut Assembly	33-9		
Strut Assembly			
Disassembly and Assembly.....	33-10		
Inspection	33-14		
Inspection	33-9		
Strut Tower Bar.....	42-12		
Sunroof <Removal and Installation>.....	42-78		
Sunroof <Diagnosis>.....	42-73		
Sunroof <General description>	54B-237		
Sunroof			
Check	42-74		
Circuit Diagram	90-212		
Diagnosis	42-73		
Fit Adjustment.....	42-74		
Initialized Check	42-75		
Operation Check.....	42-75		
Timer Function Check	42-74		
Water Test	42-73		
Suspension System			
Inspect for Looseness and Damage.....	00-60		
Switch			
Check	00E-10		
SWS			
Diagnosis	54B-10		
General Information.....	54B-2		
General Information.....	54B-10		
SWS Monitor			
How to Use.....	54B-15		
T			
Tachometer			
Check	54A-103		
Taillight.....	54B-290		
Taillight			
Circuit Diagram	90-90		
TCL			
Operation Check.....	13D-47		
TCL Indicator Light			
Check	13D-46		
TCL Switch.....	13D-48		
Tension Pulley	55A-277		
Thermostat.....	14-15		
Throttle Actuator Control Motor			
Check <3.8L Engine>	13B-1187		
Check <2.4L Engine>	13A-1134		
Throttle Body			
Assembly <3.8L Engine>.....	13B-1190		
Assembly <2.4L Engine>.....	13A-1138		
Cleaning <3.8L Engine>.....	13B-1178		
Cleaning <2.4L Engine>.....	13A-1124		
Overhaul	11D-6		
Tie Rod End			
Steering, Ball Joint Breakaway Torque Check.....	37-18		
Tightening Specification(s)			
Automatic Transaxle Overhaul.....	23B-86		
Automatic Transmission.....	23A-405		
Basic Brakes.....	35A-40		
Charging System	16-48		
Emission Control.....	17-97		
Engine <2.4L Engine>.....	11A-66		
Engine <3.8L Engine>.....	11C-56		
Engine Cooling	14-27		
Engine Lubrication.....	12-7		
Engine Overhaul <3.8L Engine>.....	11D-60		
Engine Overhaul <2.4L Engine>.....	11B-68		
Exterior	51-45		
Front Axle	26-29		
Front Suspension.....	33-26		
Fuel Supply.....	13C-17		
Intake and Exhaust.....	15-22		
MFI <3.8L Engine>.....	13B-1192		
MFI <2.4L Engine>.....	13A-1141		
Parking Brake.....	36-12		
Power Plant Mount.....	32-20		
Rear Axle.....	27-10		
SRS Air Bag.....	52B-405		
Steering.....	37-64		
Wheel and Tire.....	31-8		
Tightening Torque	00-34		
Timing Belt <2.4L Engine>	11A-51		
Timing Belt <3.8L Engine>	11C-48		
Timing Belt			
Overhaul <2.4L Engine>.....	11B-11		
Overhaul <3.8L Engine>.....	11D-11		
Replace.....	00-45		
Tire.....	31-7		
Tire			
Diagnosis.....	31-2		
Inflation Pressure Check.....	31-7		
Rotation.....	00-68		
Wear Check.....	31-7		
Toe Control Arm.....	34-13		
Toe Control Arm Ball Joint			
End Play Check.....	34-8		
Tone Alarm	54B-101		
Torque Converter			
Stall Test	23A-28		
Traction Control System (TCL)			
Diagnosis.....	13D-2		
Trailing Arm	34-12		
Transaxle	23B-10		
Transaxle			
Automatic, Fluid Level Check	00-53		
Control	23A-380		
Disassembly and Assembly.....	23B-10		
Fluid Cooler.....	23A-403		
Fluid Hose and Pipe	23A-403		
Transaxle Control	23A-380		
Transaxle Control Cable			
Adjustment.....	23A-379		
Transaxle Mounting	32-5		
Transistor.....	55A-273		
Transmission Fluid			
Change.....	23A-367		
Check.....	23A-366		

Transmission Fluid Temperature Sensor			
Check	23A-374		
Transmission range switch <3.8L Engine>.....	13B-1120		
Transmission range switch <2.4L Engine>.....	13A-1068		
Transmission Range Switch			
Adjustment.....	23A-372		
Check	23A-372		
Transmission Range Switch Control Cable			
Adjustment.....	23A-372		
Transponder			
Lock Check.....	54A-44		
Trims.....	52A-10		
Trouble Code, ABS			
Diagnosis	35B-5		
Trunk Lid <Diagnosis>.....	42-59		
Trunk Lid <Removal and Installation>.....	42-62		
Trunk Lid			
Clearance Adjustment	42-61		
Diagnosis	42-59		
Height Adjustment	42-61		
Trunk Lid Latch			
Inspection	42-64		
Turn Signal Light			
Circuit Diagram	90-112		
U			
Under Cover.....	51-11		
Underdrive Clutch.....	23B-60		
Underdrive Clutch			
Disassembly and Assembly.....	23B-60		
Upper Arm.....	34-9		
V			
Vacuum Circuit Diagram.....	17-79		
Vacuum Hose			
Check	17-81		
Vacuum Hose Routing.....	17-77		
Vacuum Hoses	17-77		
Valve			
Clearance check and adjust	11A-10		
Fuel Tank Pressure Relief	17-95		
Proportioning, Function Test			
VEHICLES WITHOUT ABS.....	35A-16		
Valve Body.....	23B-80		
Valve Body			
Disassembly and Assembly.....	23B-80		
Valve Stem Seal <2.4L Engine>.....	11A-28		
Valve Stem Seal <3.8L Engine>.....	11C-27		
Vanity Mirror Light			
Circuit Diagram	90-111		
Vehicle Identification.....	00-18		
Vehicle Identification Code Plate.....	00-20		
Ventilators.....	55A-288		
W			
Warning Light			
Circuit Diagram	90-130		
Water Hose.....	14-22		
Water Hose.....	11D-20		
Water Pipe.....	14-22		
Water Pump <2.4L Engine>.....	11B-25		
Water Pump.....	14-19		
Water Pump <3.8L Engine>.....	11D-20		
Wheel.....	31-7		
Wheel			
Balance Accuracy.....	31-3		
Diagnosis.....	31-2		
Runout Check.....	31-7		
Wheel Bearing End Play Check	27-4		
Wheel Speed Sensor	35B-107		
Wheel Speed Sensor	13D-48		
Wheel Speed Sensor			
Check.....	13D-47		
Output Voltage Check.....	35B-100		
Wind Noise			
How to Locate.....	42-27		
Window Glass	42-12		
Window Glass			
Diagnosis.....	42-14		
Door, Adjustment	42-31		
Runchannel.....	42-52		
Windshield.....	42-15		
Windshield			
Wiper and Washer.....	51-12		
Windshield Intermittent Wiper			
Volume Check.....	51-13		
Windshield Washer.....	51-21		
Windshield Washer.....	54B-255		
Windshield Washer			
Fluid Ejection Check.....	51-14		
Windshield Wiper.....	51-15		
Windshield Wiper.....	54B-255		
Windshield Wiper and Washer			
Circuit Diagram.....	90-182		
Wiper and Washer			
Windshield.....	51-12		