

GROUP 70

COMPONENT LOCATIONS

 
CONTENTS

RELAY	70-2	FUSIBLE LINK AND FUSE	70-14
ECU	70-3	INSPECTION TERMINAL LOCATION	70-15
SENSOR.....	70-7	EARTH CABLE.....	70-16
SOLENOID VALVE	70-12	EARTH	70-17

RELAY



M1701000400444

Name	Symbol	Name	Symbol
A/C compressor relay	A	Heated seat relay	B
A/T control relay	A	Horn relay	A
Engine control relay	A	Power window relay	B
Engine oil level relay	C	PTC heater relay 1	B
Fan control relay	A	PTC heater relay 2	B
Front blower relay	B	Rear blower relay	B
Front fog lamp relay	A	Rear fog lamp relay	B
Fuel pump relay 1	B	Rear window defogger relay	B
Fuel pump relay 2	B	Throttle valve control servo relay	A

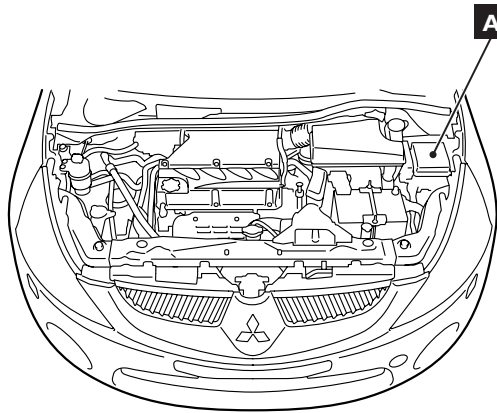





<LHD>
  
<RHD>

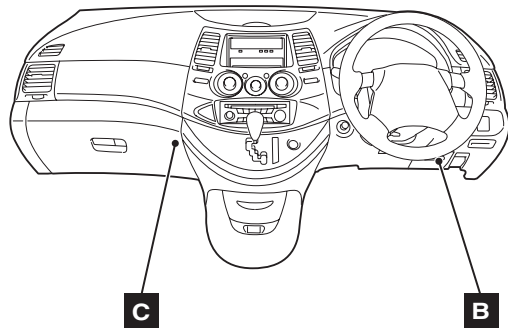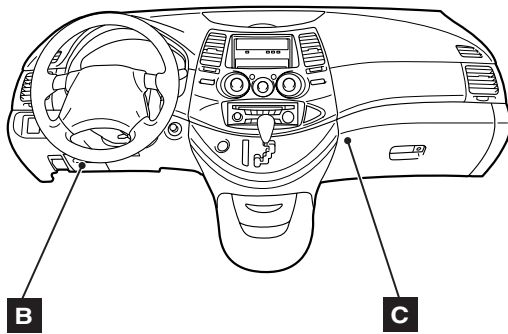

AC310823AC




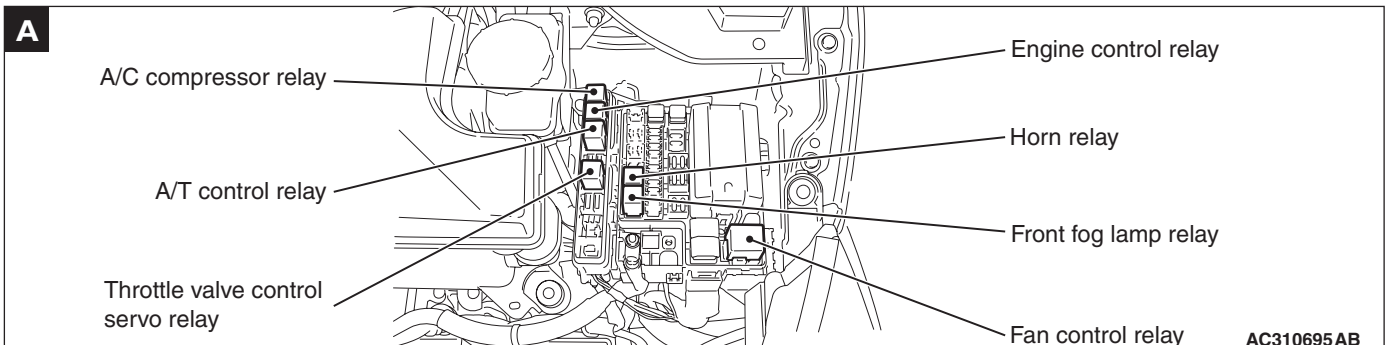 


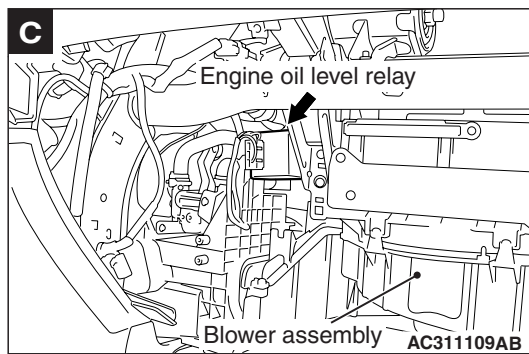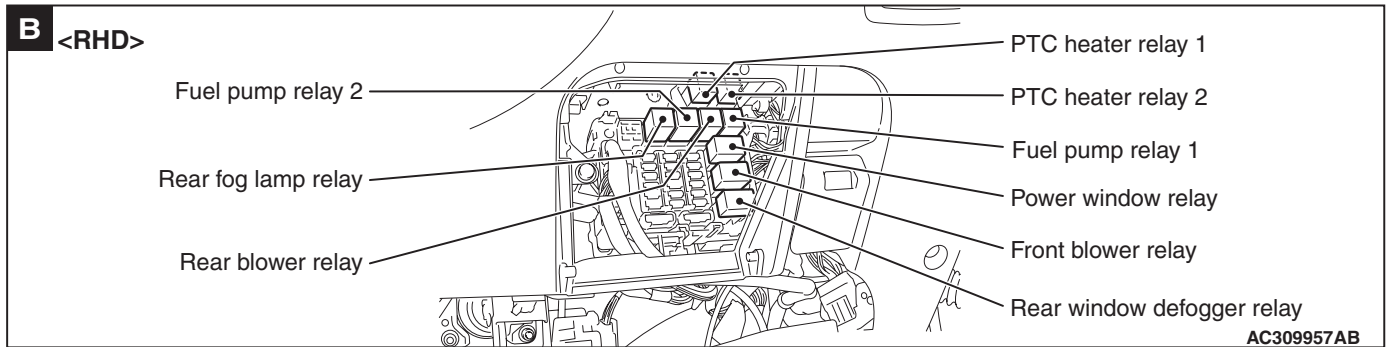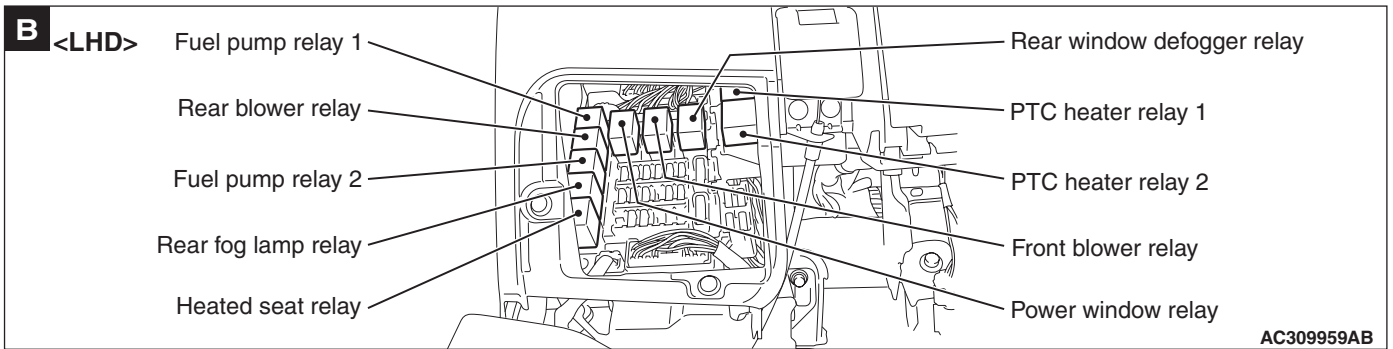   



ECU

M1701000500106

Name	Symbol	Name	Symbol
A/C-ECU	F	Fan controller	C
ABS-ECU	A	Front-ECU	B
ASC-ECU	A	Immobilizer-ECU	E
Column switch (incorporating Column-ECU)	D	Power window main switch (incorporating ECU)	L
Engine-A/T-ECU <A/T>	I	Power window sub switch (incorporating ECU)	J
Engine-ECU <M/T>	I	SRS-ECU	H
ETACS-ECU	G	Sunroof motor assembly (incorporating ECU)	K





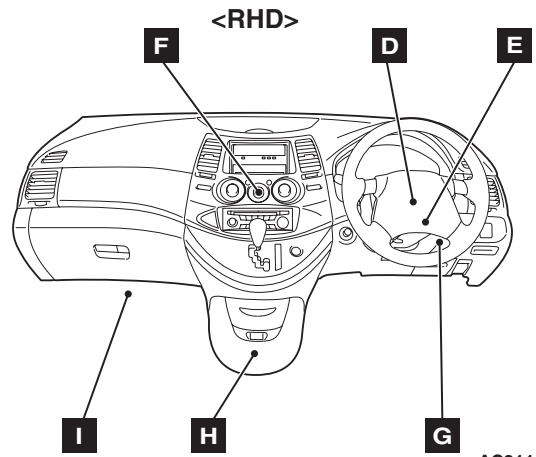 
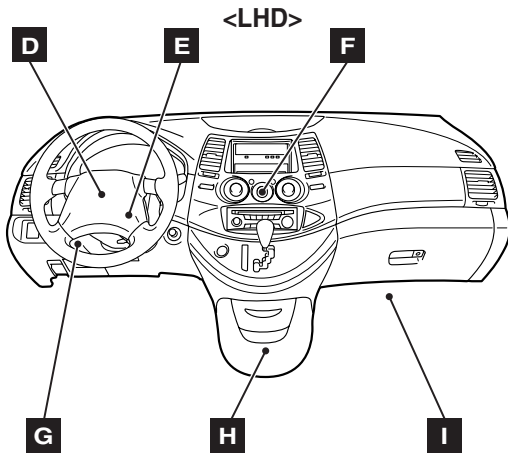 
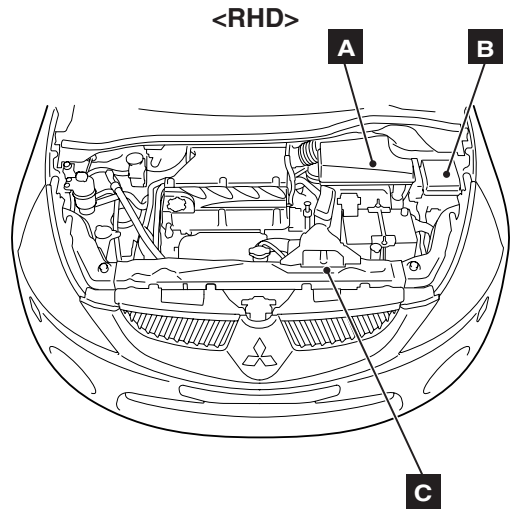 
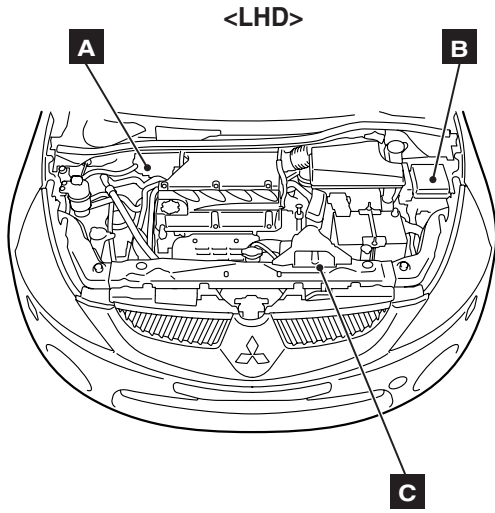 









AC311101AB

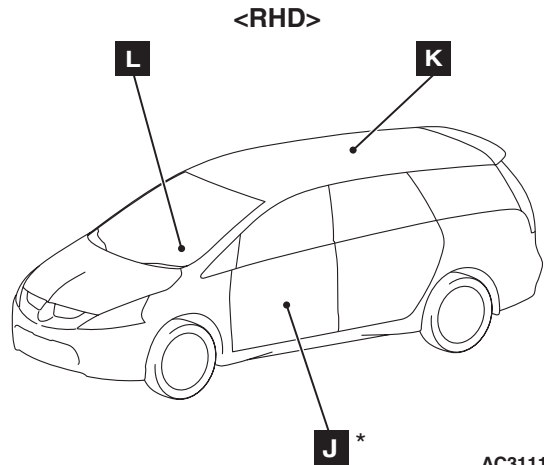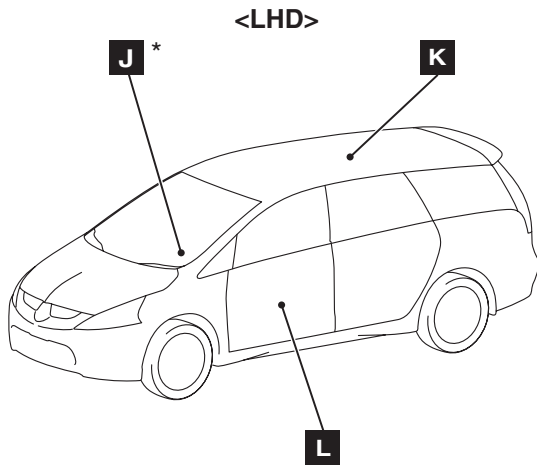  

AC311102AB

               NOTE: *: also equipped on the rear doors.

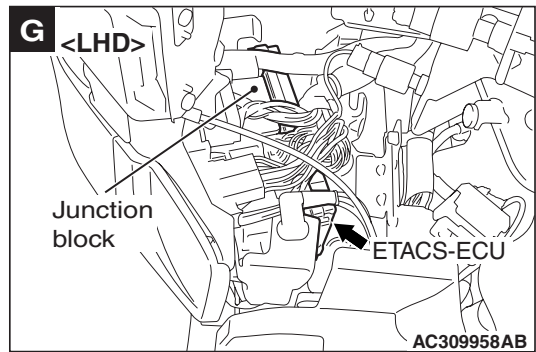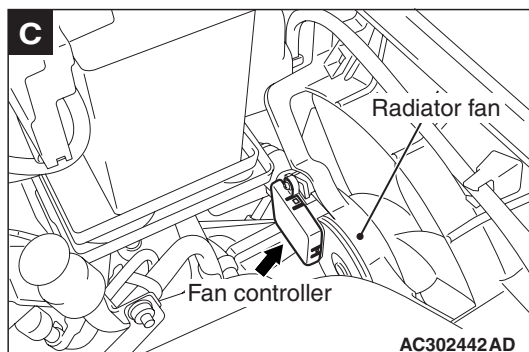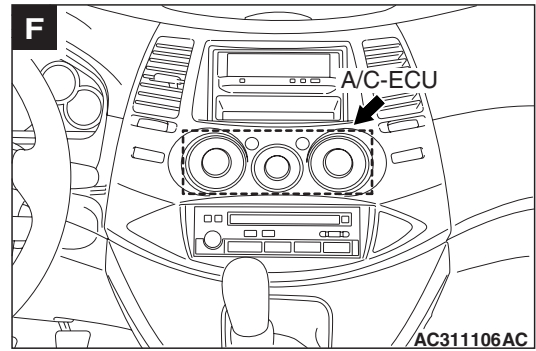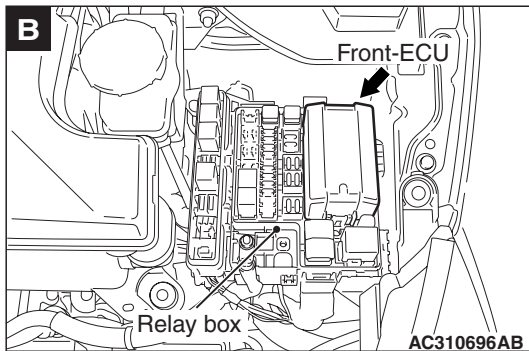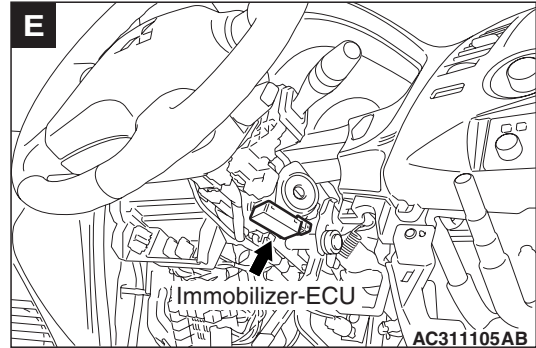
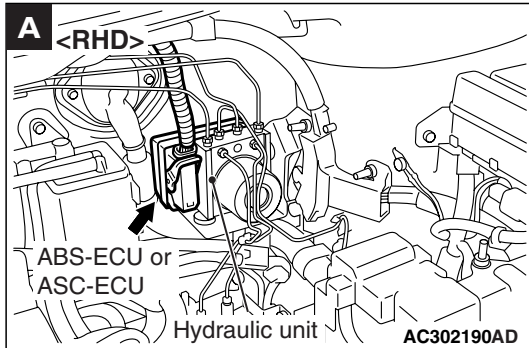
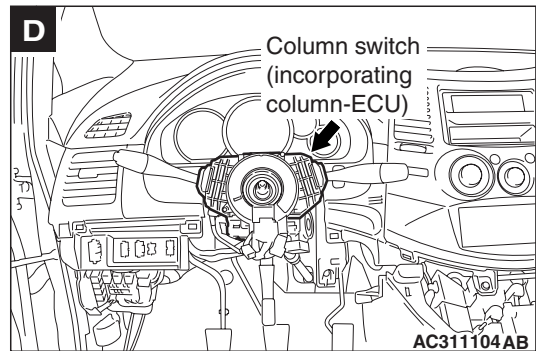
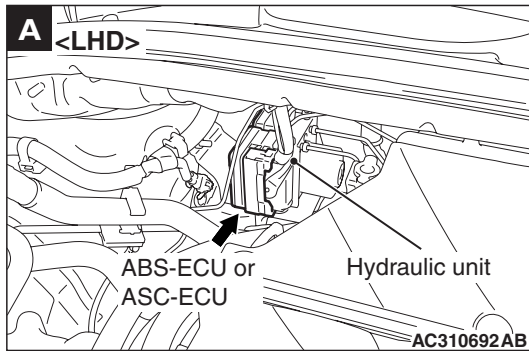


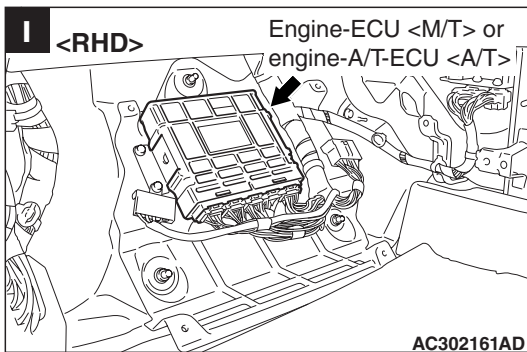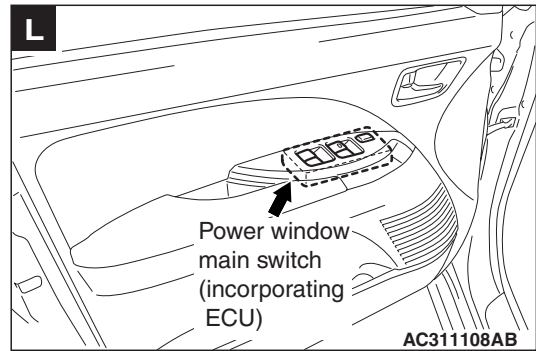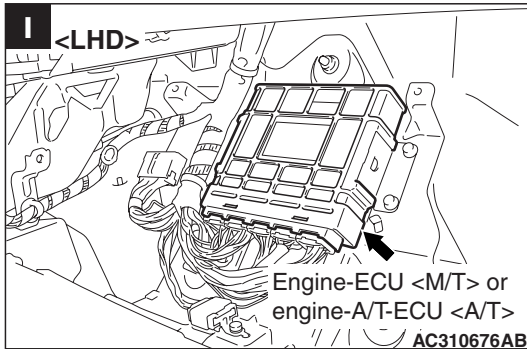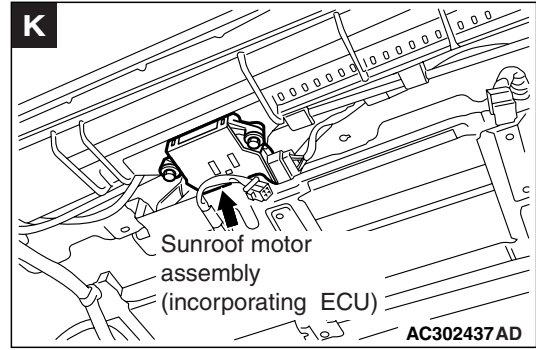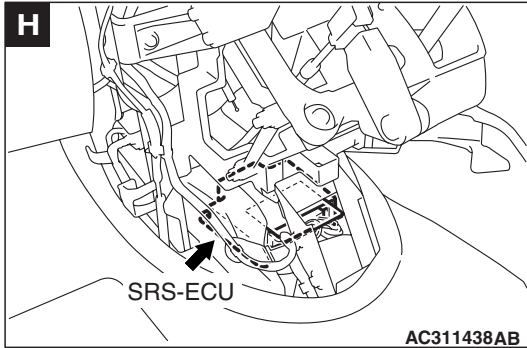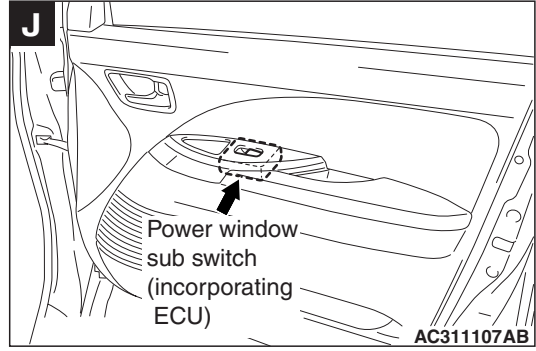
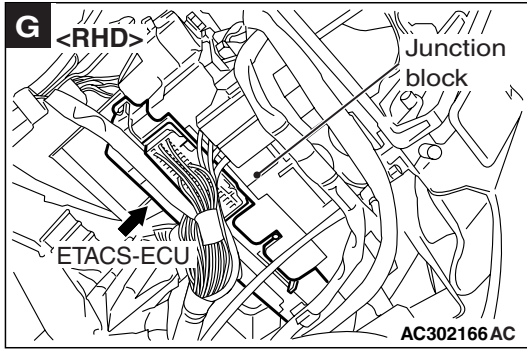


SENSOR





M1701000600493









Name	Symbol	Name	Symbol
A/C pressure sensor	A	Engine oil pan oil level sensor	H
Accelerator pedal position sensor	R	Front impact sensor	N
Ambient temperature sensor	L	G and yaw rate sensor	T
Air flow sensor	F	Input shaft speed sensor <A/T>	M
Air thermo sensor	S	Interior temperature sensor	P
Camshaft position sensor	D	Output shaft speed sensor <A/T>	M
Crank angle sensor	I	Photo sensor	Q
Cylinder 1, 4 heated oxygen sensor (Front, Rear)	J	Power steering fluid pressure sensor	G
Cylinder 2, 3 heated oxygen sensor (Front, Rear)	J	Seat slide sensor	W
Detonation sensor	B	Side impact sensor (Front)	X
Electronic-controlled throttle valve	C	Side impact sensor (Rear)	U
Engine coolant temperature sensor	K	Steering wheel sensor	O
		Vehicle speed sensor <M/T>	E
		Wheel speed sensor (Front)	V
		Wheel speed sensor (Rear)	Y




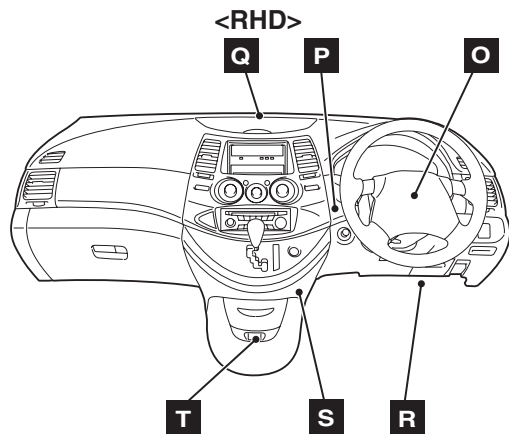 
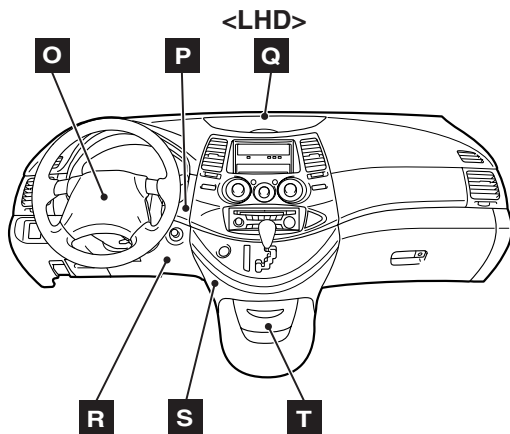 
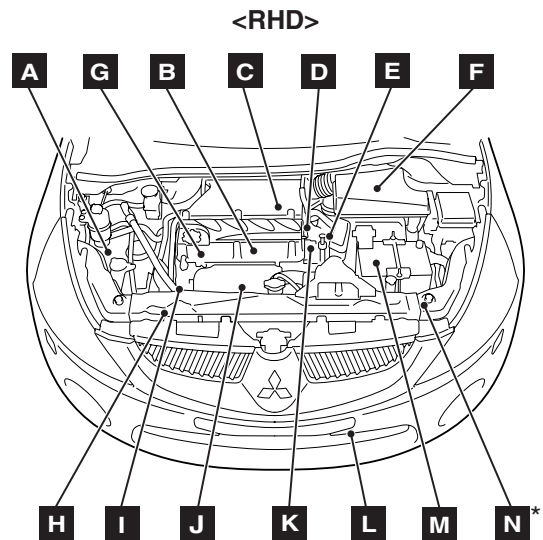 
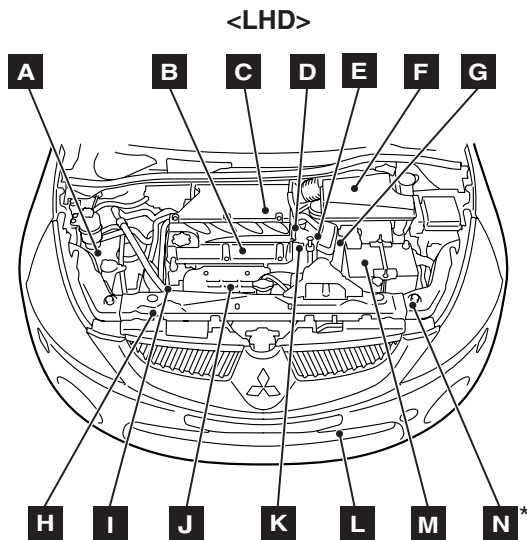 








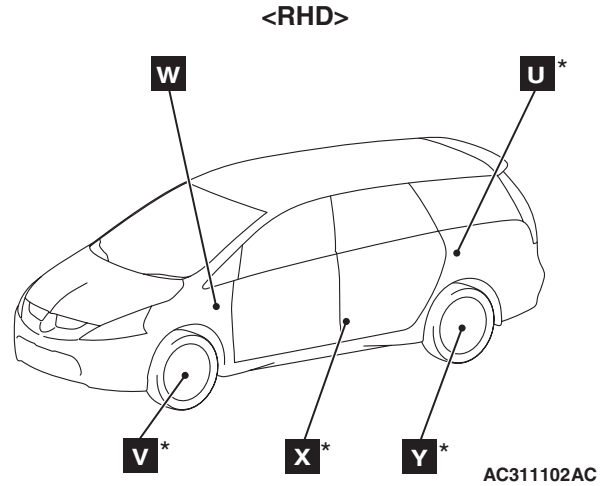 
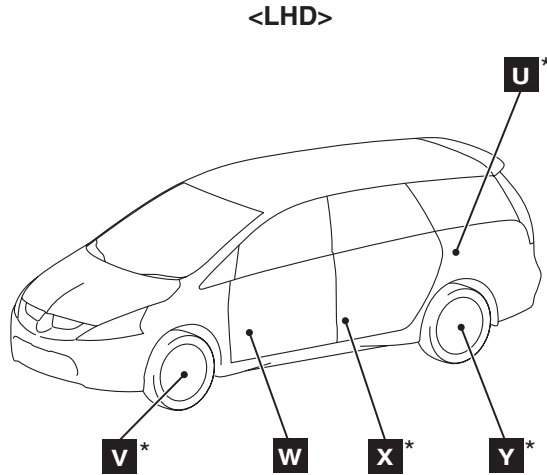 


                            
 
 
 
NOTE: *: also equipped at the right side.

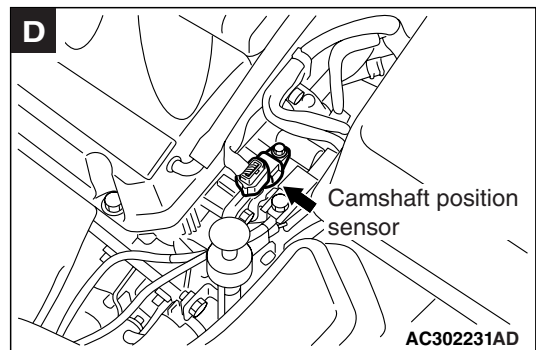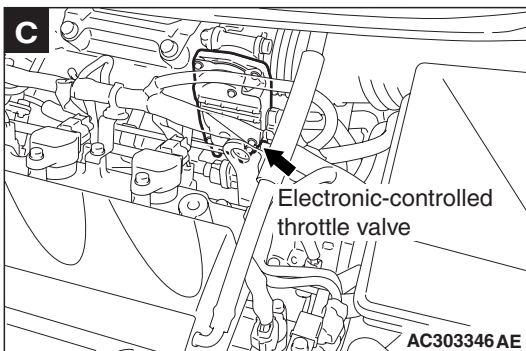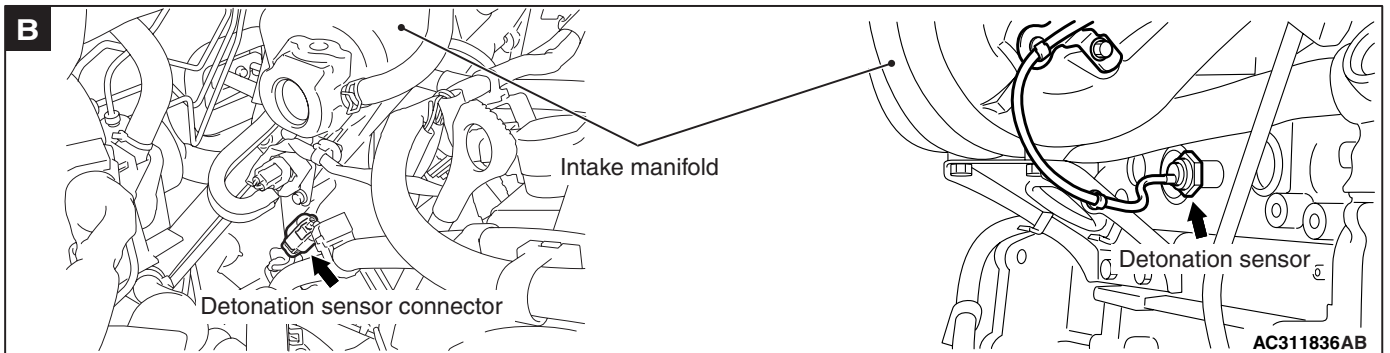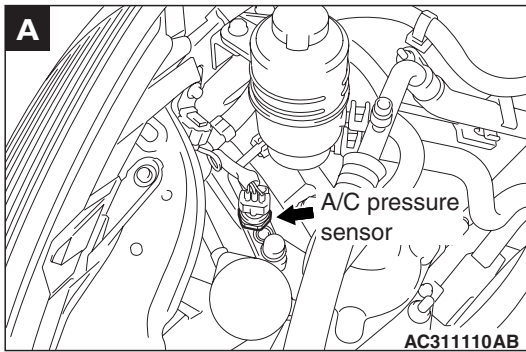

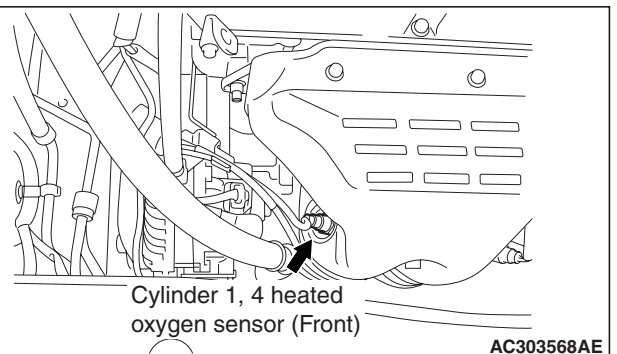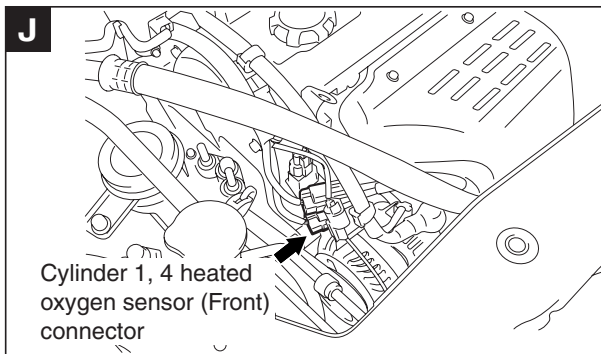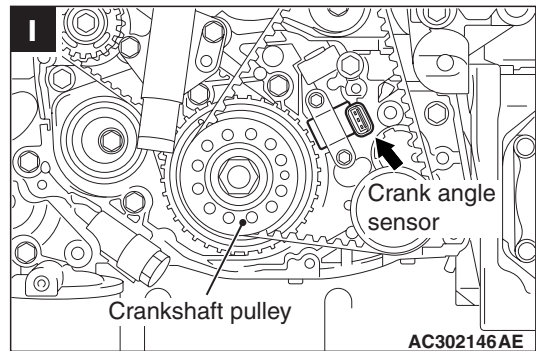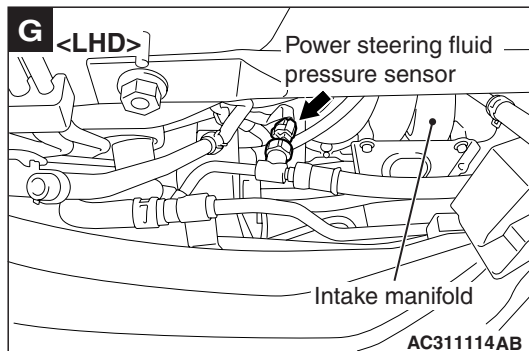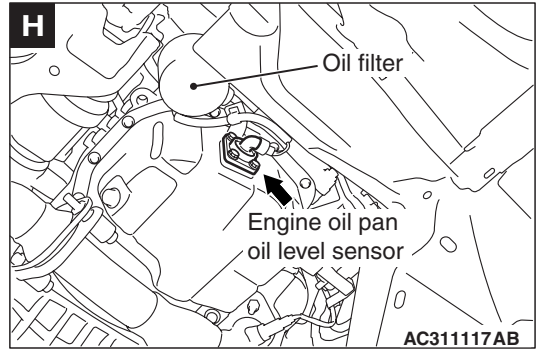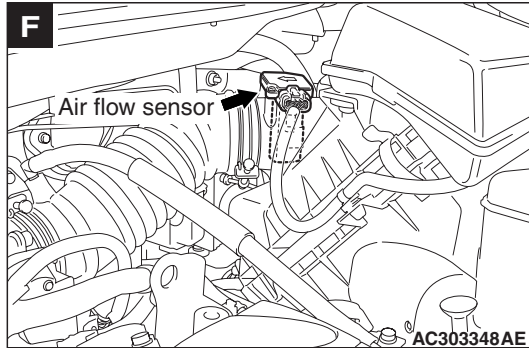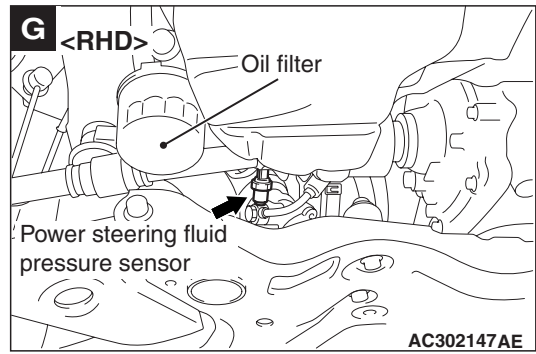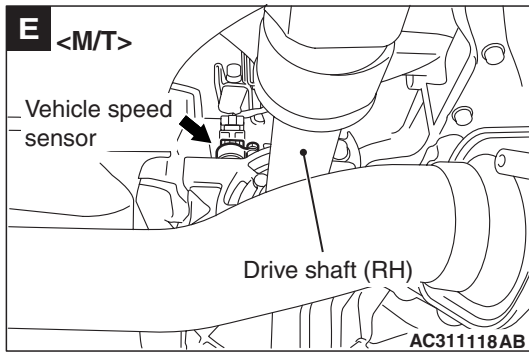

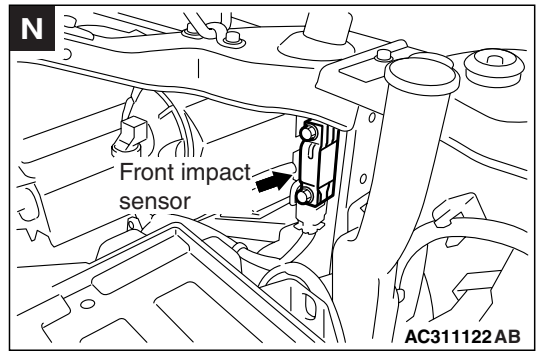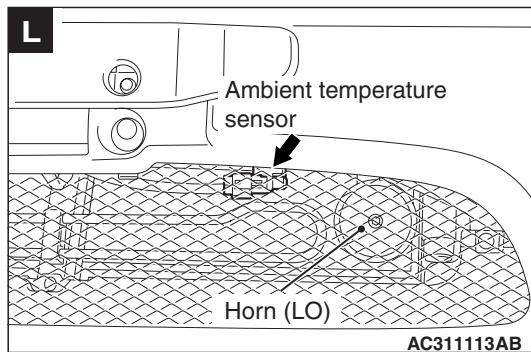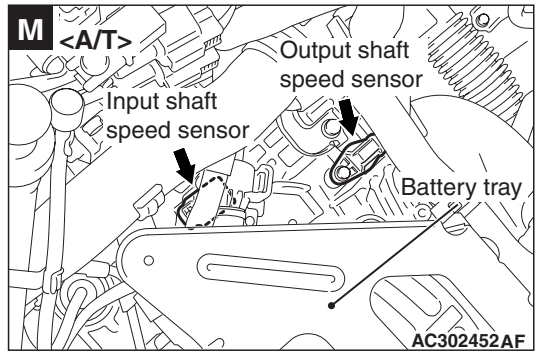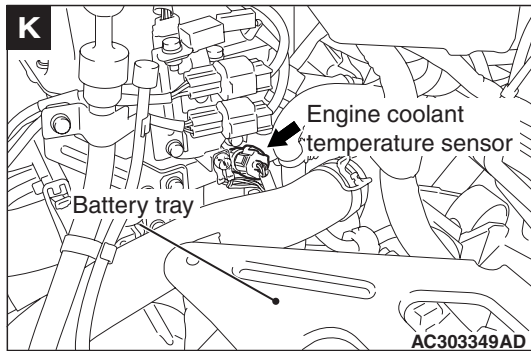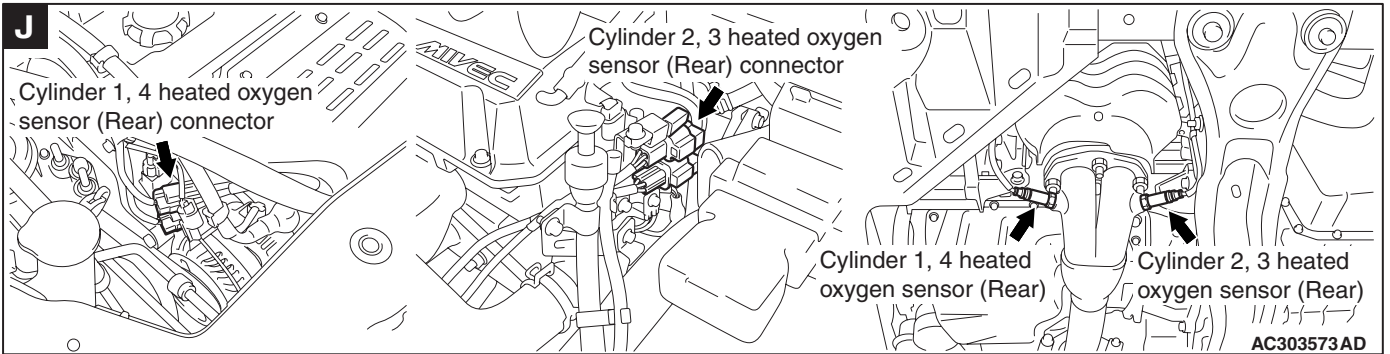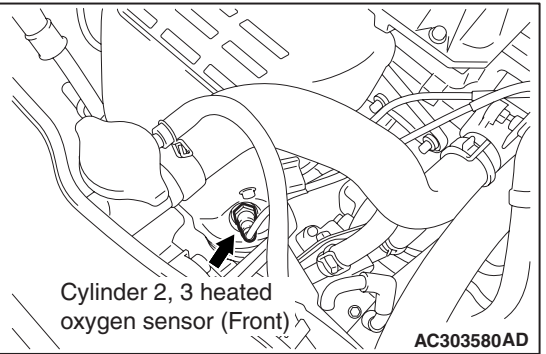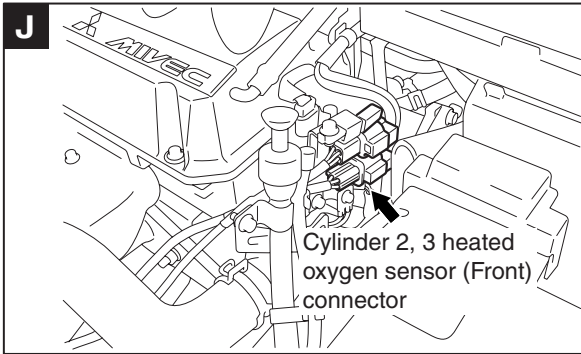

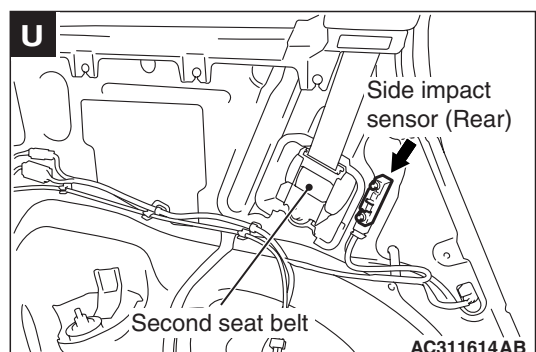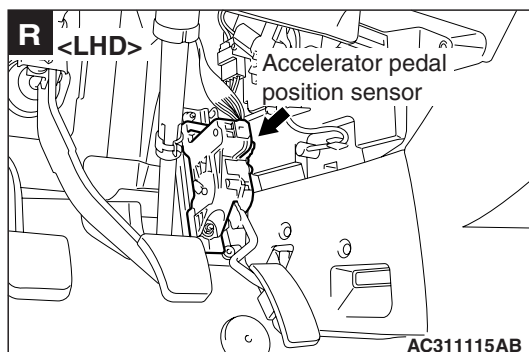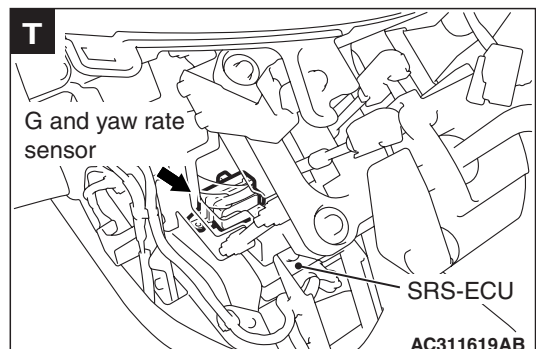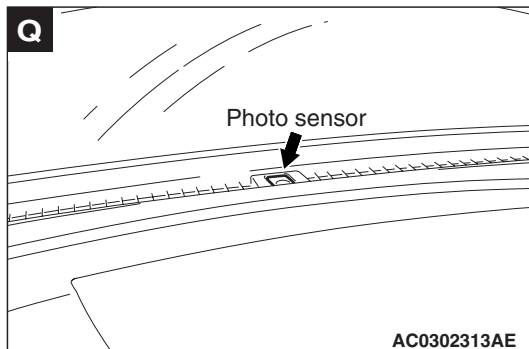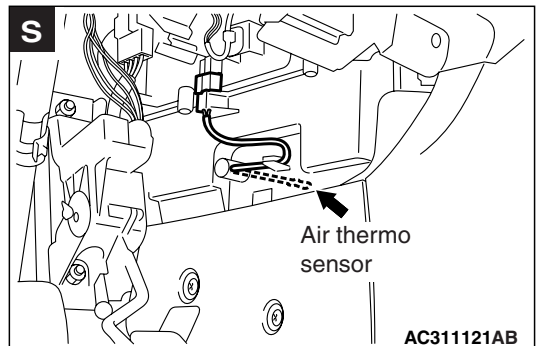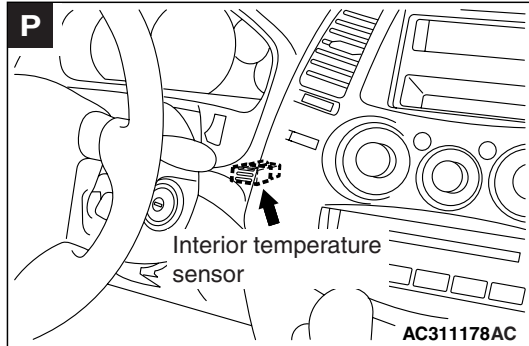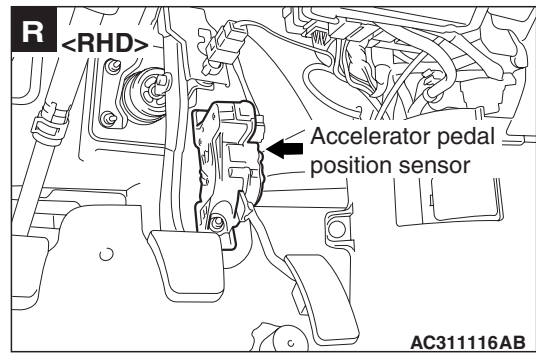
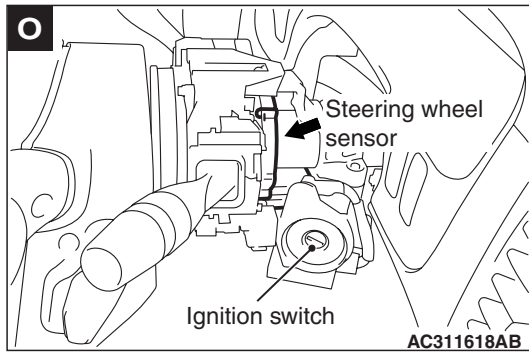


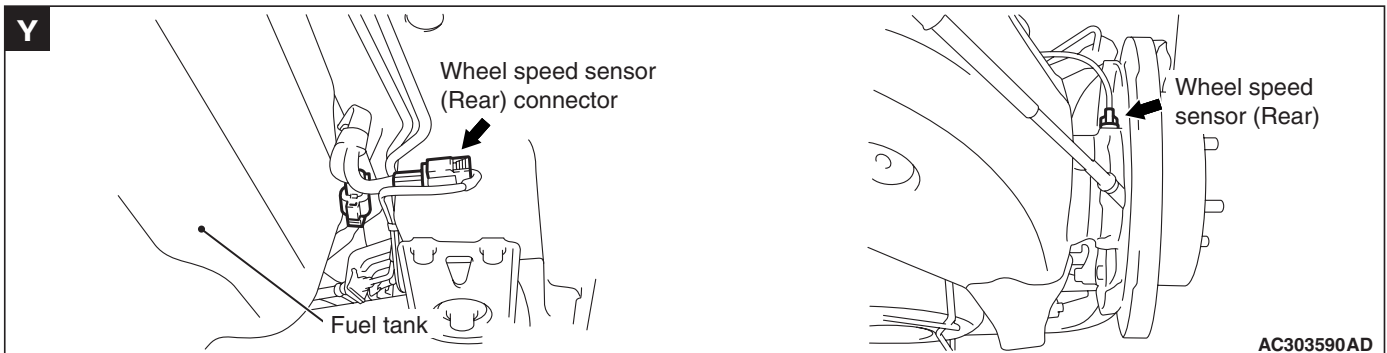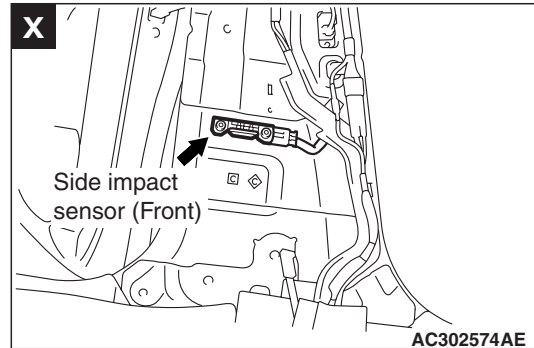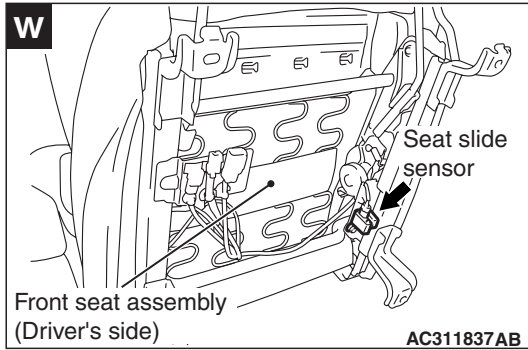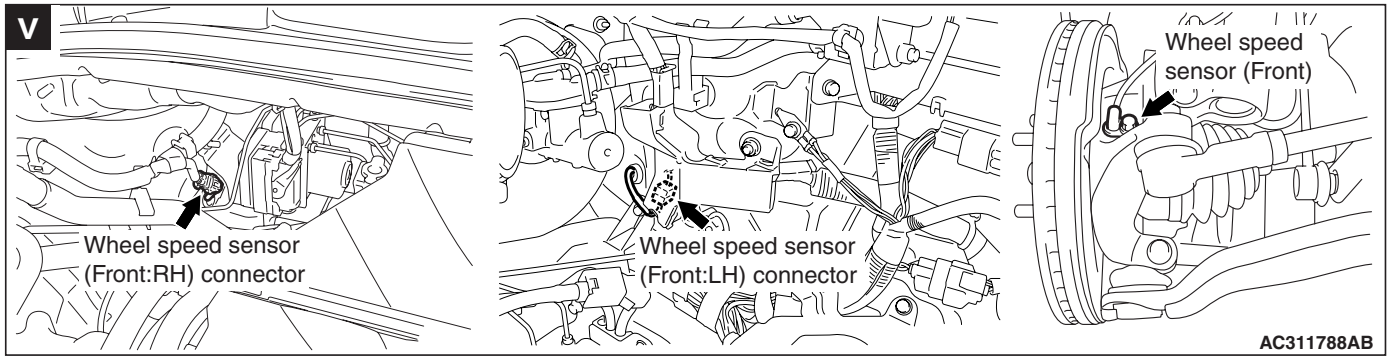






SOLENOID VALVE


M1701000800464

Name	Symbol	Name	Symbol
A/T control solenoid valve assembly	E	Hydraulic unit (incorporating solenoid valve)	A
Engine oil control valve	D		
Exhaust gas recirculation valve	C	Purge control solenoid valve	B

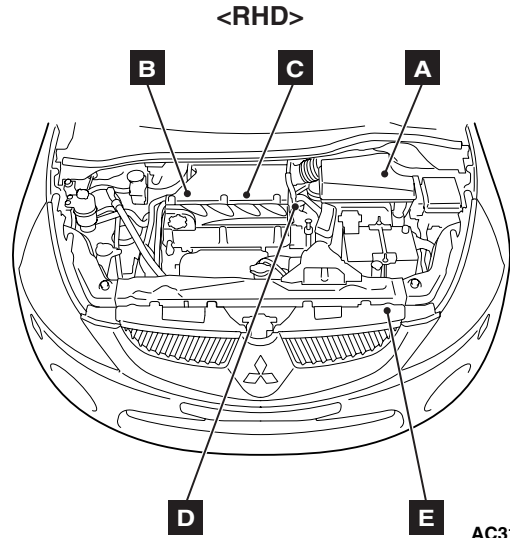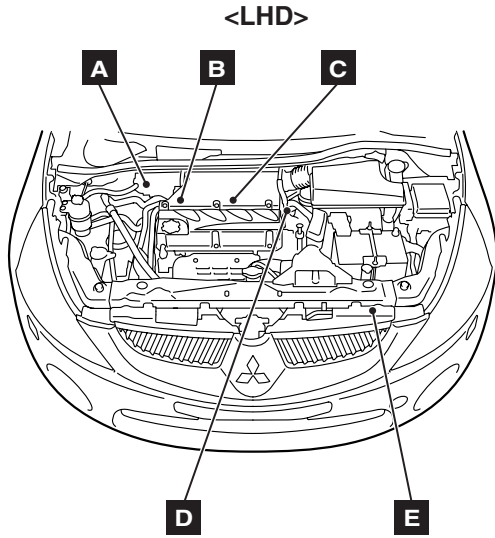  

AC310822AB

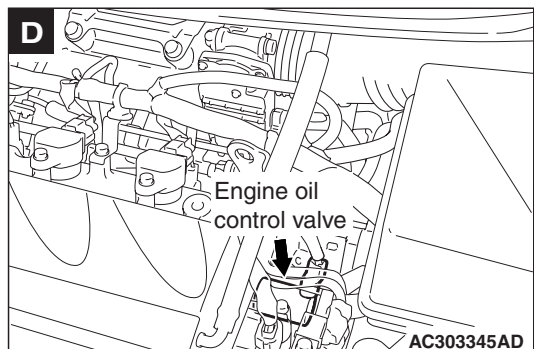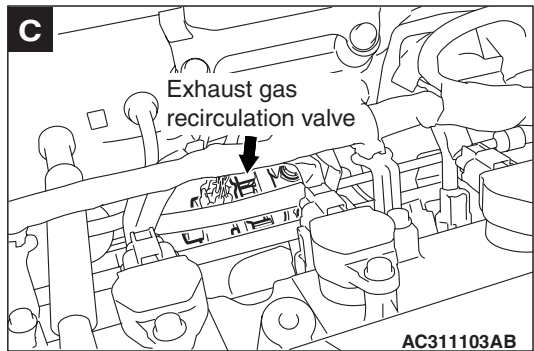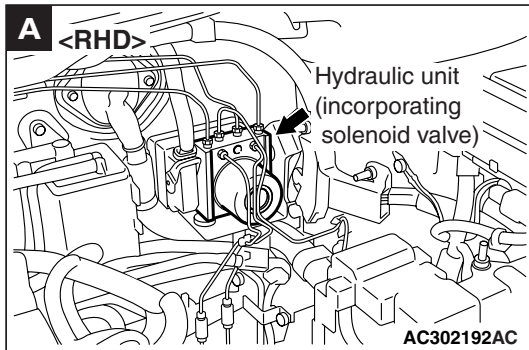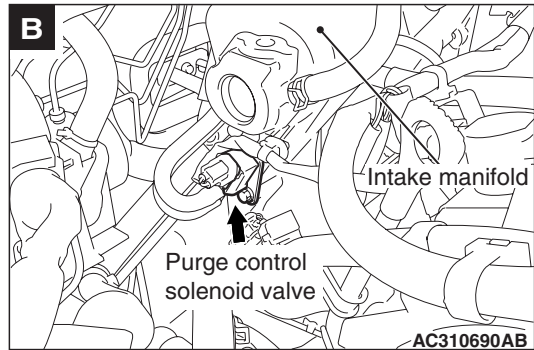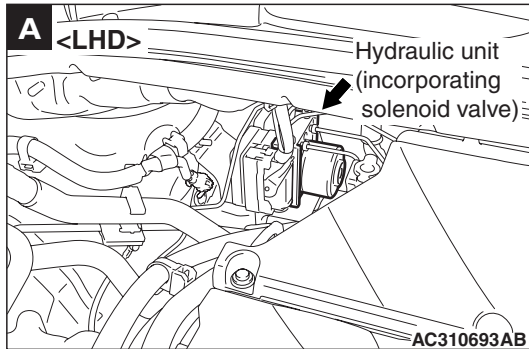     


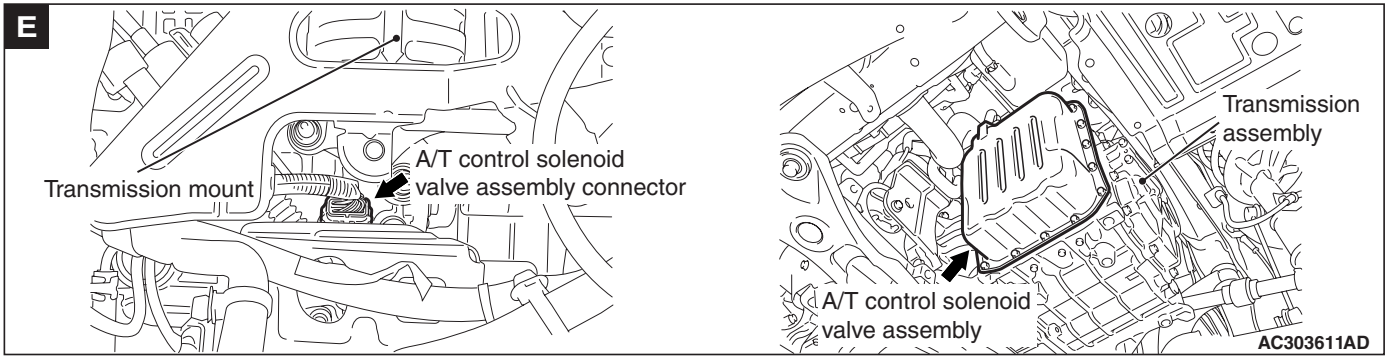 

FUSIBLE LINK AND FUSE



M1701000100432

Name	Symbol	Name	Symbol
Fuses No.1 to 24 (Passenger compartment)	C	Fusible links No.2 to 5 (Engine compartment)	B
Fuses No.6 to 25 (Engine compartment)	B	Fusible links No.26 to 31 (Battery positive terminal)	A





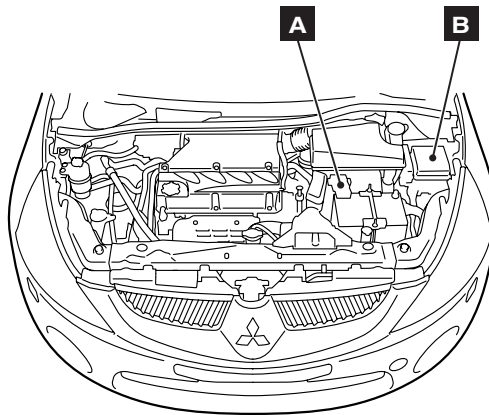 


<LHD>
  
<RHD>

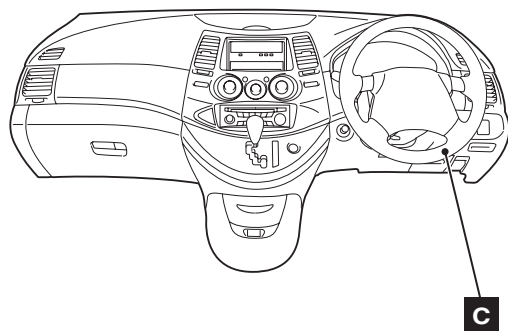
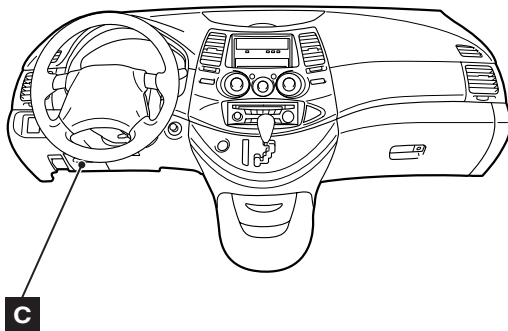


AC310823AB

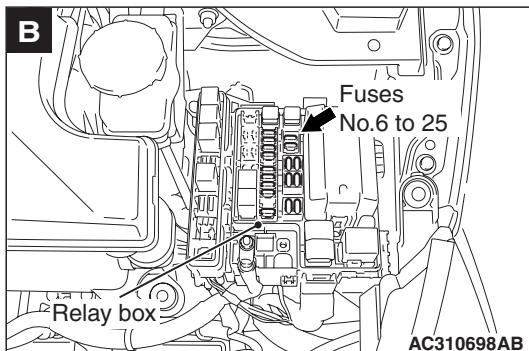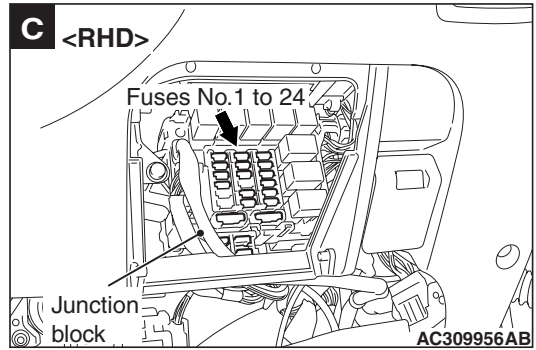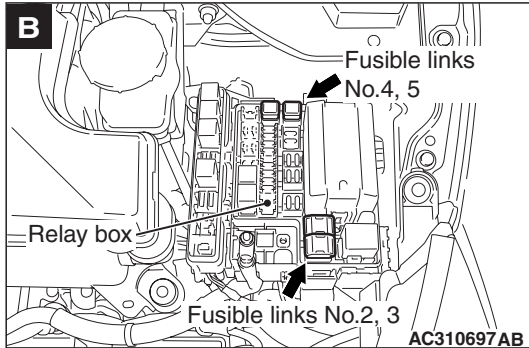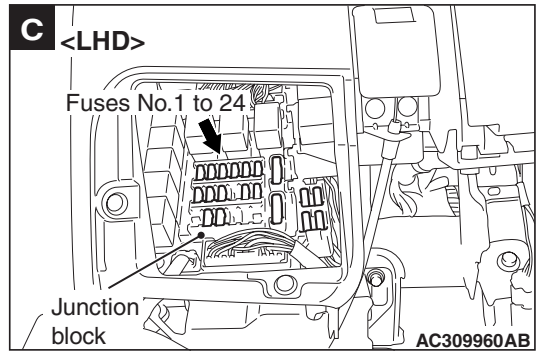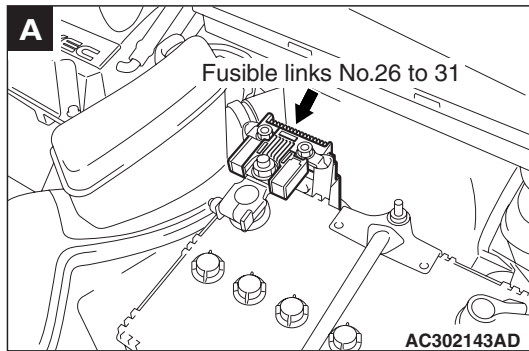     

INSPECTION TERMINAL LOCATION

 
 
M1701000200406

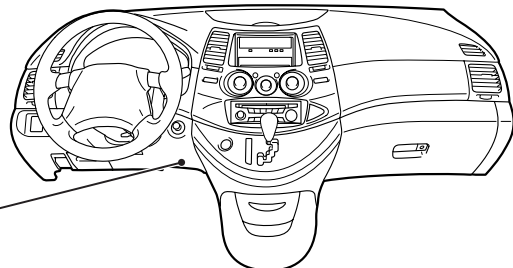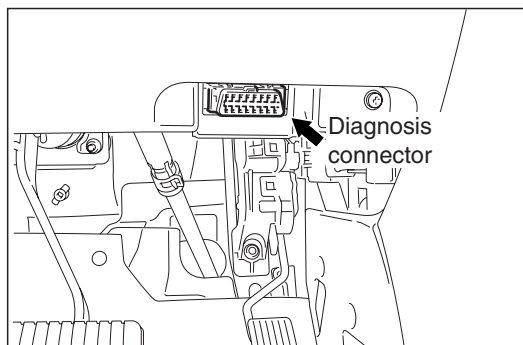

AC311119AB

EARTH CABLE

  M1701001000375

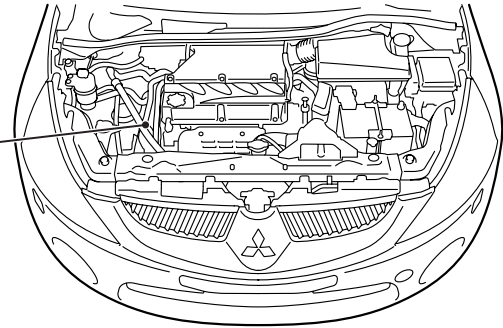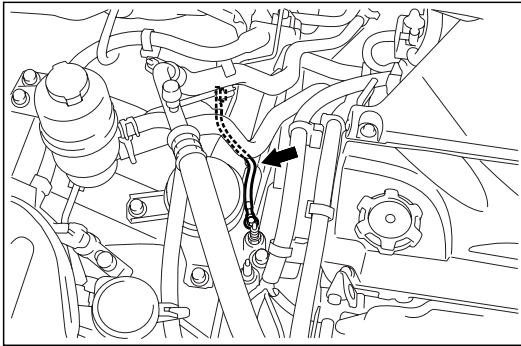


AC310821AB


EARTH

M1701000300447

 LHD

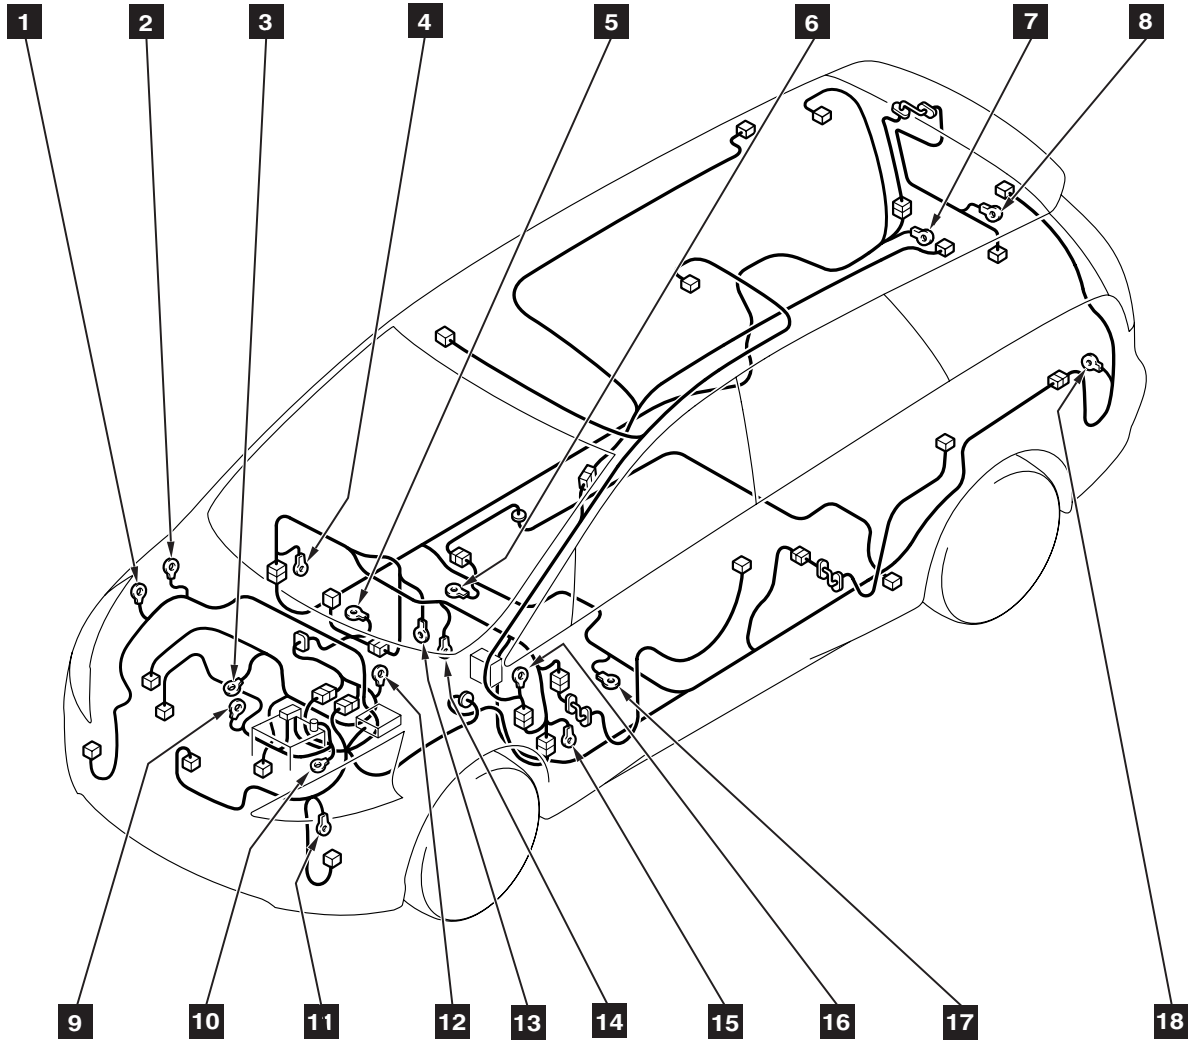

RHD

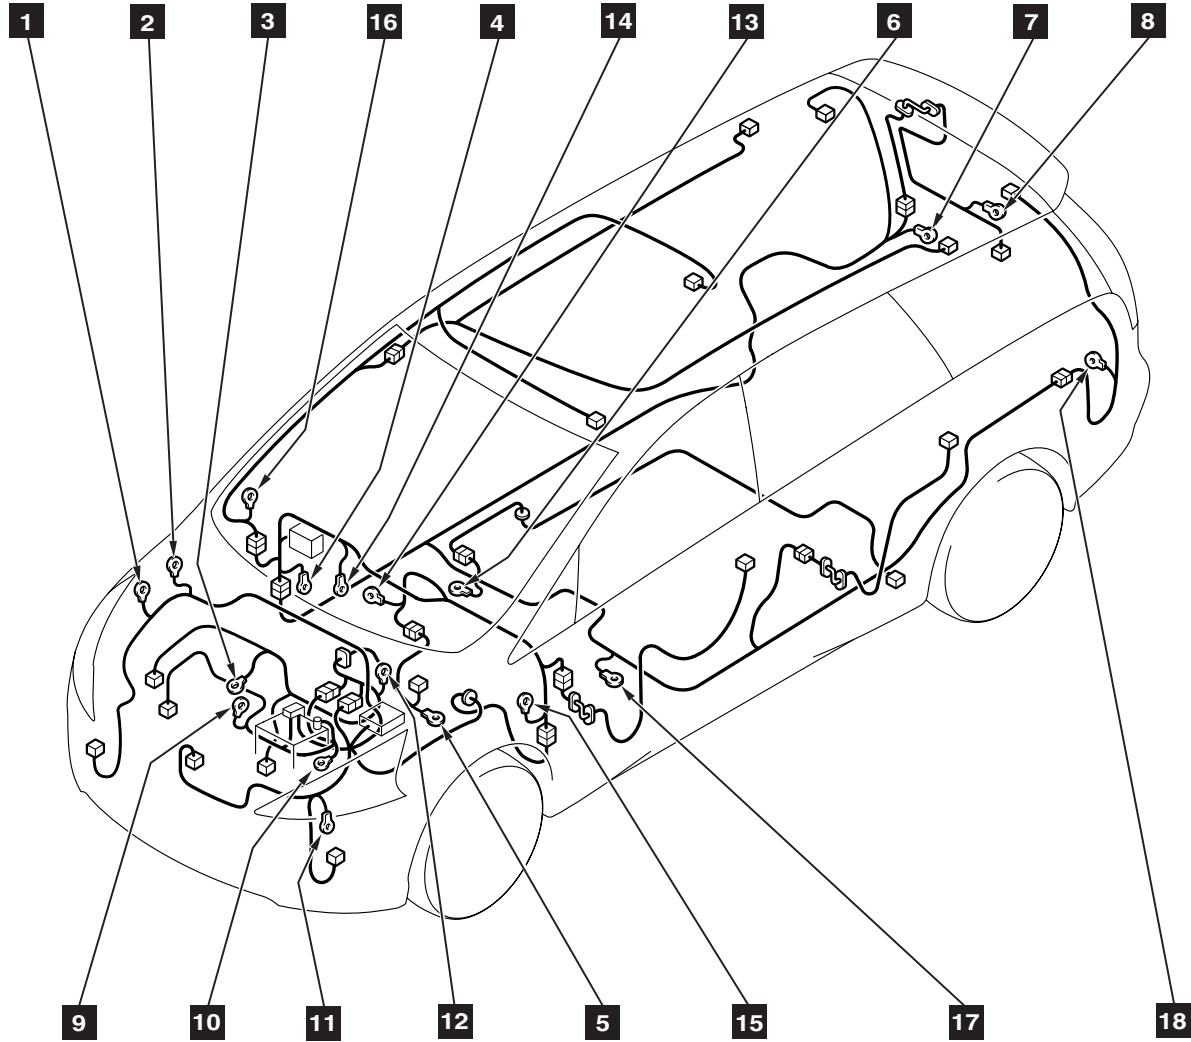 

AC310352AC

NOTE: Same earth numbers are used in the circuit diagram.

