

GROUP 1

WIRING HARNESS CONFIGURATION DIAGRAMS

CONTENTS


OVERALL WIRING DIAGRAM	1-2	ENGINE AND TRANSMISSION	
OVERALL WIRING DIAGRAM		<4G69 (R.H. drive vehicles)>	1-16
<L.H. drive vehicles>	1-2		
OVERALL WIRING DIAGRAM		DASH PANEL	1-20
<R.H. drive vehicles>	1-3	DASH PANEL <L.H. drive vehicles>	1-20
		DASH PANEL <R.H. drive vehicles>	1-28
ENGINE COMPARTMENT	1-4		
ENGINE COMPARTMENT		FLOOR AND ROOF	1-36
<L.H. drive vehicles>	1-4	FLOOR AND ROOF <L.H. drive vehicles> .	1-36
ENGINE COMPARTMENT		FLOOR AND ROOF <R.H. drive vehicles> .	1-38
<R.H. drive vehicles>	1-6		
ENGINE AND TRANSMISSION	1-8	DOOR	1-40
ENGINE AND TRANSMISSION		DOOR <L.H. drive vehicles>	1-40
<4G63>	1-8	DOOR <R.H. drive vehicles>	1-42
ENGINE AND TRANSMISSION			
<4G69 (L.H. drive vehicles)>	1-12	TAILGATE	1-44

OVERALL WIRING DIAGRAM

OVERALL WIRING DIAGRAM

M3010000100385

L.H. drive vehicles

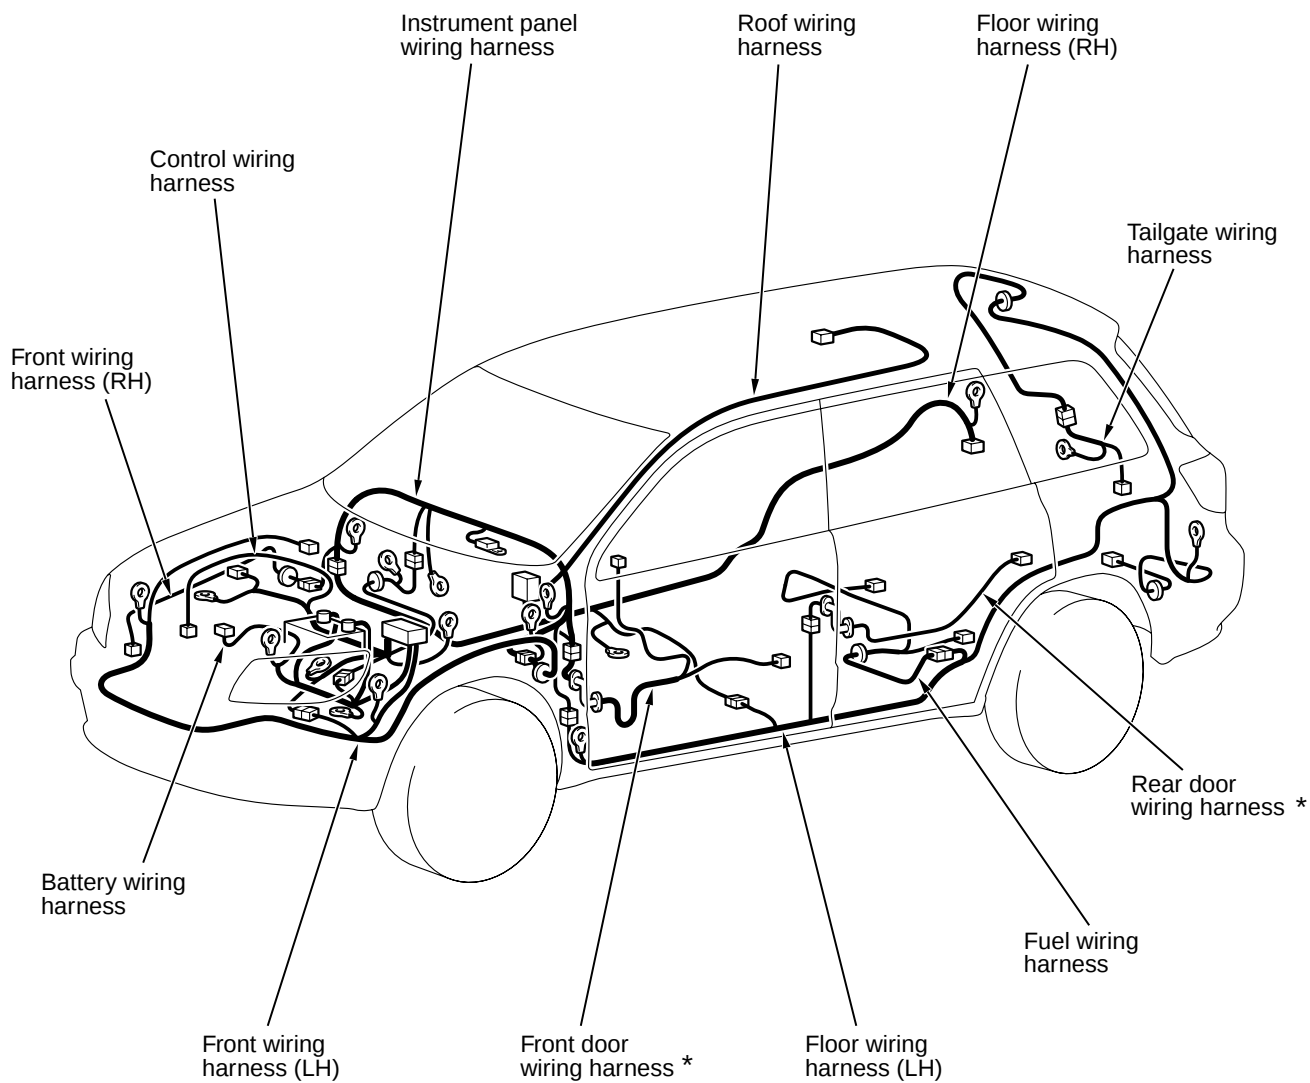

AC211751AB


NOTE:

1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

OVERALL WIRING DIAGRAM

M3010000100404

R.H. drive vehicles

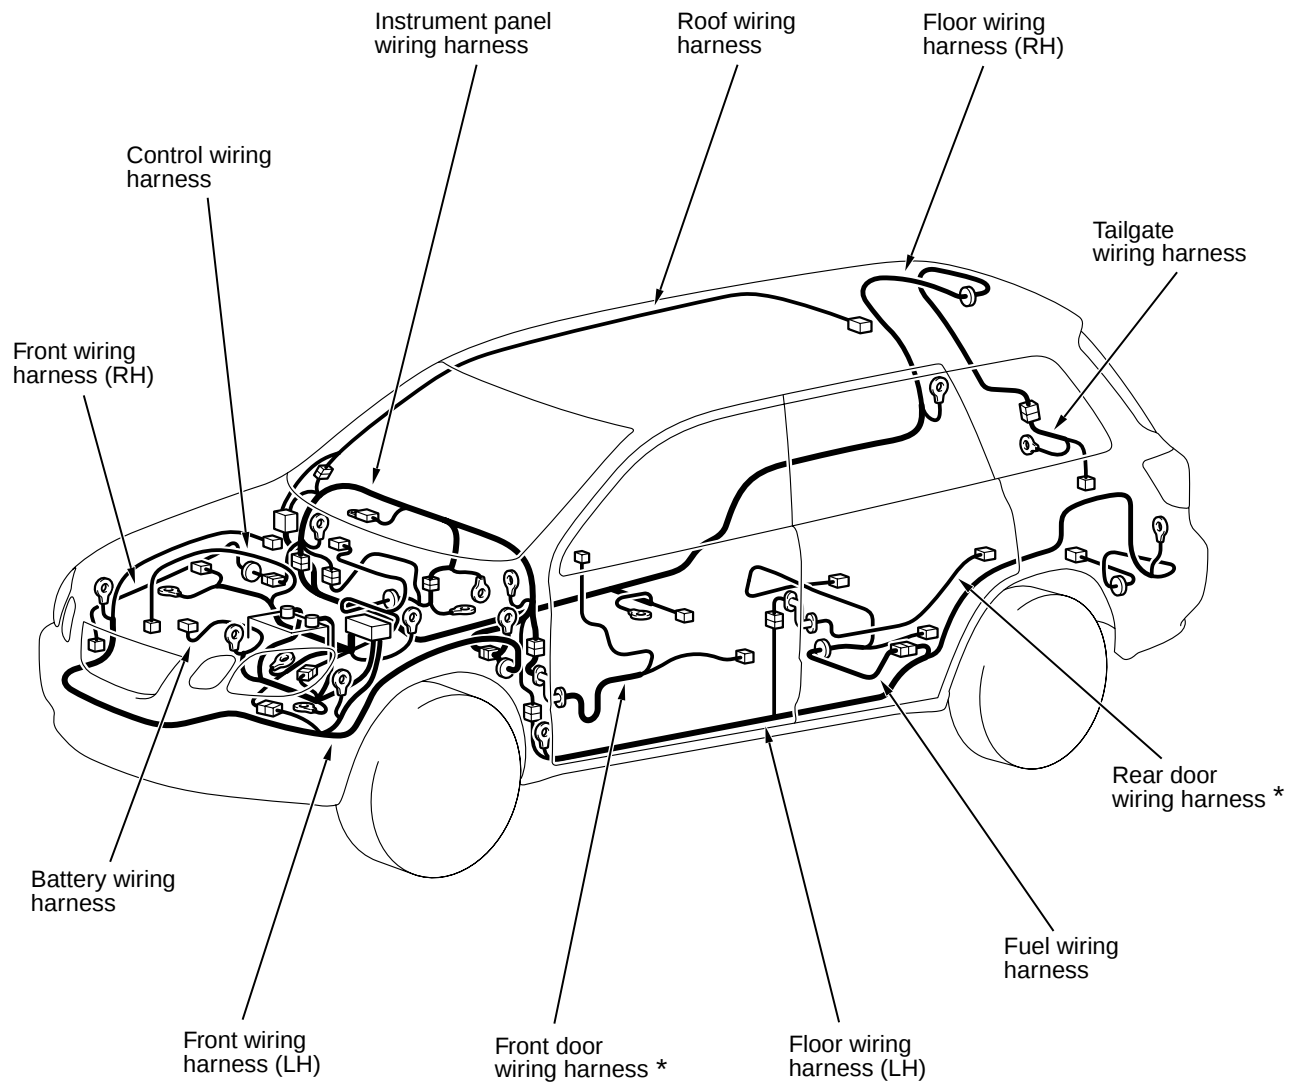

AC207934AB

NOTE:


1. This illustration shows only major wiring harnesses.
2. *: also equipped at the right side.

ENGINE COMPARTMENT

ENGINE COMPARTMENT


M3010000301003

L.H. drive vehicles

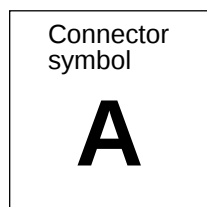


Connector colour code

B : Black
BR : Brown
G : Green
GR : Gray
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

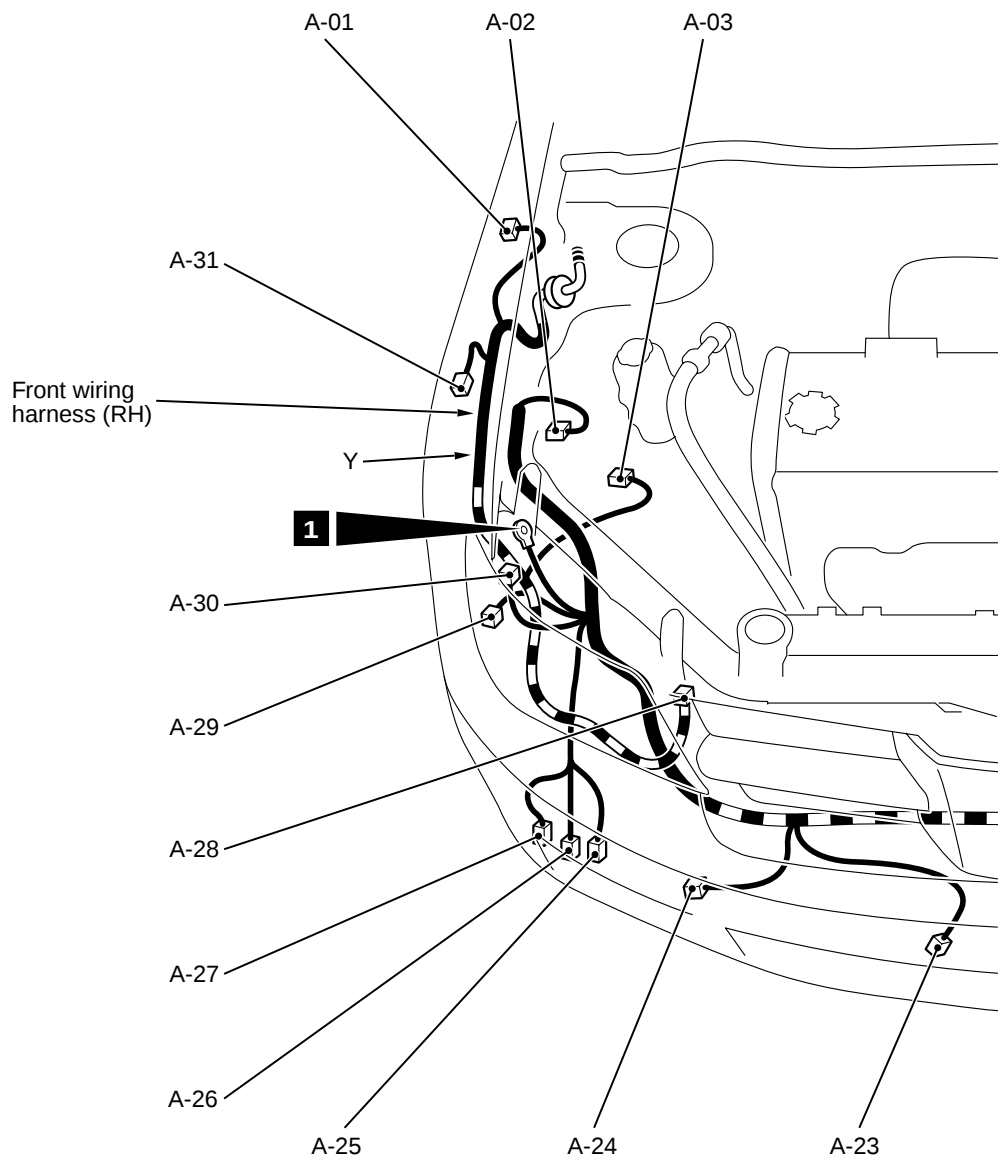

A-01	(2-GR)	Side turn signal lamp (RH)
A-02	(3-B)	A/C pressure sensor
A-03	(4-B)	No connection
A-04	(2-GR)	Side turn signal lamp (LH)
A-05X	(4)	Front fog lamp relay or spare connector (for front fog lamp relay)
A-06X	(4)	Horn relay
A-07X	(4)	Accessory socket relay
A-08X	(4)	Wiper deicer relay

A-10X	(4)	Fan control relay
A-11X	(11)	Front-ECU
A-12X	(11)	Front-ECU
A-13	(2-B)	Wheel speed sensor (Front: LH)
A-14	(17-GR)	Front wiring harness (LH) and control wiring harness combination
A-15	(3-B)	Headlamp (LH)
A-16	(6-B)	Headlamp assembly (LH)

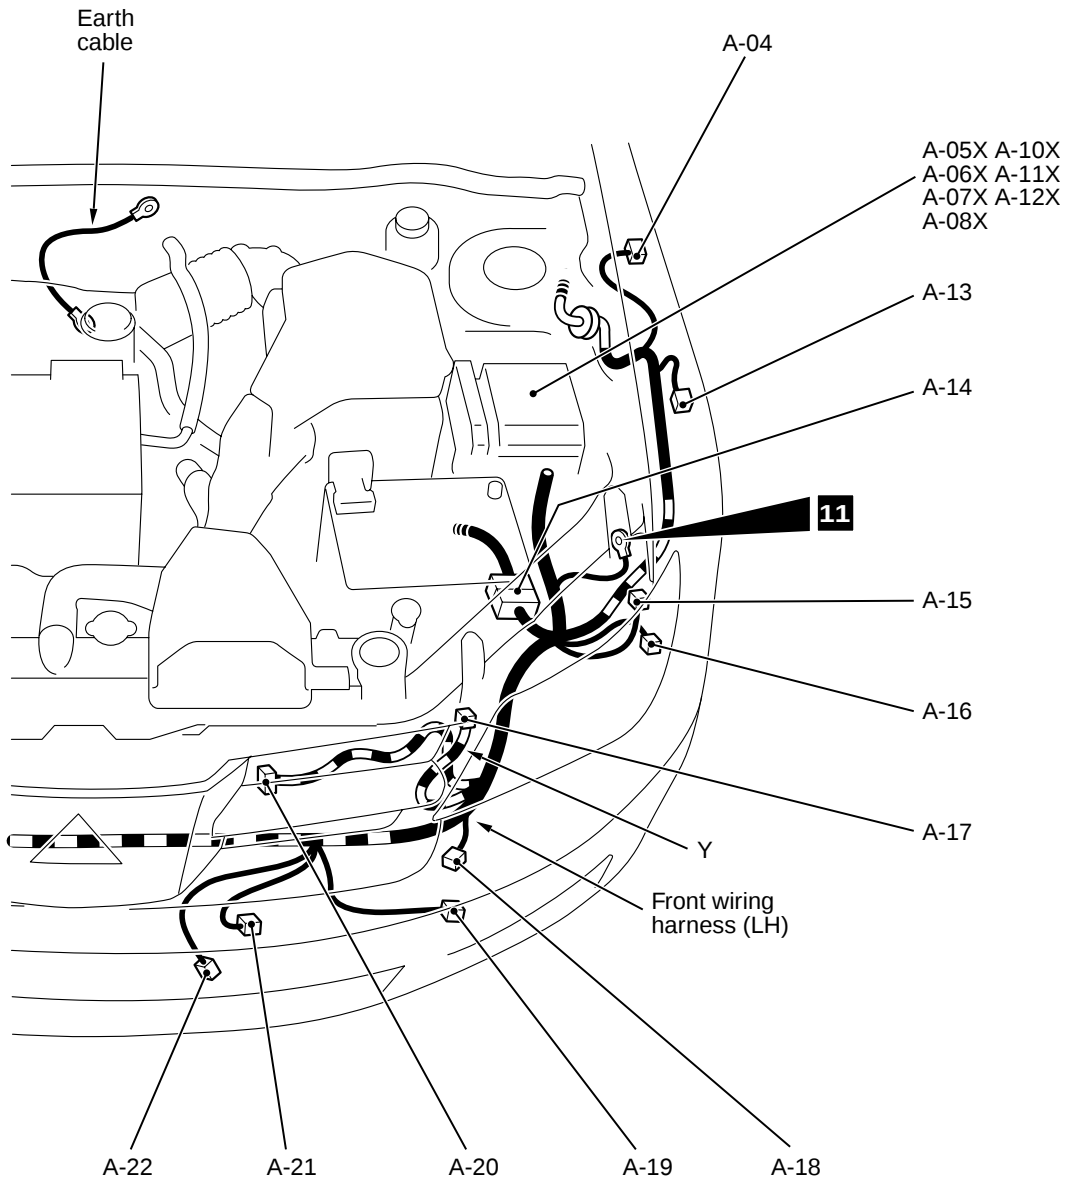

AC207938AC

A-17	(2-Y)	Front impact sensor (LH)	A-25	(2-B)	Headlamp washer motor
A-18	(2-BR)	Outside thermo sensor	A-26	(2)	Windshield washer motor
A-19	(2-B)	Front fog lamp (LH) or spare connector (for front fog lamp)	A-27	(2-G)	Rear washer motor
A-20	(3-GR)	Fan controller	A-28	(2-Y)	Front impact sensor (RH)
A-21	(2-BR)	No connection	A-29	(6-B)	Headlamp assembly (RH)
A-22	(1-B)	Horn (HI)	A-30	(3-B)	Headlamp (RH)
A-23	(1-B)	Horn (LO)	A-31	(2-B)	Wheel speed sensor (Front: RH)
A-24	(2-B)	Front fog lamp (RH) or spare connector (for front fog lamp)			


ENGINE COMPARTMENT

M3010000301058

R.H. drive vehicles

Connector
symbol**A**Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Gray
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

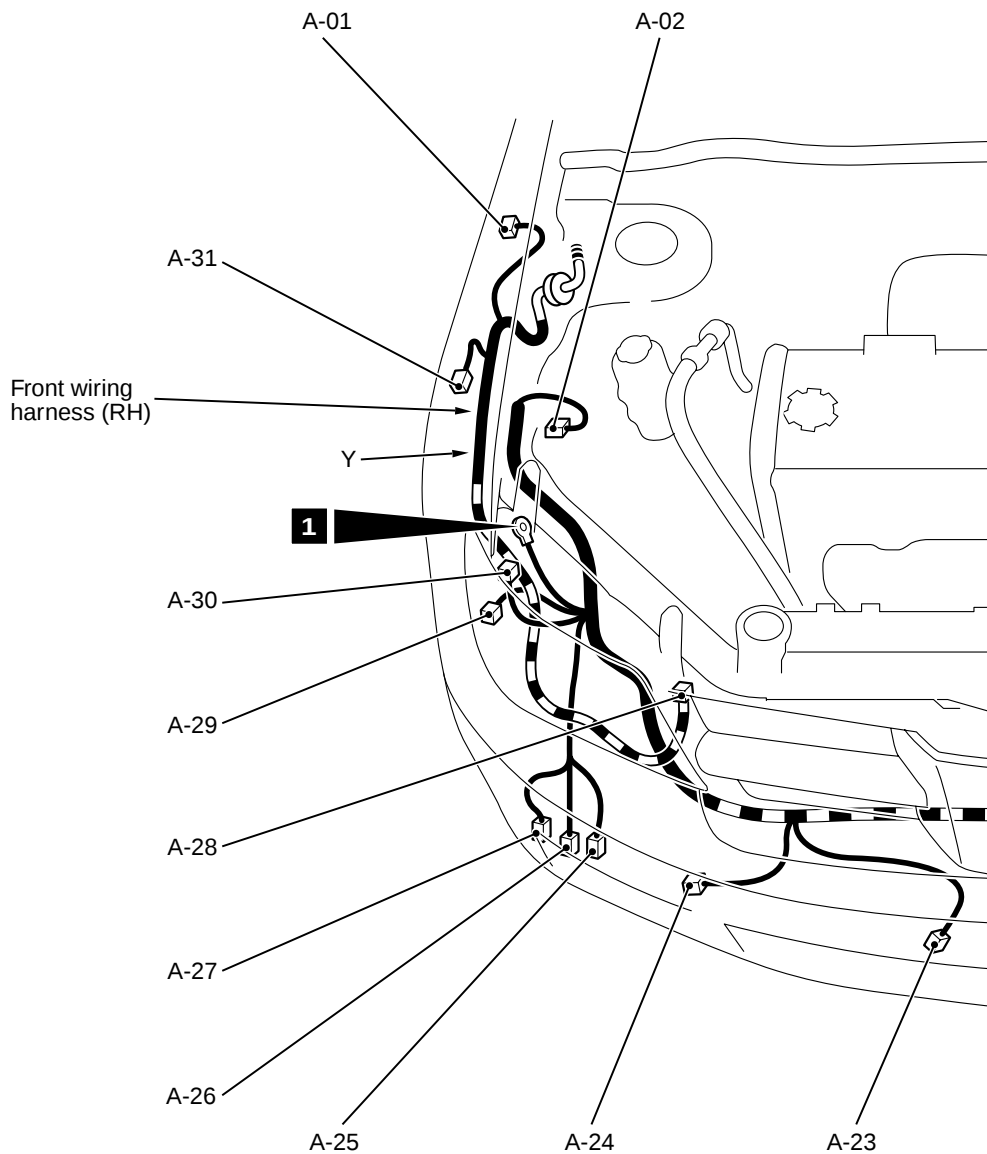

AC307665AB

A-01	(2-GR)	Side turn signal lamp (RH)
A-02	(3-B)	A/C pressure sensor
A-04	(2-GR)	Side turn signal lamp (LH)
A-05X	(4)	Front fog lamp relay
A-06X	(4)	Horn relay
A-07X	(4)	Accessory socket relay
A-08X	(4)	Wiper deicer relay
A-10X	(4)	Fan control relay

A-11X	(11)	Front-ECU
A-12X	(11)	Front-ECU
A-13	(2-B)	Wheel speed sensor (Front: LH)
A-14	(17-GR)	Front wiring harness (LH) and control wiring harness combination
A-15	(3-B)	Headlamp (LH)
A-16	(6-B)	Headlamp assembly (LH)

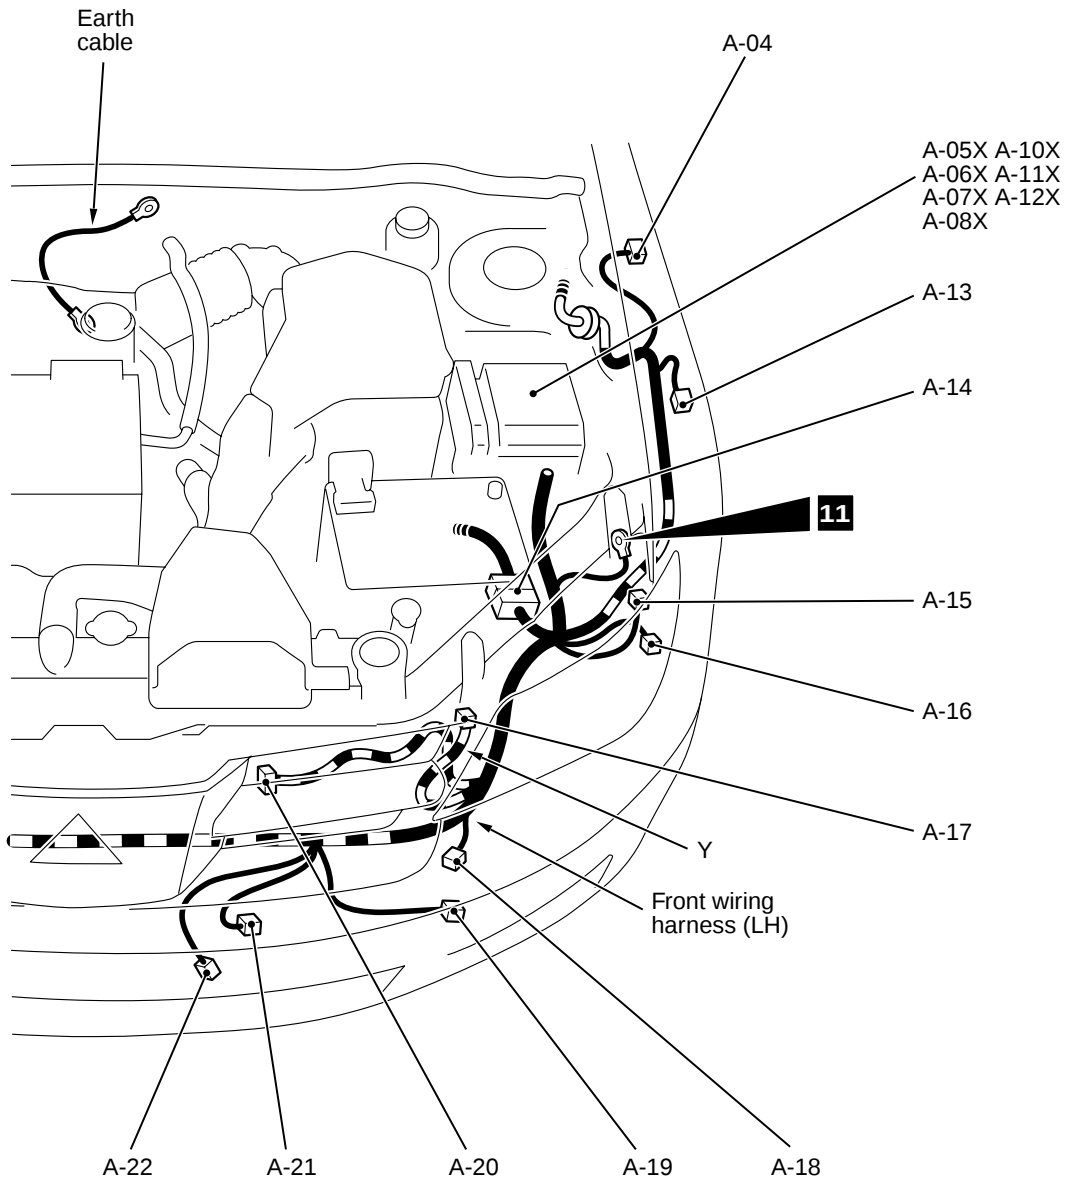

AC207938AD

A-17	(2-Y)	Front impact sensor (LH)	A-25	(2-B)	Headlamp washer motor
A-18	(2-BR)	Outside thermo sensor	A-26	(2)	Windshield washer motor
A-19	(2-B)	Front fog lamp (LH)	A-27	(2-G)	Rear washer motor
A-20	(3-GR)	Fan controller	A-28	(2-Y)	Front impact sensor (RH)
A-21	(2-BR)	No connection	A-29	(6-B)	Headlamp assembly (RH)
A-22	(1-B)	Horn (HI)	A-30	(3-B)	Headlamp (RH)
A-23	(1-B)	Horn (LO)	A-31	(2-B)	Wheel speed sensor (Front: RH)
A-24	(2-B)	Front fog lamp (RH)			

ENGINE AND TRANSMISSION


ENGINE AND TRANSMISSION

M3010000400405

4G63

Connector
symbol**B**-01
thru
-32Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Gray
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

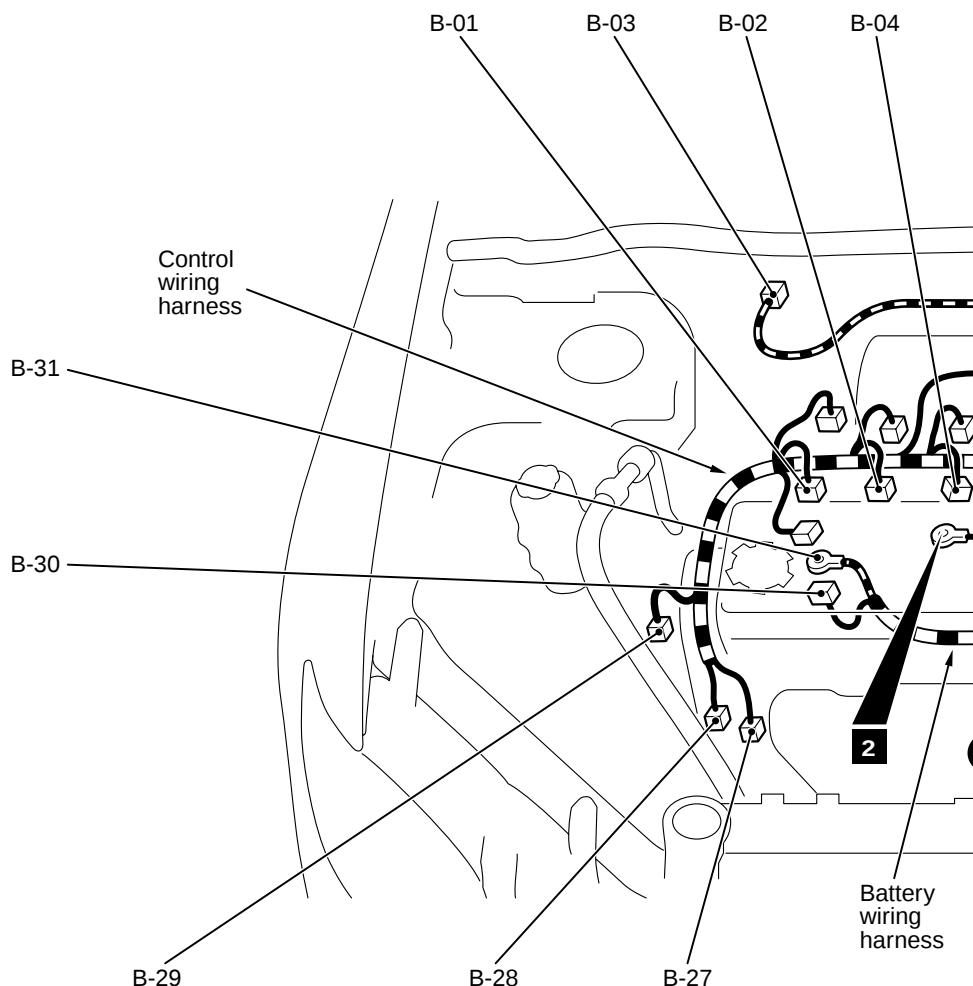

AC307812AB

B-01 (2-GR) Injector 1
 B-02 (2-GR) Injector 2
 B-03 (28-GR) ABS-ECU
 B-04 (2-GR) Injector 3
 B-05 (2-GR) Injector 4
 B-06 (4-B) Throttle position sensor

B-07 (5-GR) Windshield wiper motor
 B-08 (7-B) Air flow sensor
 B-09 (2-GR) Brake fluid level switch
 B-11X (1) Engine speed detection connector
 B-17X (4) Engine control relay
 B-18X (4) A/C compressor relay

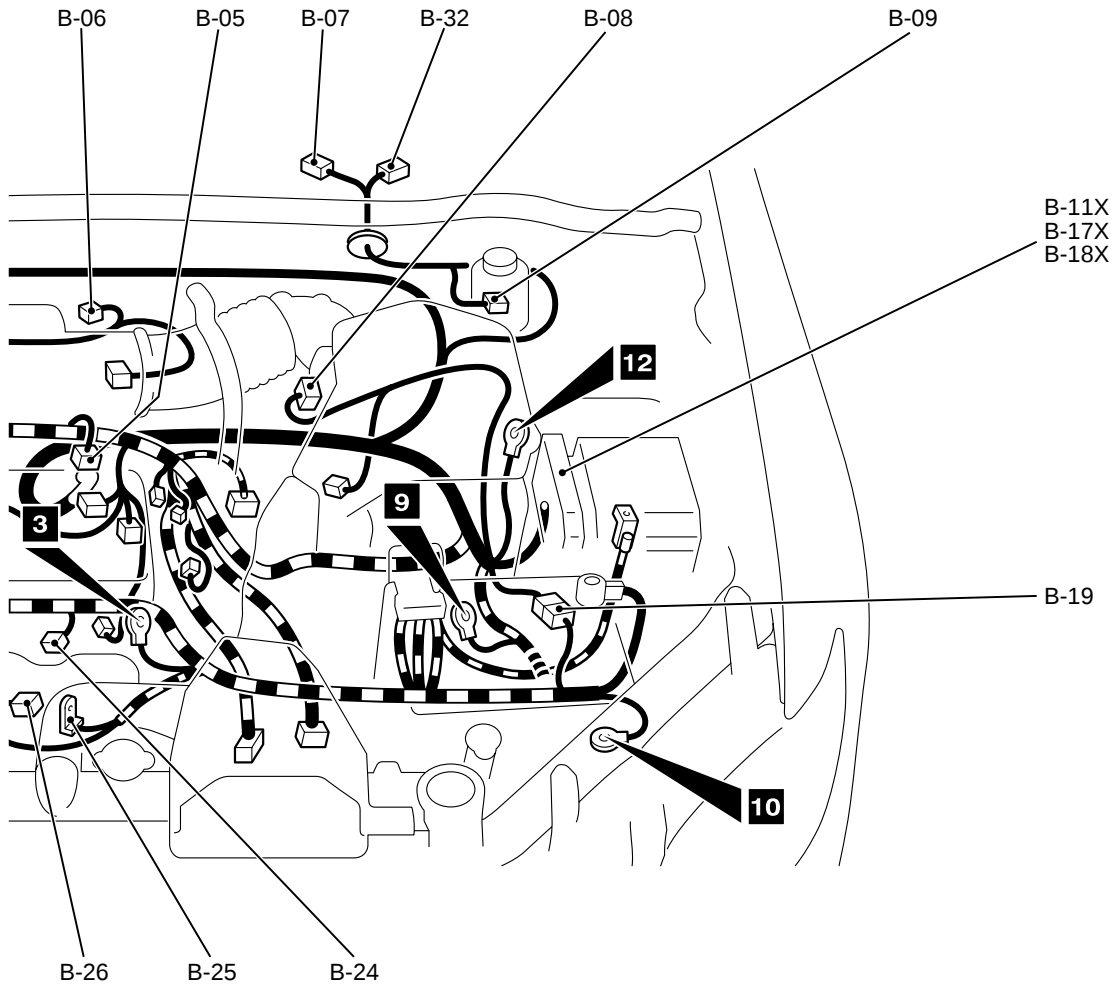


AC307667AB

B-19 (6-B) Control wiring harness and battery
wiring harness combination
B-24 (1-B) Oil pressure switch
B-25 (1) Starter
B-26 (1-B) Starter
B-27 (1-B) A/C compressor assembly

B-28 (1-B) Power steering fluid pressure switch
B-29 (3-B) Crank angle sensor
B-30 (4-GR) Alternator
B-31 (1) Alternator
B-32 (2-B) Wiper deicer


ENGINE AND TRANSMISSION <4G63> (CONTINUED)

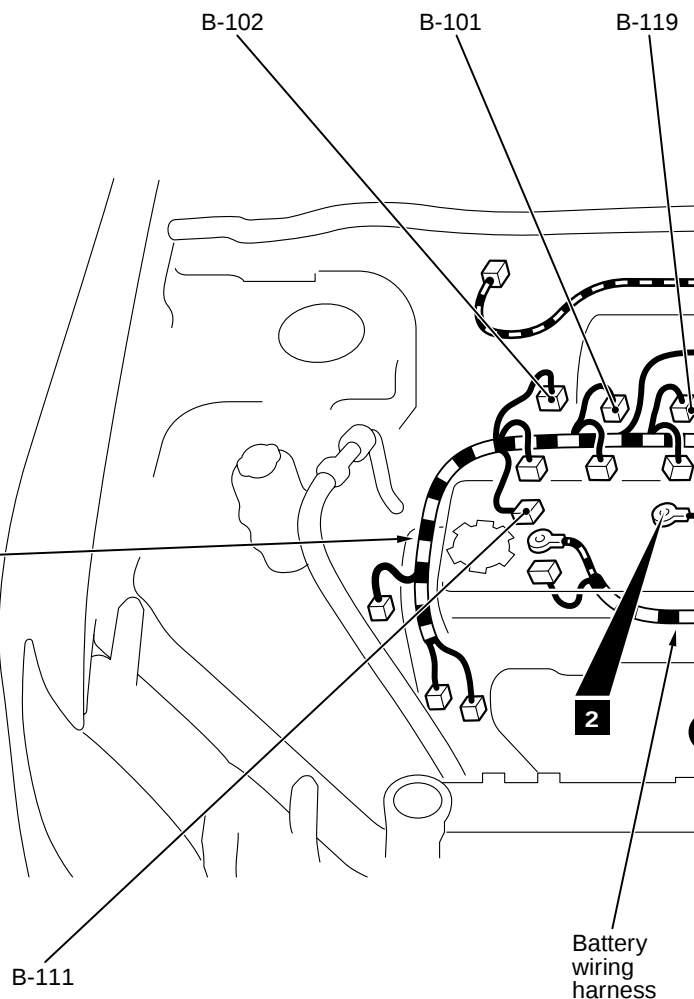Connector
symbol**B** -101
thru
-121Connector colour
codeB : Black
BR : Brown
G : Green
GR : Gray
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : YellowControl
wiring
harness

AC307812AC

B-101 (2-B) Purge control solenoid valve
 B-102 (2-GR) Detonation sensor
 B-106 (3-B) Camshaft position sensor
 B-107 (1-B) Capacitor

B-108 (2-B) Engine coolant temperature sensor
 B-109 (1-B) Engine coolant temperature gauge unit
 B-110 (3-GR) Ignition coil 1

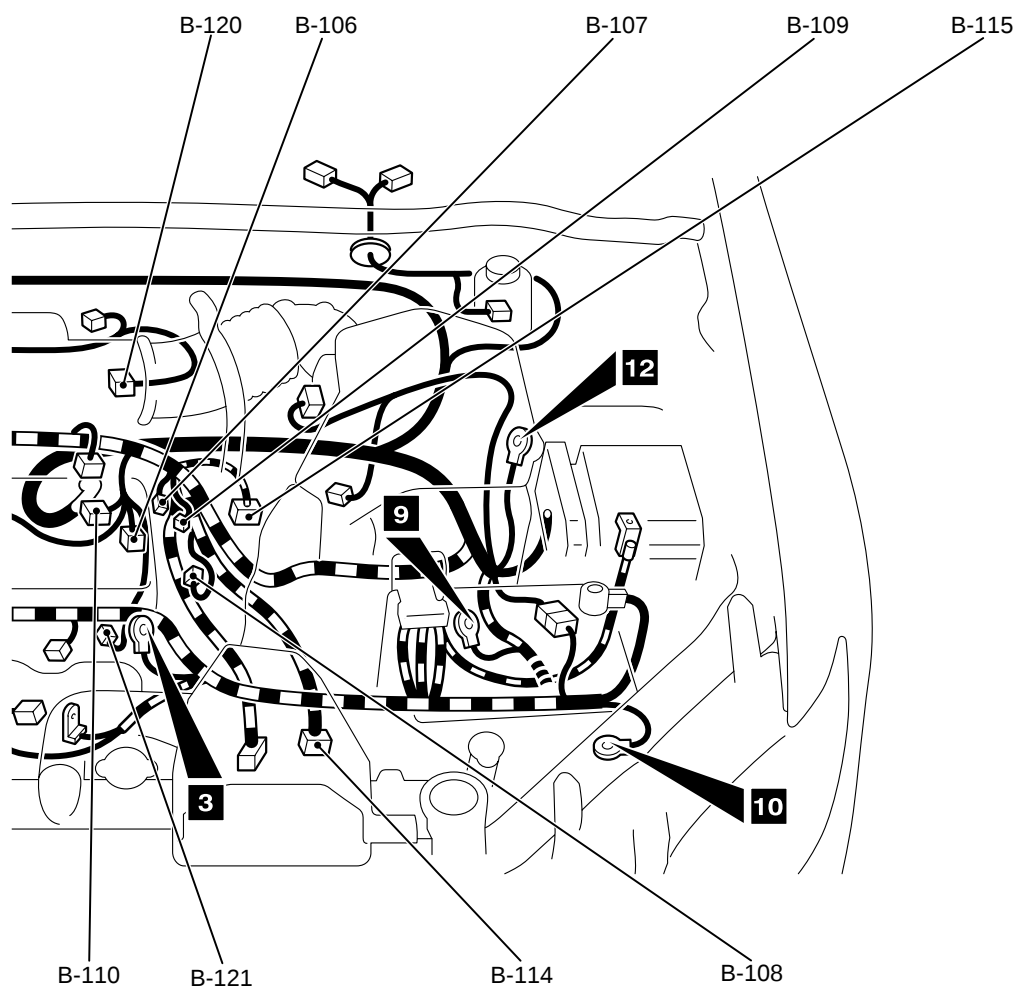

AC307667AC

B-111 (3-GR) Ignition coil 2
B-114 (2-B) Back-up lamp switch
B-115 (3-B) Vehicle speed sensor

B-119 (2-BR) EGR control solenoid valve
B-120 (6-B) Idle speed control servo
B-121 (4-B) Oxygen sensor (Front)


ENGINE AND TRANSMISSION

M3010000400438

4G69 <L.H. drive vehicles>

Connector
symbol**B**-01
thru
-39Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Gray
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

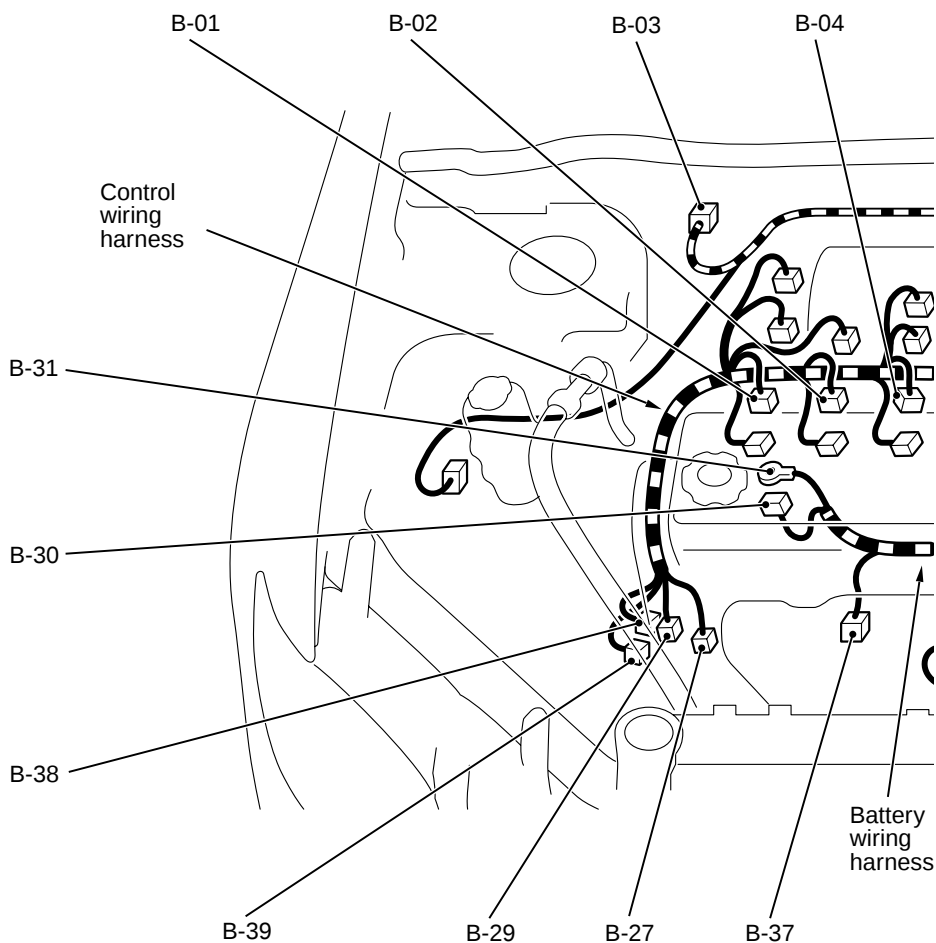

AC307669AB

B-01	(2-GR)	Injector 1
B-02	(2-GR)	Injector 2
B-03	(28-GR)	ABS-ECU
B-04	(2-GR)	Injector 3
B-05	(2-GR)	Injector 4
B-06	(4-B)	Throttle position sensor
B-07	(5-GR)	Windshield wiper motor
B-08	(7-B)	Air flow sensor


B-09	(2-GR)	Brake fluid level switch
B-11X	(1)	Engine speed detection connector
B-14X	(4)	Throttle valve control servo relay
B-16X	(4)	A/T control relay
B-17X	(4)	Engine control relay
B-18X	(4)	A/C compressor relay
B-19	(6-B)	Control wiring harness and battery wiring harness combination

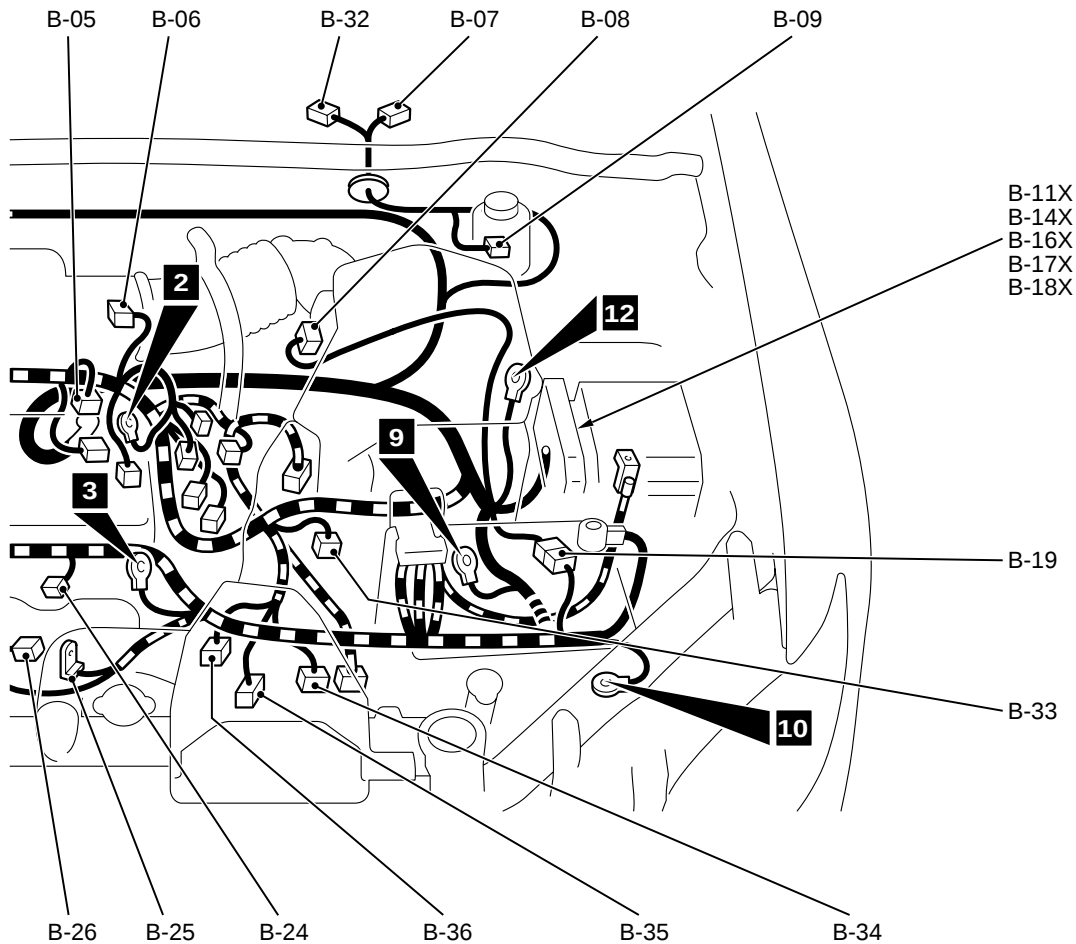

AC307670AB

B-24	(1-B)	Oil pressure switch	B-33	(3-GR)	Output shaft speed sensor
B-25	(1)	Starter	B-34	(10-GR)	A/T control solenoid valve assembly
B-26	(1-B)	Starter	B-35	(10-B)	Inhibitor switch
B-27	(1-B)	A/C compressor assembly	B-36	(3-B)	Input shaft speed sensor
B-29	(3-GR)	Crank angle sensor	B-37	(1-B)	Power steering fluid pressure switch
B-30	(4-GR)	Alternator	B-38	(4-B)	No.1, 4 cylinder oxygen sensor (Rear)
B-31	(1)	Alternator	B-39	(4-GR)	No.1, 4 cylinder oxygen sensor (Front)
B-32	(2-B)	Wiper deicer			


ENGINE AND TRANSMISSION <4G69 (L.H. drive vehicles)> (CONTINUED)

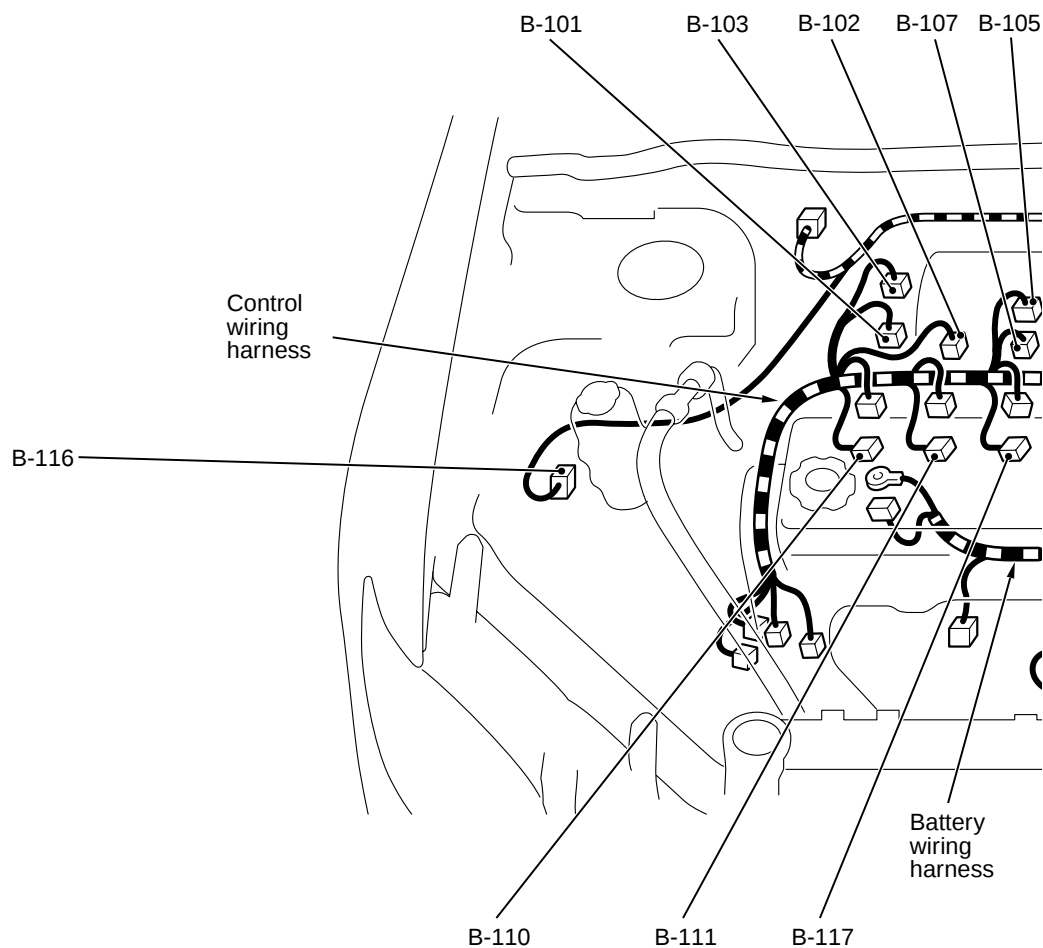Connector
symbol**B**-101
thru
-118Connector colour
codeB : Black
BR : Brown
G : Green
GR : Gray
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC307669AC

B-101 (2-B) Purge control solenoid valve
 B-102 (2-GR) Detonation sensor
 B-103 (3-B) Manifold absolute pressure sensor
 B-104 (2-B) Oil control valve
 B-105 (6-GR) EGR valve

B-106 (3-B) Camshaft position sensor
 B-107 (1-B) Capacitor
 B-108 (2-B) Engine coolant temperature sensor
 B-109 (1-B) Engine coolant temperature gauge unit

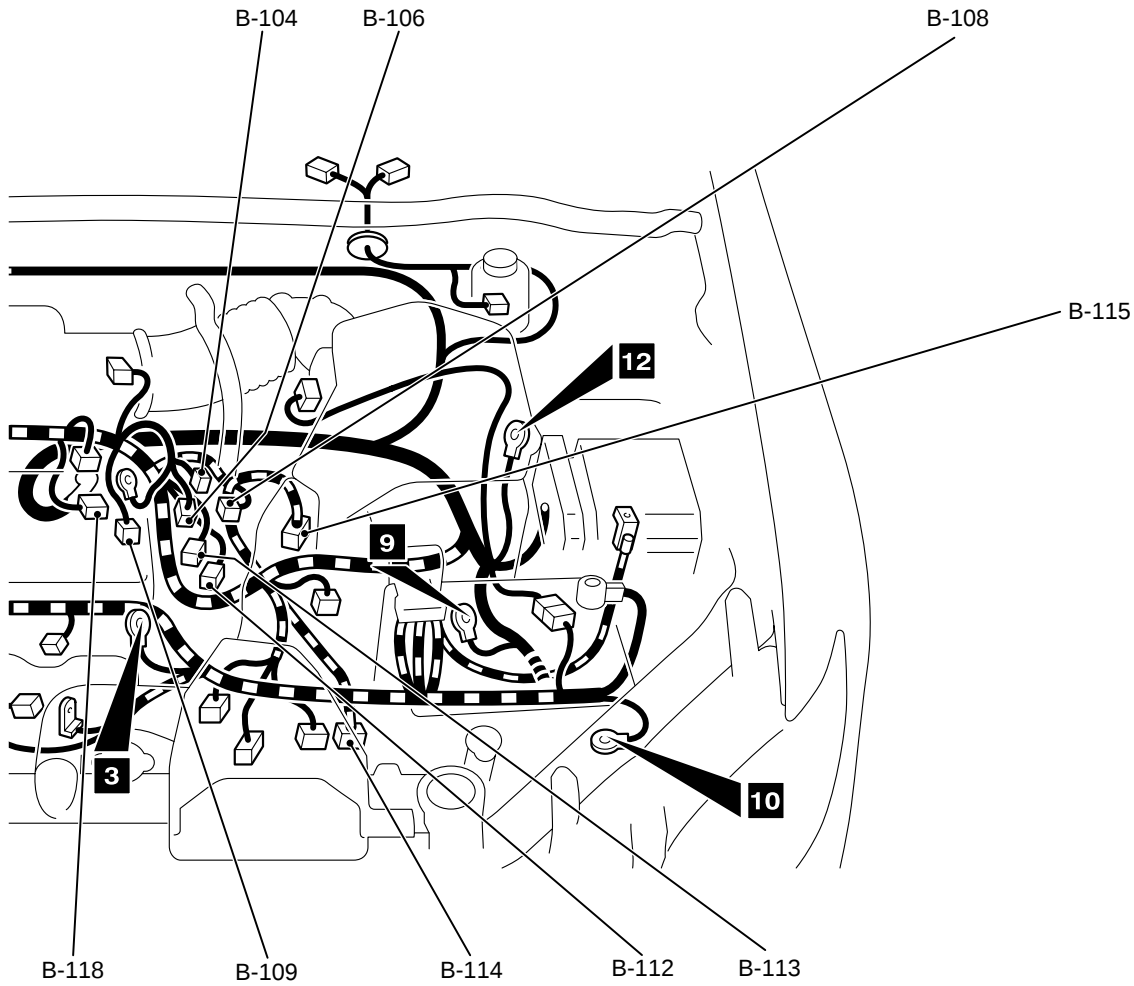

AC307670AC

B-110 (3-GR) Ignition coil 1
 B-111 (3-GR) Ignition coil 2
 B-112 (4-GR) No.2, 3 cylinder oxygen sensor (Front)
 B-113 (4-B) No.2, 3 cylinder oxygen sensor (Rear)
 B-114 (2-B) Back-up lamp switch <M/T>

B-115 (3-B) Vehicle speed sensor <M/T>
 B-116 (8-GR) Accelerator pedal position sensor
 B-117 (3-GR) Ignition coil 3
 B-118 (3-GR) Ignition coil 4


ENGINE AND TRANSMISSION

M3010000400449

4G69 <R.H. drive vehicles>

Connector
symbol**B**-01
thru
-39Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Gray
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

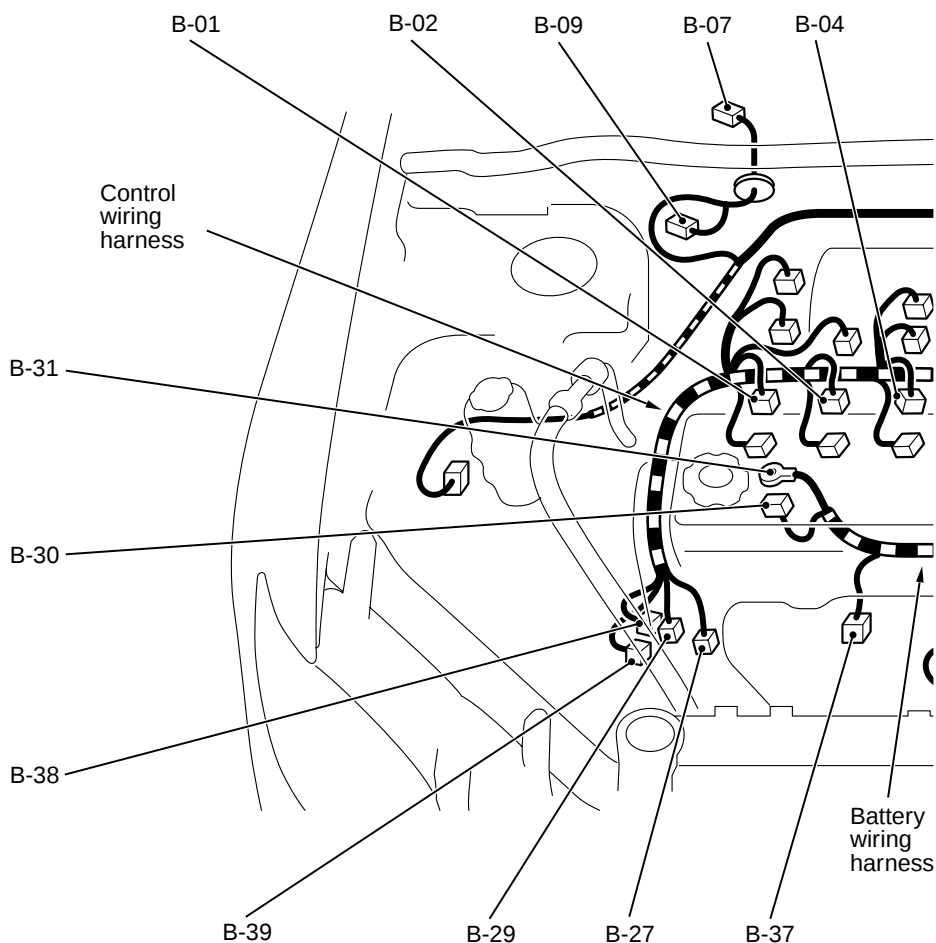

AC307674AB

B-01	(2-GR)	Injector 1
B-02	(2-GR)	Injector 2
B-03	(28-GR)	ABS-ECU
B-04	(2-GR)	Injector 3
B-05	(2-GR)	Injector 4
B-06	(4-B)	Throttle position sensor
B-07	(5-GR)	Windshield wiper motor
B-08	(7-B)	Air flow sensor

B-09	(2-GR)	Brake fluid level switch
B-11X	(1)	Engine speed detection connector
B-14X	(4)	Throttle valve control servo relay
B-16X	(4)	A/T control relay
B-17X	(4)	Engine control relay
B-18X	(4)	A/C compressor relay
B-19	(6-B)	Control wiring harness and battery wiring harness combination

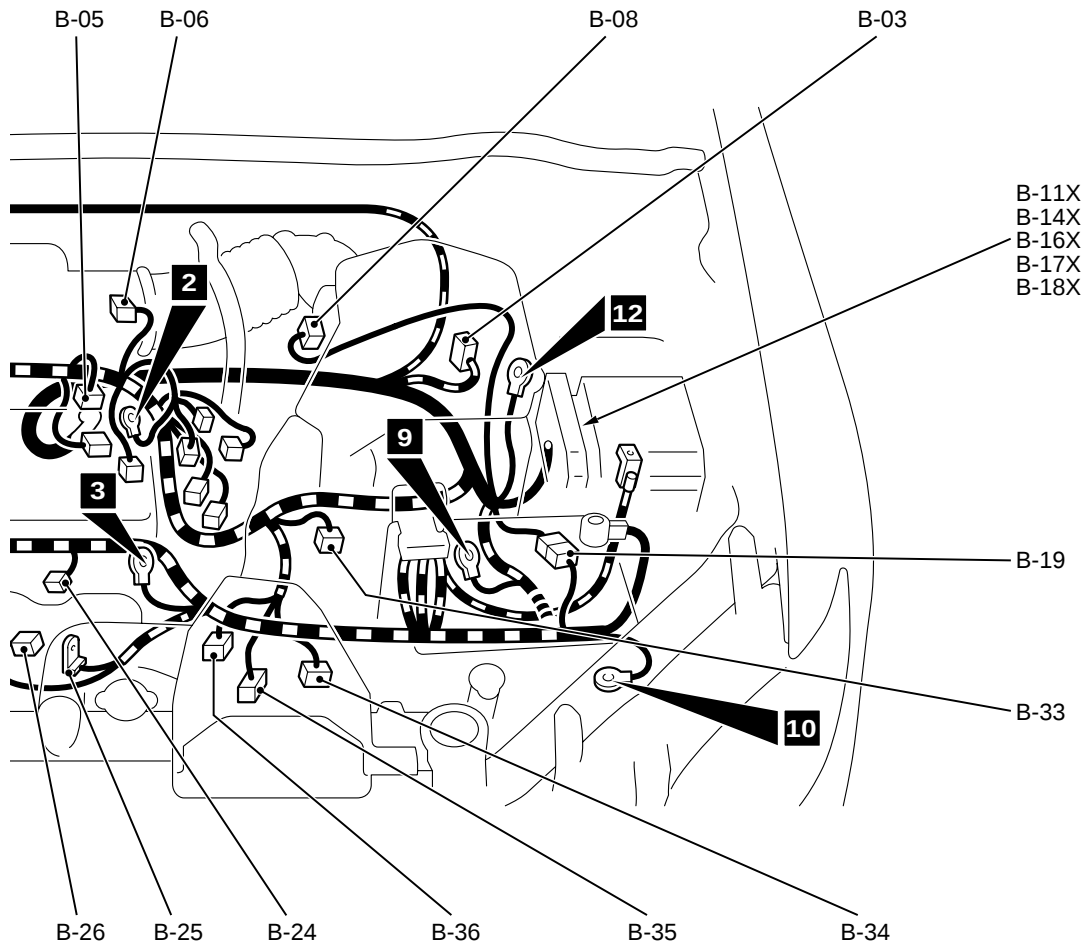


AC307675AB

B-24	(1-B)	Oil pressure switch	B-33	(3-GR)	Output shaft speed sensor
B-25	(1)	Starter	B-34	(10-GR)	A/T control solenoid valve assembly
B-26	(1-B)	Starter	B-35	(10-B)	Inhibitor switch
B-27	(1-B)	A/C compressor assembly	B-36	(3-B)	Input shaft speed sensor
B-29	(3-GR)	Crank angle sensor	B-37	(1-B)	Power steering fluid pressure switch
B-30	(4-GR)	Alternator	B-38	(4-B)	No.1, 4 cylinder oxygen sensor (Rear)
B-31	(1)	Alternator	B-39	(4-GR)	No.1, 4 cylinder oxygen sensor (Front)

ENGINE AND TRANSMISSION <4G69 (R.H. drive vehicles)> (CONTINUED)

Connector
symbol**B**-101
thru
-118Connector colour
code


B : Black
 BR : Brown
 G : Green
 GR : Gray
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

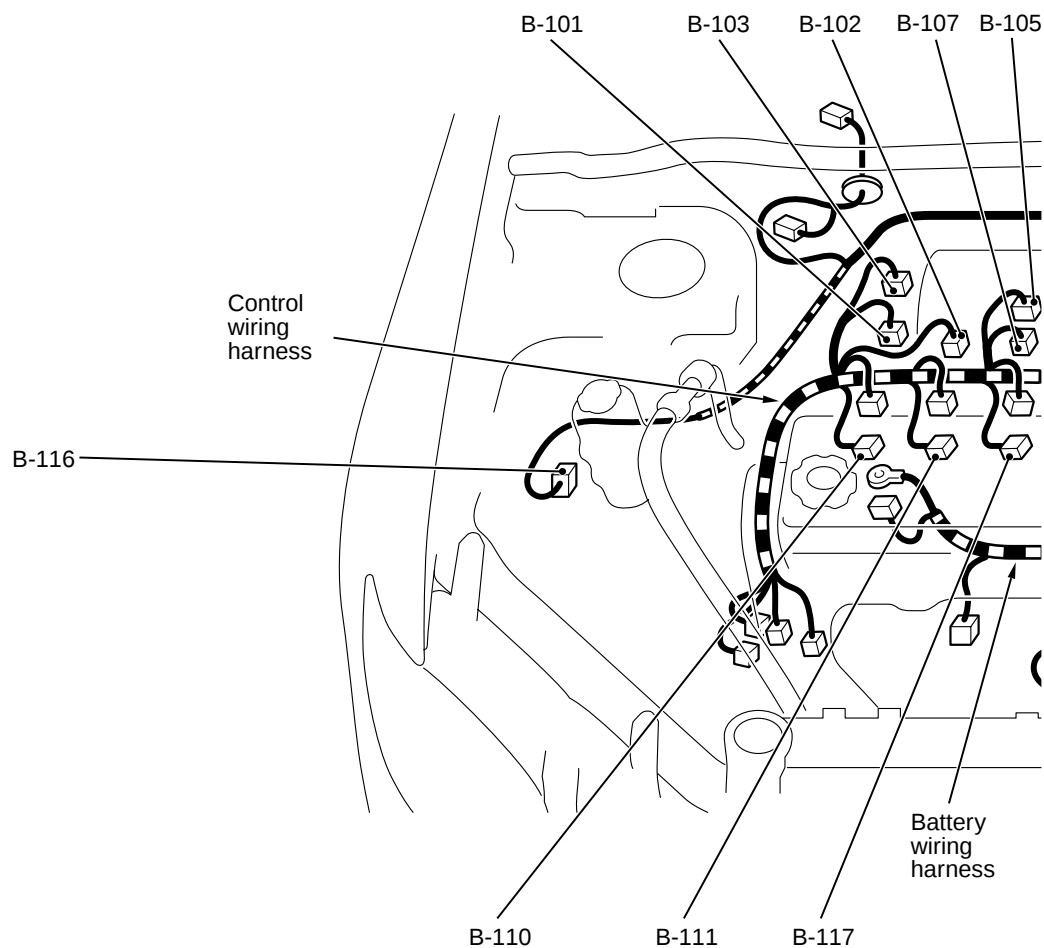

AC307674AC

B-101 (2-B) Purge control solenoid valve
 B-102 (2-GR) Detonation sensor
 B-103 (3-B) Manifold absolute pressure sensor
 B-104 (2-B) Oil control valve

B-105 (6-GR) EGR valve
 B-106 (3-B) Camshaft position sensor
 B-107 (1-B) Capacitor
 B-108 (2-B) Engine coolant temperature sensor

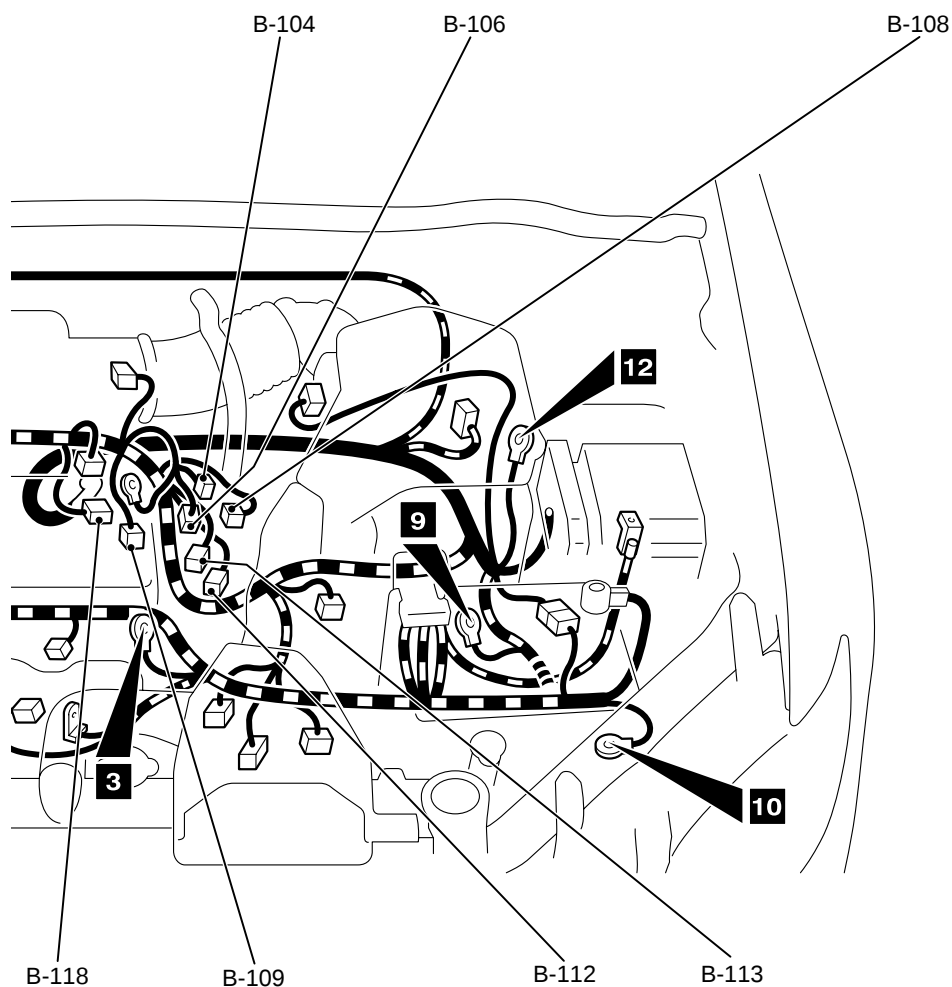

AC307675AC

B-109 (1-B) Engine coolant temperature gauge unit
B-110 (3-GR) Ignition coil 1
B-111 (3-GR) Ignition coil 2
B-112 (4-GR) No.2, 3 cylinder oxygen sensor (Front)


B-113 (4-B) No.2, 3 cylinder oxygen sensor (Rear)
B-116 (8-GR) Accelerator pedal position sensor
B-117 (3-GR) Ignition coil 3
B-118 (3-GR) Ignition coil 4

DASH PANEL

DASH PANEL


L.H. drive vehicles

M3010000600205

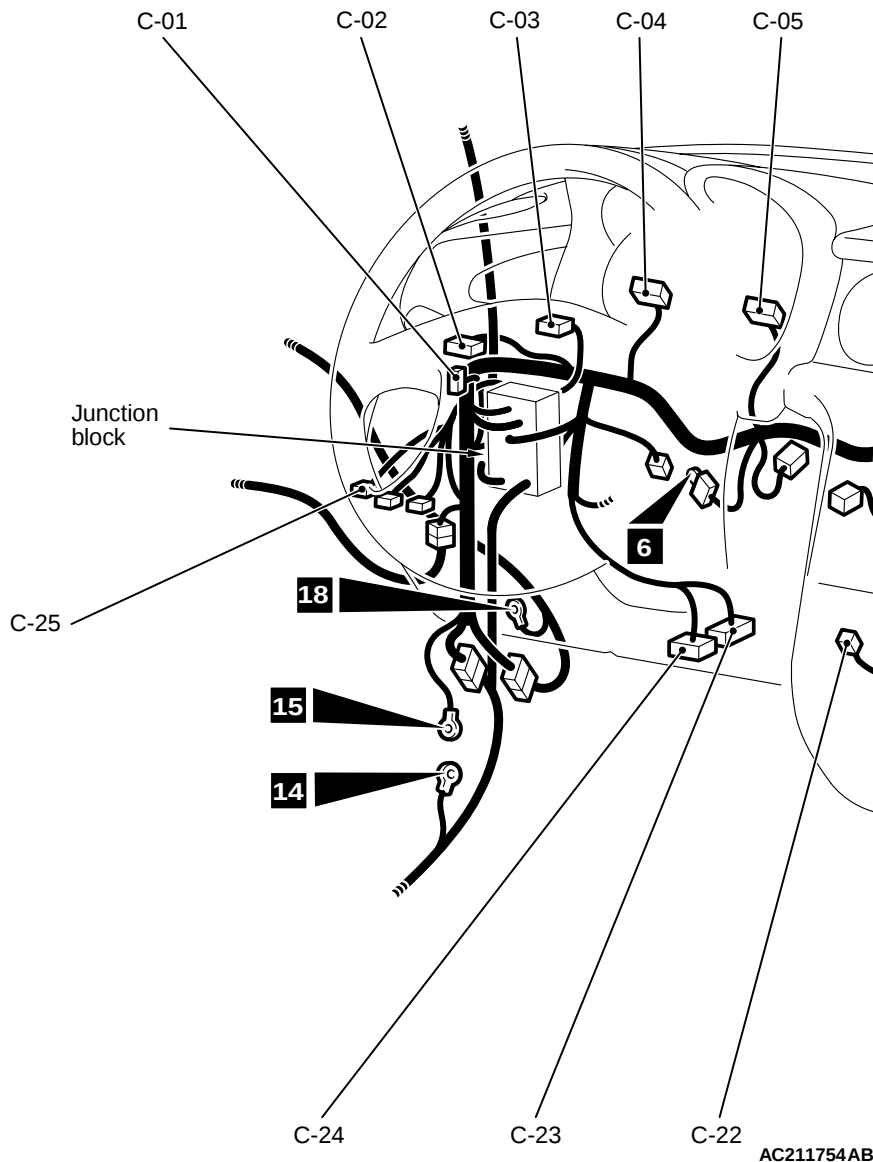Connector
symbolC -01
thru
-36Connector colour
codeB : Black
BR : Brown
G : Green
GR : Gray
L : Blue
NONE : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

C-01	(33)	J/C (4)
C-02	(33)	J/C (3)
C-03	(6)	Fog lamp switch or spare connector (for fog lamp switch)
C-04	(22)	Combination meter
C-05	(22-L)	Combination meter
C-06	(16-B)	A/C-ECU <Manual A/C>
C-07	(4)	Clock
C-08	(6)	Blower switch <Manual A/C>

C-09	(2-R)	Air bag module (squib) (passenger's side)
C-10	(7)	Instrument panel wiring harness and A/C wiring harness combination <Manual A/C>
C-11	(4)	Resistor <Manual A/C>
C-12	(2)	Blower motor <Manual A/C>
C-13	(15-L)	Instrument panel wiring harness and floor wiring harness (RH) combination

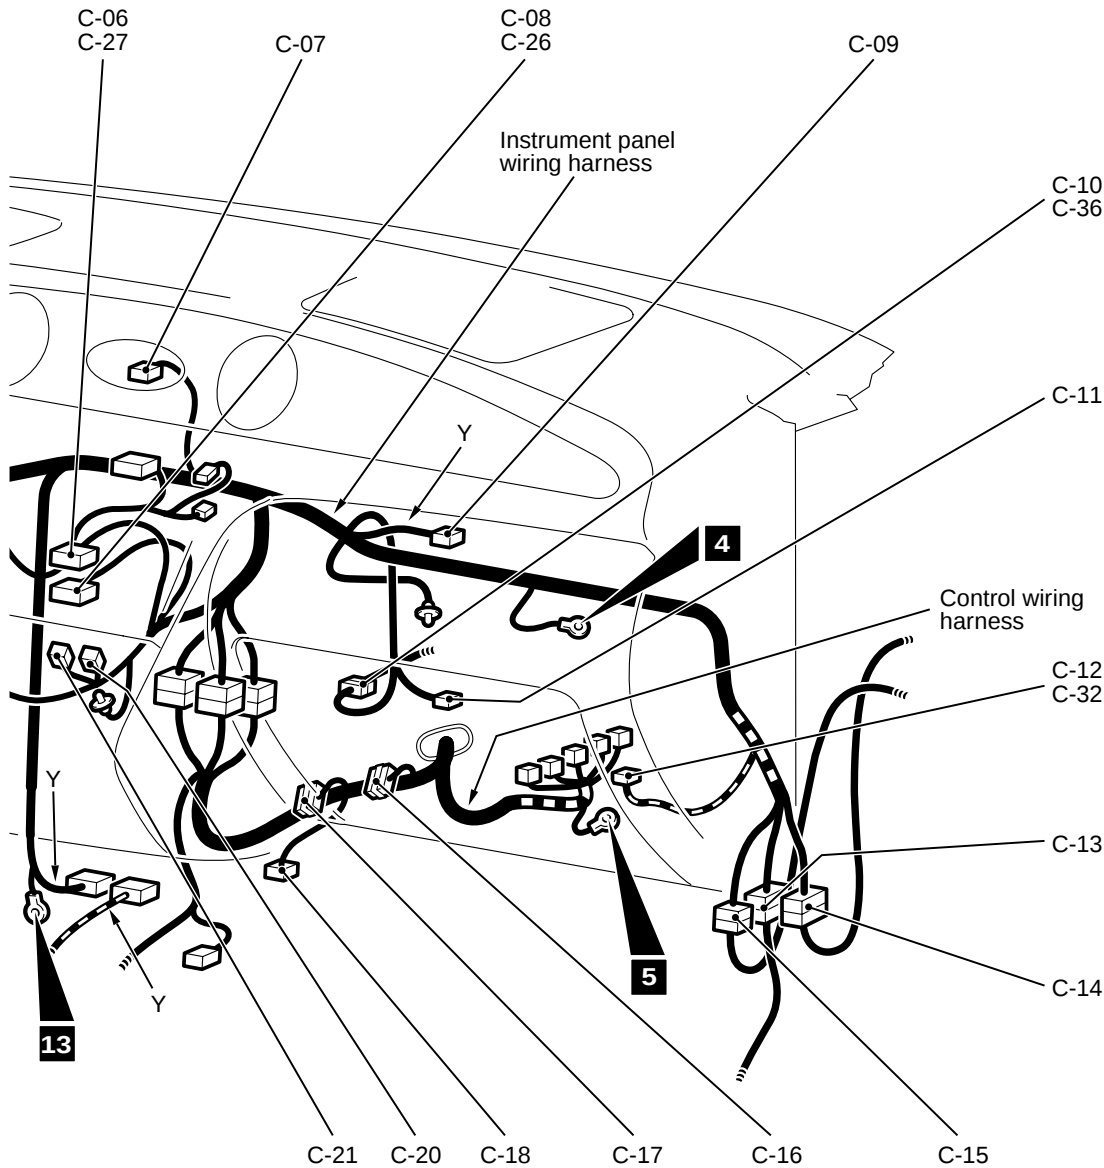


AC307677AB

C-14	(10)	Instrument panel wiring harness and front wiring harness (RH) combination	C-23	(13)	Diagnosis connector
C-15	(19-GR)	Instrument panel wiring harness and front door wiring harness (RH) combination	C-24	(16-B)	Diagnosis connector
C-16	(22-L)	J/C (1)	C-25	(11)	Remote controlled mirror switch
C-17	(13-GR)	J/C (2)	C-26	(16-B)	A/C-ECU <Automatic A/C>
C-18	(4)	Oxygen sensor (Rear) <4G63>	C-27	(20-B)	A/C-ECU <Automatic A/C>
C-20	(1)	Cigarette lighter	C-32	(6)	Blower linear controller <Automatic A/C>
C-21	(1-B)	Cigarette lighter	C-36	(13)	Instrument panel wiring harness and A/C wiring harness combination <Automatic A/C>
C-22	(4)	Hazard warning switch			

DASH PANEL <L.H. drive vehicles> (CONTINUED)

Connector
symbol**C** -101
thru
-143


Connector colour
code
 B : Black
 BR : Brown
 G : Green
 GR : Gray
 L : Blue
 NONE : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

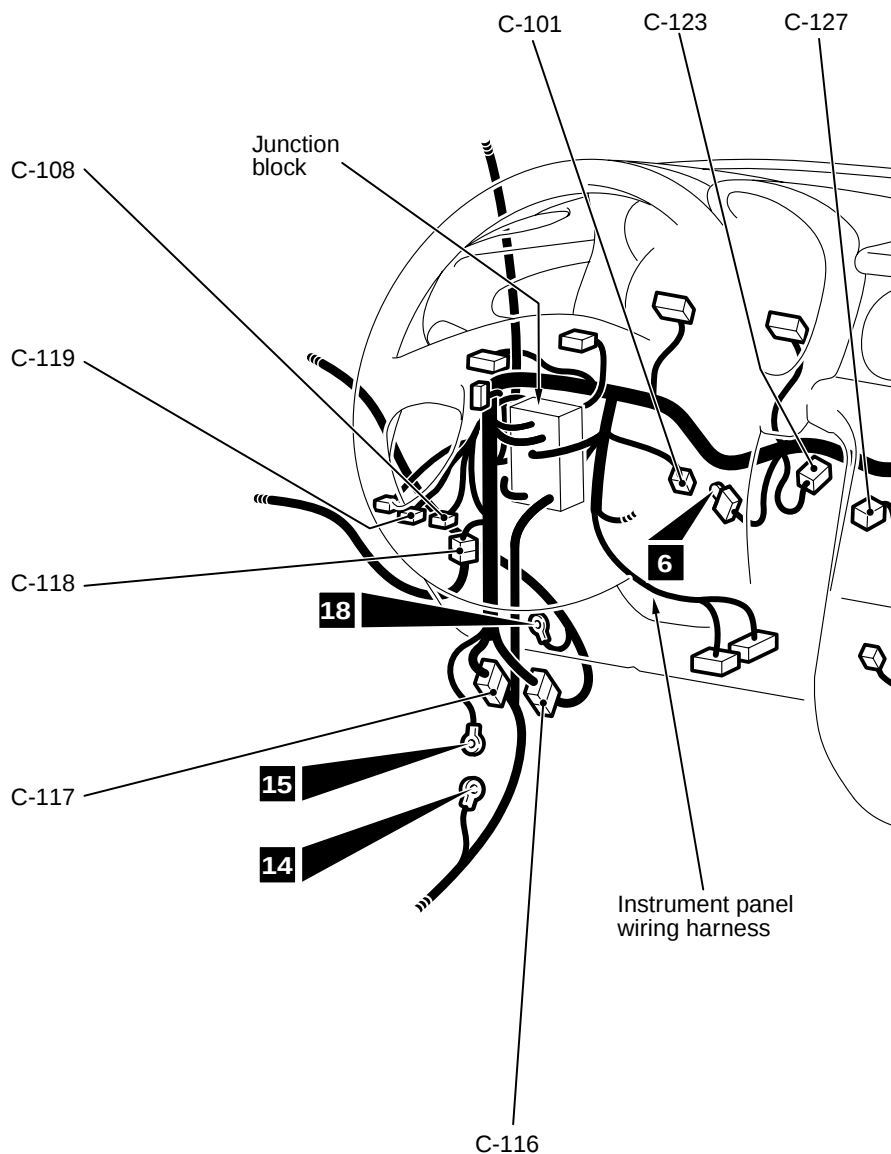

AC211754 AC

C-101 (4)	Stop lamp switch
C-102 (14)	Spare connector (for audio)
C-103 (2-B)	Cigarette lighter illumination lamp
C-104 (16-B)	Instrument panel wiring harness and control wiring harness combination
C-105 (22)	Instrument panel wiring harness and control wiring harness combination
C-106 (19-GR)	Instrument panel wiring harness and control wiring harness combination
C-107 (2-B)	Glove box lamp

C-108 (6-GR)	Headlamp leveling switch
C-114 (22-Y)	SRS-ECU
C-115 (20-Y)	SRS-ECU
C-116 (43)	Instrument panel wiring harness and front wiring harness (LH) combination
C-117 (38)	Instrument panel wiring harness and floor wiring harness (LH) combination
C-118 (32)	Instrument panel wiring harness and front door wiring harness (LH) combination



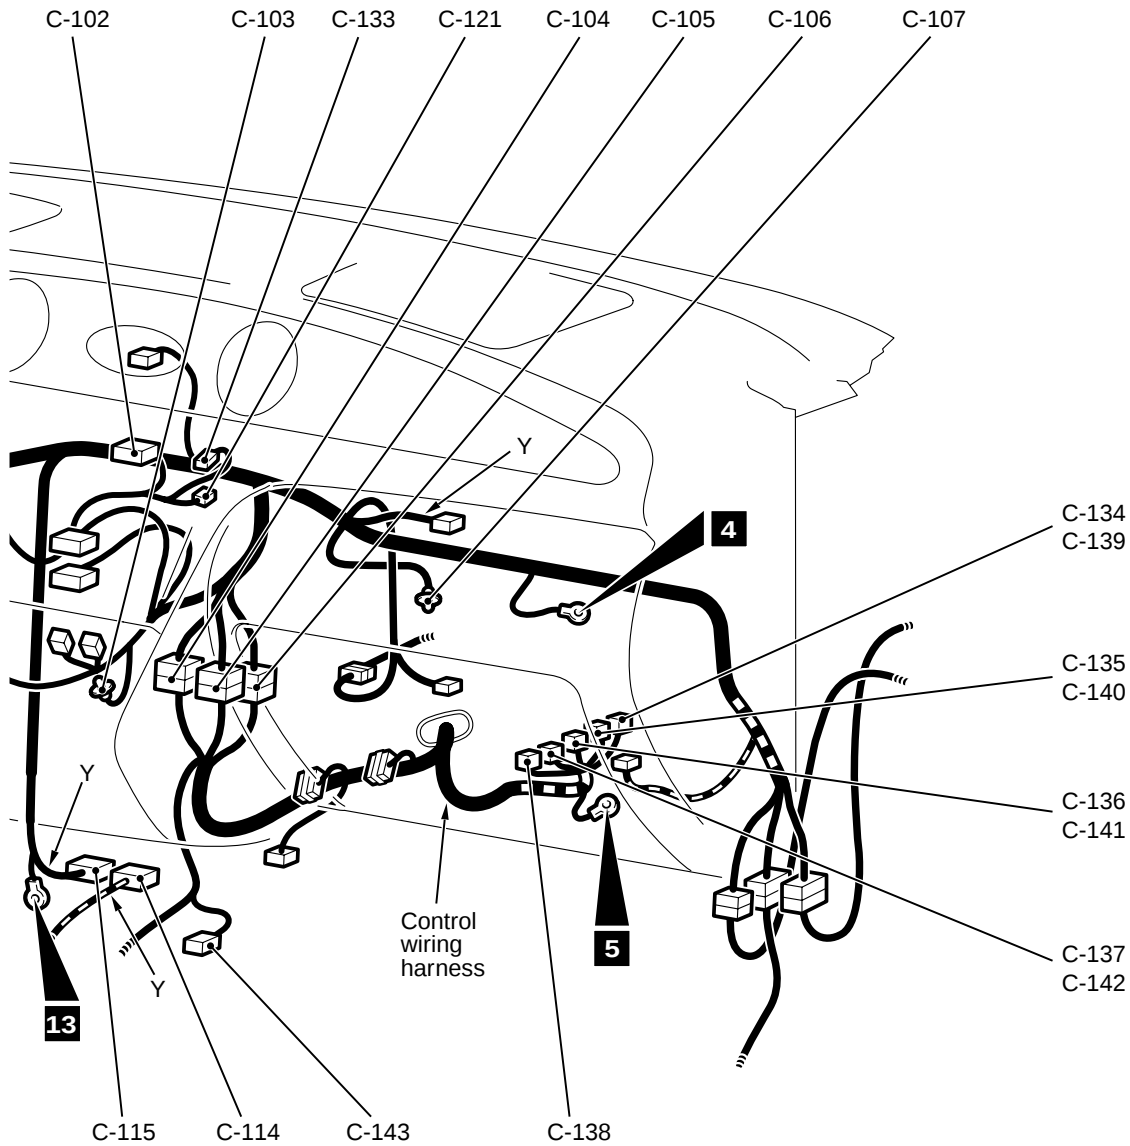


AC307677AC

C-119 (6-L)	Rheostat
C-121 (1)	Antenna amplifire
C-123 (2)	Photo sensor <Automatic A/C>
C-127 (2)	Interior temperature sensor <Automatic A/C>
C-133 (1-B)	Spare connector (for audio)
C-134 (26)	Engine-ECU <4G63>
C-135 (16)	Engine-ECU <4G63>
C-136 (12)	Engine-ECU <4G63>
C-137 (22)	Engine-ECU <4G63>
C-138 (26-GR)	Engine-ECU <4G69-M/T> Engine-A/T-ECU <4G69-A/T>

C-139 (27-GR)	Engine-ECU <4G69-M/T> Engine-A/T-ECU <4G69-A/T>
C-140 (28-GR)	Engine-ECU <4G69-M/T> Engine-A/T-ECU <4G69-A/T>
C-141 (29-GR)	Engine-ECU <4G69-M/T> Engine-A/T-ECU <4G69-A/T>
C-142 (30-GR)	Engine-ECU <4G69-M/T> Engine-A/T-ECU <4G69-A/T>
C-143 (6)	Shift switch assembly

DASH PANEL <L.H. drive vehicles> (CONTINUED)

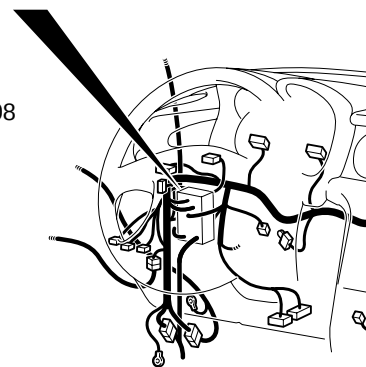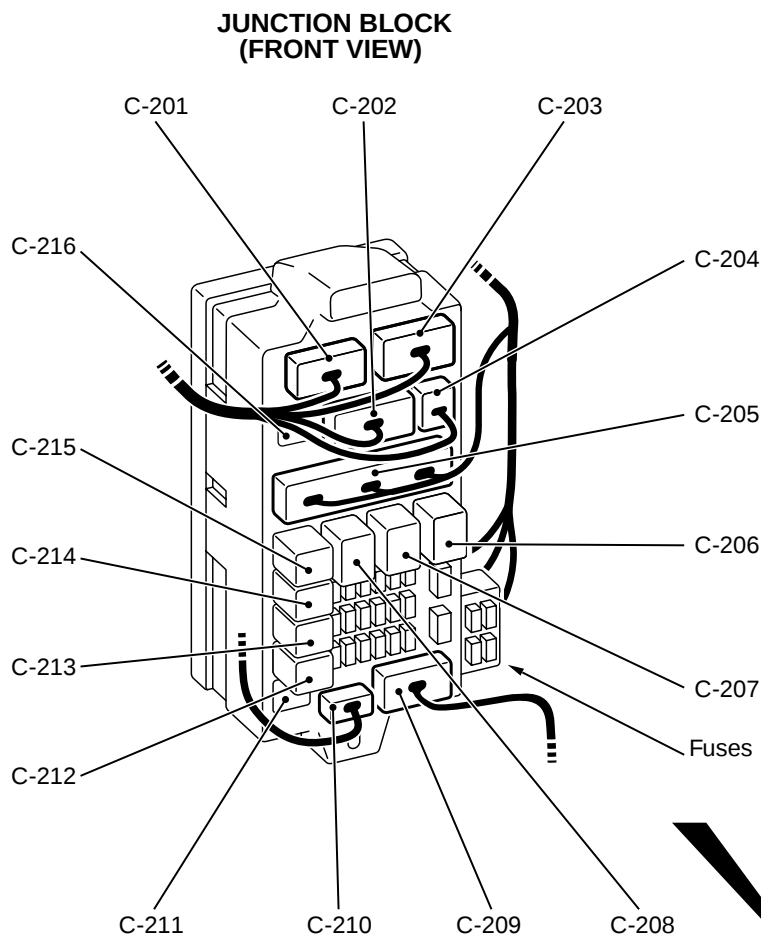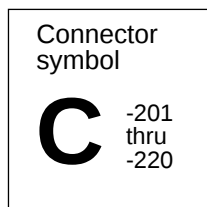


AC207947 AB


C-201 (13)	Instrument panel wiring harness and J/B combination
C-202 (14)	Instrument panel wiring harness and J/B combination
C-203 (6)	Instrument panel wiring harness and J/B combination
C-204 (1-B)	Instrument panel wiring harness and J/B combination

C-205 (28)	Instrument panel wiring harness and J/B combination
C-206 (5)	Defogger relay
C-207 (5)	Blower relay
C-208 (5)	Power window relay
C-209 (15)	Floor wiring harness (LH) and J/B combination

JUNCTION BLOCK
(REAR VIEW)

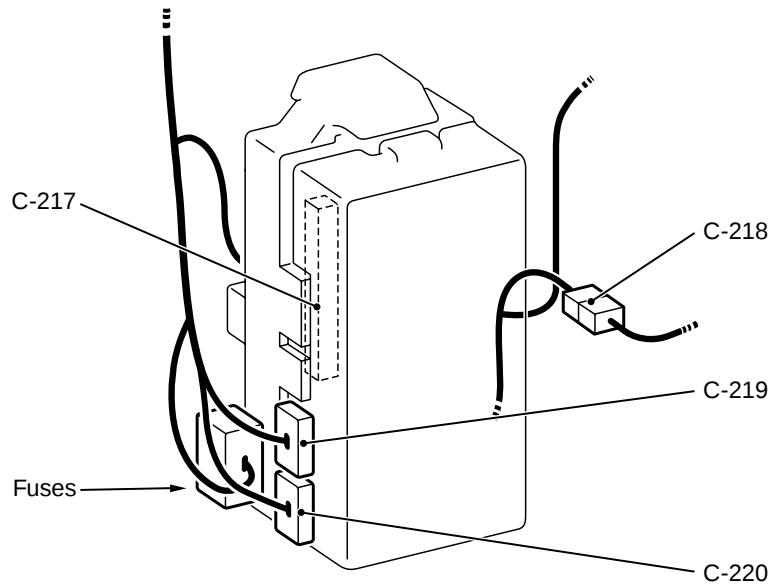

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Gray
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

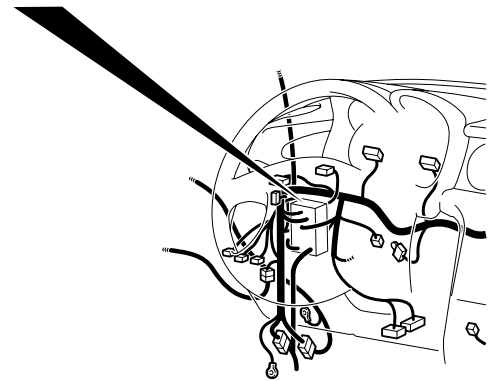


AC207948AB


C-210 (3)	Roof wiring harness and J/B combination
C-211 (4)	No connection
C-212 (4)	Rear fog lamp relay
C-213 (4)	Fuel pump relay (2)
C-214 (4)	Heated seat relay
C-215 (4)	Fuel pump relay (1)

C-216 (2)	No connection
C-217 (20)	ETACS-ECU
C-218 (5)	Instrument panel wiring harness and roof wiring harness combination
C-219 (24-GR)	ETACS-ECU
C-220 (24)	ETACS-ECU

DASH PANEL <L.H. drive vehicles> (CONTINUED)

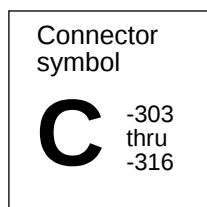

STEERING COLUMN

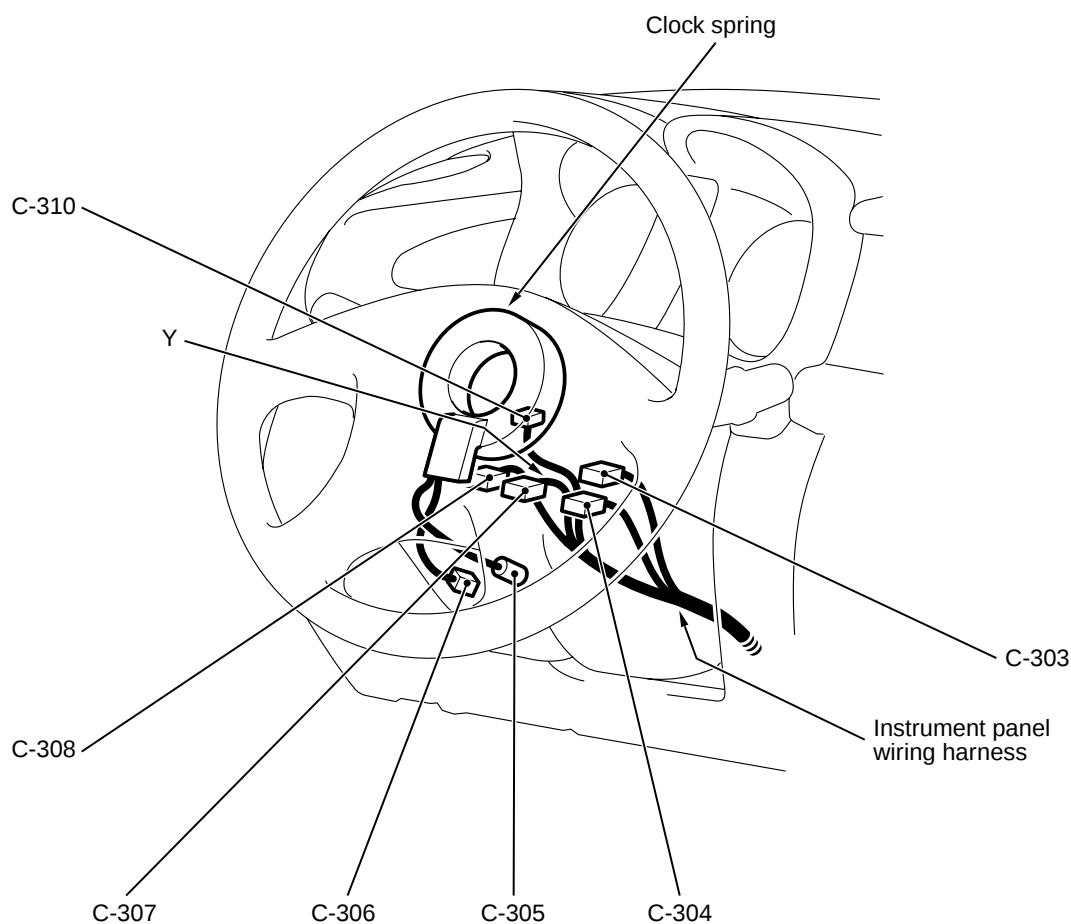


AC211756 AB

C-303 (6)	Ignition switch
C-304 (7)	Key reminder switch
C-305 (1)	Horn switch
C-306 (2)	Air bag module (squib) (driver's side)


C-307 (4-Y)	Clock spring
C-308 (6)	Clock spring
C-310 (10)	Column switch

HEATER UNIT ASSEMBLY

<Manual A/C>

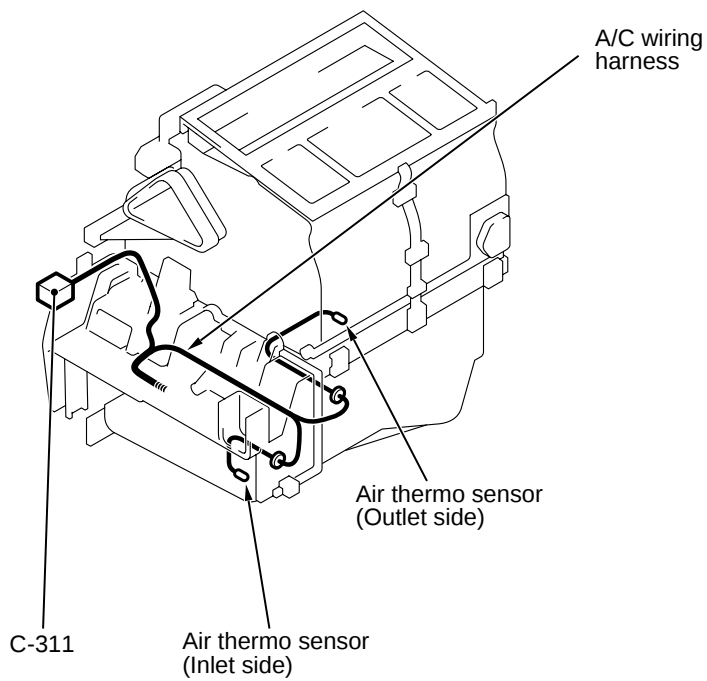

<Automatic A/C>

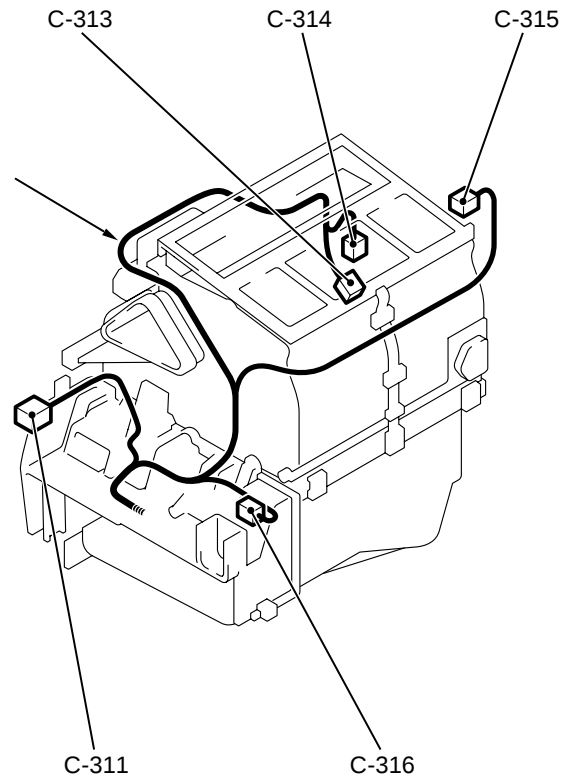

- C-311 (7) Outside/inside air selection damper control motor
- C-313 (6) Air mixing damper control motor and potentiometer <Automatic A/C>
- C-314 (2) Heater water temperature sensor <Automatic A/C>


- C-315 (6) Mode selection damper control motor and potentiometer <Automatic A/C>
- C-316 (2) Air thermo sensor <Automatic A/C>

AC207956AB

DASH PANEL

M3010000600238


R.H. drive vehicles

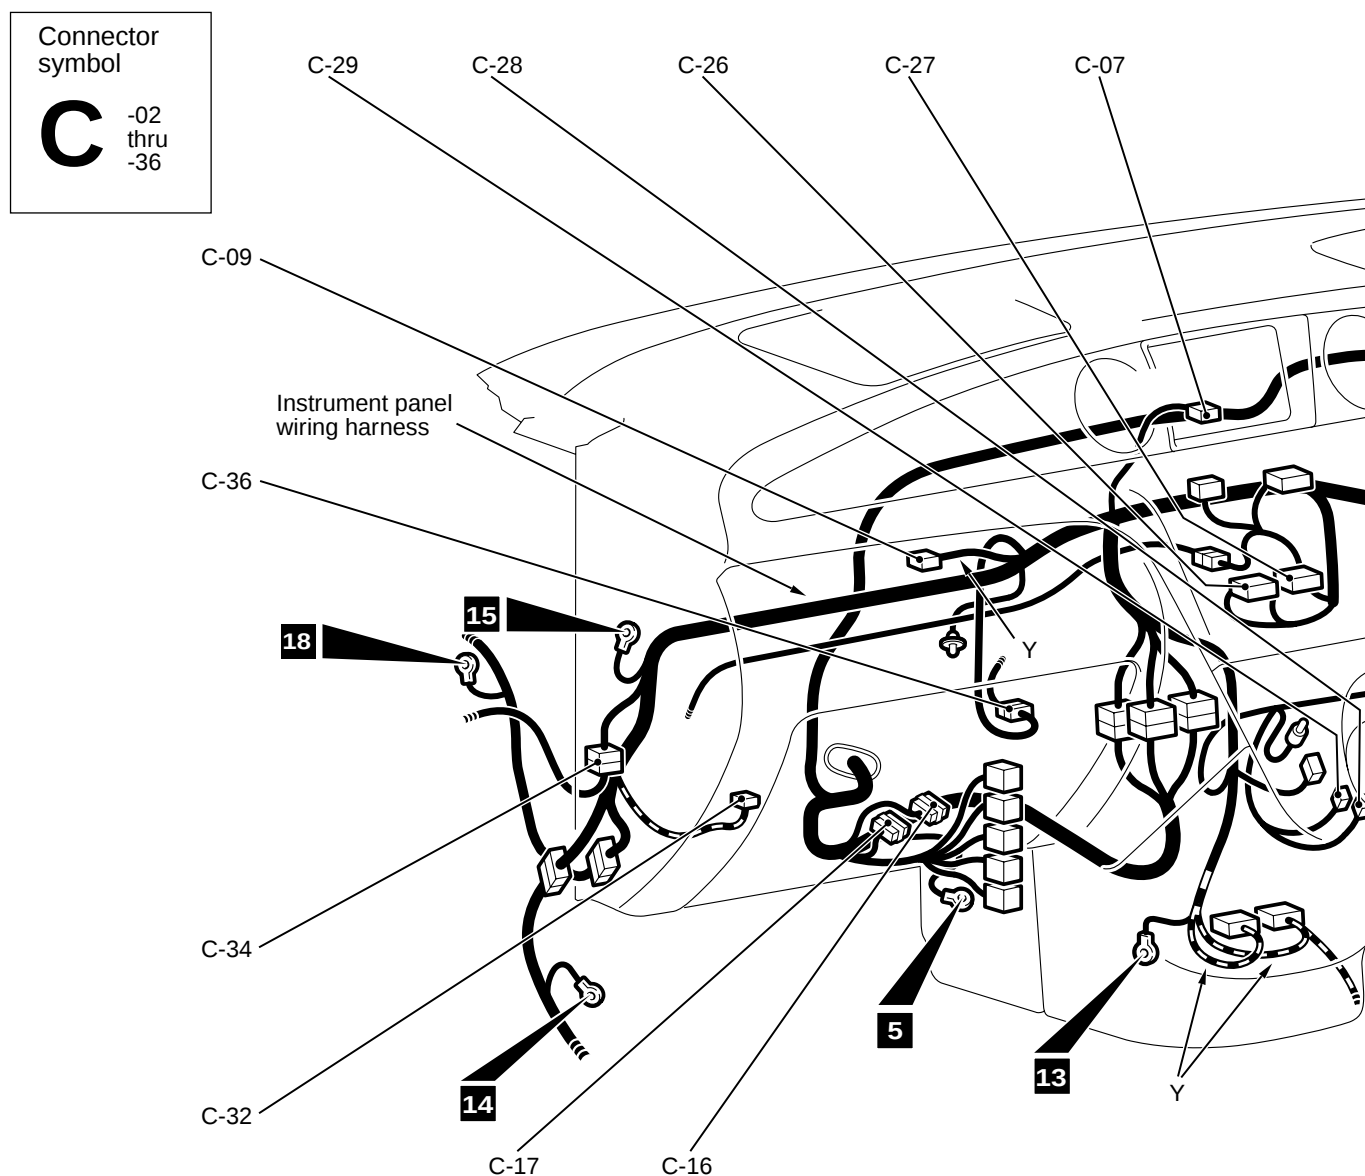

AC307681AB

C-02	(33)	J/C (3)
C-03	(6)	Fog lamp switch or spare connector (for fog lamp switch)
C-04	(22)	Combination meter
C-05	(22-L)	Combination meter
C-07	(4)	Clock
C-09	(2-R)	Air bag module (squib) (passenger's side)
C-13	(15-L)	Instrument panel wiring harness and floor wiring harness (RH) combination

C-14	(10)	Instrument panel wiring harness and front wiring harness (RH) combination
C-15	(16)	Instrument panel wiring harness and front door wiring harness (RH) combination
C-16	(22-L)	J/C (1)
C-17	(13-GR)	J/C (2)
C-22	(4)	Hazard warning switch

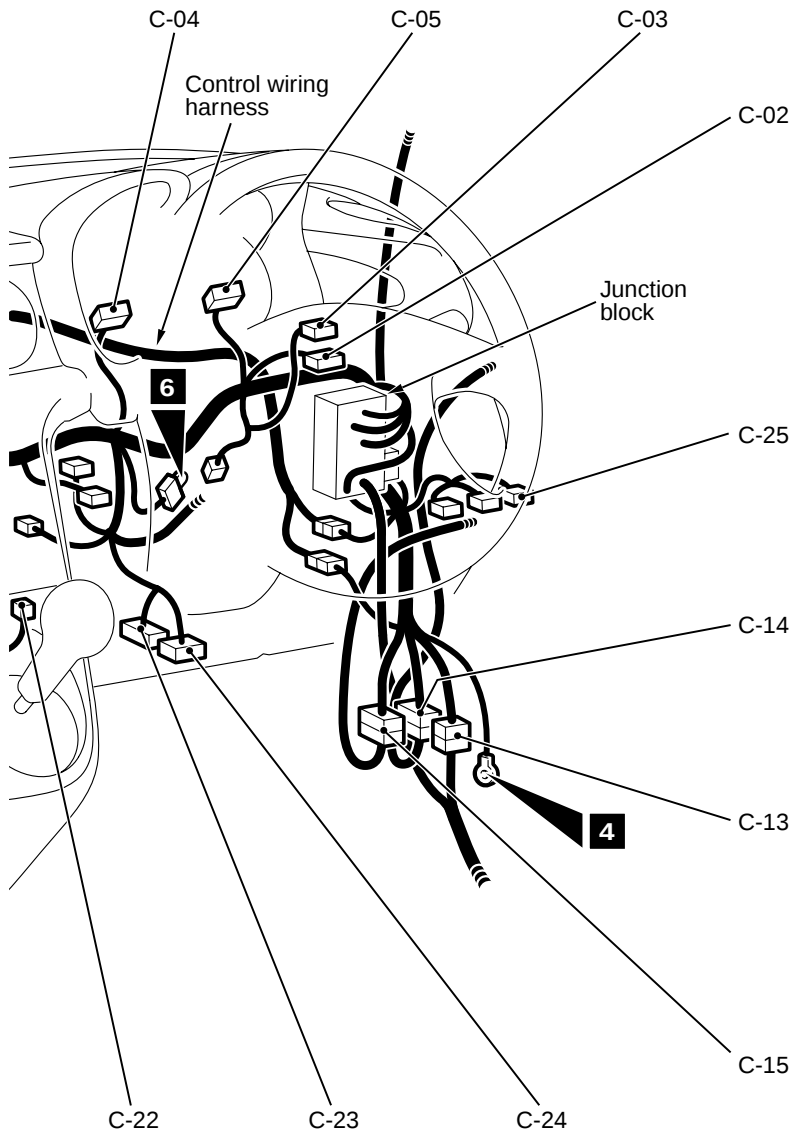


Connector colour
code
B : Black
BR : Brown
G : Green
GR : Gray
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC307682AB


C-23 (13) Diagnosis connector
C-24 (16-B) Diagnosis connector
C-25 (11) Remote controlled mirror switch
C-26 (16-B) A/C-ECU
C-27 (20-B) A/C-ECU
C-28 (1) Accessory socket (2)
C-29 (1-B) Accessory socket (2)

C-32 (6) Blower linear controller
C-34 (19-GR) Instrument panel wiring harness and
front door wiring harness (LH)
combination
C-36 (13) Instrument panel wiring harness and
A/C wiring harness combination

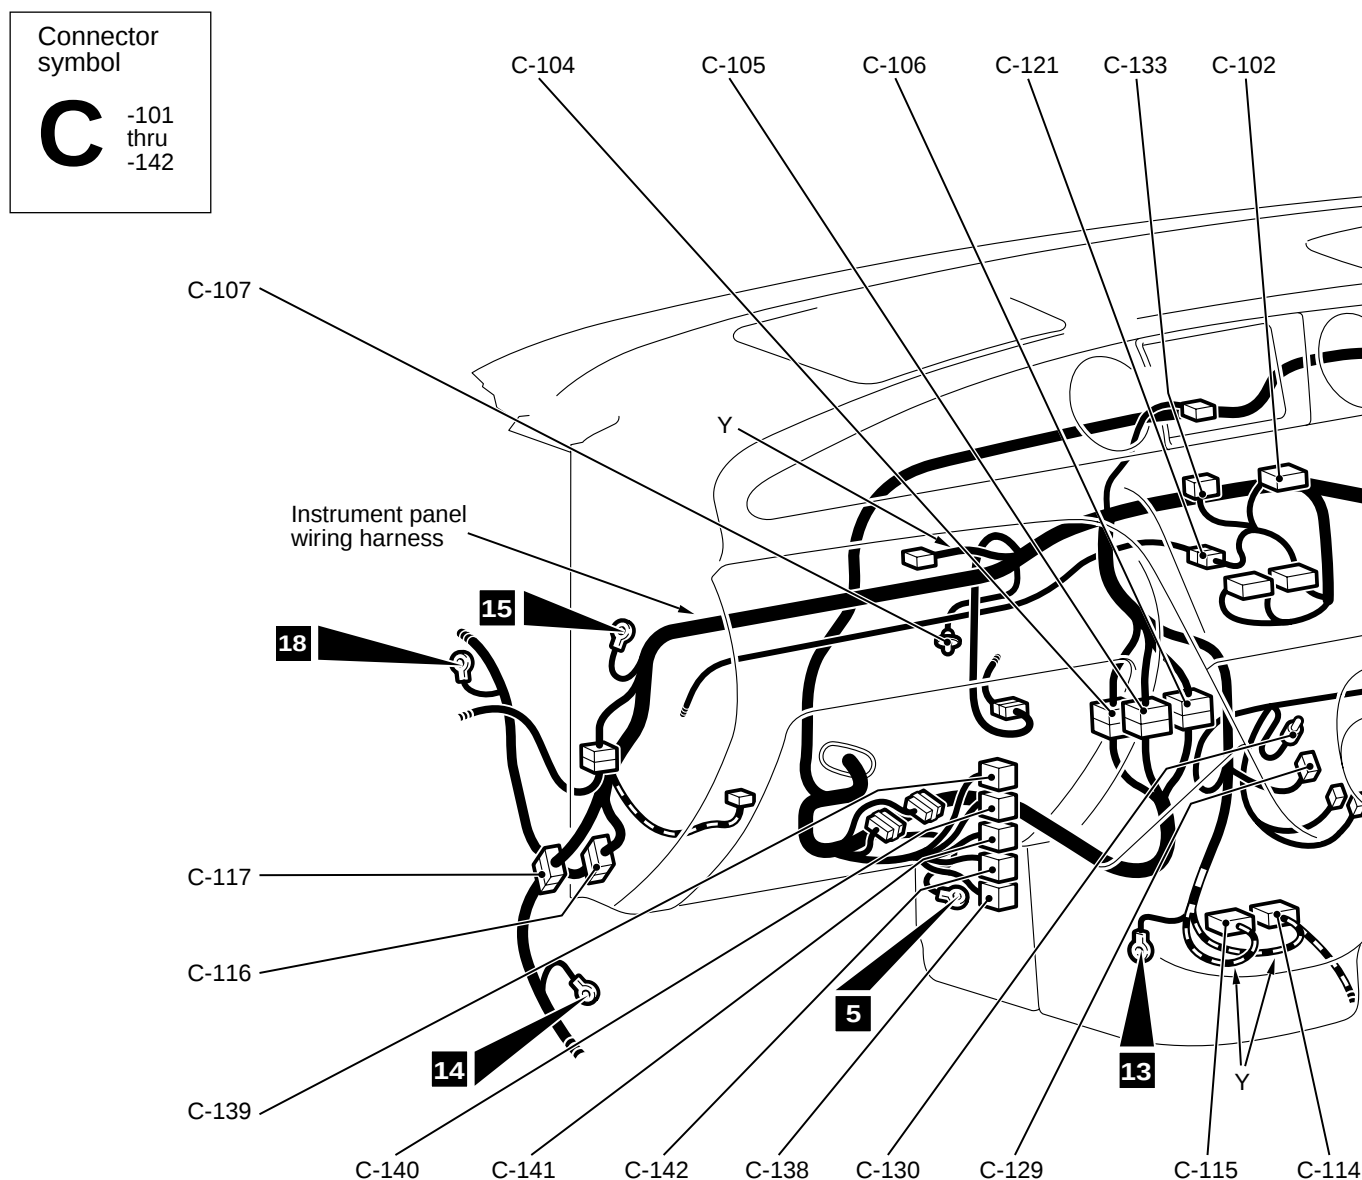DASH PANEL <R.H. drive vehicles> (CONTINUED)

AC307681AC

C-101 (4)	Stop lamp switch	C-108 (6-GR)	Headlamp leveling switch
C-102 (14)	Spare connector (for audio)	C-114 (22-Y)	SRS-ECU
C-104 (16-B)	Instrument panel wiring harness and control wiring harness combination	C-115 (20-Y)	SRS-ECU
C-105 (22)	Instrument panel wiring harness and control wiring harness combination	C-116 (43)	Instrument panel wiring harness and front wiring harness (LH) combination
C-106 (19-GR)	Instrument panel wiring harness and control wiring harness combination	C-117 (38)	Instrument panel wiring harness and floor wiring harness (LH) combination
C-107 (2-B)	Glove box lamp	C-119 (6-L)	Rheostat
		C-121 (1)	Antenna amplifire

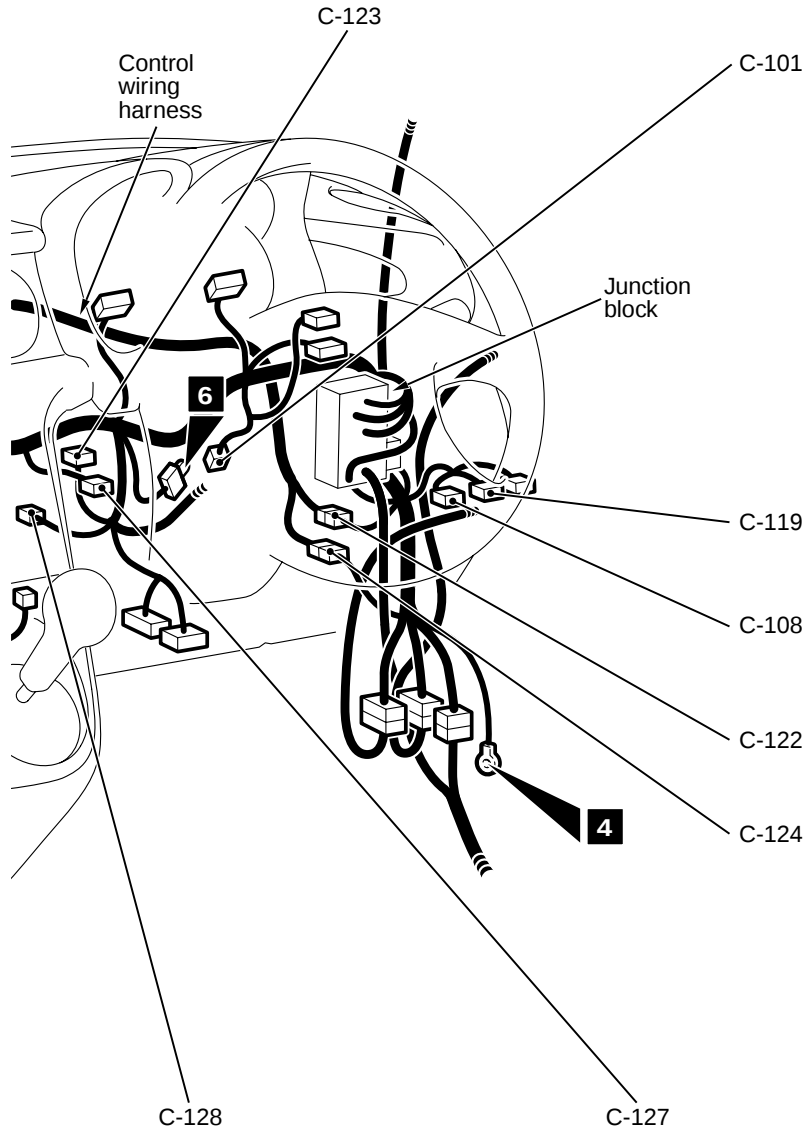



Connector colour
code
B : Black
BR : Brown
G : Green
GR : Gray
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC307682AC

C-122 (2)	Instrument panel wiring harness and control wiring harness combination
C-123 (2)	Photo sensor
C-124 (2)	Instrument panel wiring harness and control wiring harness combination
C-127 (2)	Interior temperature sensor
C-128 (1)	Parking brake switch
C-129 (6)	Shift switch assembly

C-130 (2-B)	Ashtray illumination lamp
C-133 (1-B)	Spare connector (for audio)
C-138 (26-GR)	Engine-A/T-ECU
C-139 (27-GR)	Engine-A/T-ECU
C-140 (28-GR)	Engine-A/T-ECU
C-141 (29-GR)	Engine-A/T-ECU
C-142 (30-GR)	Engine-A/T-ECU

DASH PANEL <R.H. drive vehicles> (CONTINUED)

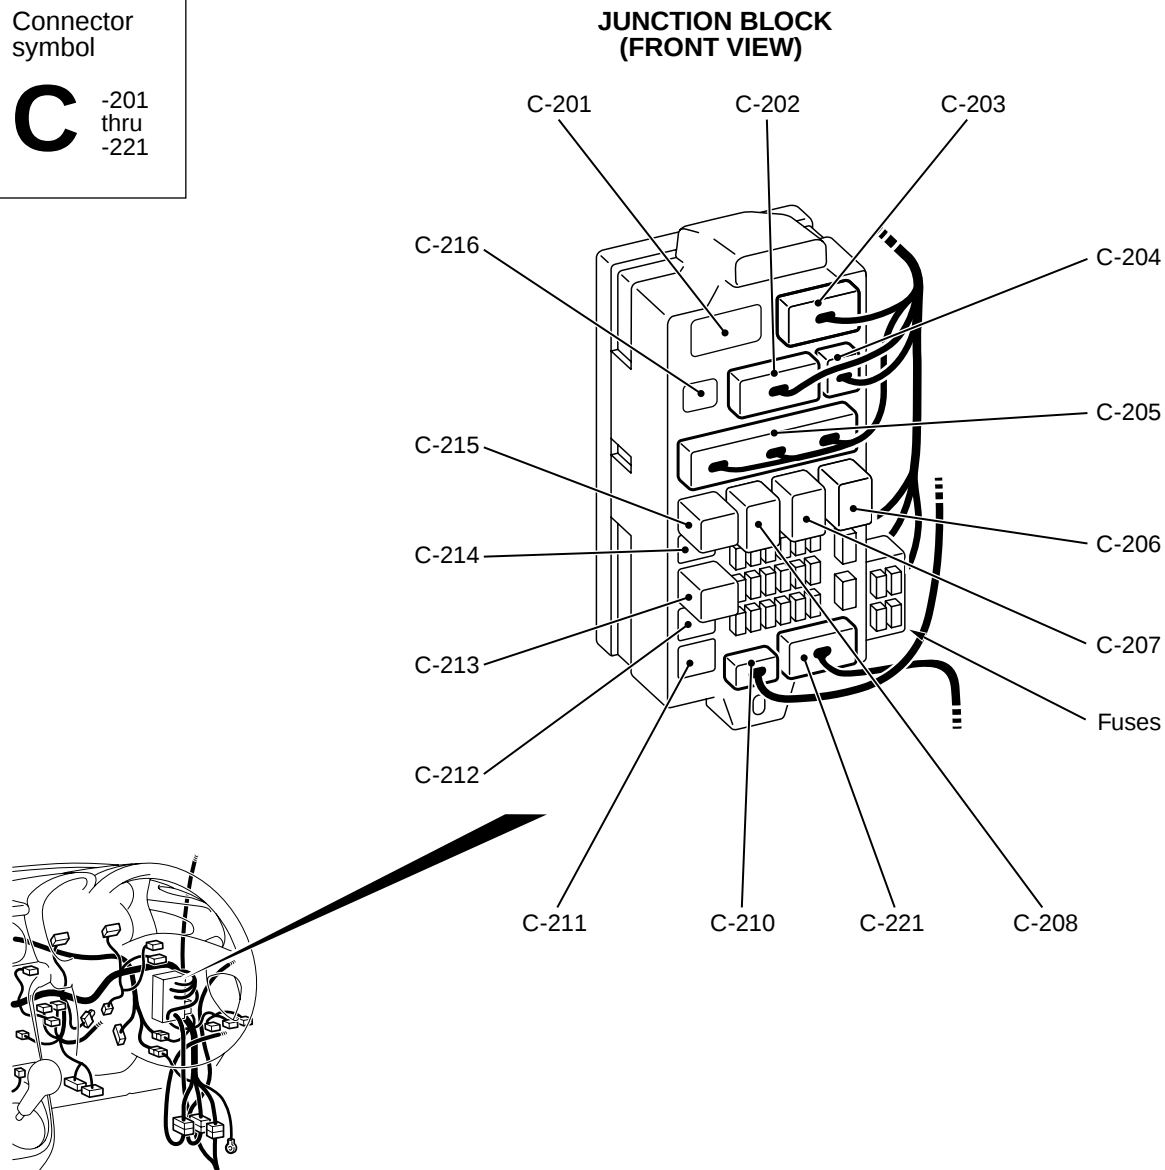
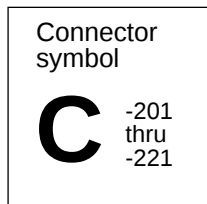


AC207953AB

C-201 (13)	Instrument panel wiring harness and J/B combination
C-202 (14)	Instrument panel wiring harness and J/B combination
C-203 (6)	Instrument panel wiring harness and J/B combination
C-204 (1-B)	Instrument panel wiring harness and J/B combination

C-205 (28)	Instrument panel wiring harness and J/B combination
C-206 (5)	Defogger relay
C-207 (5)	Blower relay
C-208 (5)	Power window relay
C-210 (3)	Roof wiring harness and J/B combination

JUNCTION BLOCK
(REAR VIEW)

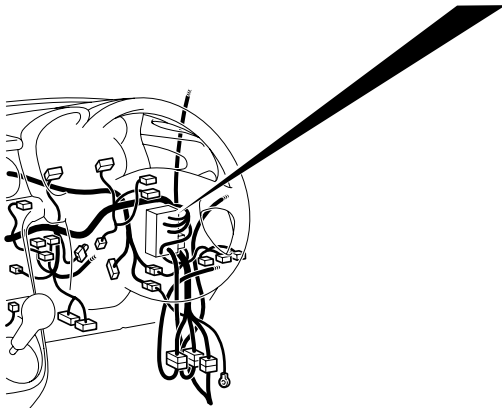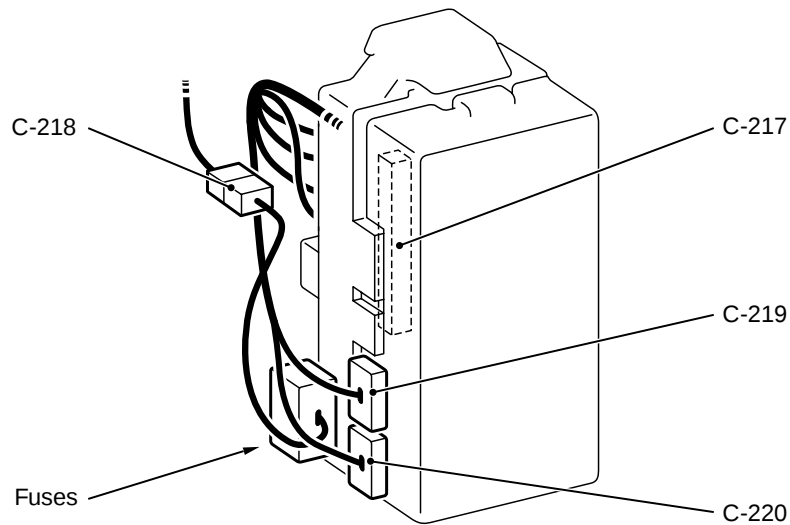

Connector colour
code


B : Black
BR : Brown
G : Green
GR : Gray
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC207954 AB


C-211 (4) No connection
C-212 (4) Rear fog lamp relay
C-213 (4) Fuel pump relay (2)
C-214 (4) No connection
C-215 (4) Fuel pump relay (1)
C-216 (2) No connection
C-217 (20) ETACS-ECU

C-218 (5) Instrument panel wiring harness and
roof wiring harness combination
C-219 (24-GR) ETACS-ECU
C-220 (24) ETACS-ECU
C-221 (15) Floor wiring harness (RH) and J/B
combination

DASH PANEL <R.H. drive vehicles> (CONTINUED)

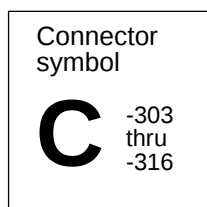

STEERING COLUMN

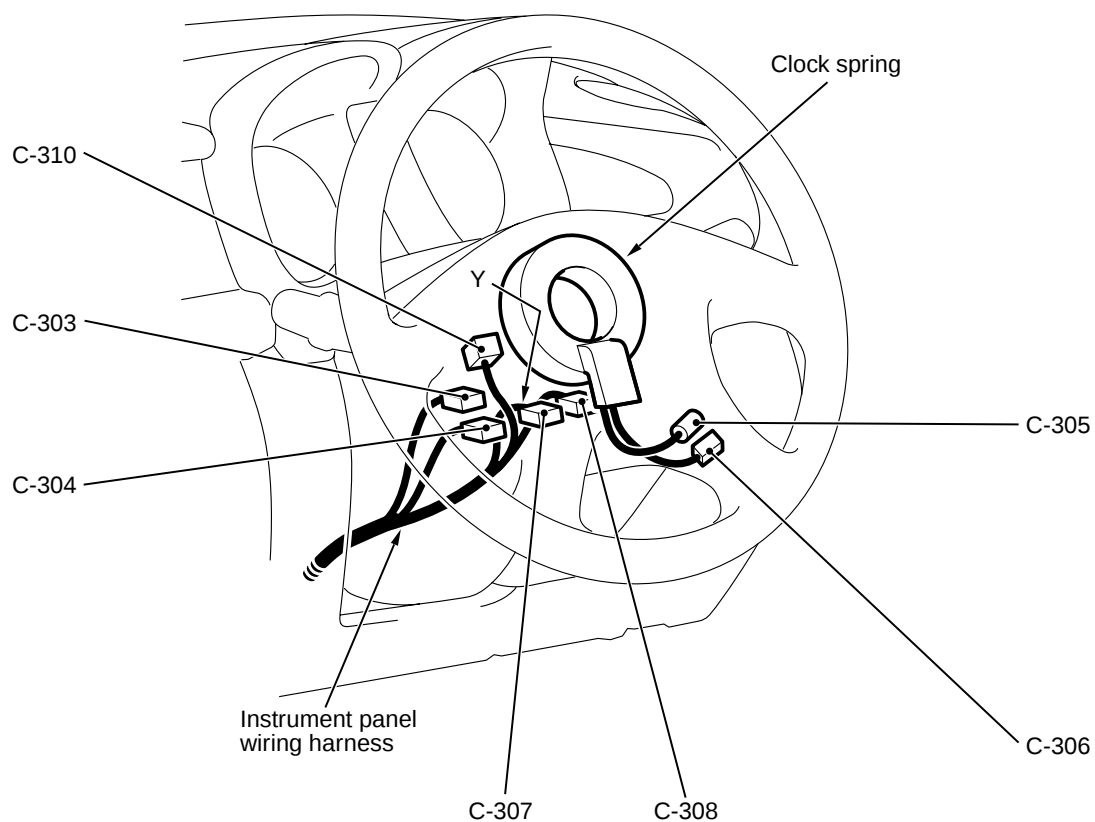


C-303 (6)	Ignition switch
C-304 (7)	Key reminder switch
C-305 (1)	Horn switch
C-306 (2)	Air bag module (squib) (driver's side)

C-307 (4-Y)	Clock spring
C-308 (6)	Clock spring
C-310 (10)	Column switch

AC308210AB

HEATER UNIT ASSEMBLY

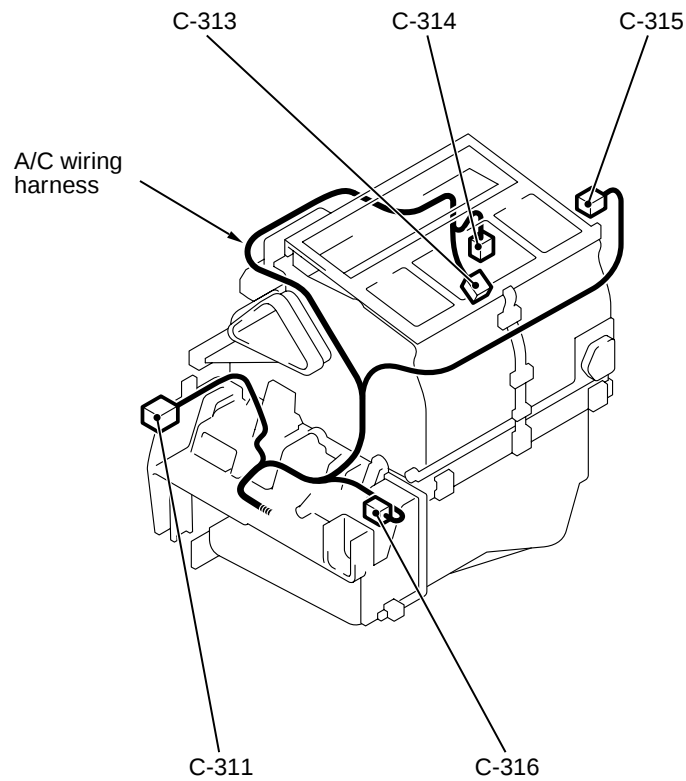

AC308211AB

C-311 (7) Outside/inside air selection damper control motor
C-313 (6) Air mixing damper control motor and potentiometer
C-314 (2) Heater water temperature sensor


C-315 (6) Mode selection damper control motor and potentiometer
C-316 (2) Air thermo sensor

FLOOR AND ROOF

FLOOR AND ROOF


M3010000900659

L.H. drive vehicles

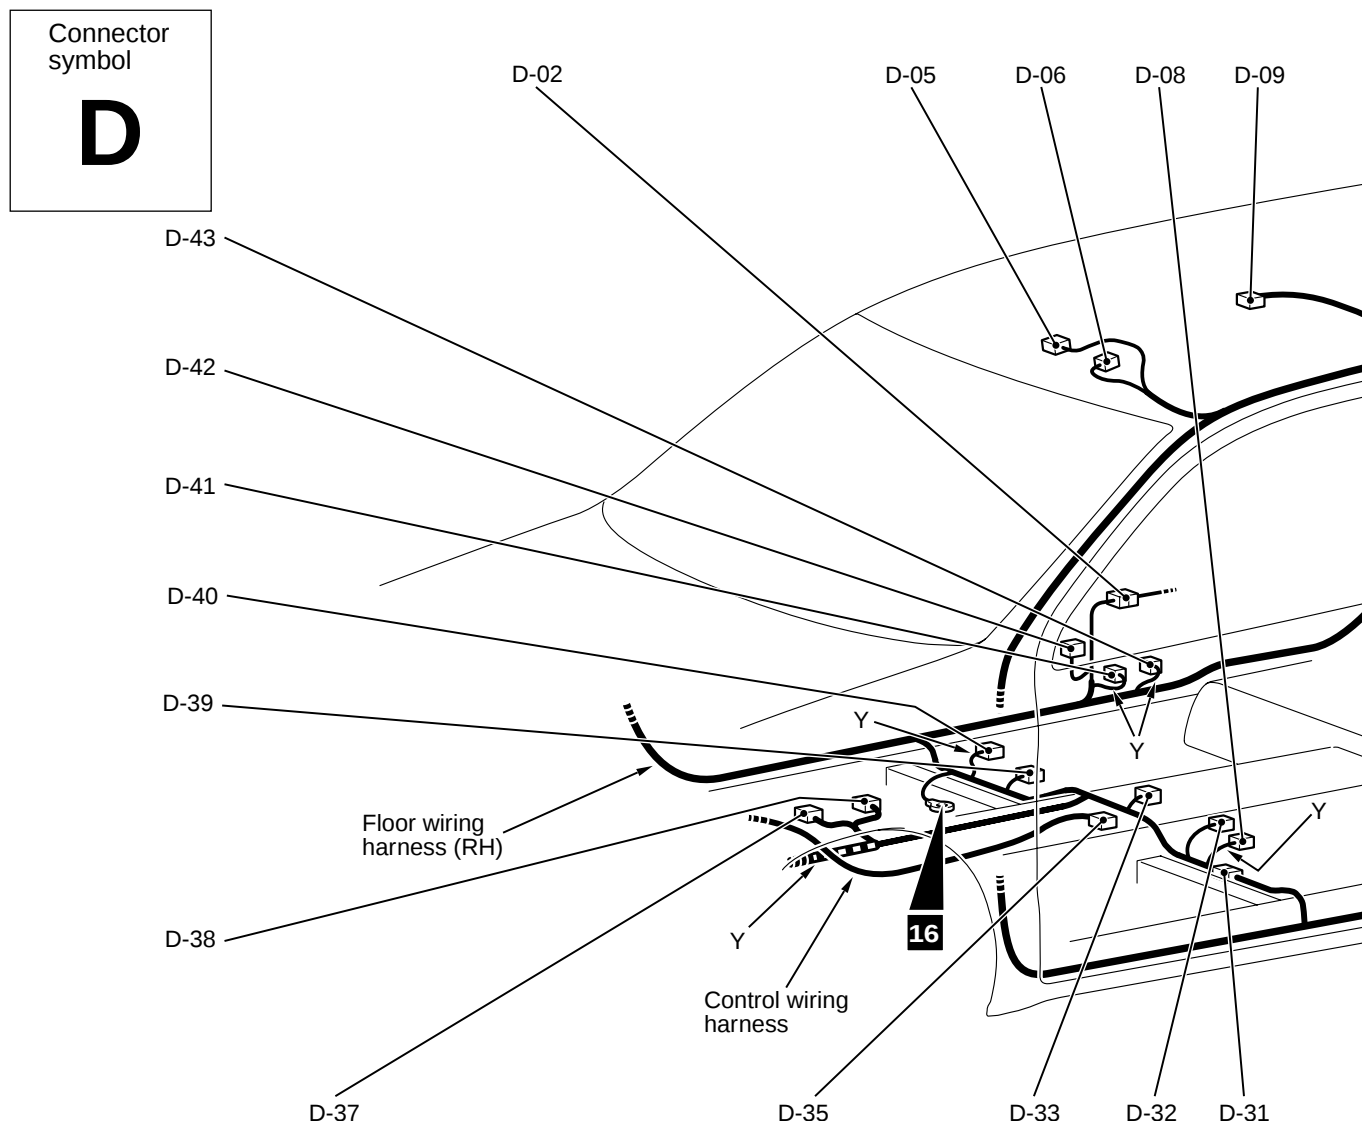

AC211757AB

D-02	(8)	Floor wiring harness (RH) and rear door wiring harness (RH) combination	D-14	(6)	Rear combination lamp (RH)
D-05	(2)	Front room lamp	D-15	(3-B)	Fuel gauge unit <2WD>
D-06	(6-B)	Sunroof switch	D-16	(5-GR)	Fuel pump <2WD> or fuel pump and gauge unit (main) <4WD>
D-08	(2-R)	Side air bag module (squib) (LH)	D-17	(1)	Accessory socket (1)
D-09	(10)	Sunroof motor assembly	D-18	(1-B)	Accessory socket (1)
D-10	(3)	Rear door switch (RH)	D-19	(6)	Rear combination lamp (LH)
D-11	(2-GR)	Rear room lamp	D-20	(3)	Rear door switch (LH)
D-12	(2)	Fuel gauge unit (sub) <4WD>	D-22	(2-B)	Wheel speed sensor (Rear: LH)
D-13	(2-B)	Wheel speed sensor (Rear: RH)			

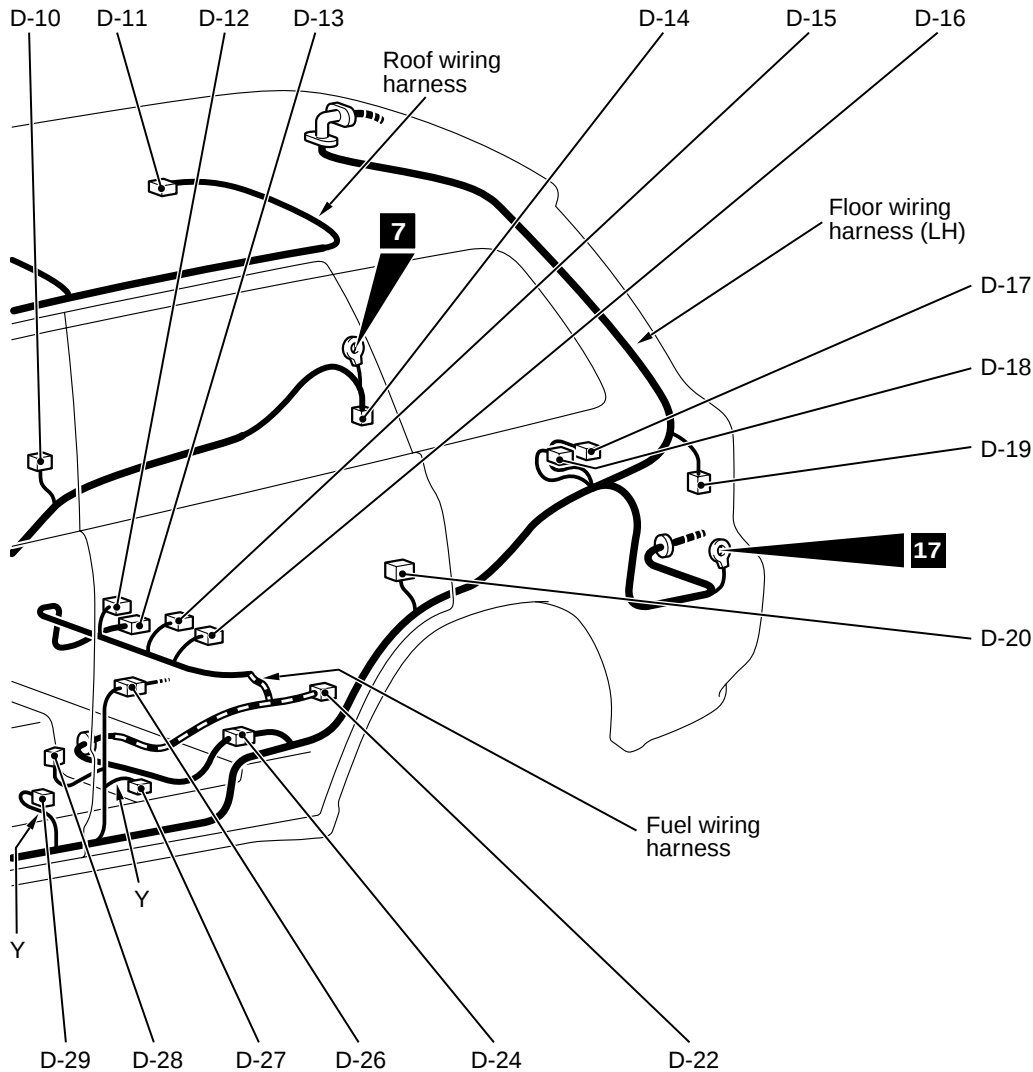

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Gray
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow


AC211758AB

D-24	(8)	Floor wiring harness (LH) and fuel wiring harness combination	D-33	(1-B)	Parking brake switch
D-26	(8)	Floor wiring harness (LH) and rear door wiring harness (LH) combination	D-35	(3-B)	G sensor
D-27	(2)	Side impact sensor (LH)	D-37	(2)	No connection
D-28	(3)	Front door switch (LH)	D-38	(9)	Heated seat switch
D-29	(2-B)	Seat belt pre-tensioner (LH)	D-39	(3-B)	Heated seat assembly (RH)
D-31	(12-B)	Floor wiring harness (RH) and floor wiring harness (LH) combination	D-40	(2-R)	Side air bag module (squib) (RH)
D-32	(3-B)	Heated seat assembly (LH)	D-41	(2)	Side impact sensor (RH)
			D-42	(3)	Front door switch (RH)
			D-43	(2-B)	Seat belt pre-tensioner (RH)

FLOOR AND ROOF

M3010000900671


R.H. drive vehicles

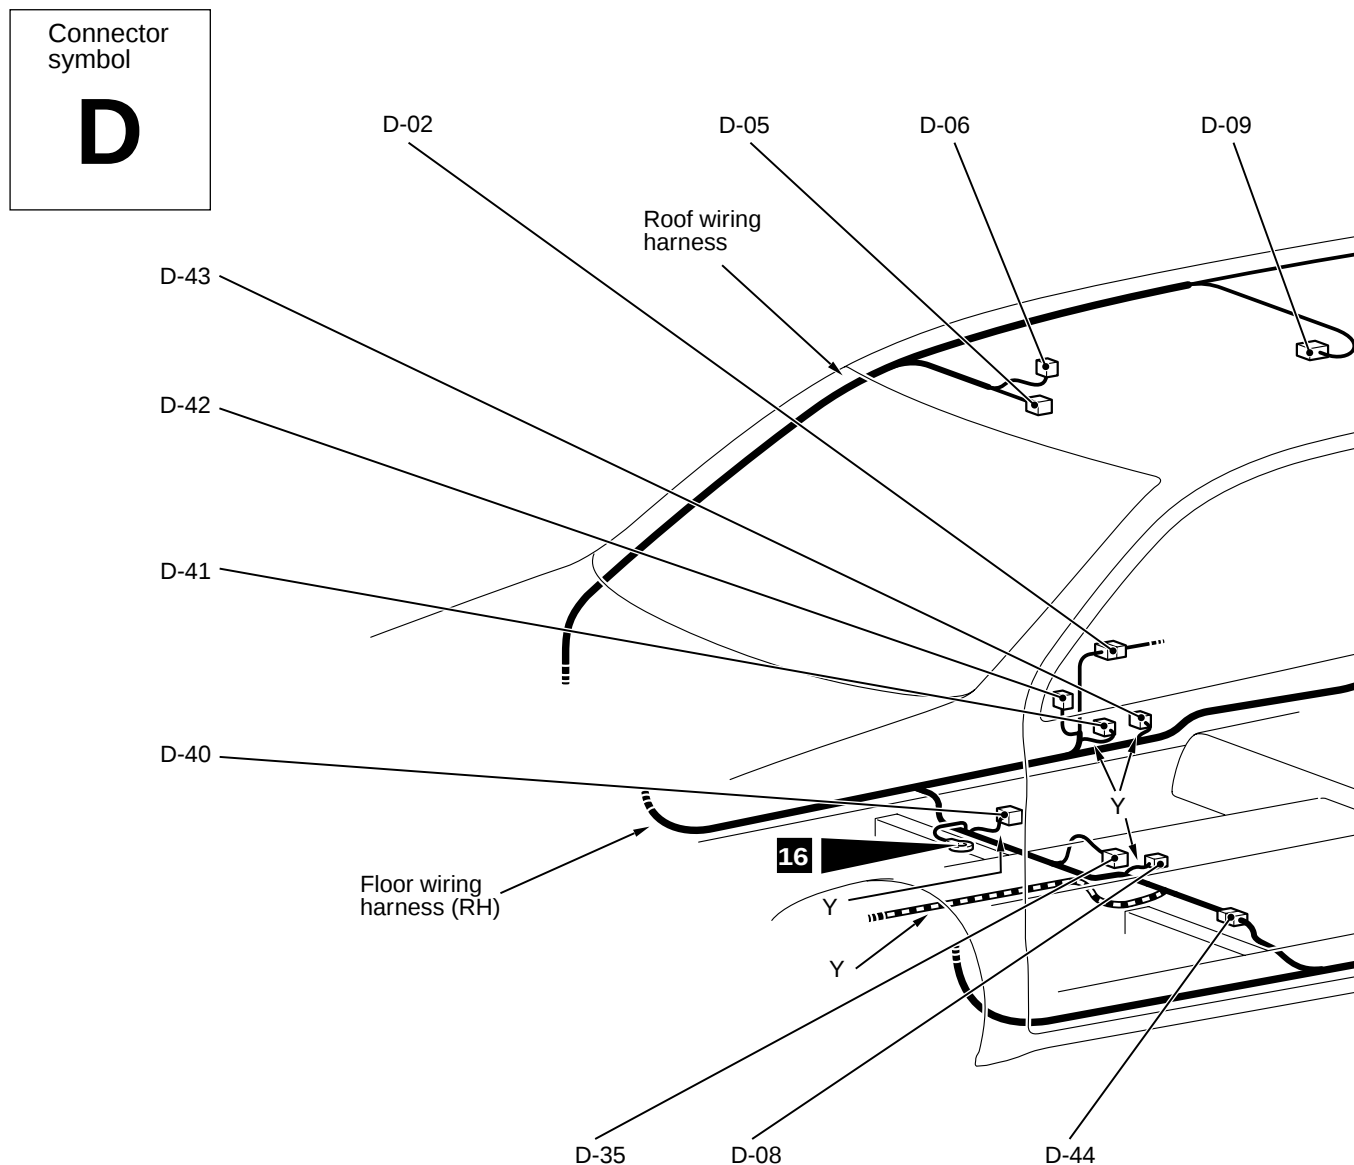

AC307684AB

D-02	(8)	Floor wiring harness (RH) and rear door wiring harness (RH) combination
D-05	(2)	Front room lamp
D-06	(6-B)	Sunroof switch
D-08	(2-R)	Side air bag module (squib) (LH)
D-09	(10)	Sunroof motor assembly
D-10	(3)	Rear door switch (RH)
D-11	(2-GR)	Rear room lamp
D-12	(2)	Fuel gauge unit (sub)

D-13	(2-B)	Wheel speed sensor (Rear: RH)
D-14	(6)	Rear combination lamp (RH)
D-15	(3-B)	Fuel gauge unit
D-16	(5-GR)	Fuel pump and gauge unit (main)
D-17	(1)	Accessory socket (1)
D-18	(1-B)	Accessory socket (1)
D-19	(6)	Rear combination lamp (LH)
D-20	(3)	Rear door switch (LH)
D-22	(2-B)	Wheel speed sensor (Rear: LH)

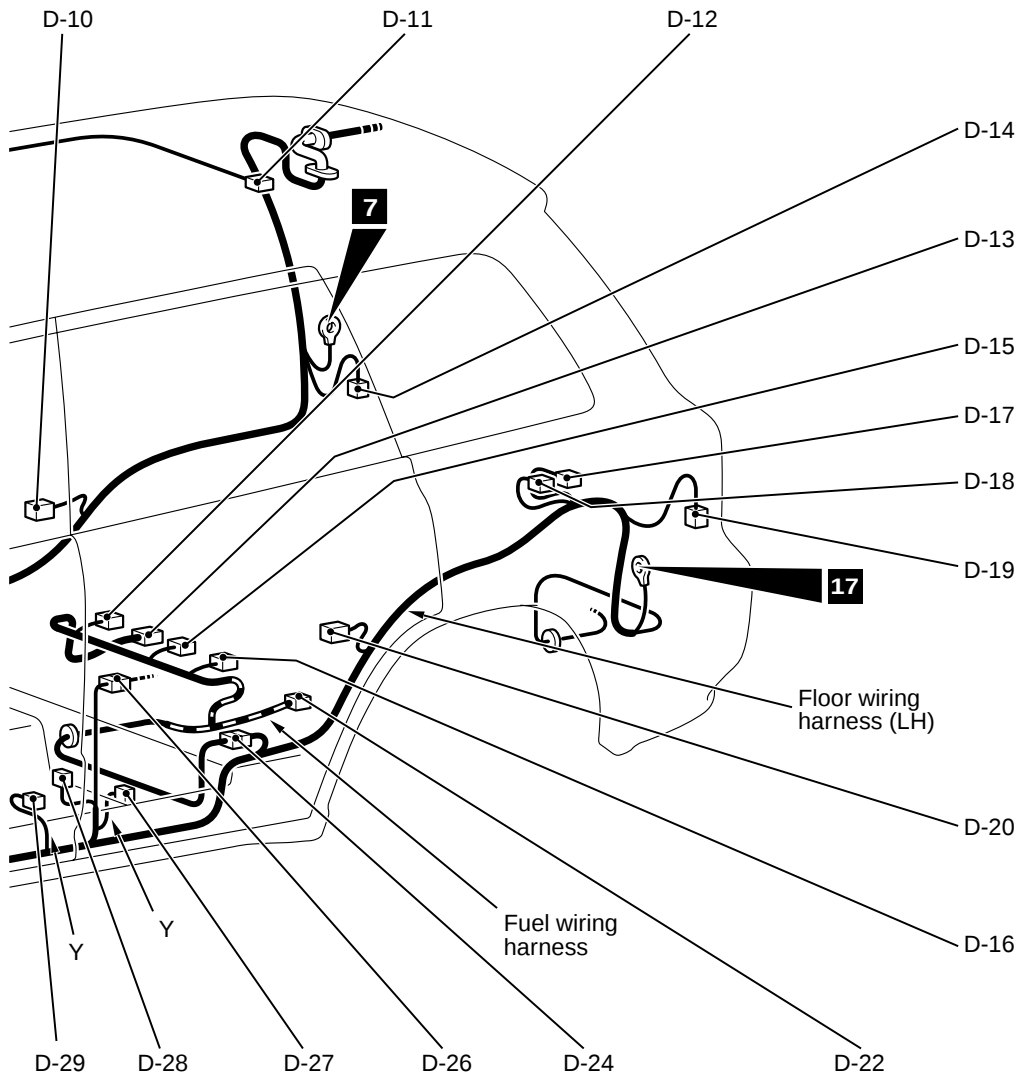

Connector colour
code
B : Black
BR : Brown
G : Green
GR : Gray
L : Blue
None : Milk white
O : Orange
R : Red
V : Violet
Y : Yellow

AC307685AB

D-24	(8)	Floor wiring harness (LH) and fuel wiring harness combination	D-35	(3-B)	G sensor
D-26	(8)	Floor wiring harness (LH) and rear door wiring harness (LH) combination	D-40	(2-R)	Side air bag module (squib) (RH)
D-27	(2)	Side impact sensor (LH)	D-41	(2)	Side impact sensor (RH)
D-28	(3)	Front door switch (LH)	D-42	(3)	Front door switch (RH)
D-29	(2-B)	Seat belt pre-tensioner (LH)	D-43	(2-B)	Seat belt pre-tensioner (RH)
			D-44	(4B)	Floor wiring harness (RH) and floor wiring harness (LH) combination

DOOR


DOOR

L.H. drive vehicles

M3010001400367

Connector
symbol**E**

Driver's side

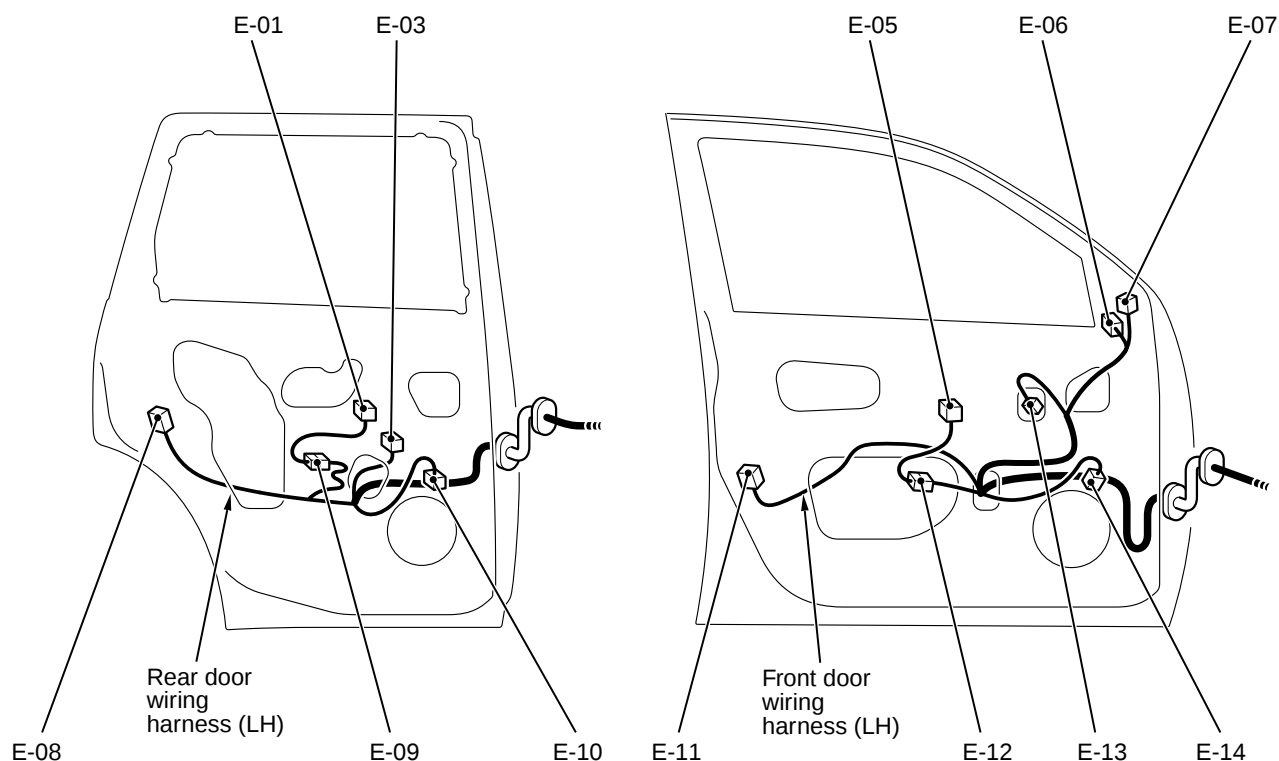


AC207961AD

E-01	(8)	Power window sub switch (Rear: LH)
E-03	(6-GR)	Power window motor (Rear: LH)
E-05	(14)	Power window main switch
E-06	(7)	Remote controlled mirror (LH)
E-07	(2)	Tweeter (LH)
E-08	(6-B)	Door lock actuator (Rear: LH)
E-09	(8)	Rear door wiring harness (LH) and rear door sub wiring harness (LH) combination

E-10	(2)	Rear door speaker (LH)
E-11	(6-B)	Door lock actuator (Front: LH)
E-12	(16)	Front door wiring harness (LH) and front door sub wiring harness (LH) combination
E-13	(6-GR)	Power window motor (Front: LH)

Passenger's side

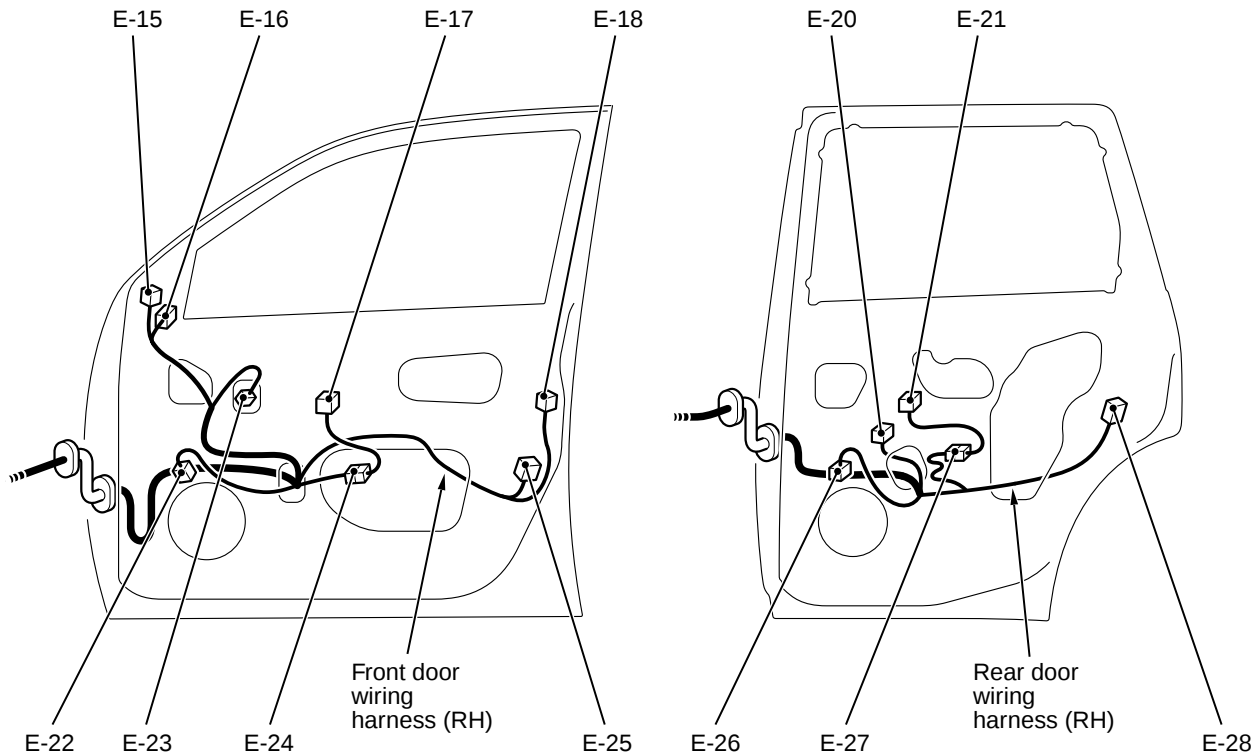

AC207962AD

E-14	(2)	Front door speaker (LH)	E-24	(8)	Front door wiring harness (RH) and front door sub wiring harness (RH) combination
E-15	(2)	Tweeter (RH)	E-25	(6-B)	Door lock actuator (Front: RH)
E-16	(7)	Remote controlled mirror (RH)	E-26	(2)	Rear door speaker (RH)
E-17	(8)	Power window sub switch (Front: RH)	E-27	(8)	Rear door wiring harness (RH) and rear door sub wiring harness (RH) combination
E-18	(3-B)	Door lock key cylinder switch (RH)	E-28	(6-B)	Door lock actuator (Rear: RH)
E-20	(6-GR)	Power window motor (Rear: RH)			
E-21	(8)	Power window sub switch (Rear: RH)			
E-22	(2)	Front door speaker (RH)			
E-23	(6-GR)	Power window motor (Front: RH)			


DOOR

M3010001400390

R.H. drive vehicles

Connector
symbol**E**

Driver's side

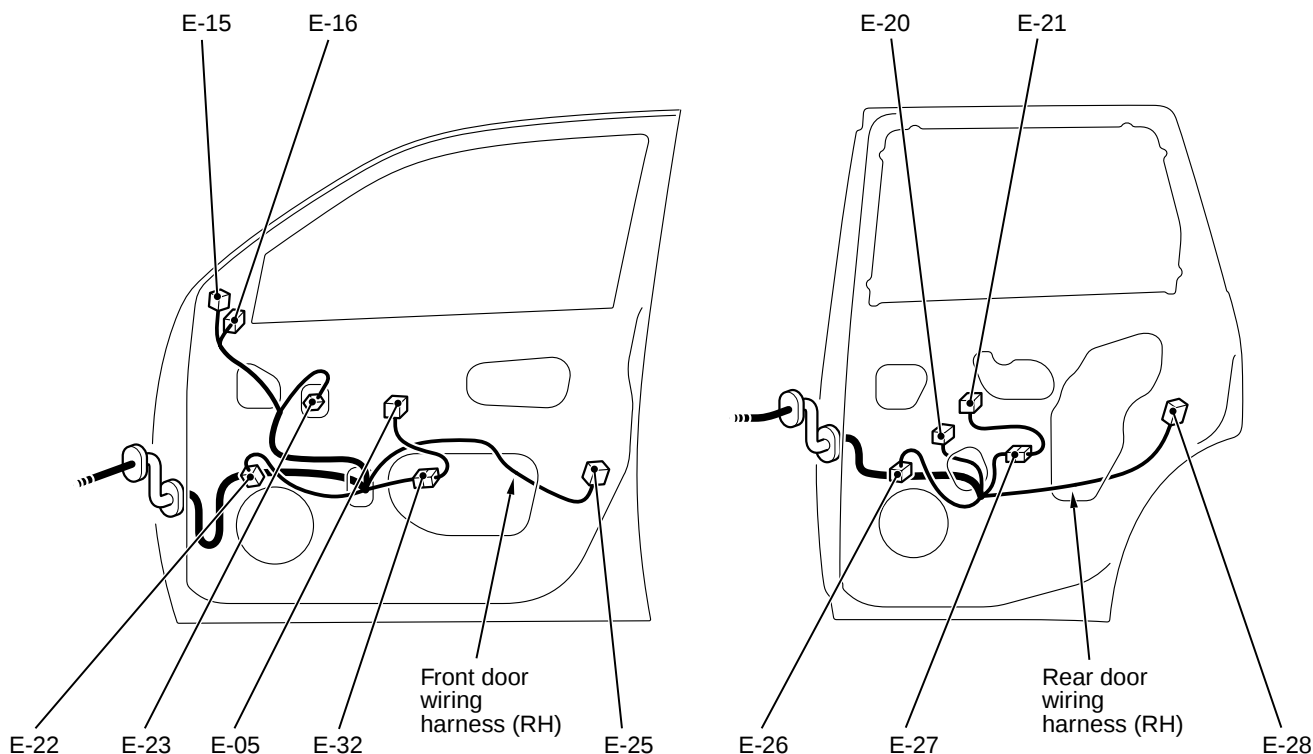


AC207963AC

E-01	(8)	Power window sub switch (Rear: LH)
E-03	(6-GR)	Power window motor (Rear: LH)
E-04	(3-B)	Door lock key cylinder switch (LH)
E-05	(14)	Power window main switch
E-06	(7)	Remote controlled mirror (LH)
E-07	(2)	Tweeter (LH)
E-08	(6-B)	Door lock actuator (Rear: LH)
E-09	(8)	Rear door wiring harness (LH) and rear door sub wiring harness (LH) combination

E-10	(2)	Rear door speaker (LH)
E-11	(6-B)	Door lock actuator (Front: LH)
E-13	(6-GR)	Power window motor (Front: LH)
E-14	(2)	Front door speaker (LH)
E-15	(2)	Tweeter (RH)

Passenger's side

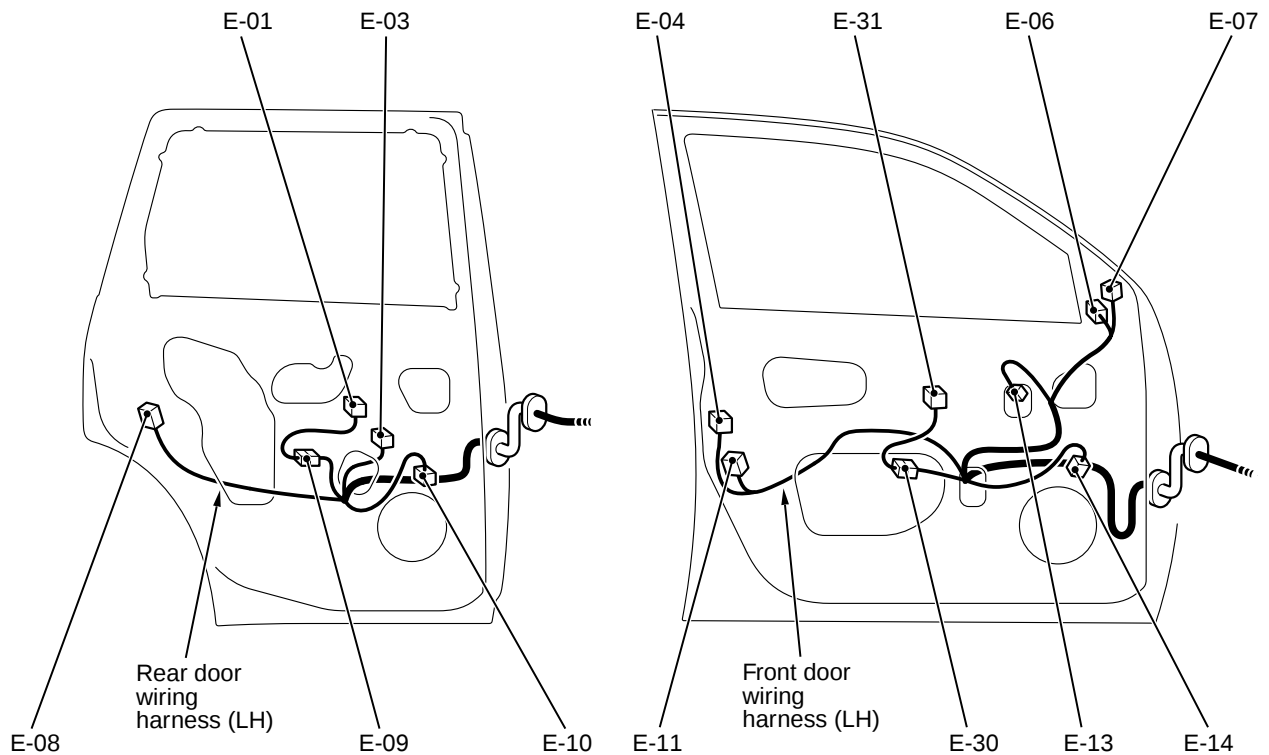


AC207964AC

E-16	(7)	Remote controlled mirror (RH)	E-28	(6-B)	Door lock actuator (Rear: RH)
E-20	(6-GR)	Power window motor (Rear: RH)	E-30	(8)	Front door wiring harness (LH) and front door sub wiring harness (LH) combination
E-21	(8)	Power window sub switch (Rear: RH)	E-31	(8)	Power window sub switch (Front: LH)
E-22	(2)	Front door speaker (RH)	E-32	(16)	Front door wiring harness (RH) and front door sub wiring harness (RH) combination
E-23	(6-GR)	Power window motor (Front: RH)			
E-25	(6-B)	Door lock actuator (Front: RH)			
E-26	(2)	Rear door speaker (RH)			
E-27	(8)	Rear door wiring harness (RH) and rear door sub wiring harness (RH) combination			

TAILGATE

Connector
symbol**F**Connector colour
code

B : Black
 BR : Brown
 G : Green
 GR : Gray
 L : Blue
 None : Milk white
 O : Orange
 R : Red
 V : Violet
 Y : Yellow

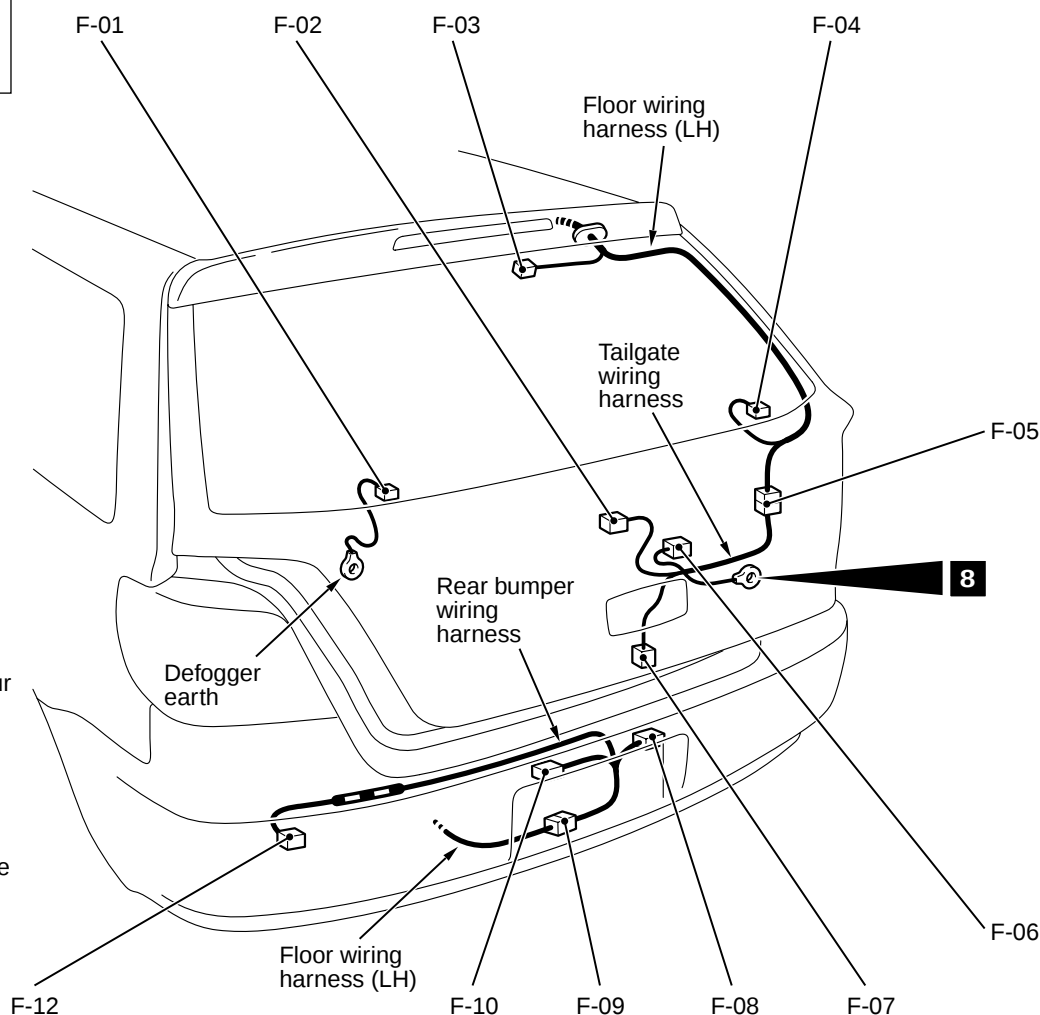

AC211759AB

F-01	(1)	Defogger (-)	F-07	(1-B)	Tailgate switch
F-02	(4)	Rear wiper motor	F-08	(2-GR)	Licence plate lamp (RH)
F-03	(2)	High-mounted stop lamp	F-09	(4-GR)	Floor wiring harness (LH) and rear bumper wiring harness combination
F-04	(1-B)	Defogger (+)	F-10	(2-GR)	Licence plate lamp (LH)
F-05	(10)	Floor wiring harness (LH) and tailgate wiring harness combination	F-12	(2-B)	Rear fog lamp
F-06	(6-B)	Tailgate lock actuator			