
GROUP 2

SINGLE PART INSTALLATION POSITION





CONTENTS

ECU	2-2	INSPECTION CONNECTOR	2-14
RELAY	2-5	FUSIBLE LINK AND FUSE	2-15
SENSOR.....	2-6	EARTH	2-16
SOLENOID VALVE	2-12	EARTH CABLE.....	2-20

ECU

M3020000500287









Name	Symbol	Name	Symbol
A/C-ECU <Automatic A/C>	E	Fan controller	C
A/C-ECU <Manual A/C>	E	Front-ECU	B
ABS-ECU	A	Immobilizer-ECU <4G63>	D
		Immobilizer-ECU <4G69>	G
Blower linear controller <Automatic A/C>	I	Power window main switch (Incorporating CPU)	K
Column-switch (Incorporating column-ECU)	D	Power window sub switch (Incorporating CPU)	J
Engine-ECU <M/T>	I	SRS-ECU	H
Engine-A/T-ECU <A/T>	I	Sunroof motor assembly (Incorporating ECU)	L
ETACS-ECU	F		




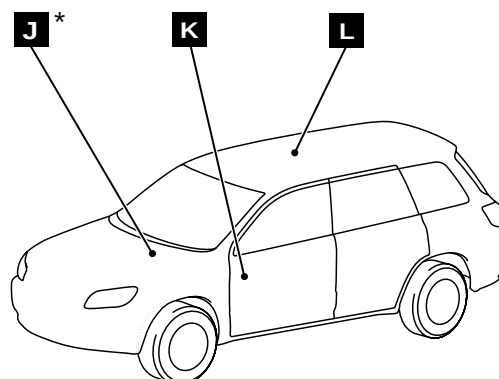
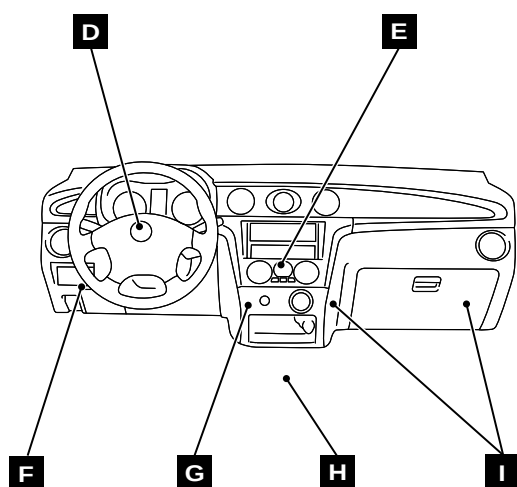
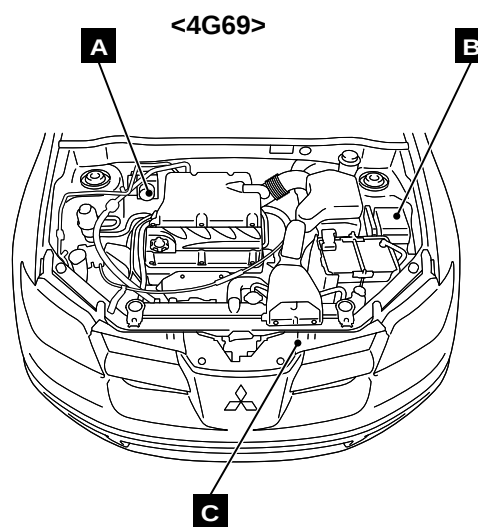
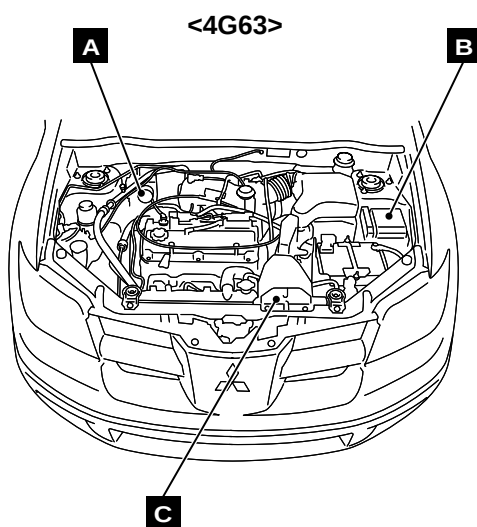


NOTE:

*:also equipped at the rear door.

AC308048AB

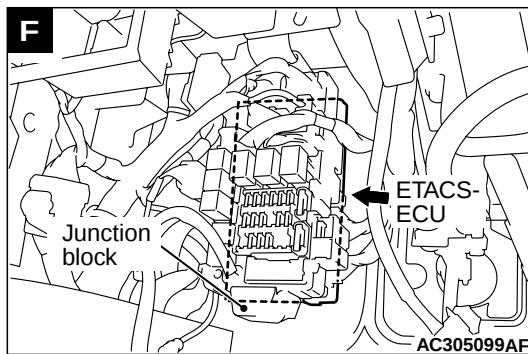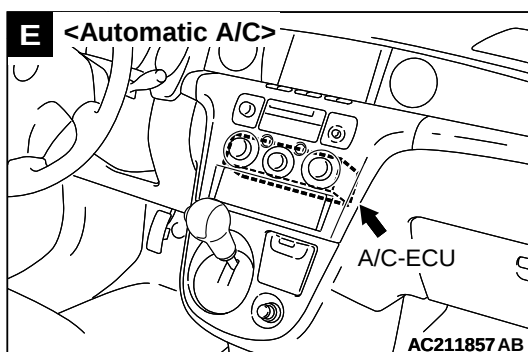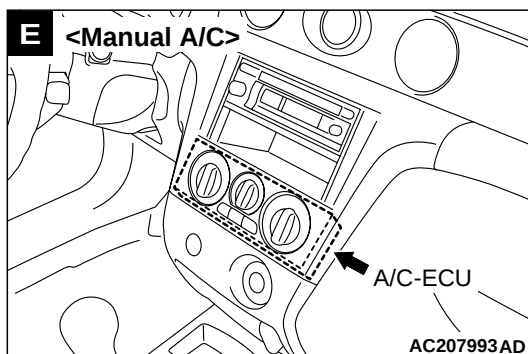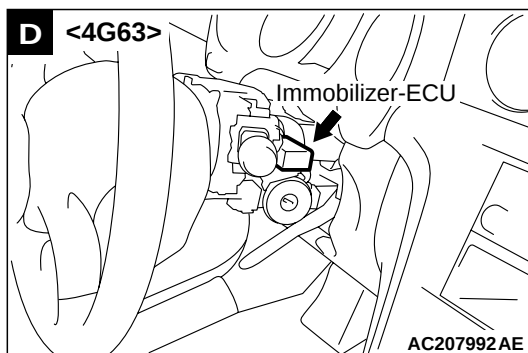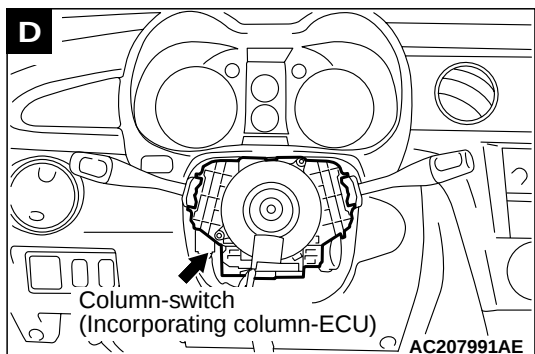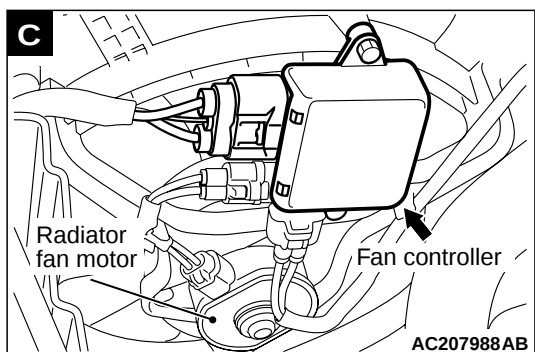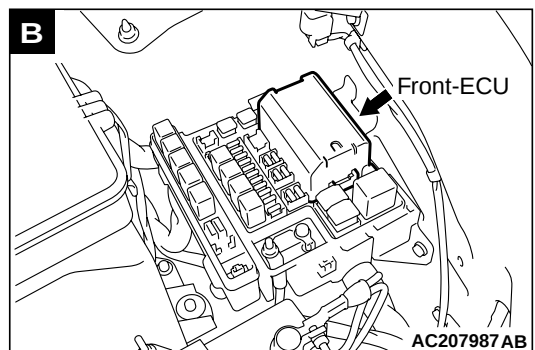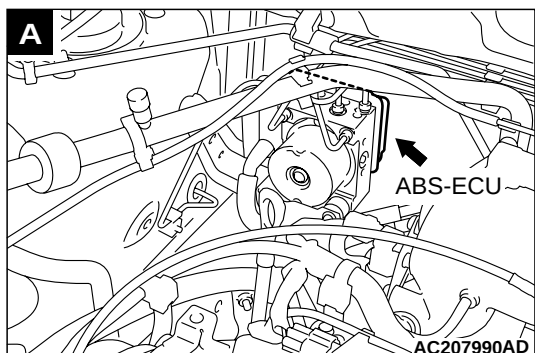


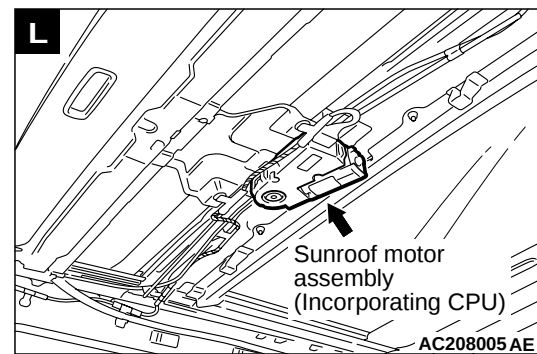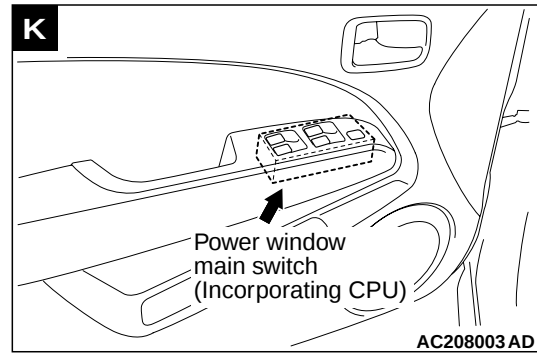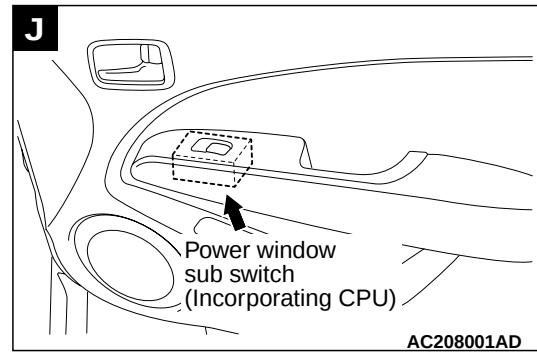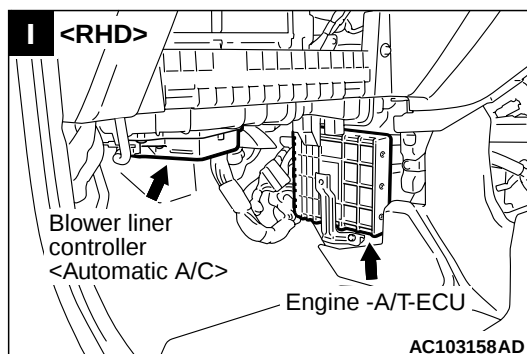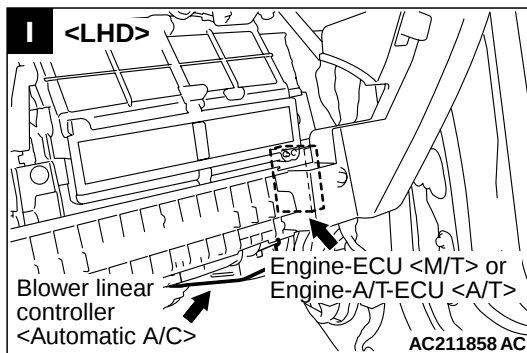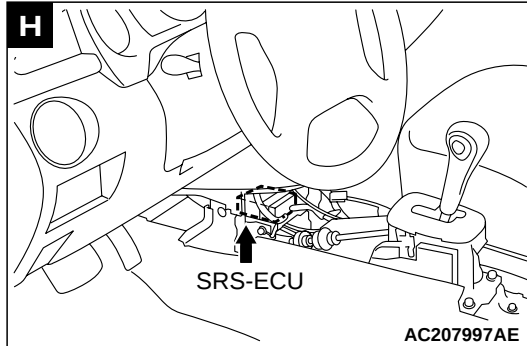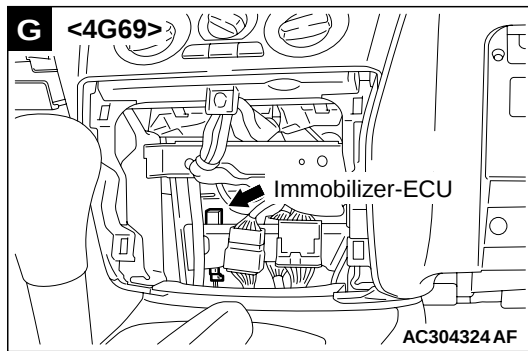


RELAY

M3020000400280


Name	Symbol	Name	Symbol
A/C compressor relay	A	Fuel pump relay (1)	B
Accessory socket relay	A	Fuel pump relay (2)	B
A/T control relay	A	Heated seat relay	B
Blower relay	B	Horn relay	A
Defogger relay	B	Power window relay	B
Engine control relay	A	Rear fog lamp relay	B
Fan control relay	A	Throttle valve control servo relay	A
Front fog lamp relay	A	Wiper deicer relay <Except 4G69 (RHD)>	A

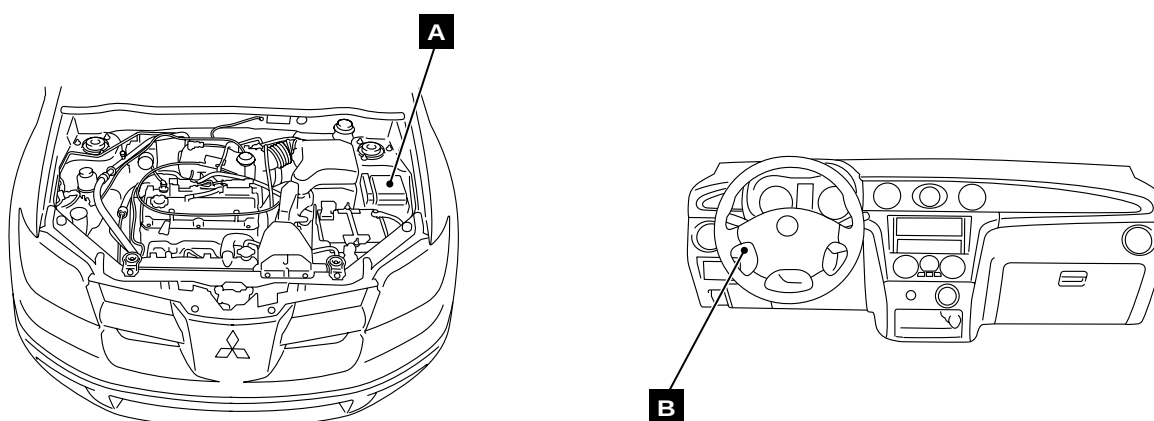

AC207979 AB

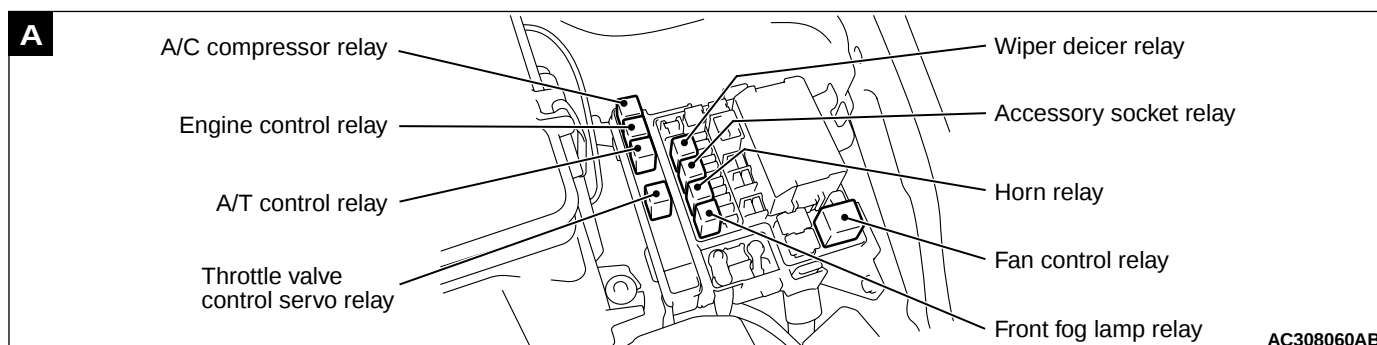

AC308060 AB

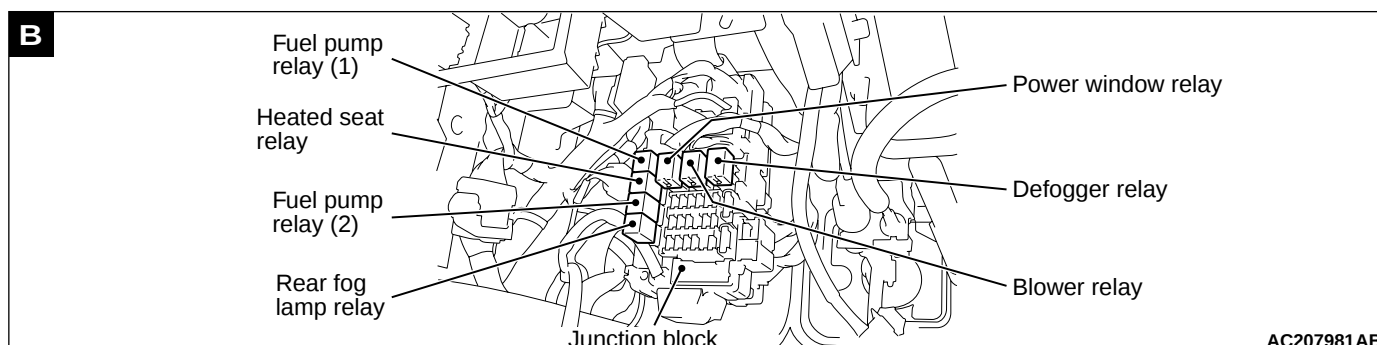


AC207981 AB

SENSOR


M3020000600314

Name	Symbol	Name	Symbol
A/C pressure sensor	A	Manifold absolute pressure sensor <4G69>	L
Accelerator pedal position sensor	A	No.1, 4 cylinder oxygen sensor (Front)	O
Air flow sensor	E	No.1, 4 cylinder oxygen sensor (Rear)	O
Air thermo sensor	R	No.2, 3 cylinder oxygen sensor (Front)	O
Camshaft position sensor	D	No.2, 3 cylinder oxygen sensor (Rear)	O
Crank angle sensor	G	Output shaft speed sensor <A/T>	N
Detonation sensor	H	Oxygen sensor (Front) <4G63>	I
Engine coolant temperature sensor	D	Oxygen sensor (Rear) <4G63>	T
Front impact sensor (LH)	K	Photo sensor <Automatic A/C>	P
Front impact sensor (RH)	F	Side impact sensor	V
G sensor <ABS-4WD>	U	Throttle body assembly (Incorporating throttle position sensor) <4G69>	M
Heater water temperature sensor <Automatic A/C>	R	Throttle position sensor <4G63>	B
Interior temperature sensor <Automatic A/C>	Q	Vehicle speed sensor <M/T>	C
Outside thermo sensor	J	Wheel speed sensor (Front)	S
Input shaft speed sensor <A/T>	N	Wheel speed sensor (Rear)	W



<4G63>

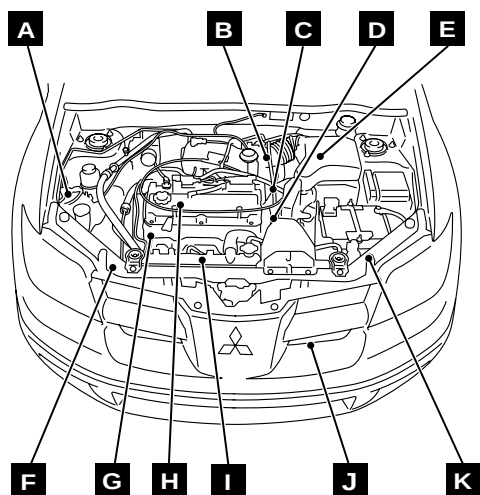

<4G69>

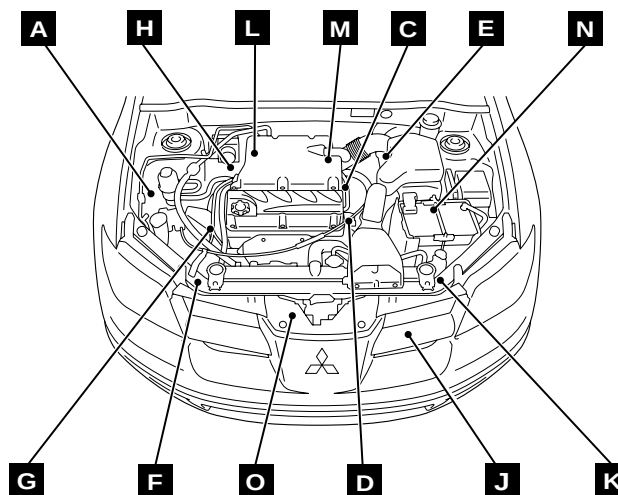







AC308089AB








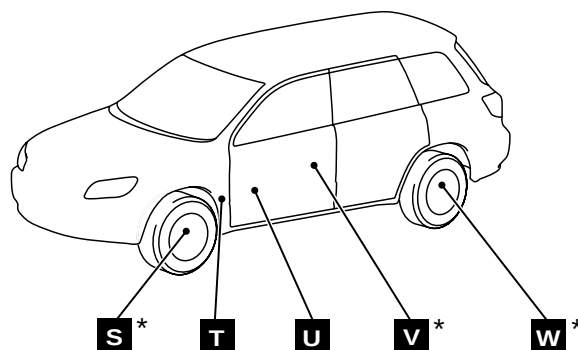
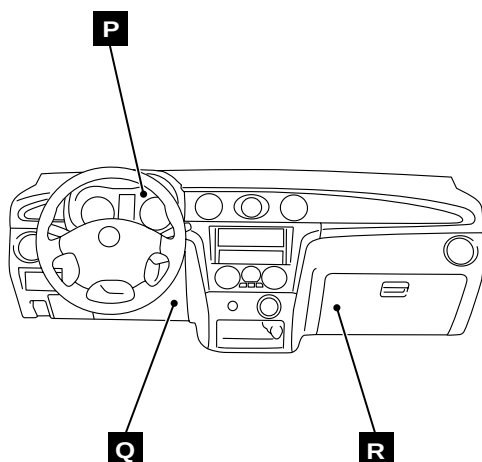











AC308090AB








NOTE:





*:also equipped at the right side.

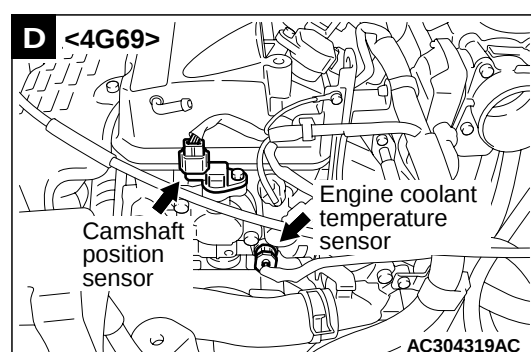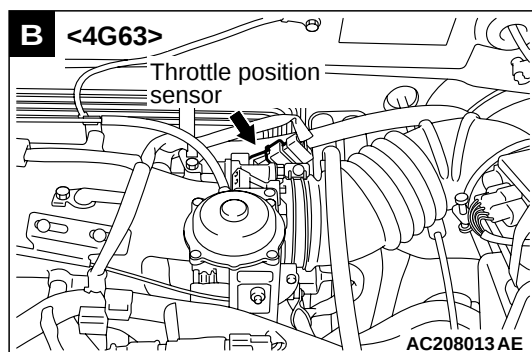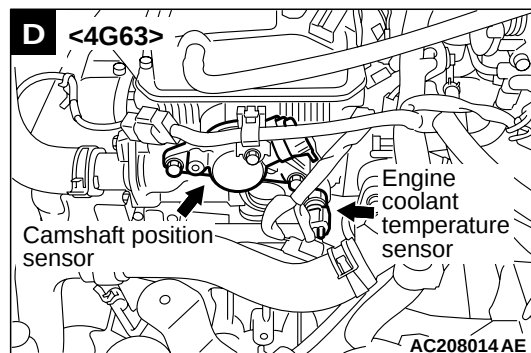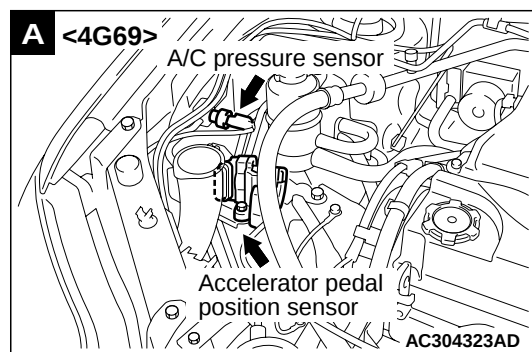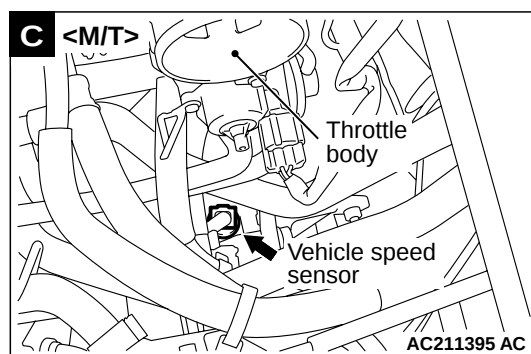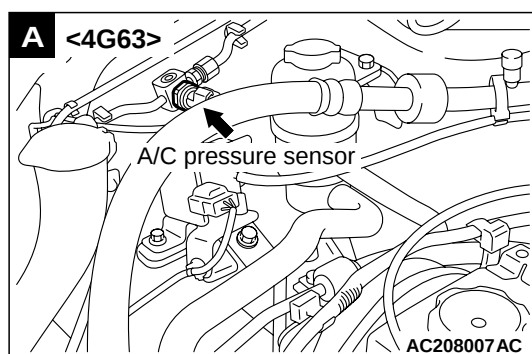

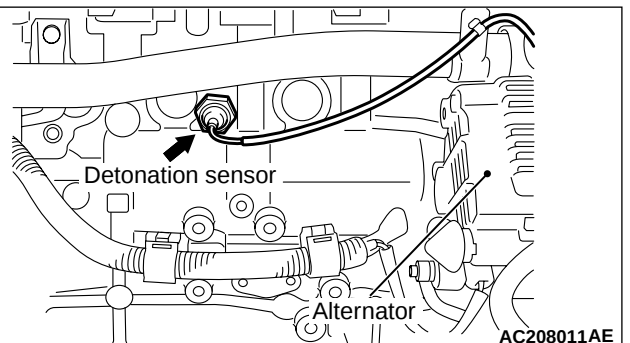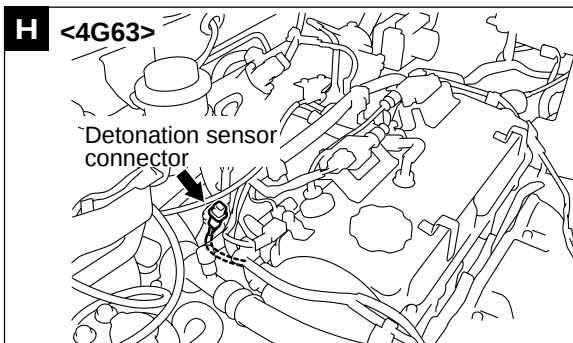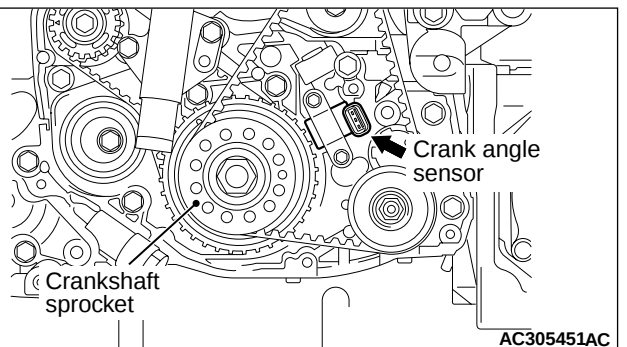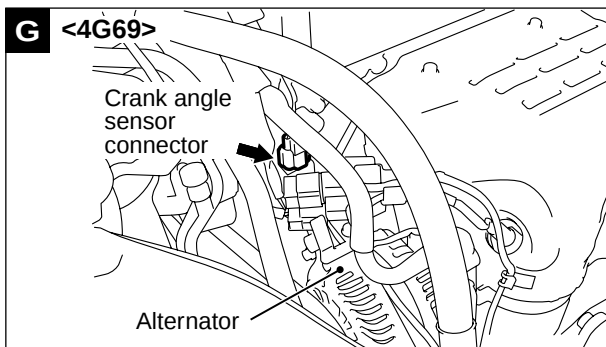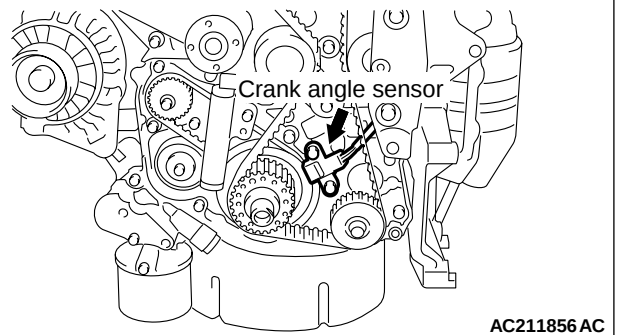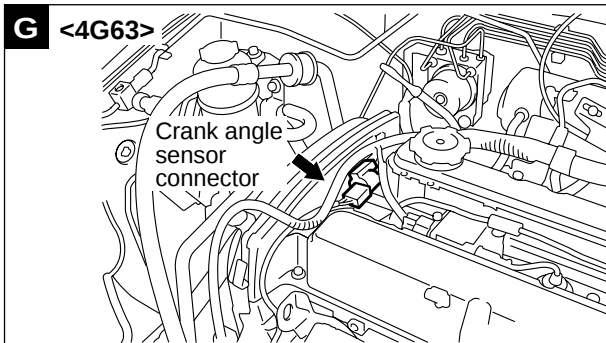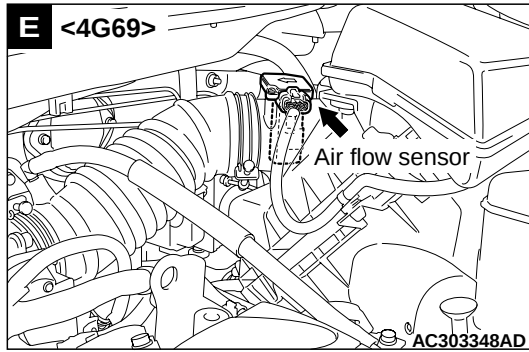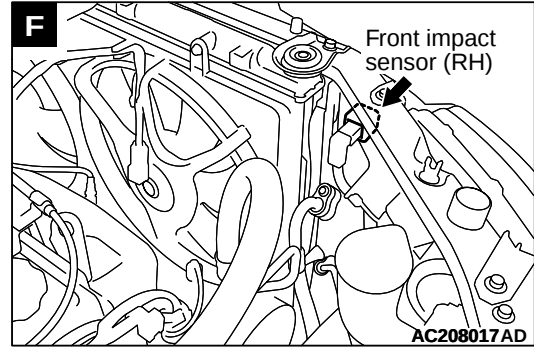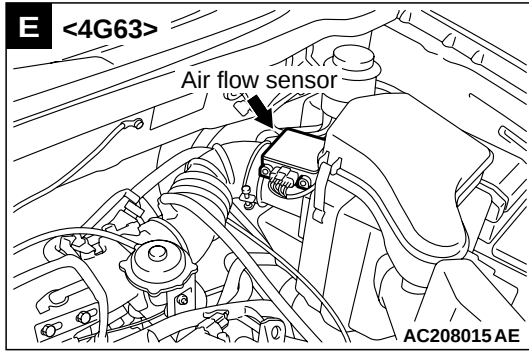

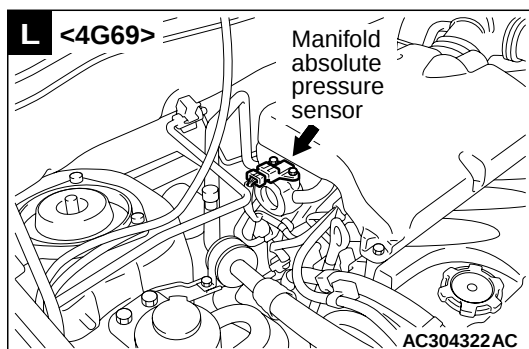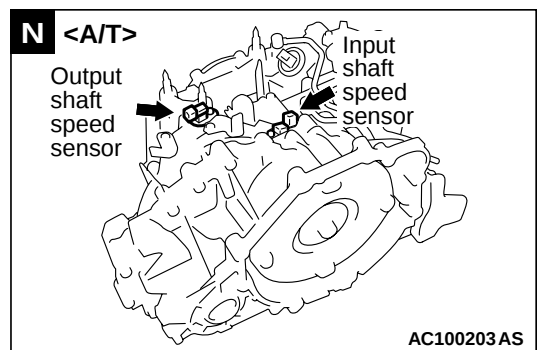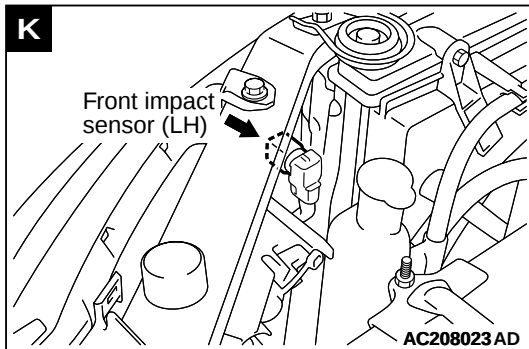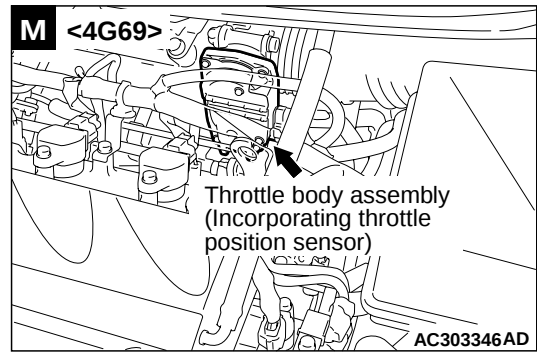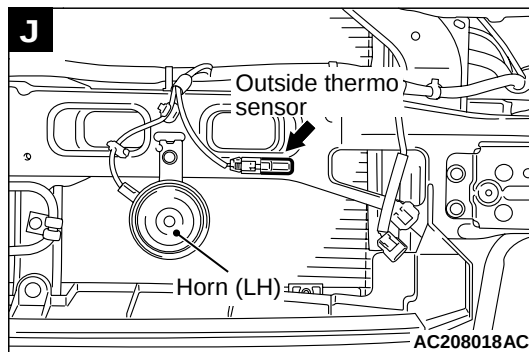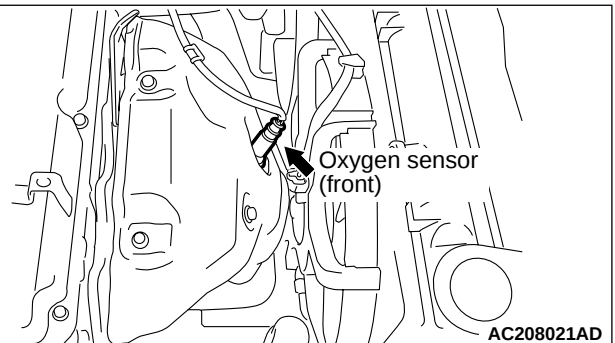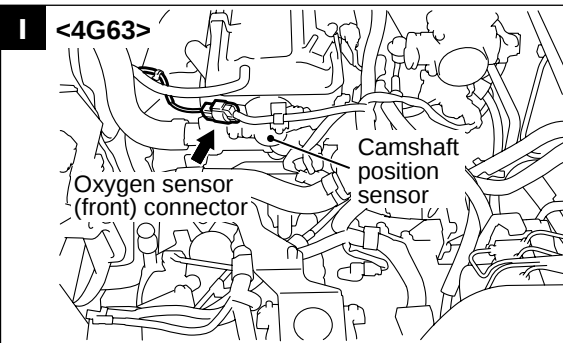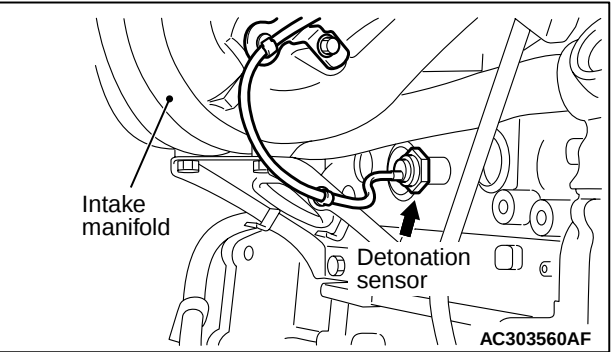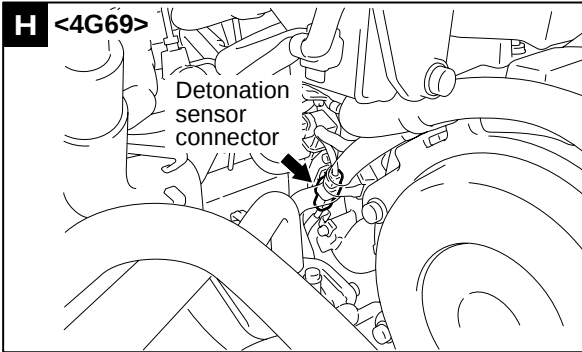

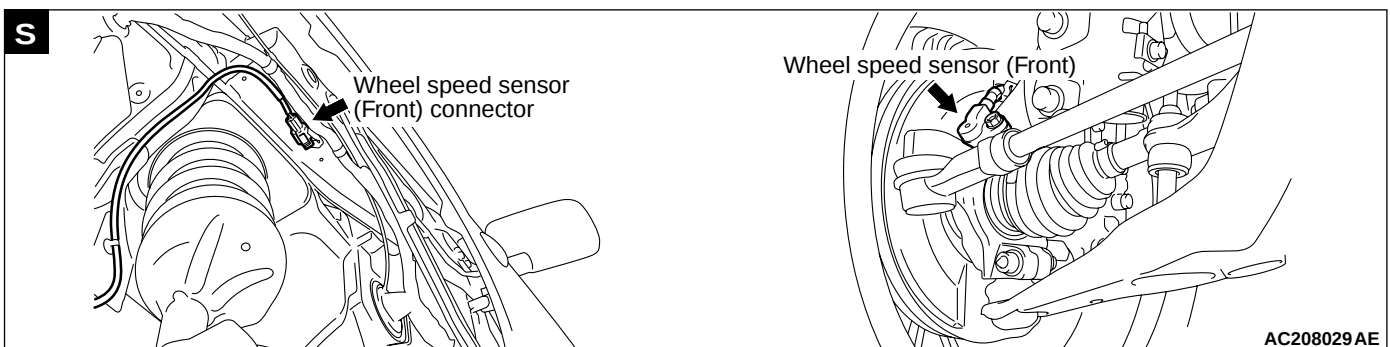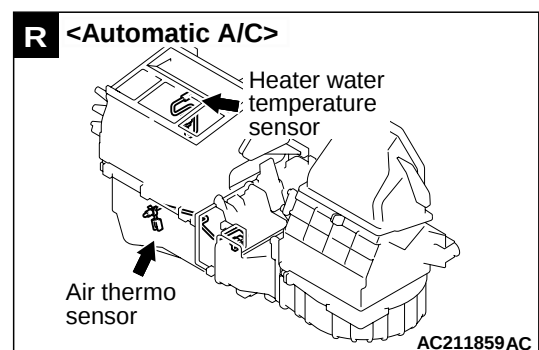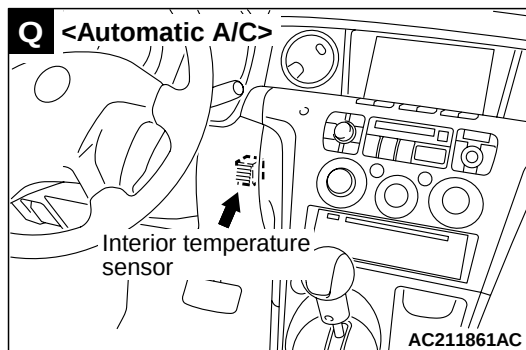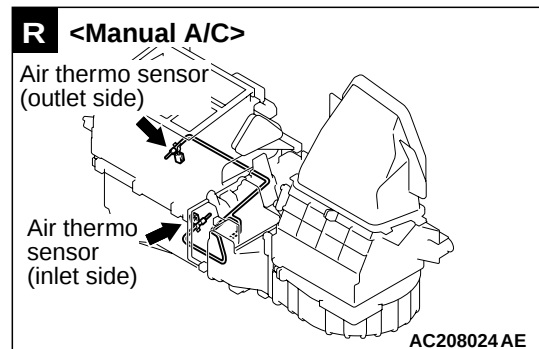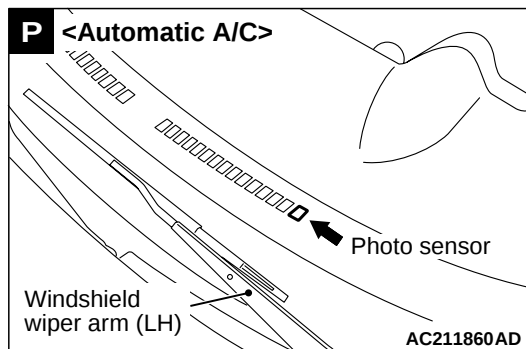
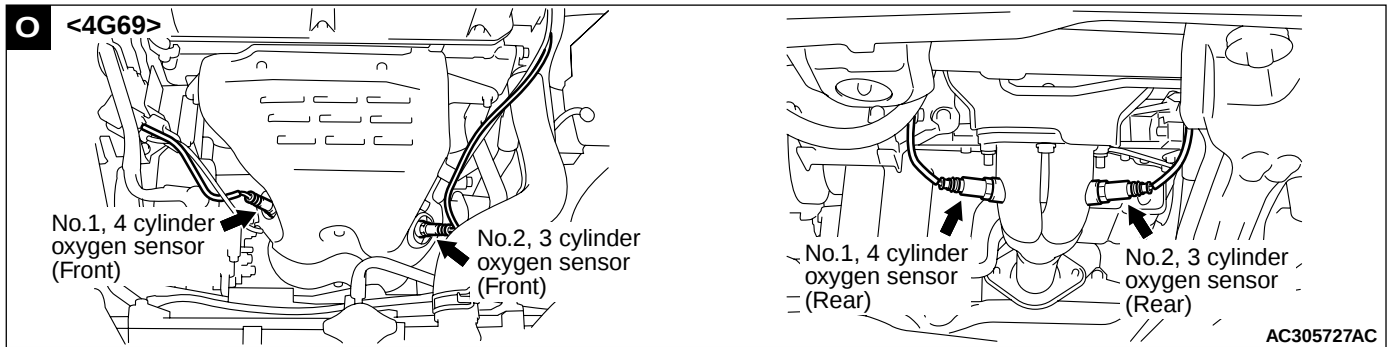
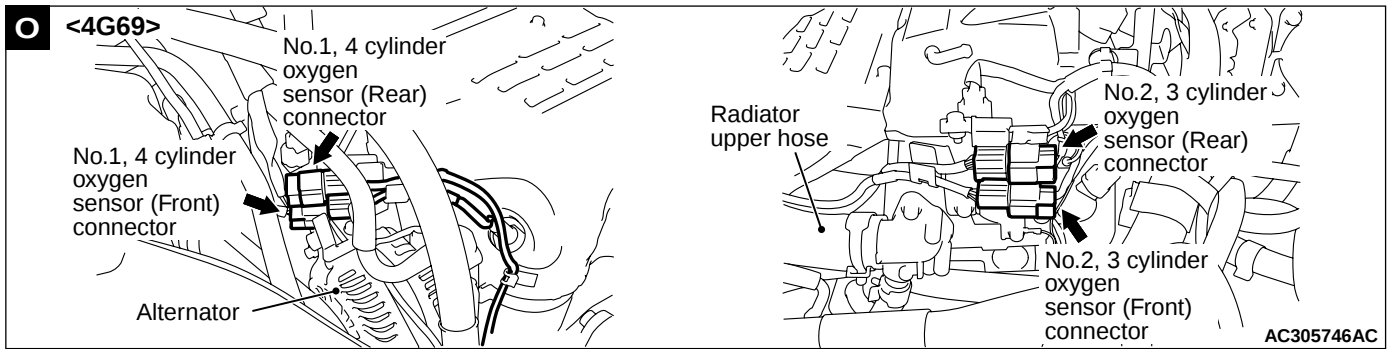




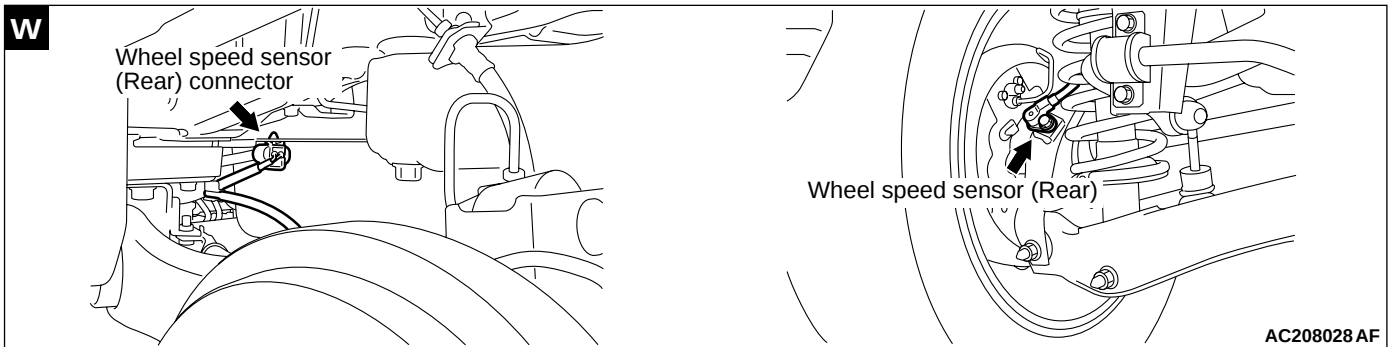
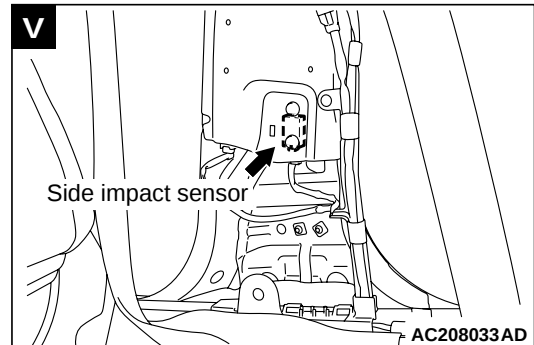
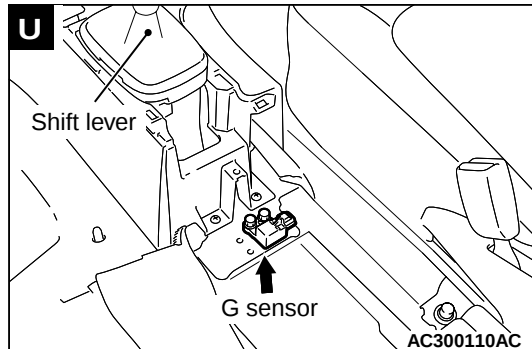
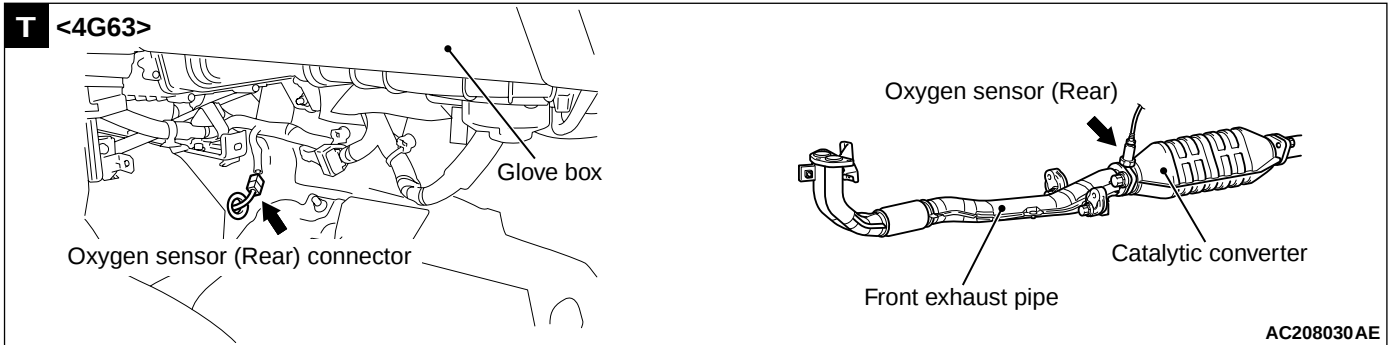


SOLENOID VALVE

M3020000800255

Name	Symbol	Name	Symbol
A/T control solenoid valve assembly	E	EGR valve <4G69>	D
EGR control solenoid valve <4G63>	A	Hydraulic unit (Incorporating ABS solenoid valve)	B
Evaporative emission purge solenoid <4G69>	C	Purge control solenoid valve <4G63>	A
Evaporative emission ventilation solenoid <4G69>	F		

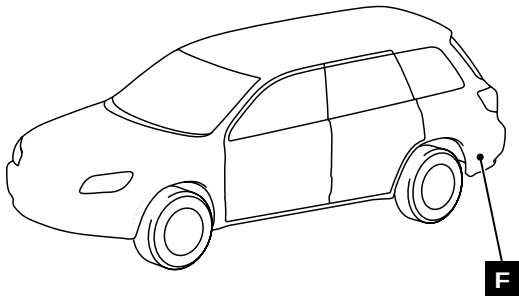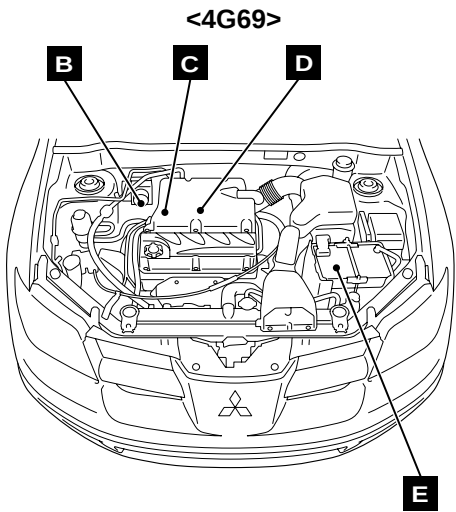
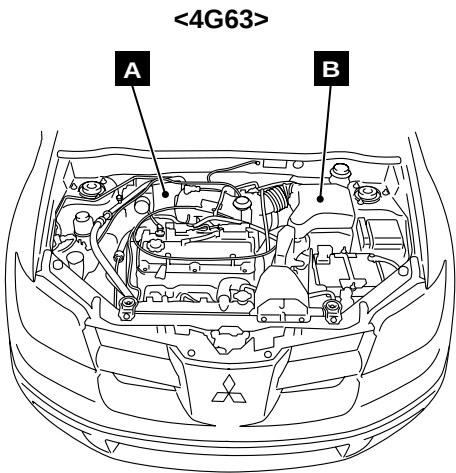


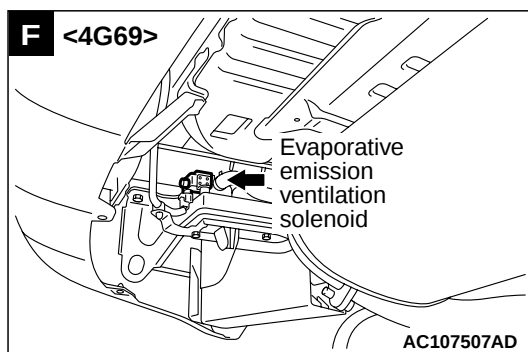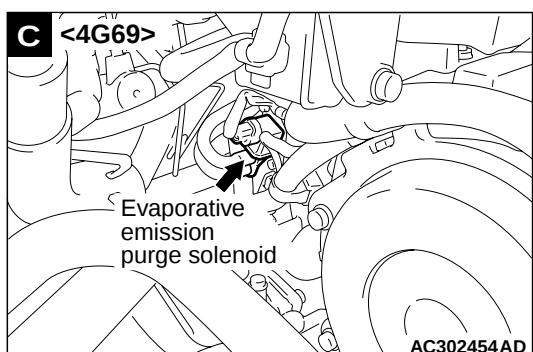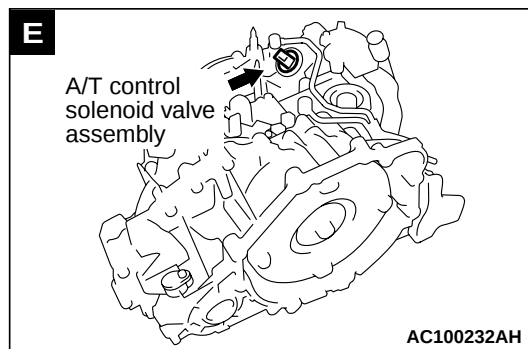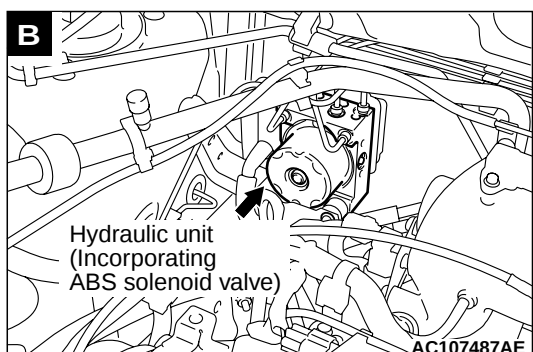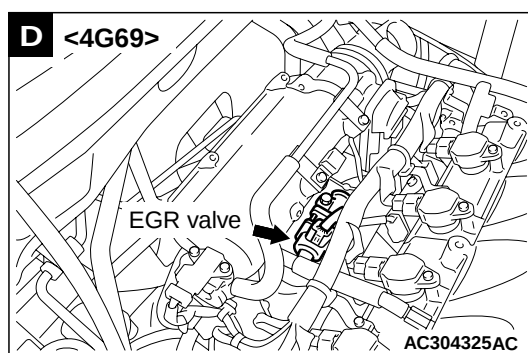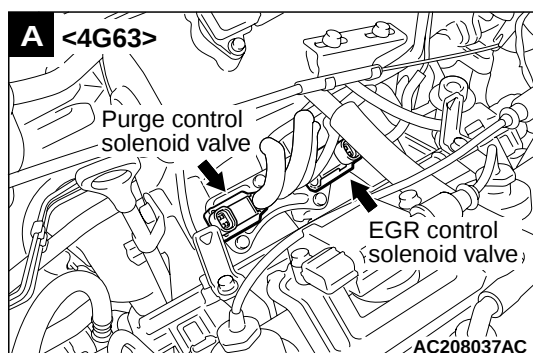



M3020000200305

INSPECTION CONNECTOR

Name	Symbol	Name	Symbol
Diagnosis connector	B	Engine speed detection connector	A

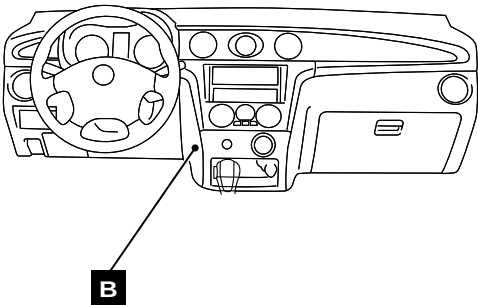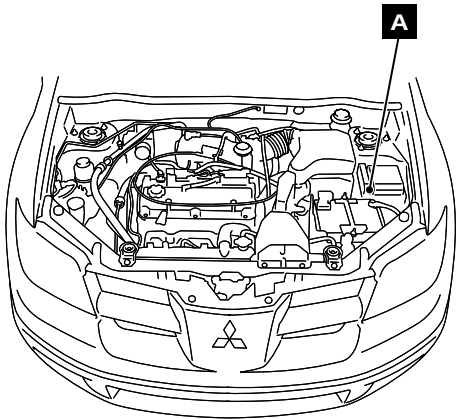



AC207979 AE

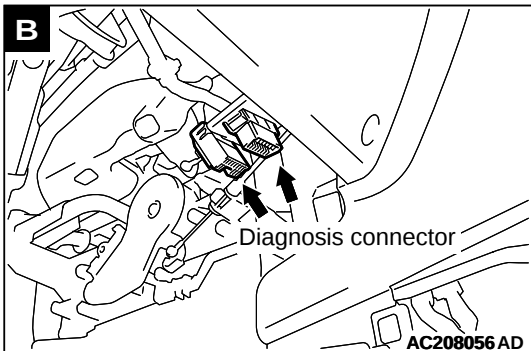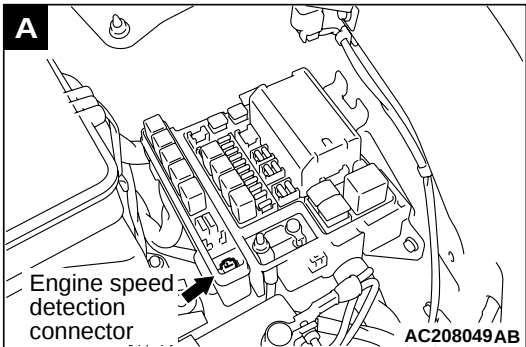





FUSIBLE LINK AND FUSE

M3020000100245

Name	Symbol	Name	Symbol
Fuses No.6 to 25 (Engine compartment)	B	Fusible links No.1 to 5 (Engine compartment)	B
Fuses No.1 to 21 (Passenger compartment)	C	Fusible link No.26 (Engine compartment)	A

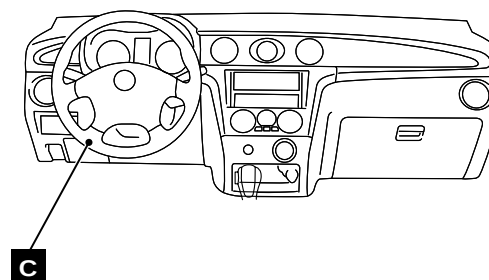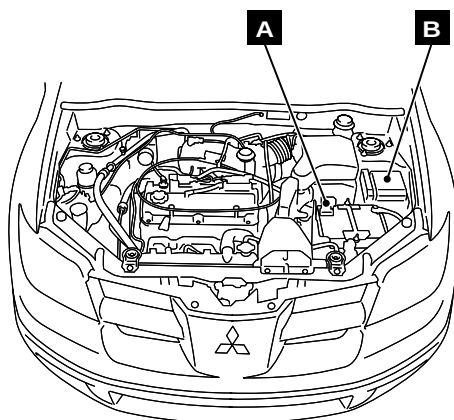


AC211773 AB

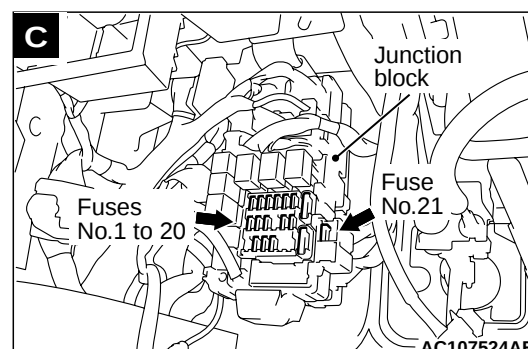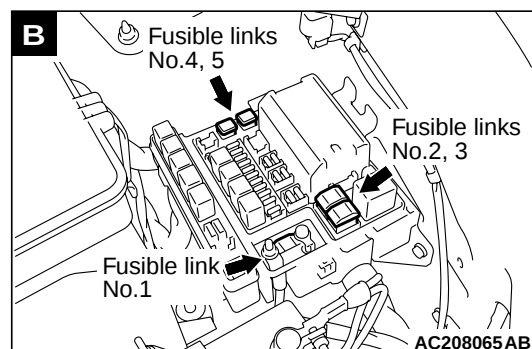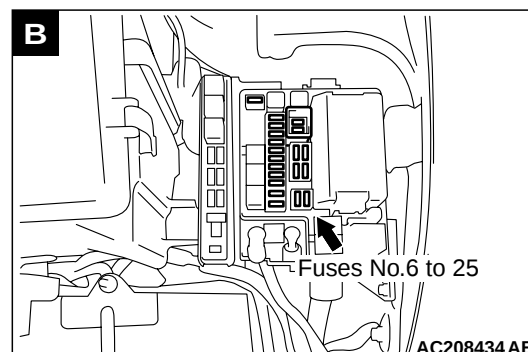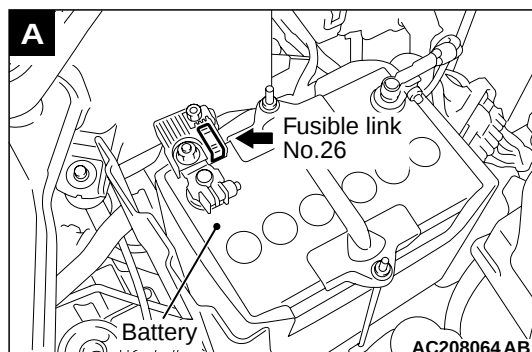

EARTH


M3020000300261

L.H. drive vehicles

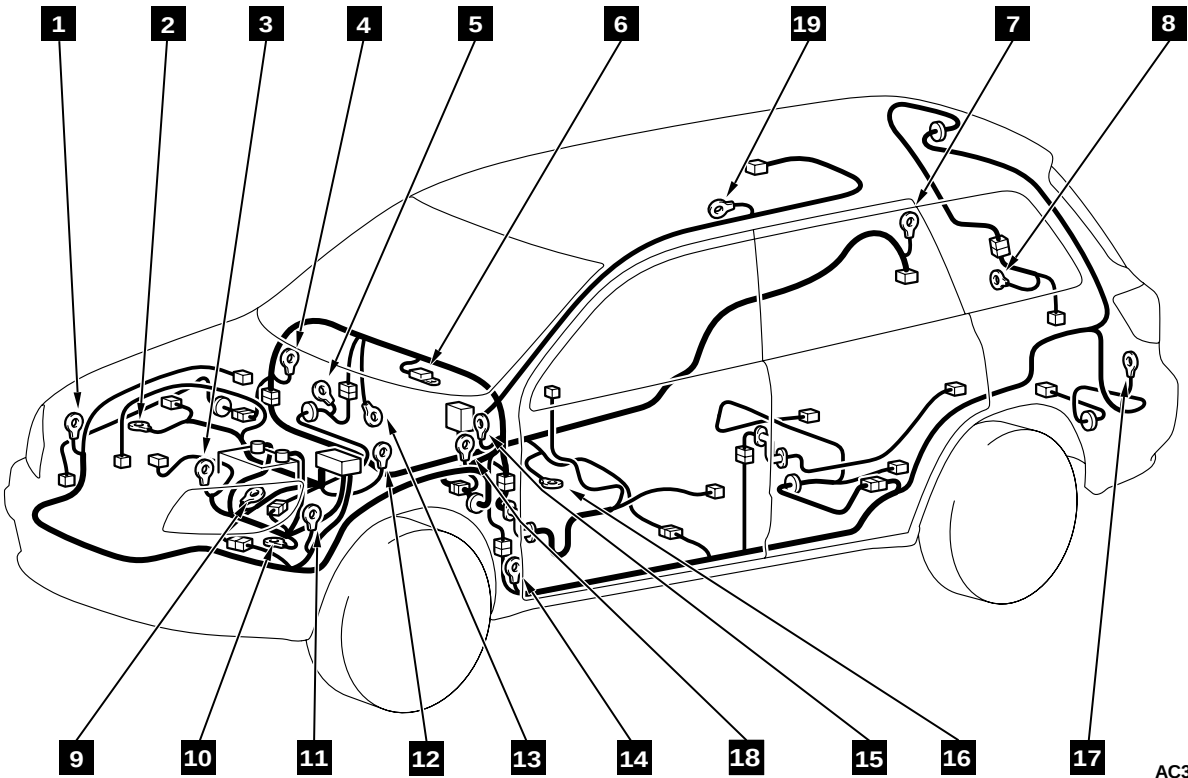









AC308095 AB









R.H. drive vehicles








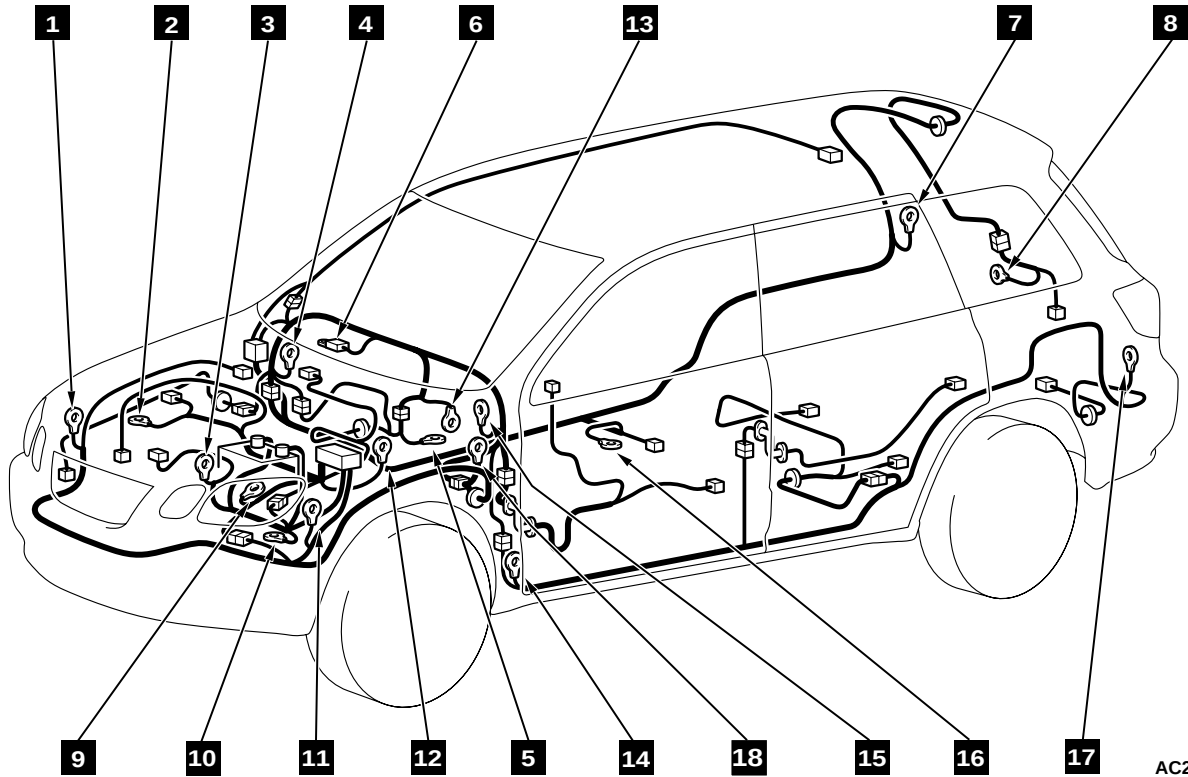



AC208782 AB

NOTE: Same earth numbers are used in the circuit diagram.

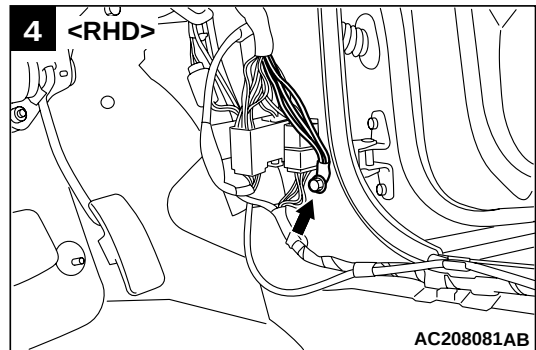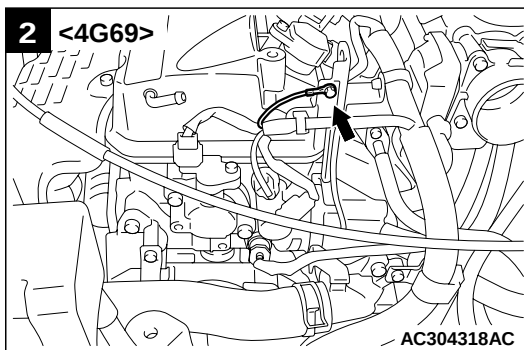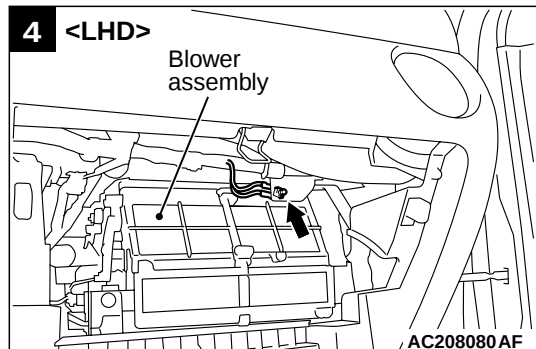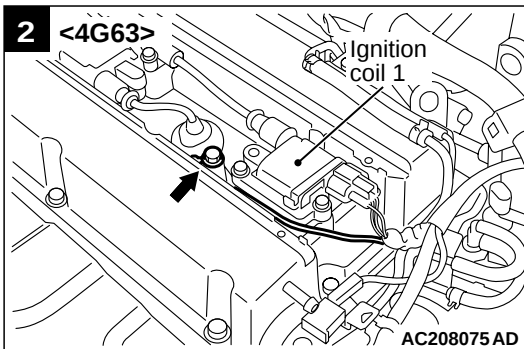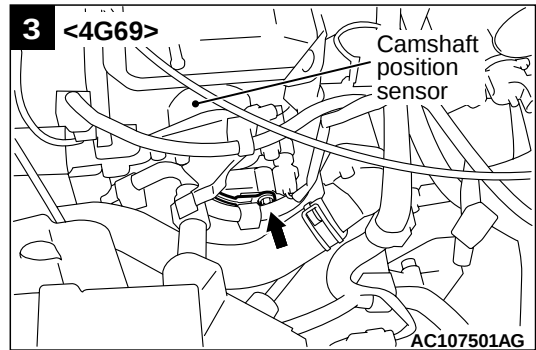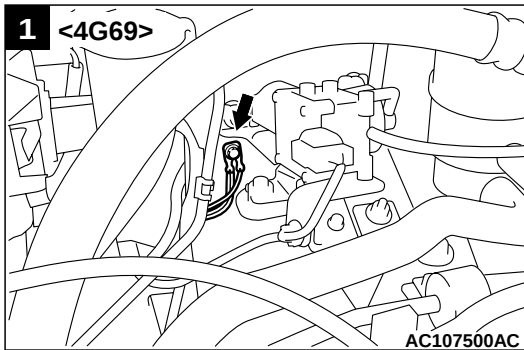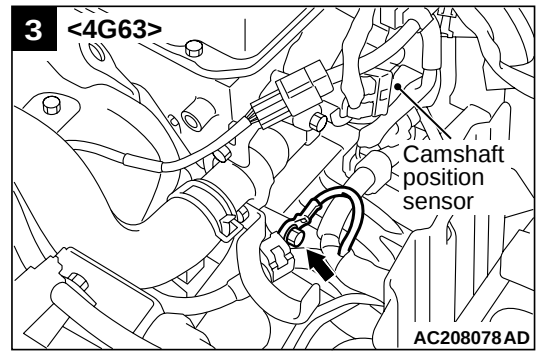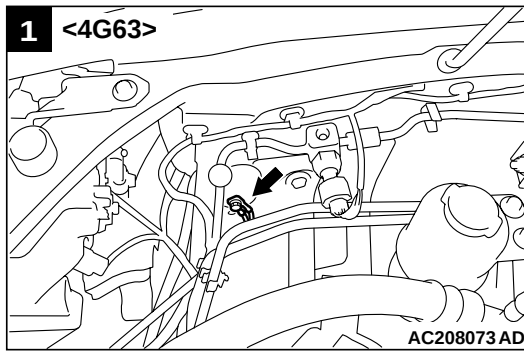

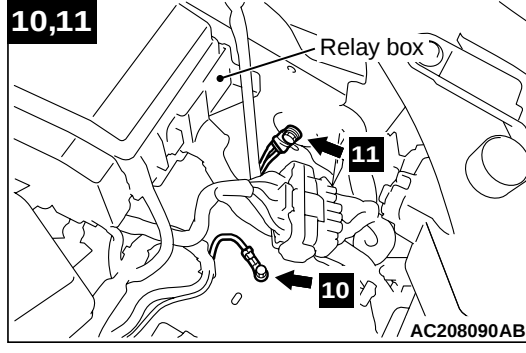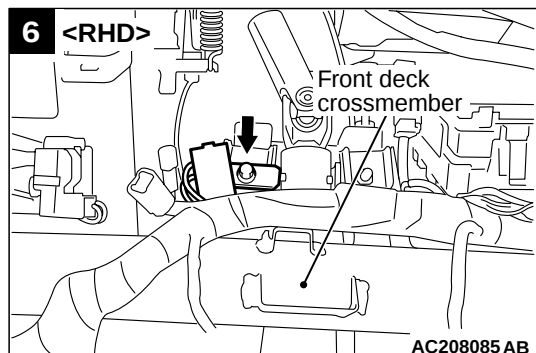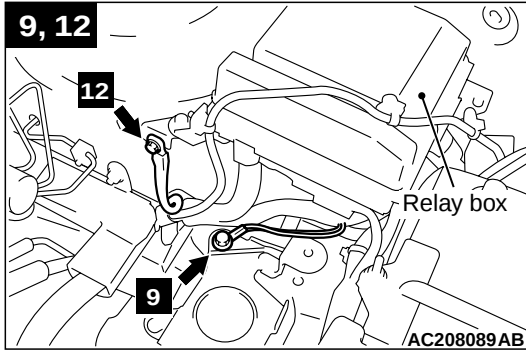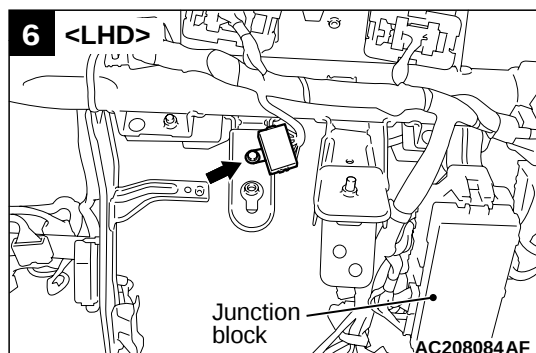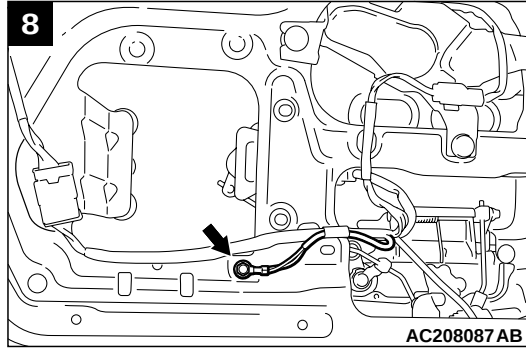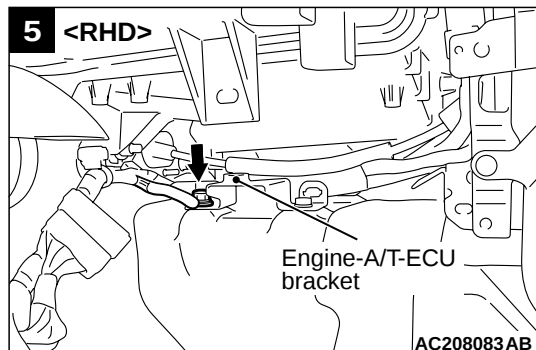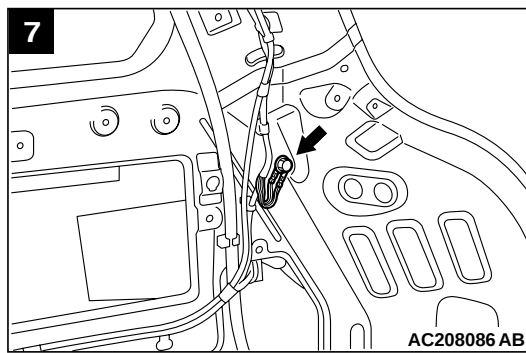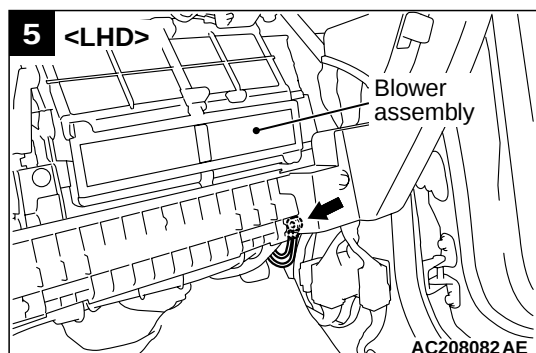

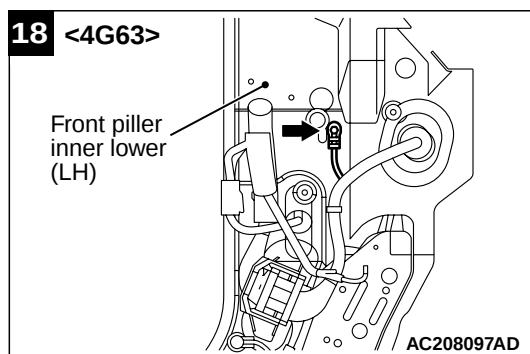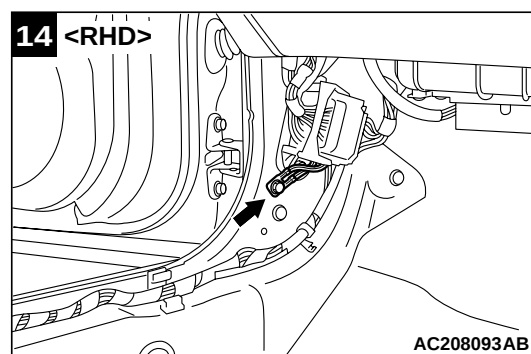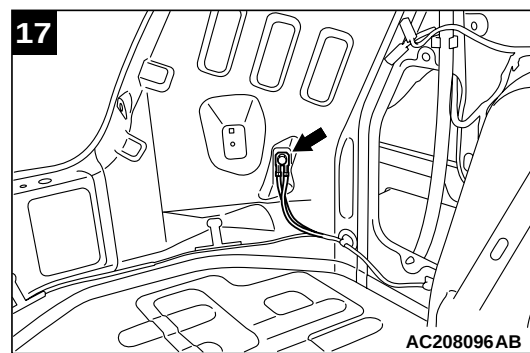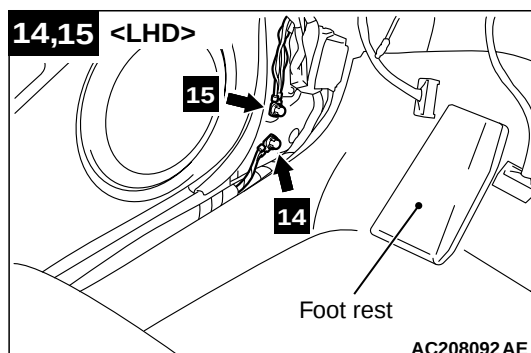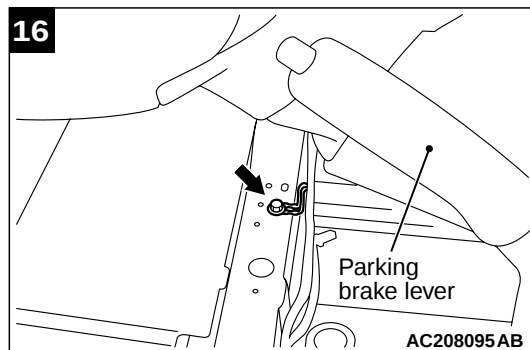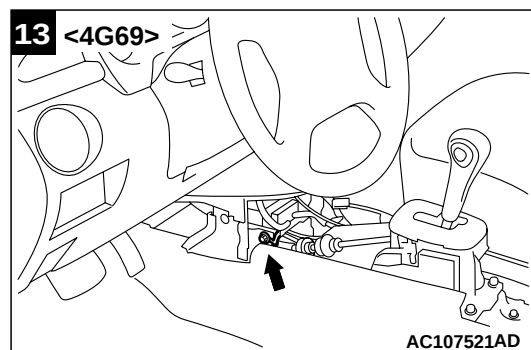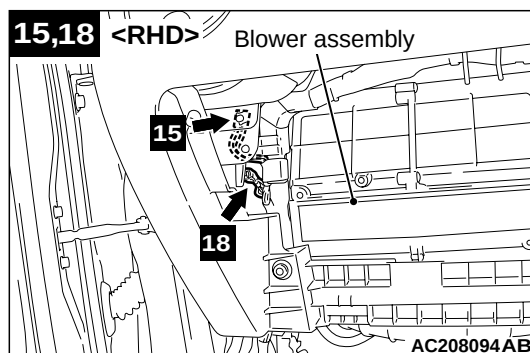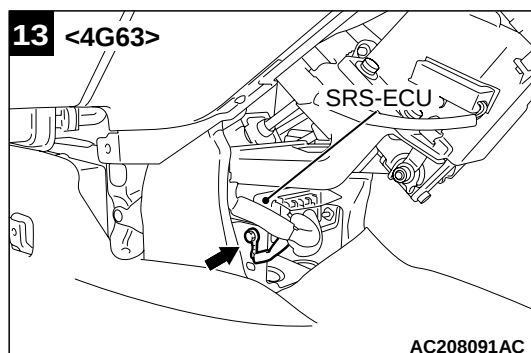


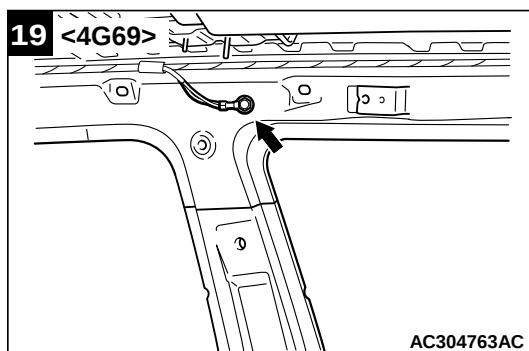


EARTH CABLE

M3020001000263

<4G63>

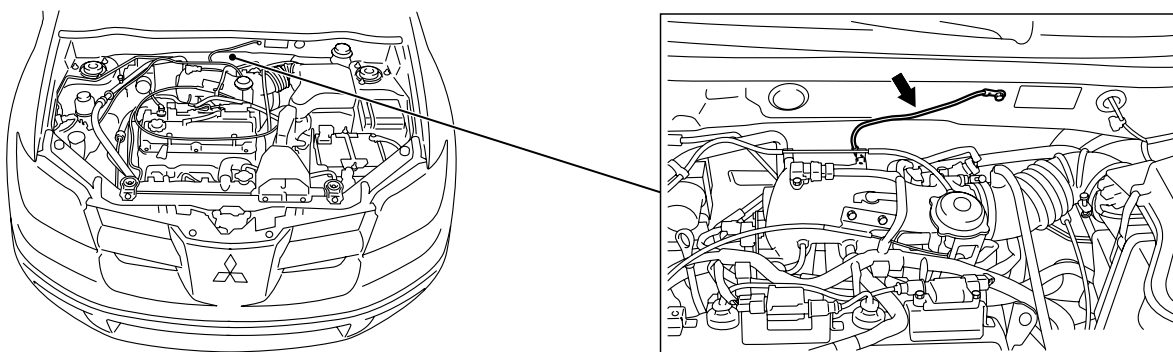

<4G69>

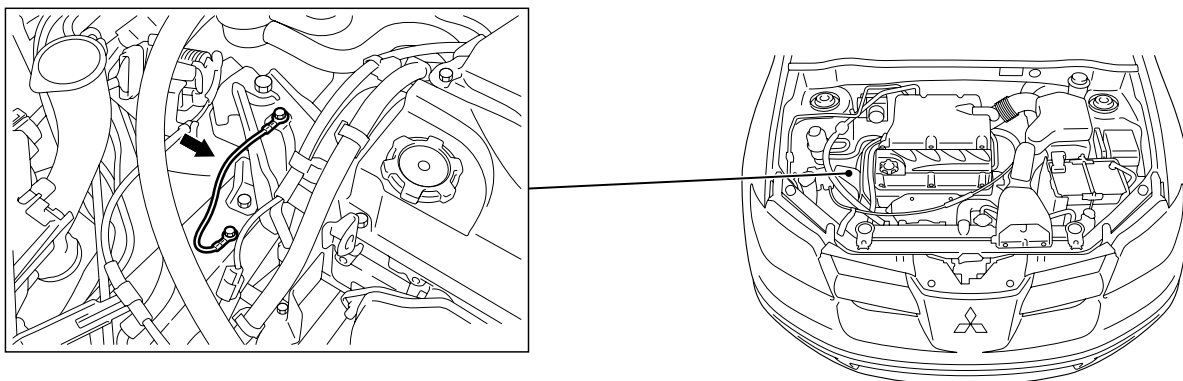

AC308096AB