
GROUP 4

INDEX

CONTENTS

IN ORDER OF CONNECTOR No....	4-2	IN ORDER OF PART NAME.....	4-10
------------------------------	-----	----------------------------	------

IN ORDER OF CONNECTOR No.

M3040002000150

In order of connector No.

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A	A-01	Side turn signal lamp (RH)	3-69, 101
	A-02	A/C pressure sensor	3-106, 112
	A-03	No connection	-
	A-04	Side turn signal lamp (LH)	3-68, 100
	A-05X	Front fog lamp relay or spare connector (for front fog lamp relay)	3-48, 156
	A-06X	Horn relay	3-74
	A-07X	Accessory socket relay	3-134
	A-08X	Wiper deicer relay	3-131
	A-10X	Fan control relay	3-39, 107, 113
	A-11X	Front-ECU	3-17, 40, 45, 49, 53, 65, 67, 116, 120, 157
	A-12X	Front-ECU	3-40, 45, 49, 53, 116, 120, 157
	A-13	ABS sensor (Front: LH) <ABS>	3-140
	A-14	Front wiring harness (LH) and control wiring harness combination	3-24, 26, 28, 38, 39, 106, 107, 111, 112, 113, 116, 138, 140, 148
	A-15	Headlamp (LH)	3-40
	A-16	Headlamp assembly (LH)	3-44, 66, 68, 100
	A-17	Front impact sensor (LH)	3-144
	A-18	Outside thermo sensor	3-114
	A-19	Front fog lamp (LH) or spare connector (for front fog lamp)	3-48, 156
	A-20	Fan controller	3-39, 107, 113
	A-21	No connection	-
	A-22	Horn (HI)	3-74
	A-23	Horn (LO)	3-74
	A-24	Front fog lamp (RH) or spare connector (for front fog lamp)	3-48, 156
	A-25	Headlamp washer motor	3-120
	A-26	Windshield washer motor	3-116
	A-27	Rear washer motor	3-123
	A-28	Front impact sensor (RH)	3-144
	A-29	Headlamp assembly (RH)	3-44, 67, 69, 101
	A-30	Headlamp (RH)	3-40
	A-31	ABS sensor (Front: RH) <ABS>	3-140

Connector No.		Parts name	Circuit diagram page	Wiring diagram page
B	B-01	Injector 1	3-32	1-6
	B-02	Injector 2	3-32	1-6
	B-03	ABS-ECU	3-138, 140, 141	1-7
	B-04	Injector 3	3-32	1-6
	B-05	Injector 4	3-32	1-7
	B-06	Throttle position sensor	3-34	1-7
	B-07	Windshield wiper motor	3-116	1-7
	B-08	Air flow sensor	3-36	1-7
	B-09	Brake fluid level switch	3-81	1-7
	B-11X	Engine speed detection connector	3-24, 29	1-7
	B-17X	Engine control relay	3-28, 38, 148	1-7
	B-18X	A/C compressor relay	3-106, 111	1-7
	B-19	Control wiring harness and battery wiring harness combination	3-22, 26, 29, 81	1-7
	B-24	Oil pressure switch	3-81	1-7
	B-25	Starter	3-22	1-7
	B-26	Starter	3-22	1-7
	B-27	A/C compressor assembly	3-106, 111	1-6
	B-28	Power steering fluid pressure switch	3-37	1-6
	B-29	Crank angle sensor	3-33	1-6
	B-30	Alternator	3-26	1-6
	B-31	Alternator	3-26	1-6
	B-32	Wiper deicer	3-131	1-7
	B-101	Purge control solenoid valve	3-33	1-8
	B-102	EGR control solenoid valve	3-33	1-8
	B-103	Detonation sensor	3-36	1-8
	B-105	Idle speed control servo	3-32	1-9
	B-106	Camshaft position sensor	3-33	1-9
	B-107	Capacitor	3-24	1-9
	B-108	Engine coolant temperature sensor	3-34	1-9
	B-109	Engine coolant temperature gauge unit	3-76	1-9
	B-110	Ignition coil 1	3-24	1-9
	B-111	Ignition coil 2	3-24	1-8
	B-112	Oxygen sensor (Front)	3-35	1-9
	B-114	Back-up lamp switch	3-72, 122	1-9
	B-115	Vehicle speed sensor	3-37, 77, 118, 152	1-9

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
C	C-01	J/C (4) 3-9, 44, 48, 52, 65, 67, 70, 76, 105, 111, 126, 128, 130, 132, 133, 135, 136, 153, 154, 156	1-10
	C-02	J/C (3) 3-8, 31, 41, 42, 45, 46, 49, 51, 53, 55, 70, 71, 72, 77, 80, 84, 110, 116, 117, 118, 120, 121, 122, 123, 124, 132, 136, 141, 144, 147, 149, 152, 157, 158	1-10
	C-03	Fog lamp switch or spare connector (for fog lamp switch) 3-48, 52, 156	1-10
	C-04	Combination meter 3-26, 31, 69, 76, 80, 101, 138, 142	1-10
	C-05	Combination meter 3-26, 31, 40, 48, 52, 57, 61, 69, 81, 101, 138, 142, 150, 156	1-10
	C-06	A/C-ECU <Manual A/C> 3-105, 106, 126, 127, 128, 129, 130	1-11
	C-07	Clock 3-136	1-11
	C-08	Blower switch <Manual A/C> 3-104	1-11
	C-09	Air bag module (squib) (passenger's side) 3-142	1-11
	C-10	Instrument panel wiring harness and A/C wiring harness combination <Manual A/C> 3-105	1-11
	C-11	Resistor <Manual A/C> 3-104	1-11
	C-12	Blower motor <Manual A/C> 3-104	1-11
	C-13	Instrument panel wiring harness and floor wiring harness (RH) combination 3-58, 62, 72, 81, 85, 87, 99, 133, 151, 154	1-11
	C-14	Instrument panel wiring harness and front wiring harness (RH) combination 3-69, 101, 140, 144	1-11
	C-15	Instrument panel wiring harness and front door wiring harness (RH) combination 3-88, 92, 95, 96, 103, 125, 129, 132	1-11
	C-16	J/C (1) 3-6, 33, 37, 77, 118, 138, 152	1-11
	C-17	J/C (2) 3-7, 28, 35, 37, 38, 77, 81, 107, 113, 116, 118, 131, 148, 152	1-11
	C-18	Oxygen sensor (Rear) 3-35	1-11
	C-20	Cigarette lighter 3-135	1-11
	C-21	Cigarette lighter 3-135	1-11
	C-22	Hazard warning switch 3-70	1-10
	C-23	Diagnosis connector 3-31, 41, 45, 116, 120, 123	1-10
	C-24	Diagnosis connector 3-31, 43, 47, 51, 55, 59, 63, 71, 78, 84, 94, 98, 115, 119, 121, 124, 141, 144, 147, 149, 152, 158	1-10
	C-25	Remote controlled mirror switch 3-125	1-10

Connector No.		Parts name	Circuit diagram page	Wiring diagram page
C	C-26	A/C-ECU <Automatic A/C>	3-110, 111, 112, 114, 115, 126, 128, 130	1-11
	C-27	A/C-ECU <Automatic A/C>	3-110, 112, 114, 115, 127, 129, 130	1-11
	C-32	Blower linear controller <Automatic A/C>	3-110	1-11
	C-36	Instrument panel wiring harness and A/C wiring harness combination <Automatic A/C>	3-114, 115	1-11
	C-101	Stop lamp switch	3-73, 138	1-12
	C-102	Spare connector (for audio)	3-132	1-13
	C-103	Cigarette lighter illumination lamp	3-135	1-13
	C-104	Instrument panel wiring harness and control wiring harness combination	3-31, 76, 106, 111, 112, 116, 138, 140, 141, 148	1-13
	C-105	Instrument panel wiring harness and control wiring harness combination	3-26, 31, 72, 77, 81, 106, 112, 118, 122, 138, 141, 149, 152	1-13
	C-106	Instrument panel wiring harness and control wiring harness combination	3-22, 29, 31, 72, 77, 106, 111, 118, 122, 131, 138, 148, 152	1-13
	C-107	Glove box lamp	3-65	1-13
	C-108	Headlamp leveling switch	3-67	1-12
	C-114	SRS-ECU	3-143, 145	1-13
	C-115	SRS-ECU	3-94, 103, 142, 144	1-13
	C-116	Instrument panel wiring harness and front wiring harness (LH) combination	3-18, 20, 24, 28, 31, 40, 41, 42, 44, 45, 46, 48, 49, 50, 51, 52, 53, 54, 55, 56, 60, 65, 67, 68, 69, 70, 71, 73, 74, 76, 78, 80, 84, 85, 94, 98, 100, 101, 104, 105, 106, 110, 111, 112, 114, 116, 117, 119, 120, 121, 123, 124, 126, 127, 128, 129, 130, 131, 132, 134, 135, 136, 138, 141, 144, 146, 147, 149, 150, 153, 154, 156, 157, 158	1-12
	C-117	Instrument panel wiring harness and floor wiring harness (LH) combination	3-44, 52, 72, 73, 76, 80, 85, 87, 133, 134, 140, 154	1-12
	C-118	Instrument panel wiring harness and front door wiring harness (LH) combination	3-86, 87, 92, 125, 129, 132	1-12
	C-119	Rheostat	3-153	1-12
	C-121	Antenna amplifire	3-133	1-13
	C-123	Photo sensor <Automatic A/C>	3-115	1-12
	C-127	Interior temperature sensor <Automatic A/C>	3-114	1-12
	C-133	Spare connector (for audio)	3-133	1-13
	C-134	Engine-ECU	3-24, 28, 30, 33, 36, 37, 38, 106, 112, 149	1-13

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
C	C-135	Engine-ECU	3-26, 28, 31, 33, 37, 38, 106, 112, 149
	C-136	Engine-ECU	3-24, 29, 31, 35, 77, 149
	C-137	Engine-ECU	3-29, 30, 31, 33, 34, 35, 36, 37, 77, 106, 112
	C-201	Instrument panel wiring harness and J/B combination	3-4, 52, 154
	C-202	Instrument panel wiring harness and J/B combination	3-4, 30, 31, 41, 42, 44, 45, 46, 49, 51, 53, 55, 60, 68, 69, 70, 71, 72, 77, 80, 100, 101, 110, 117, 121, 122, 138, 151, 154, 157, 158
	C-203	Instrument panel wiring harness and J/B combination	3-4, 18, 21, 24, 26, 30, 41, 45, 49, 53, 56, 60, 70, 72, 78, 80, 84, 85, 104, 110, 117, 121, 123, 125, 127, 129, 130, 135, 138, 142, 146, 147, 150, 154, 157
	C-204	Instrument panel wiring harness and J/B combination	3-4, 20, 31, 42, 46, 50, 52, 54, 56, 60, 71, 78, 80, 84, 94, 98, 104, 110, 119, 121, 124, 127, 129, 130, 141, 144, 147, 149, 150, 158
	C-205	Instrument panel wiring harness and J/B combination	3-4, 24, 26, 30, 31, 42, 43, 46, 47, 50, 51, 52, 54, 55, 56, 58, 59, 60, 62, 63, 69, 71, 77, 78, 80, 84, 92, 94, 95, 96, 98, 99, 101, 104, 110, 119, 121, 124, 125, 127, 129, 131, 135, 138, 141, 142, 144, 147, 149, 150, 151, 158
	C-206	Defogger relay	3-4, 21, 127, 129, 130
	C-207	Blower relay	3-4, 104, 110
	C-208	Power window relay	3-4, 85
	C-209	Floor wiring harness (LH) and J/B combination	3-4, 30, 42, 44, 46, 58, 62, 68, 85, 93, 97, 100, 123, 127, 147, 154
	C-210	Roof wiring harness and J/B combination	3-4, 56, 64, 102, 146
	C-211	No connection	3-4
	C-212	Rear fog lamp relay	3-4, 52
	C-213	Fuel pump relay (2)	3-4, 30
	C-214	Heated seat relay	3-4, 154
	C-215	Fuel pump relay (1)	3-4, 30
	C-216	No connection	3-4
	C-217	ETACS-ECU	3-4, 42, 46, 50, 54, 56, 58, 60, 62, 64, 68, 71, 78, 84, 92, 94, 95, 96, 98, 99, 100, 102, 117, 119, 121, 123, 124, 147, 150, 158
	C-218	Instrument panel wiring harness and roof wiring harness combination	3-96, 146

Connector No.		Parts name	Circuit diagram page	Wiring diagram page
C	C-219	ETACS-ECU	3-43, 47, 50, 51, 52, 54, 55, 57, 58, 61, 62, 71, 78, 84, 94, 95, 96, 98, 117, 118, 121, 123, 124, 147, 150, 152, 158	1-15
	C-220	ETACS-ECU	3-54, 57, 61, 92, 94, 95, 96, 98, 103, 123, 124	1-15
	C-303	Ignition switch	3-18	1-16
	C-304	Key reminder switch	3-57, 61, 98, 148	1-16
	C-305	Horn switch	3-74	1-16
	C-306	Air bag module (squib) (driver's side)	3-142	1-16
	C-307	Clock spring	3-142	1-16
	C-308	Clock spring	3-74	1-16
	C-310	Column switch	3-41, 45, 49, 53, 70, 117, 120, 122, 157	1-16
	C-311	Outside/inside air selection damper control motor	3-105, 114	1-17
	C-313	Air mixing damper control motor and potentiometer <Automatic A/C>	3-114	1-17
	C-314	Heater water temperature sensor <Automatic A/C>	3-114	1-17
	C-315	Mode selection damper control motor and potentiometer <Automatic A/C>	3-115	1-17
	C-316	Air thermo sensor <Automatic A/C>	3-114	1-17
D	D-02	Floor wiring harness (RH) and rear door wiring harness (RH) combination	3-89, 93, 97, 133	1-18
	D-05	Front room lamp	3-56, 64, 102	1-18
	D-06	Sunroof switch	3-146	1-18
	D-08	Side air bag module (squib) (LH)	3-145	1-18
	D-09	Sunroof motor assembly	3-146	1-18
	D-10	Rear door switch (RH)	3-58, 62, 99, 151	1-19
	D-11	Rear room lamp	3-56, 64, 102	1-19
	D-12	Fuel gauge unit (sub) <4WD>	3-76, 80	1-19
	D-13	ABS sensor (Rear: RH) <ABS>	3-140	1-19
	D-14	Rear combination lamp (RH)	3-44, 68, 72, 73, 100	1-19
	D-15	Fuel gauge unit <2WD>	3-76, 80	1-19
	D-16	Fuel pump <2WD> or fuel pump and gauge unit (main) <4WD>	3-30, 76, 80	1-19
	D-17	Accessory socket (1)	3-134	1-19
	D-18	Accessory socket (1)	3-134	1-19
	D-19	Rear combination lamp (LH)	3-44, 68, 72, 73, 100	1-19
	D-20	Rear door switch (LH)	3-58, 62, 99, 151	1-19
	D-22	ABS sensor (Rear: LH) <ABS>	3-140	1-19

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D	D-24	Floor wiring harness (LH) and fuel wiring harness combination	3-30, 76, 80, 140
	D-26	Floor wiring harness (LH) and rear door wiring harness (LH) combination	3-90, 93, 97, 133
	D-27	Side impact sensor (LH)	3-145
	D-28	Front door switch (LH)	3-42, 46, 58, 62, 85, 99, 147, 151
	D-29	Seat belt pre-tensioner (LH)	3-143
	D-31	Floor wiring harness (RH) and floor wiring harness (LH) combination	3-44, 68, 73, 93, 97, 100, 143, 145, 154
	D-32	Heated seat assembly (LH)	3-155
	D-33	Parking brake switch	3-81
	D-35	G sensor <ABS-4WD>	3-140
	D-37	No connection	3-44, 154
	D-38	Heated seat switch	3-154
	D-39	Heated seat assembly (RH)	3-155
	D-40	Side air bag module (squib) (RH)	3-145
	D-41	Side impact sensor (RH)	3-145
	D-42	Front door switch (RH)	3-58, 62, 99, 151
	D-43	Seat belt pre-tensioner (RH)	3-143
E	E-01	Power window sub switch (Rear: LH)	3-90
	E-03	Power window motor (Rear: LH)	3-90
	E-05	Power window main switch	3-87
	E-06	Remote controlled mirror (LH)	3-125, 129
	E-07	Tweeter (LH)	3-132
	E-08	Door lock actuator (Rear: LH)	3-93, 97
	E-09	Rear door wiring harness (LH) and rear door sub wiring harness (LH) combination	3-90
	E-10	Rear door speaker (LH)	3-133
	E-11	Door lock actuator (Front: LH)	3-92, 96
	E-12	Front door wiring harness (LH) and front door sub wiring harness (LH) combination	3-86
	E-13	Power window motor (Front: LH)	3-86
	E-14	Front door speaker (LH)	3-132
	E-15	Tweeter (RH)	3-132
	E-16	Remote controlled mirror (RH)	3-125, 129
	E-17	Power window sub switch (Front: RH)	3-88
	E-18	Door lock key cylinder switch (RH)	3-95, 103
	E-20	Power window motor (Rear: RH)	3-89

Connector No.		Parts name	Circuit diagram page	Wiring diagram page
E	E-21	Power window sub switch (Rear: RH)	3-89	1-21
	E-22	Front door speaker (RH)	3-132	1-21
	E-23	Power window motor (Front: RH)	3-88	1-21
	E-24	Front door wiring harness (RH) and front door sub wiring harness (RH) combination	3-88	1-21
	E-25	Door lock actuator (Front: RH)	3-92, 96	1-21
	E-26	Rear door speaker (RH)	3-133	1-21
	E-27	Rear door wiring harness (RH) and rear door sub wiring harness (RH) combination	3-89	1-21
	E-28	Door lock actuator (Rear: RH)	3-93, 97	1-21
F	F-01	Defogger (-)	3-127	1-22
	F-02	Rear wiper motor	3-123	1-22
	F-03	High-mounted stop lamp	3-73	1-22
	F-04	Defogger (+)	3-127	1-22
	F-05	Floor wiring harness (LH) and tailgate wiring harness combination	3-58, 62, 93, 97, 99, 123, 151	1-22
	F-06	Tailgate lock actuator	3-93, 97	1-22
	F-07	Tailgate switch	3-58, 62, 99, 151	1-22
	F-08	Licence plate lamp (RH)	3-44	1-22
	F-09	Floor wiring harness (LH) and rear bumper wiring harness combination	3-44, 52	1-22
	F-10	Licence plate lamp (LH)	3-44	1-22
	F-12	Rear fog lamp	3-52	1-22

IN ORDER OF PART NAME

M3040001000157

In order of parts name

	Parts name	Connector No.	Circuit diagram page	Wiring diagram page
A	A/C compressor assembly	B-27	3-106, 111	1-6
	A/C compressor relay	B-18X	3-106, 111	1-7
	A/C pressure sensor	A-02	3-106, 112	1-4
	A/C-ECU <Automatic A/C>	C-26	3-110, 111, 112, 114, 115, 126, 128, 130	1-11
	A/C-ECU <Automatic A/C>	C-27	3-110, 112, 114, 115, 127, 129, 130	1-11
	A/C-ECU <Manual A/C>	C-06	3-105, 106, 126, 127, 128, 129, 130	1-11
	ABS sensor (Front: LH) <ABS>	A-13	3-140	1-5
	ABS sensor (Front: RH) <ABS>	A-31	3-140	1-4
	ABS sensor (Rear: LH) <ABS>	D-22	3-140	1-19
	ABS sensor (Rear: RH) <ABS>	D-13	3-140	1-19
	ABS-ECU	B-03	3-138, 140, 141	1-7
	Accessory socket (1)	D-17	3-134	1-19
	Accessory socket (1)	D-18	3-134	1-19
	Accessory socket relay	A-07X	3-134	1-5
	Air bag module (squib) (driver's side)	C-306	3-142	1-16
	Air bag module (squib) (passenger's side)	C-09	3-142	1-11
	Air flow sensor	B-08	3-36	1-7
	Air mixing damper control motor and potentiometer <Automatic A/C>	C-313	3-114	1-17
	Air thermo sensor <Automatic A/C>	C-316	3-114	1-17
	Alternator	B-30	3-26	1-6
	Alternator	B-31	3-26	1-6
	Antenna amplifire	C-121	3-133	1-13
B	Back-up lamp switch	B-114	3-72, 122	1-9
	Blower linear controller <Automatic A/C>	C-32	3-110	1-11
	Blower motor <Manual A/C>	C-12	3-104	1-11
	Blower relay	C-207	3-4, 104, 110	1-14
	Blower switch <Manual A/C>	C-08	3-104	1-11
	Brake fluid level switch	B-09	3-81	1-7
C	Camshaft position sensor	B-106	3-33	1-9
	Capacitor	B-107	3-24	1-9
	Cigarette lighter	C-20	3-135	1-11
	Cigarette lighter	C-21	3-135	1-11
	Cigarette lighter illumination lamp	C-103	3-135	1-13

Parts name		Connector No.	Circuit diagram page	Wiring diagram page
C	Clock	C-07	3-136	1-11
	Clock spring	C-307	3-142	1-16
	Clock spring	C-308	3-74	1-16
	Column switch	C-310	3-41, 45, 49, 53, 70, 117, 120, 122, 157	1-16
	Combination meter	C-04	3-26, 31, 69, 76, 80, 101, 138, 142	1-10
	Combination meter	C-05	3-26, 31, 40, 48, 52, 57, 61, 69, 81, 101, 138, 142, 150, 156	1-10
	Control wiring harness and battery wiring harness combination	B-19	3-22, 26, 29, 81	1-7
	Crank angle sensor	B-29	3-33	1-6
D	Defogger (+)	F-04	3-127	1-22
	Defogger (–)	F-01	3-127	1-22
	Defogger relay	C-206	3-4, 21, 127, 129, 130	1-14
	Detonation sensor	B-103	3-36	1-8
	Diagnosis connector	C-23	3-31, 41, 45, 116, 120, 123	1-10
	Diagnosis connector	C-24	3-31, 43, 47, 51, 55, 59, 63, 71, 78, 84, 94, 98, 115, 119, 121, 124, 141, 144, 147, 149, 152, 158	1-10
	Door lock actuator (Front: LH)	E-11	3-92, 96	1-20
	Door lock actuator (Front: RH)	E-25	3-92, 96	1-21
	Door lock actuator (Rear: LH)	E-08	3-93, 97	1-20
	Door lock actuator (Rear: RH)	E-28	3-93, 97	1-21
	Door lock key cylinder switch (RH)	E-18	3-95, 103	1-21
E	EGR control solenoid valve	B-102	3-33	1-8
	Engine control relay	B-17X	3-28, 38, 148	1-7
	Engine coolant temperature gauge unit	B-109	3-76	1-9
	Engine coolant temperature sensor	B-108	3-34	1-9
	Engine-ECU	C-134	3-24, 28, 30, 33, 36, 37, 38, 106, 112, 149	1-13
	Engine-ECU	C-135	3-26, 28, 31, 33, 37, 38, 106, 112, 149	1-13
	Engine-ECU	C-136	3-24, 29, 31, 35, 77, 149	1-13
	Engine-ECU	C-137	3-29, 30, 31, 33, 34, 35, 36, 37, 77, 106, 112	1-13
	Engine speed detection connector	B-11X	3-24, 29	1-7
	ETACS-ECU	C-217	3-4, 42, 46, 50, 54, 56, 58, 60, 62, 64, 68, 71, 78, 84, 92, 94, 95, 96, 98, 99, 100, 102, 117, 119, 121, 123, 124, 147, 150, 158	1-15

Parts name		Connector No.	Circuit diagram page	Wiring diagram page
E	ETACS-ECU	C-219	3-43, 47, 50, 51, 52, 54, 55, 57, 58, 61, 62, 71, 78, 84, 94, 95, 96, 98, 117, 118, 121, 123, 124, 147, 150, 152, 158	1-15
	ETACS-ECU	C-220	3-54, 57, 61, 92, 94, 95, 96, 98, 103, 123, 124	1-15
F	Fan control relay	A-10X	3-39, 107, 113	1-5
	Fan controller	A-20	3-39, 107, 113	1-5
	Floor wiring harness (LH) and fuel wiring harness combination	D-24	3-30, 76, 80, 140	1-19
	Floor wiring harness (LH) and J/B combination	C-209	3-4, 30, 42, 44, 46, 58, 62, 68, 85, 93, 97, 100, 123, 127, 147, 154	1-14
	Floor wiring harness (LH) and rear bumper wiring harness combination	F-09	3-44, 52	1-22
	Floor wiring harness (LH) and rear door wiring harness (LH) combination	D-26	3-90, 93, 97, 133	1-19
	Floor wiring harness (LH) and tailgate wiring harness combination	F-05	3-58, 62, 93, 97, 99, 123, 151	1-22
	Floor wiring harness (RH) and floor wiring harness (LH) combination	D-31	3-44, 68, 73, 93, 97, 100, 143, 145, 154	1-18
	Floor wiring harness (RH) and rear door wiring harness (RH) combination	D-02	3-89, 93, 97, 133	1-18
	Fog lamp switch or spare connector (for fog lamp switch)	C-03	3-48, 52, 156	1-10
	Front door speaker (LH)	E-14	3-132	1-20
	Front door speaker (RH)	E-22	3-132	1-21
	Front door switch (LH)	D-28	3-42, 46, 58, 62, 85, 99, 147, 151	1-19
	Front door switch (RH)	D-42	3-58, 62, 99, 151	1-18
	Front door wiring harness (LH) and front door sub wiring harness (LH) combination	E-12	3-86	1-20
	Front door wiring harness (RH) and front door sub wiring harness (RH) combination	E-24	3-88	1-21
	Front fog lamp (LH) or spare connector (for front fog lamp)	A-19	3-48, 156	1-5
	Front fog lamp (RH) or spare connector (for front fog lamp)	A-24	3-48, 156	1-4
	Front fog lamp relay or spare connector (for front fog lamp relay)	A-05X	3-48, 156	1-5
	Front impact sensor (LH)	A-17	3-144	1-5
	Front impact sensor (RH)	A-28	3-144	1-4
	Front room lamp	D-05	3-56, 64, 102	1-18

Parts name		Connector No.	Circuit diagram page	Wiring diagram page
F	Front wiring harness (LH) and control wiring harness combination	A-14	3-24, 26, 28, 38, 39, 106, 107, 111, 112, 113, 116, 138, 140, 148	1-5
	Front-ECU	A-11X	3-17, 40, 45, 49, 53, 65, 67, 116, 120, 157	1-5
	Front-ECU	A-12X	3-40, 45, 49, 53, 116, 120, 157	1-5
	Fuel gauge unit (sub) <4WD>	D-12	3-76, 80	1-19
	Fuel gauge unit <2WD>	D-15	3-76, 80	1-19
	Fuel pump <2WD> or fuel pump and gauge unit (main) <4WD>	D-16	3-30, 76, 80	1-19
	Fuel pump relay (1)	C-215	3-4, 30	1-14
	Fuel pump relay (2)	C-213	3-4, 30	1-14
G	G sensor <ABS-4WD>	D-35	3-140	1-18
	Glove box lamp	C-107	3-65	1-13
H	Hazard warning switch	C-22	3-70	1-10
	Headlamp (LH)	A-15	3-40	1-5
	Headlamp (RH)	A-30	3-40	1-4
	Headlamp assembly (LH)	A-16	3-44, 66, 68, 100	1-5
	Headlamp assembly (RH)	A-29	3-44, 67, 69, 101	1-4
	Headlamp leveling switch	C-108	3-67	1-12
	Headlamp washer motor	A-25	3-120	1-4
	Heated seat assembly (LH)	D-32	3-155	1-18
	Heated seat assembly (RH)	D-39	3-155	1-18
	Heated seat relay	C-214	3-4, 154	1-14
	Heated seat switch	D-38	3-154	1-18
	Heater water temperature sensor <Automatic A/C>	C-314	3-114	1-17
	High-mounted stop lamp	F-03	3-73	1-22
	Horn (HI)	A-22	3-74	1-5
	Horn (LO)	A-23	3-74	1-4
	Horn relay	A-06X	3-74	1-5
	Horn switch	C-305	3-74	1-16
I	Idle speed control servo	B-105	3-32	1-9
	Ignition coil 1	B-110	3-24	1-9
	Ignition coil 2	B-111	3-24	1-8
	Ignition switch	C-303	3-18	1-16
	Injector 1	B-01	3-32	1-6
	Injector 2	B-02	3-32	1-6
	Injector 3	B-04	3-32	1-6
	Injector 4	B-05	3-32	1-7

Parts name		Connector No.	Circuit diagram page	Wiring diagram page
I	Instrument panel wiring harness and A/C wiring harness combination <Automatic A/C>	C-36	3-114, 115	1-11
	Instrument panel wiring harness and A/C wiring harness combination <Manual A/C>	C-10	3-105	1-11
	Instrument panel wiring harness and control wiring harness combination	C-104	3-31, 76, 106, 111, 112, 116, 138, 140, 141, 148	1-13
	Instrument panel wiring harness and control wiring harness combination	C-105	3-26, 31, 72, 77, 81, 106, 112, 118, 122, 138, 141, 149, 152	1-13
	Instrument panel wiring harness and control wiring harness combination	C-106	3-22, 29, 31, 72, 77, 106, 111, 118, 122, 131, 138, 148, 152	1-13
	Instrument panel wiring harness and floor wiring harness (LH) combination	C-117	3-44, 52, 72, 73, 76, 80, 85, 87, 133, 134, 140, 154	1-12
	Instrument panel wiring harness and floor wiring harness (RH) combination	C-13	3-58, 62, 72, 81, 85, 87, 99, 133, 151, 154	1-11
	Instrument panel wiring harness and front door wiring harness (LH) combination	C-118	3-86, 87, 92, 125, 129, 132	1-12
	Instrument panel wiring harness and front door wiring harness (RH) combination	C-15	3-88, 92, 95, 96, 103, 125, 129, 132	1-11
	Instrument panel wiring harness and front wiring harness (LH) combination	C-116	3-18, 20, 24, 28, 31, 40, 41, 42, 44, 45, 46, 48, 49, 50, 51, 52, 53, 54, 55, 56, 60, 65, 67, 68, 69, 70, 71, 73, 74, 76, 78, 80, 84, 85, 94, 98, 100, 101, 104, 105, 106, 110, 111, 112, 114, 116, 117, 119, 120, 121, 123, 124, 126, 127, 128, 129, 130, 131, 132, 134, 135, 136, 138, 141, 144, 146, 147, 149, 150, 153, 154, 156, 157, 158	1-12
	Instrument panel wiring harness and front wiring harness (RH) combination	C-14	3-69, 101, 140, 144	1-11
	Instrument panel wiring harness and J/B combination	C-201	3-4, 52, 154	1-14
	Instrument panel wiring harness and J/B combination	C-202	3-4, 30, 31, 41, 42, 44, 45, 46, 49, 51, 53, 55, 60, 68, 69, 70, 71, 72, 77, 80, 100, 101, 110, 117, 121, 122, 138, 151, 154, 157, 158	1-14
	Instrument panel wiring harness and J/B combination	C-203	3-4, 18, 21, 24, 26, 30, 41, 45, 49, 53, 56, 60, 70, 72, 78, 80, 84, 85, 104, 110, 117, 121, 123, 125, 127, 129, 130, 135, 138, 142, 146, 147, 150, 154, 157	1-14

Parts name		Connector No.	Circuit diagram page	Wiring diagram page
I	Instrument panel wiring harness and J/B combination	C-204	3-4, 20, 31, 42, 46, 50, 52, 54, 56, 60, 71, 78, 80, 84, 94, 98, 104, 110, 119, 121, 124, 127, 129, 130, 141, 144, 147, 149, 150, 158	1-14
	Instrument panel wiring harness and J/B combination	C-205	3-4, 24, 26, 30, 31, 42, 43, 46, 47, 50, 51, 52, 54, 55, 56, 58, 59, 60, 62, 63, 69, 71, 77, 78, 80, 84, 92, 94, 95, 96, 98, 99, 101, 104, 110, 119, 121, 124, 125, 127, 129, 131, 135, 138, 141, 142, 144, 147, 149, 150, 151, 158	1-14
	Instrument panel wiring harness and roof wiring harness combination	C-218	3-96, 146	1-15
	Interior temperature sensor <Automatic A/C>	C-127	3-114	1-12
J	J/C (1)	C-16	3-6, 33, 37, 77, 118, 138, 152	1-11
	J/C (2)	C-17	3-7, 28, 35, 37, 38, 77, 81, 107, 113, 116, 118, 131, 148, 152	1-11
	J/C (3)	C-02	3-8, 31, 41, 42, 45, 46, 49, 51, 53, 55, 70, 71, 72, 77, 80, 84, 110, 116, 117, 118, 120, 121, 122, 123, 124, 132, 136, 141, 144, 147, 149, 152, 157, 158	1-10
	J/C (4)	C-01	3-9, 44, 48, 52, 65, 67, 70, 76, 105, 111, 126, 128, 130, 132, 133, 135, 136, 153, 154, 156	1-10
K	Key reminder switch	C-304	3-57, 61, 98, 148	1-16
L	Licence plate lamp (LH)	F-10	3-44	1-22
	Licence plate lamp (RH)	F-08	3-44	1-22
M	Mode selection damper control motor and potentiometer <Automatic A/C>	C-315	3-115	1-17
N	No connection	A-03	-	1-4
	No connection	A-21	-	1-5
	No connection	C-211	3-4	1-14
	No connection	C-216	3-4	1-14
	No connection	D-37	3-44, 154	1-18
O	Oil pressure switch	B-24	3-81	1-7
	Outside thermo sensor	A-18	3-114	1-5
	Outside/inside air selection damper control motor	C-311	3-105, 114	1-17
	Oxygen sensor (Rear)	C-18	3-35	1-11
	Oxygen sensor (Front)	B-112	3-35	1-9
P	Parking brake switch	D-33	3-81	1-18
	Photo sensor <Automatic A/C>	C-123	3-115	1-12

Parts name		Connector No.	Circuit diagram page	Wiring diagram page
P	Power steering fluid pressure switch	B-28	3-37	1-6
	Power window main switch	E-05	3-87	1-20
	Power window motor (Front: LH)	E-13	3-86	1-20
	Power window motor (Front: RH)	E-23	3-88	1-21
	Power window motor (Rear: LH)	E-03	3-90	1-20
	Power window motor (Rear: RH)	E-20	3-89	1-21
	Power window relay	C-208	3-4, 85	1-14
	Power window sub switch (Front: RH)	E-17	3-88	1-21
	Power window sub switch (Rear: LH)	E-01	3-90	1-20
	Power window sub switch (Rear: RH)	E-21	3-89	1-21
	Purge control solenoid valve	B-101	3-33	1-8
R	Rear combination lamp (LH)	D-19	3-44, 68, 72, 73, 100	1-19
	Rear combination lamp (RH)	D-14	3-44, 68, 72, 73, 100	1-19
	Rear door speaker (LH)	E-10	3-133	1-20
	Rear door speaker (RH)	E-26	3-133	1-21
	Rear door switch (LH)	D-20	3-58, 62, 99, 151	1-19
	Rear door switch (RH)	D-10	3-58, 62, 99, 151	1-19
	Rear door wiring harness (LH) and rear door sub wiring harness (LH) combination	E-09	3-90	1-20
	Rear door wiring harness (RH) and rear door sub wiring harness (RH) combination	E-27	3-89	1-21
	Rear fog lamp	F-12	3-52	1-22
	Rear fog lamp relay	C-212	3-4, 52	1-14
	Rear room lamp	D-11	3-56, 64, 102	1-19
	Rear washer motor	A-27	3-123	1-4
	Rear wiper motor	F-02	3-123	1-22
	Remote controlled mirror (LH)	E-06	3-125, 129	1-20
	Remote controlled mirror (RH)	E-16	3-125, 129	1-21
	Remote controlled mirror switch	C-25	3-125	1-10
	Resistor <Manual A/C>	C-11	3-104	1-11
	Rheostat	C-119	3-153	1-12
	Roof wiring harness and J/B combination	C-210	3-4, 56, 64, 102, 146	1-14
S	Seat belt pre-tensioner (LH)	D-29	3-143	1-19
	Seat belt pre-tensioner (RH)	D-43	3-143	1-18
	Side air bag module (squib) (LH)	D-08	3-145	1-18
	Side air bag module (squib) (RH)	D-40	3-145	1-18
	Side impact sensor (LH)	D-27	3-145	1-19

Parts name		Connector No.	Circuit diagram page	Wiring diagram page
S	Side impact sensor (RH)	D-41	3-145	1-18
	Side turn signal lamp (LH)	A-04	3-68, 100	1-5
	Side turn signal lamp (RH)	A-01	3-69, 101	1-4
	Spare connector (for audio)	C-102	3-132	1-13
	Spare connector (for audio)	C-133	3-133	1-13
	SRS-ECU	C-114	3-143, 145	1-13
	SRS-ECU	C-115	3-94, 103, 142, 144	1-13
	Starter	B-25	3-22	1-7
	Starter	B-26	3-22	1-7
	Stop lamp switch	C-101	3-73, 138	1-12
	Sunroof motor assembly	D-09	3-146	1-18
	Sunroof switch	D-06	3-146	1-18
T	Tailgate lock actuator	F-06	3-93, 97	1-22
	Tailgate switch	F-07	3-58, 62, 99, 151	1-22
	Throttle position sensor	B-06	3-34	1-7
	Tweeter (LH)	E-07	3-132	1-20
	Tweeter (RH)	E-15	3-132	1-21
V	Vehicle speed sensor	B-115	3-37, 77, 118, 152	1-9
W	Windshield washer motor	A-26	3-116	1-4
	Windshield wiper motor	B-07	3-116	1-7
	Wiper deicer	B-32	3-131	1-7
	Wiper deicer relay	A-08X	3-131	1-5

NOTES