

ALPHABETICAL INDEX

A

Adjustment of accelerator cable	14-9
Air cleaner filter	0-11
Air conditioner switch	24-39
Air-conditioning	24-37
Air-tightness test (Air-conditioning)	24-14
Automatic free-wheeling hub	2-34
Automatic transmission	21-61
Automatic transmission and transfer case	0-18
Automatic transmission control	21-33
Automatic transmission oil cooler	7-14
Axle assembly	3-12
Axle hub	2-27
Axle shaft	3-13
Axle shaft end play	3-10

B

Back door	23-38
Ball joint seals, steering linkage seals and drive shaft boots	0-18
Basic ignition timing adjustment	0-9
Battery	8-73
Bleeding	5-8
Bleeding	6-4
Bleeding	19-11
Blend proportioning valve function test	5-8
Blower assembly	24-27
Body dimensions and measurement methods	13-2
Body paneling	23-5
Brake booster	5-14
Brake booster operating test	5-7
Brake fluid	0-16
Brake hoses	0-17
Brake lines	5-15
Brake master cylinder	5-11
Brake pedal	5-9
Brakes	0-17
Bumpers	23-17

C

Carburetor (Conventional)	14-26
Carburetor (FBC)	14-15
Carburetor choke mechanism and linkage	0-10
Changing gear oil	3-10
Charging system	8-74
Charging system	8-79
Checking ball joint end play	19-13

Checking fluid level	19-11
Checking gear oil level	2-12
Checking gear oil level	3-10
Checking power steering belt tension	19-11
Checking stationary steering effort	19-10
Checking steering angle	19-13
Checking steering wheel free play	19-10
Checking steering wheel return to center	19-10
Clock	8-158
Clutch assembly	6-5
Clutch control	6-8
Clutch pedal inspection and adjustment	6-4
Compressor (Air-conditioning)	24-42
Compressor front housing (Air-conditioning)	24-46
Condenser (Air-conditioning)	24-42
Control panel (Air-conditioning)	24-38
Conventional differential	3-18
Coolant leak check	7-5
Cooling system	0-15
Cooling unit	24-39
Crankcase ventilation system	0-13
Crankshaft	9-47
Cylinder block	9-51
Cylinder head	9-30

D

Diagnosis chart-general (Automatic transmission)	21-14
Differential carrier	2-53
Differential mounting	2-51
Drive belts	0-15
Drive shafts	2-42

E

Electric wiring diagram (Air-conditioning)	24-38
Engine and transmission assembly	9-19
Engine control	14-30
Engine idle speed adjustment	14-7
Engine mounting	9-16
Engine oil	0-12
Engine oil filter	0-12
Engine oil level gauge	9-15
Evacuation (Air-conditioning)	24-15
Evaporative emission control system	0-14
Evaporative emission control system	25-20
Exhaust emission control system	25-21
Exhaust pipes and mufflers	11-3

ALPHABETICAL INDEX

F

Fan and water pump	7-10
Fan belt tension adjustment	7-7
Fast idle adjustment for vehicles equipped with air conditioning	14-7
Fenders	23-19
Floor console	23-55
Folding top	23-43
Frame alignment	13-3
Front axle and rear axle	0-18
Front axle total backlash	2-12
Front clutch	21-90
Front disc brakes	5-16
Front doors	23-27
Front suspension crossmember	2-59
Front wheel bearings	0-18
Fuel filter	0-10
Fuel filler door	23-16
Fuel line	14-12
Fuel pump	14-14
Fuel system	0-10
Fuel tank	14-9
Fuses	8-131

G

Gas charge (Air-conditioning)	24-16
Gas leak test (Air-conditioning)	24-17
Grille and mouldings	23-21

H

Headlight washer	8-154
Headlining and assist straps	23-60
Heater control	24-21
Heater operation (Front heater)	24-20
Heater operation (Rear heater)	24-33
Heater relay	24-27
Heater unit	24-24
Hood	23-14
Horn	8-156

I

Idle speed and mixture adjustment	14-7
Ignition cables	0-11
Ignition coil	8-101
Ignition switch	8-133
Ignition system	8-77
Ignition system	8-97
Inner shaft	2-48
Inspection and adjustment of the wheel alignment	2-11
Inspection of drive shaft end play	2-12
Instrument panel	23-52

J

Jet valve clearance adjustment	0-8
Jet valves	9-37

K

Knuckle	2-25
---------------	------

L

Lighting system	8-144
Limited slip differential	3-30
Limited slip differential preload measurement	3-11
Lower arm	2-17
Lubricant capacities table and recommended lubricants	0-6

M

Magnetic clutch	24-43
Mainshaft	21-58
Manual free-wheeling hub	2-31
Manual transmission	21-50
Manual transmission and transfer case	0-18
Meters and gauges	8-134
Mounting	23-11
Mud guard	23-22

O

Oil pump and reaction shaft support	21-86
Oil pump pressure test	19-12

P

Parking brake stroke adjustment	5-7
Parking brakes	5-27
Performance test (Air-conditioning)	24-18
Pistons and connecting rods	9-43
Planetary gear	21-96
Power steering gear box	19-18
Power steering oil pump	19-25
Power window	8-166
Propeller shaft and universal joints	16-4

R

Radiator	7-8
Radiator cap pressure test	7-5
Radio and stereo	8-161
Rear axle total backlash	3-10
Rear clutch	21-93
Rear drum brakes	5-22
Rear heater	24-33
Rear suspension	17-3
Rear window defogger	8-159
Rear window wiper and washer	8-152
Receiver	24-42
Retorquing of cylinder head bolts	9-14
Rocker arms, rocker arm shafts, camshaft... ..	9-26

S

Scheduled maintenance table	0-3
Seat belts	23-69
Seats	23-63

ALPHABETICAL INDEX

Service brake pedal inspection and adjustment 5-6
 Shock absorber 2-24
 Silent shaft drive chain tension adjustment procedure 9-14
 Silent shafts and oil pump 9-39
 Spark plugs 0-11
 Specific gravity test 7-5
 Stabilizer bar 2-23
 Starting system 8-84
 Steering column and shaft 19-14
 Steering hoses 19-31
 Steering linkage 19-31
 Stripe tape 23-49

T

Thermostat 7-12
 3-point ELR seat belts with tension relievers 8-169
 Timing chain 9-23
 Torsion bar 2-20
 Transfer 21-39
 Transmission and transfer case 21-28
 Trims 23-57

U

Under guard 23-17
 Upper arm 2-13
 Upper control arm bushings 0-18

V

Valve body 21-99
 Valve clearance adjustment 0-8
 Valves and valve springs 9-32
 Ventilation ducting 24-28

W

Water temperature gauge unit 7-13
 Wheel bearing play inspection 2-13
 Wheels and tires 22-5
 Window glass 23-23
 Windshield wipers and washer 8-149
 Wiring harness 8-102