

MITSUBISHI PAJERO

WORKSHOP MANUAL

FOREWORD

This Workshop Manual contains procedures for removal, disassembly, inspection, adjustment, reassembly and installation, etc. for service mechanics.

Use the following manuals in combination with this manual as required.

WORKSHOP MANUAL
ENGINE GROUP

PWEE □□□□
(Looseleaf edition)

ELECTRICAL WIRING
PARTS CATALOGUE

PHJE9026
B6035604A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

General	00
Engine	11
Lubrication	12
Fuel	13
Cooling	14
Intake and Exhaust	15
Engine Electrical	16
Emission Control	17
Clutch	21
Manual Transmission	22
Automatic Transmission	23
Propeller Shaft	25
Front Axle	26
Rear Axle	27
Wheel and Tyre	31
Power Plant Mount	32
Front Suspension	33
Rear Suspension	34
Service Brakes	35
Parking Brakes	36
Steering	37
Body	42
Exterior	51
Interior	52A
Supplemental Restraint System (SRS)	52B
Chassis Electrical	54
Heater, Air Conditioner and Ventilation	55