

GROUP 52A

INTERIOR


GENERAL

OUTLINE OF CHANGES


- The seat cushion assembly for fixed mounting boss-type front seats has been integrated with the seat leg assembly. Disassembly service points have been established to correspond to this.
- The suspension mechanism in front suspension seats has been changed from a shock absorber – spring mechanism to a rubber-moulded spring mechanism. Disassembly service points have been established to correspond to this.

• Normal seats

<New>

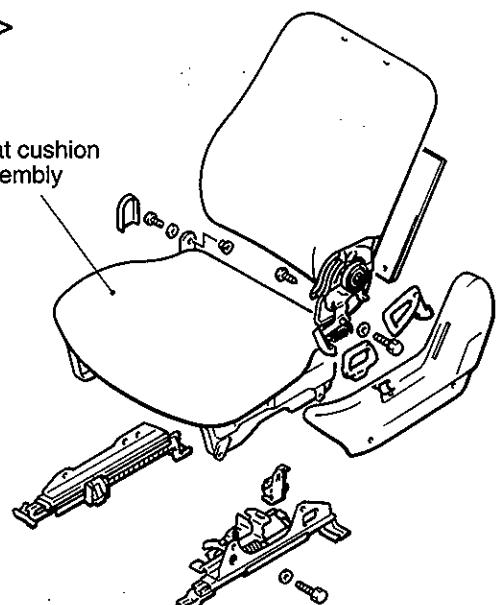

<Old>

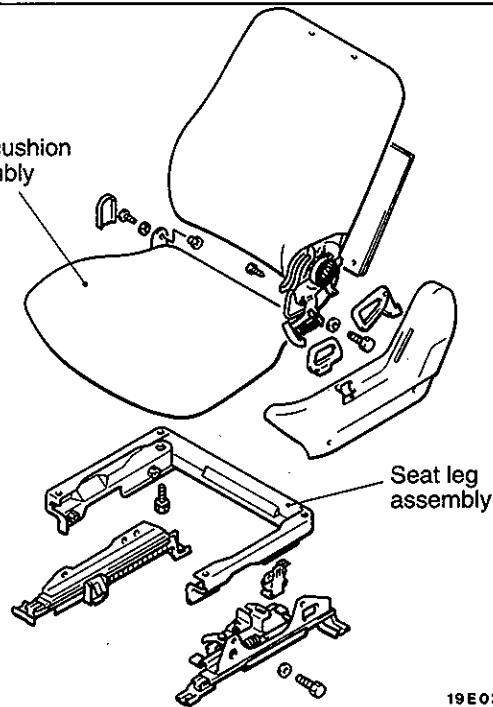


19E0226


19E0225

• Suspension seats

<New>

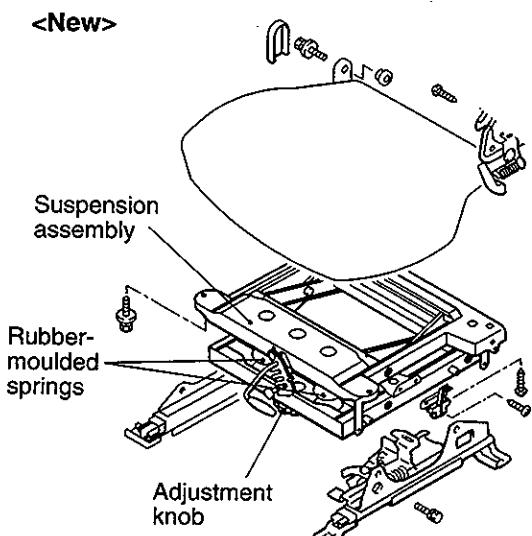

<Old>

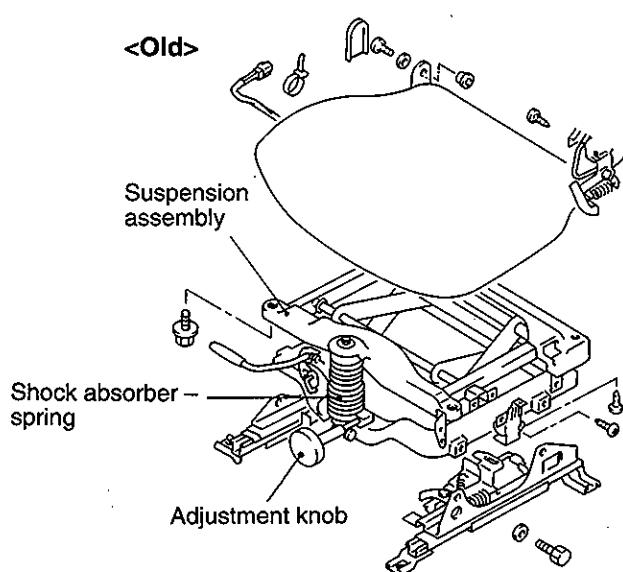


19E0246

19E0070

FRONT SEAT


DISASSEMBLY AND REASSEMBLY

<Normal seats>

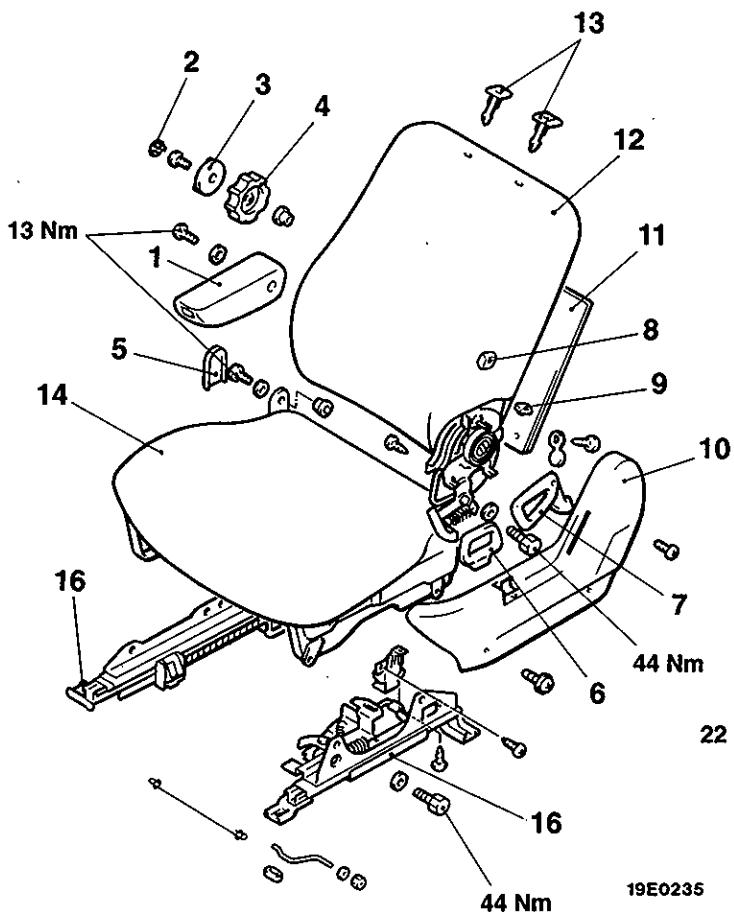

Pre-removal and Post-installation Operation
 • Removal and Installation of Front Inner Seat Belt assembly


<Suspension seats>

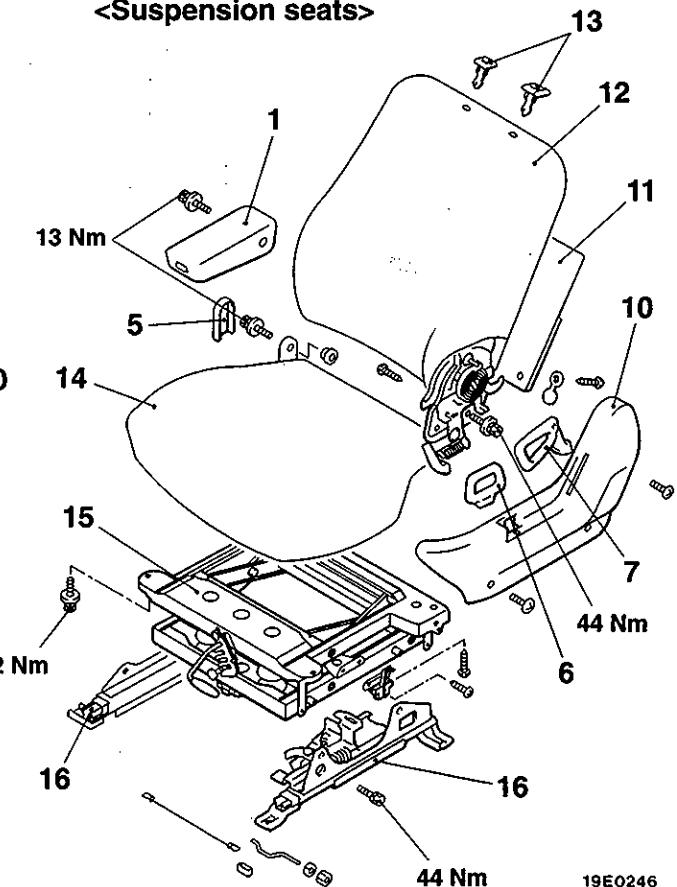

Disassembly steps

1. Armrest assembly
2. Side support lever cap
3. Side support lever
4. Lumbar support lever
5. Free hinge protector
6. Slide knob
7. Reclining knob
8. Reclining memory knob

9. Walk-in knob
10. Shield cover
11. Back pocket assembly
12. Seatback assembly
13. Headrest restraint guide
14. Seat cushion assembly
15. Suspension assembly
16. Seat adjuster

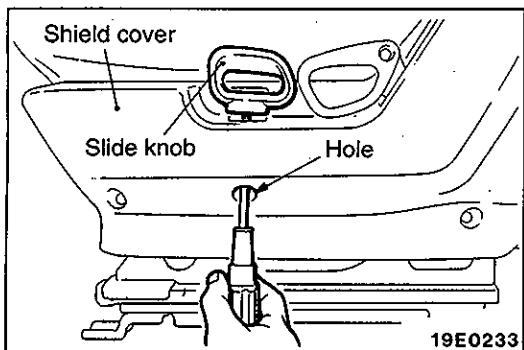

DISASSEMBLY SERVICE POINT

6. SLIDE KNOB REMOVAL

Pass a screwdriver through the shield cover hold and remove the slide knob mounting screw.