

GROUP 52A

INTERIOR


GENERAL

OUTLINE OF CHANGE

The large rear console has been adopted. To correspond to this, the maintenance service procedures have been established.

FLOOR CONSOLE


REMOVAL AND INSTALLATION

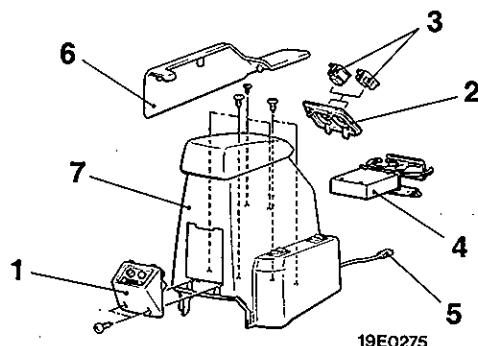

Removal steps

1. Rear heater control assembly	5. Connector
2. Switch panel	6. Side panel A
3. Switch or hole cover	7. Rear console assembly
4. Cup holder	

DISASSEMBLY AND REASSEMBLY

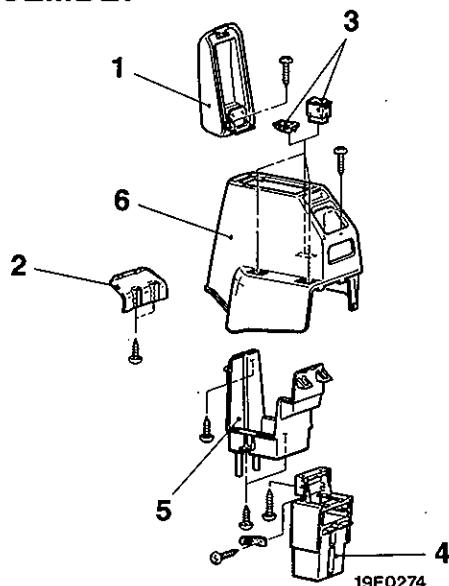

Disassembly steps

1. Rear console lid	4. Inner box A
2. Rear cover	5. Inner box B
3. Switch or hole cover	6. Rear console