

MITSUBISHI PAJERO

WORKSHOP MANUAL SUPPLEMENT

FOREWORD

This Workshop Manual contains procedures for removal, disassembly, inspection, adjustment, reassembly and installation, etc. for service mechanics.

Use the following manuals in combination with this manual as required.

TECHNICAL INFORMATION MANUAL
PYJE9002

WORKSHOP MANUAL
ENGINE GROUP

CHASSIS GROUP

ELECTRICAL WIRING

PARTS CATALOGUE

PWEE□□□□
(Looseleaf edition)
PWJE9086
(Looseleaf edition)
PWJE9086-G
(Supplement)
PWJE9086-H
(Supplement)
PHJE9026
(Looseleaf edition)
PHJE9026-D
(Supplement)
PHJE9026-E
(Supplement)
PHJE9026-F
(Supplement)
PHJE9026-G
(Supplement)
B6035607A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

General	00
Engine	11
Fuel	13
Cooling	14
Intake and Exhaust	15
Engine Electrical	16
Emission Control	17
Automatic Transmission	23
Body	42
Exterior	51
Interior	52A
Chassis Electrical	54

NOTES