






SINGLE PART INSTALLATION POSITION



CONTENTS

SENSOR	2	SOLENOID VALVE	3
--------------	---	----------------------	---

SENSOR





Name	Symbol	Name	Symbol
Accelerator pedal position sensor	F	Engine coolant temperature sensor	C
Boost air temperature sensor	A	Fuel temperature sensor	D
Boost pressure sensor	B	Pump speed sensor	D
Control sleeve position sensor	D	Timer piston position sensor	D
Crank angle sensor	E	VG control pressure sensor	B
EGR valve position sensor	A		

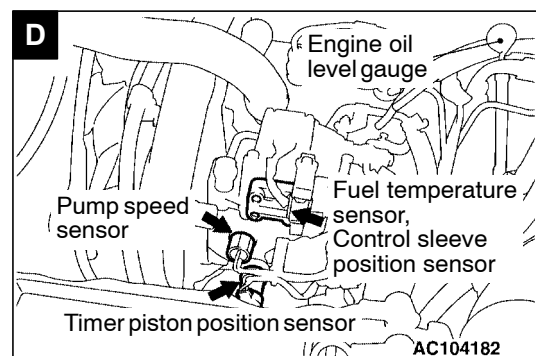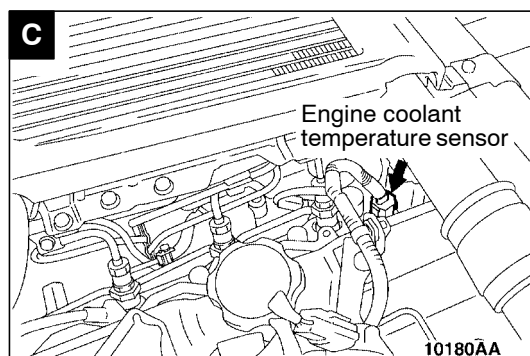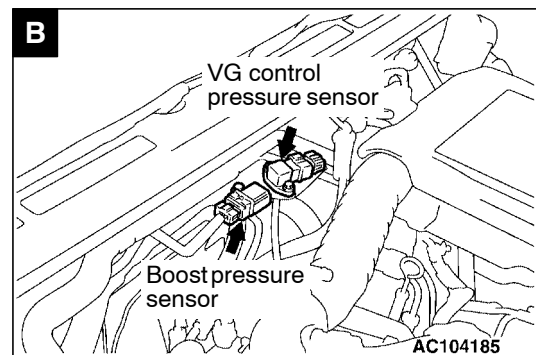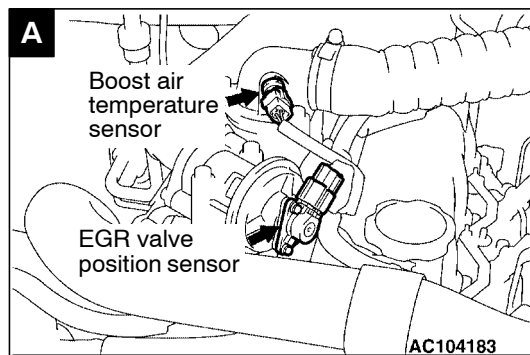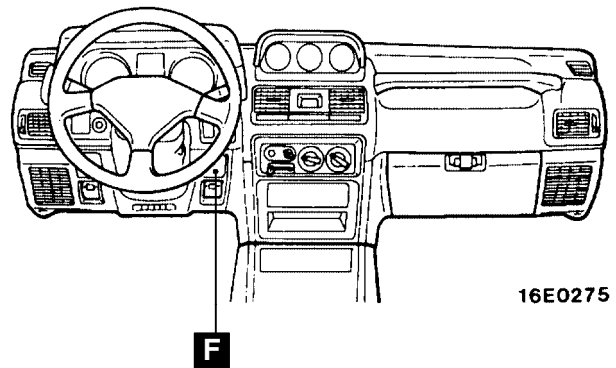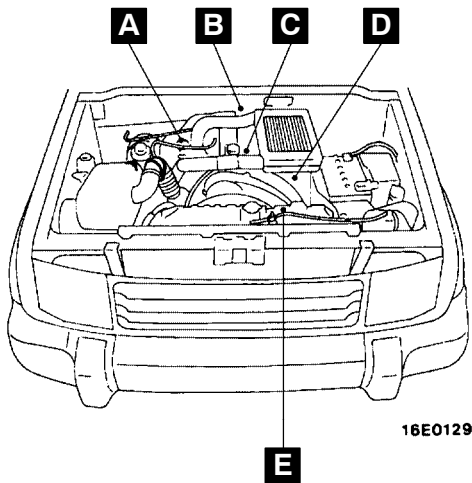

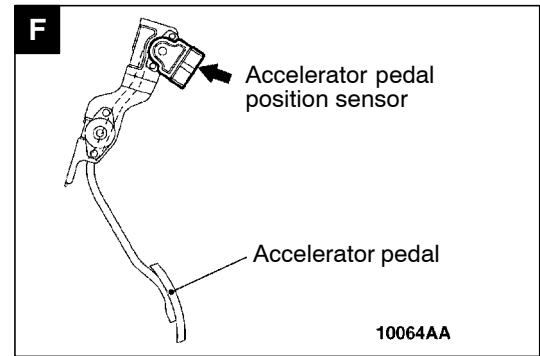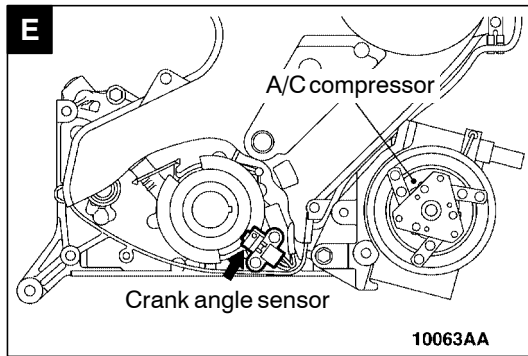

SOLENOID VALVE

Name	Symbol	Name	Symbol
EGR solenoid valve 1	B	Throttle solenoid valve	A
EGR solenoid valve 2	B	Timing control valve	C
Fuel cut solenoid valve	C	VGT solenoid valve	A
GE actuator	C		

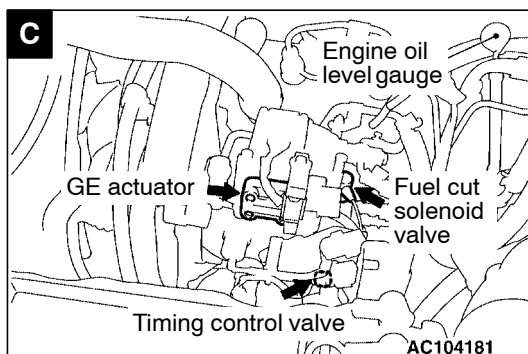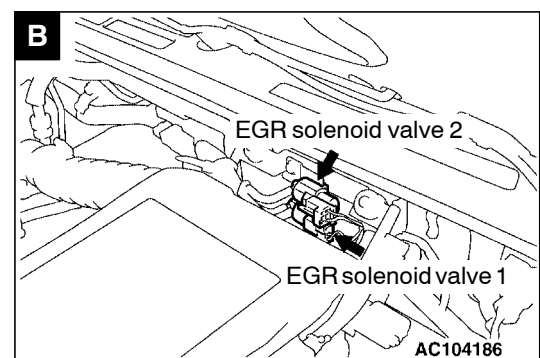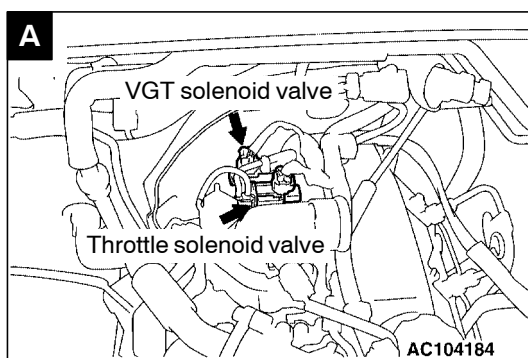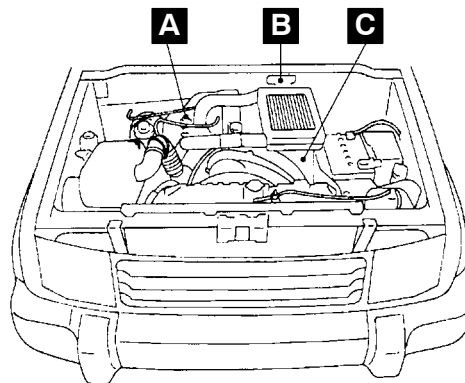

NOTES