

35C M-ASTC

MITSUBISHI ACTIVE STABILITY AND TRACTION CONTROL SYSTEM,

M-ATC

MITSUBISHI ACTIVE TRACTION CONTROL SYSTEM

CONTENTS

GENERAL	2	Initialization of Steering Wheel Sensor <Vehicles with M-ASTC>	50
Outline of Changes	2		
SERVICE SPECIFICATIONS	2	M-ASTC-ECU, M-ATC-ECU	51
SPECIAL TOOLS	2	G AND YAW RATE SENSOR <VEHICLES WITH M-ASTC>	53
TROUBLESHOOTING	2	STEERING WHEEL SENSOR <VEHICLES WITH M-ASTC>	54
ON-VEHICLE SERVICE	50		
Solenoid Valve Check	50		

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).