

# 52B SRS

## (SUPPLEMENTAL RESTRAINT SYSTEM)

### CONTENTS

<b>GENERAL</b> .....	<b>2</b>	<b>SRS MAINTENANCE</b> .....	<b>7</b>
Outline of changes .....	2		
<b>SPECIAL TOOLS</b> .....	<b>2</b>	<b>AIR BAG MODULES AND CLOCK SPRING</b> .....	<b>8</b>
<b>TEST EQUIPMENT</b> .....	<b>2</b>	<b>AIR BAG MODULE DISPOSAL PROCEDURES</b> .....	<b>12</b>
<b>TROUBLESHOOTING</b> .....	<b>3</b>	Undeployed Air Bag Module .....	<b>12</b>

**CAUTION**

- Carefully read and observe the information in the **SRS SERVICE PRECAUTIONS** prior to any service.
- For information concerning troubleshooting or maintenance, always observe the procedures in the Troubleshooting (P.52B-3.) section.
- If any SRS components are removed or replaced in connection with any service procedures, be sure to follow the procedures in the **INDIVIDUAL COMPONENT SERVICE** section for the components involved.
- If you have any questions about the SRS, please contact your local distributor.