

2 WIRING HARNESS CONFIGURATION DIAGRAMS

1 OVERALL WIRING DIAGRAM

1-1	L.H. drive vehicles	2- 2
1-2	R.H. drive vehicles <Vehicles built up to October 1991>	2- 3
1-2	R.H. drive vehicles <Vehicles built from November 1991>	2- 3-1

2 ENGINE COMPARTMENT **A**

2-1	L.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS>	2- 4
2-2	R.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS built up to October 1991>	2- 6
2-2	R.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS built from November 1991>	2- 7-1
2-3	L.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS>	2- 8
2-4	R.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS built up to October 1991>	2-10
2-4	R.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS built from November 1991>	2-11-1
2-5	L.H. drive vehicles with MPI-DOHC engine	2-12
2-6	R.H. drive vehicles with MPI-DOHC engine <Vehicles built up to October 1991>	2-14
2-6	R.H. drive vehicles with MPI-DOHC engine <Vehicles built from November 1991>	2-15-1

3 ENGINE AND TRANSMISSION **B**

3-1	MPI-SOHC engine	2-16
3-2	MPI-DOHC engine	2-18

4 DASH PANEL **C**

4-1	L.H. drive vehicles <Vehicles built up to March 1991>	2-20
4-1	L.H. drive vehicles <Vehicles built from April 1991>	2-23-1
4-2	R.H. drive vehicles <Vehicles built up to March 1991>	2-24
4-2	R.H. drive vehicles <Vehicles built from April 1991 to October 1991>	2-27-1
4-2	R.H. drive vehicles <Vehicles built from November 1991>	2-27-5

5 INSTRUMENT PANEL **D**

5-1	L.H. drive vehicles	2-28
5-2	R.H. drive vehicles	2-29

6 INTERIOR **E**

6-1	L.H. drive vehicles	2-30
6-2	R.H. drive vehicles	2-32

7 DOOR **F**

7-1	L.H. drive vehicles	2-34
7-2	R.H. drive vehicles	2-35

8 LUGGAGE COMPARTMENT **G**

8-1	L.H. drive vehicles	2-36
8-2	R.H. drive vehicles <Vehicles built up to October 1991>	2-37
8-2	R.H. drive vehicles <Vehicles built from November 1991>	2-37-1

9 TRUNK LID **H**

9	TRUNK LID H	2-38
---	--------------------	------


10 UNDER REAR FLOOR **J**

10	UNDER REAR FLOOR J	2-39
----	---------------------------	------


1 OVERALL WIRING DIAGRAM

1-1 L.H. drive vehicles

<Vehicles without ACTIVE-ECS>

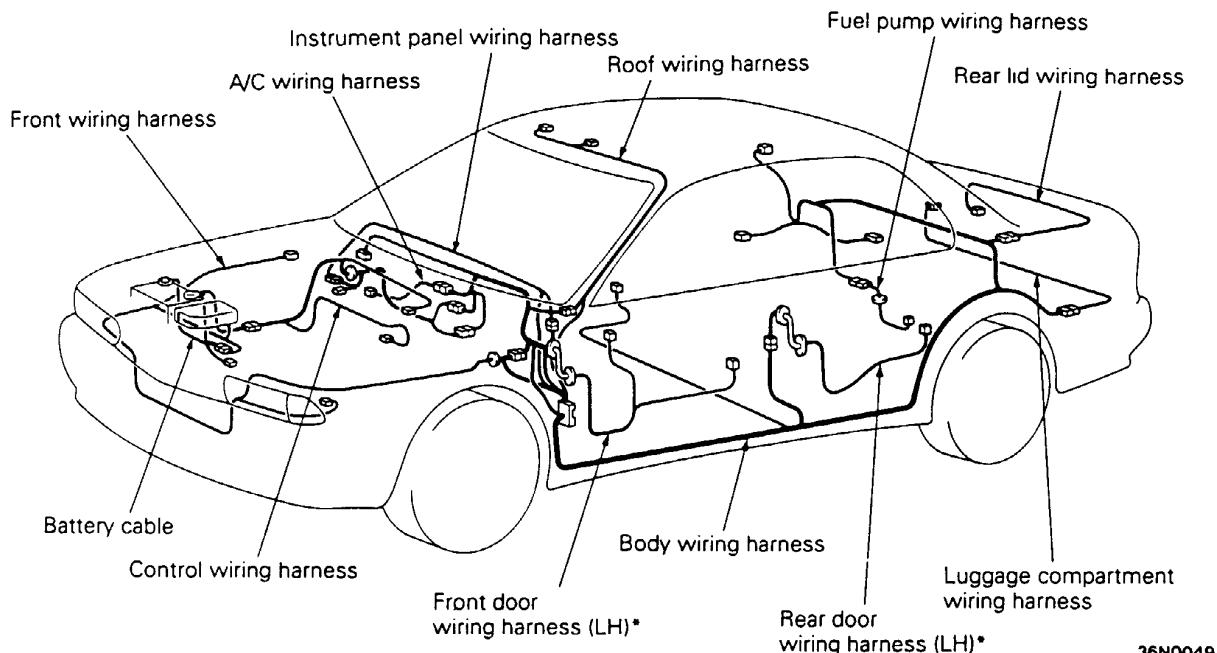

<Vehicles with ACTIVE-ECS>

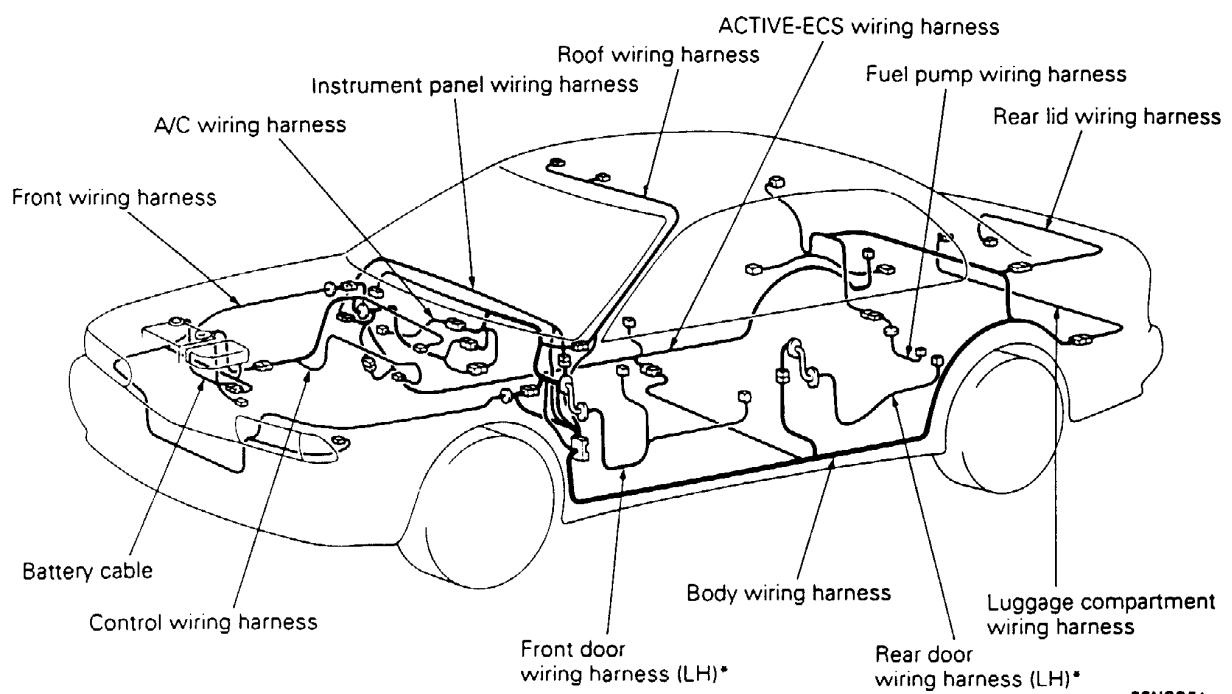


NOTE


- (1) These illustrations show only major wiring harnesses.
- (2) *: also equipped at the right side.

1-2 R.H. drive vehicles <Vehicles built up to October 1991>

<Vehicles without ABS>

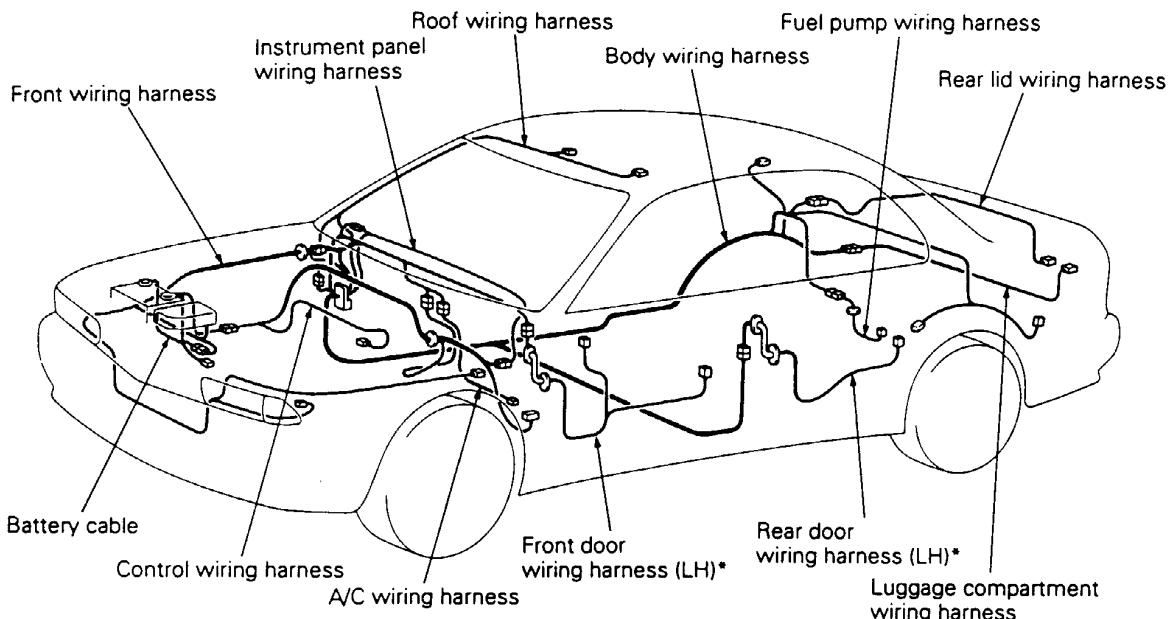

<Vehicles with ABS>

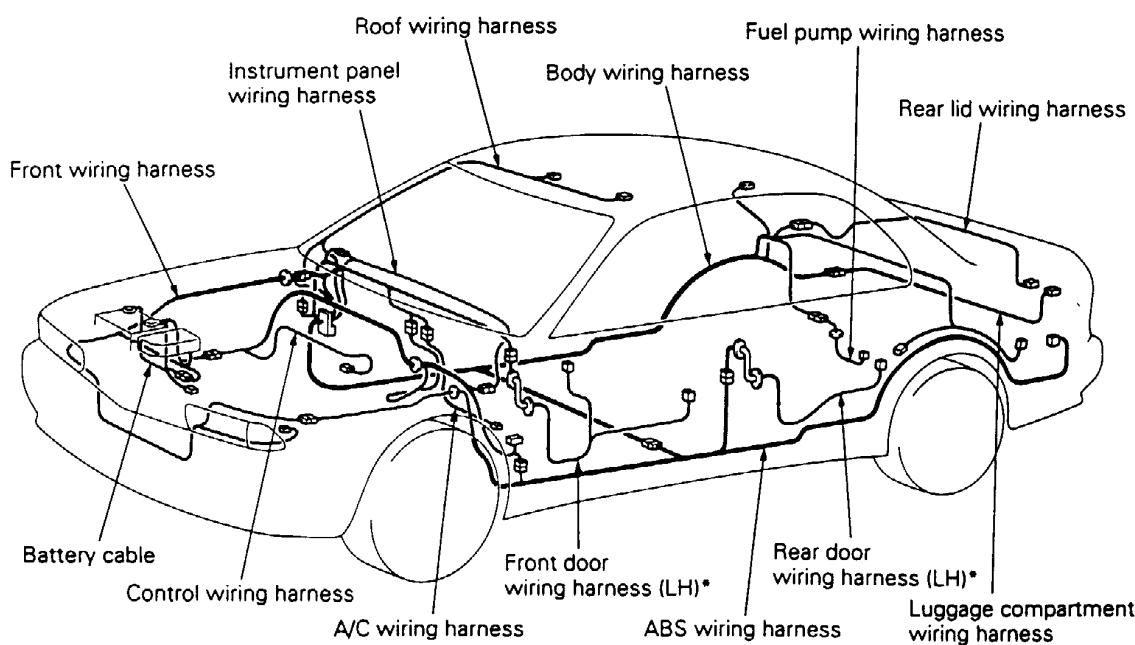


NOTE


- (1) These illustrations show only major wiring harnesses.
- (2) *: also equipped at the right side.

1-2 R.H. drive vehicles <Vehicles built from November 1991>

<Vehicles without ABS>

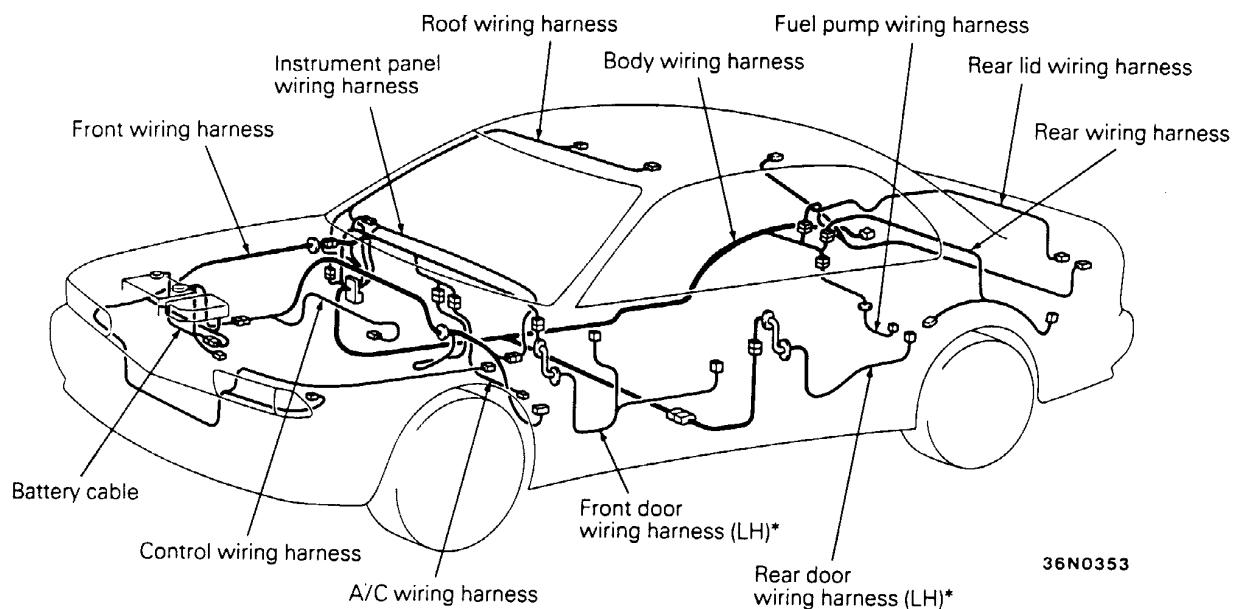

<Vehicles with ABS>

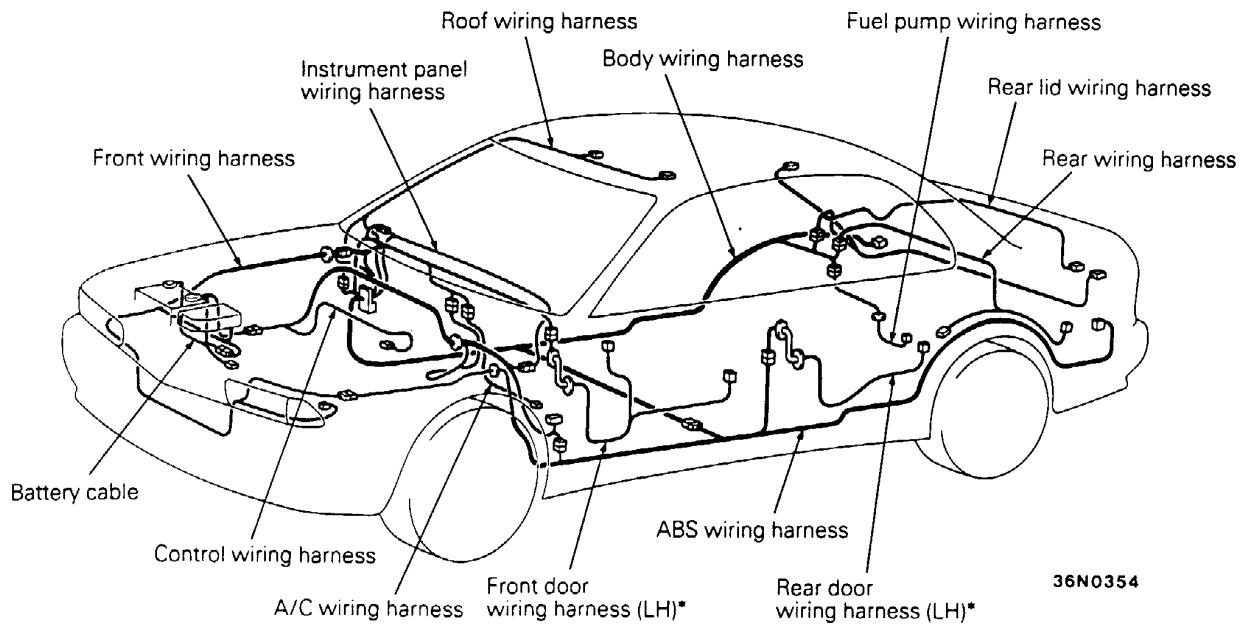


NOTE


- (1) These illustrations show only major wiring harnesses.
(2) * : also equipped at the right side.

NOTES

2 ENGINE COMPARTMENT


2-1 L.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS>

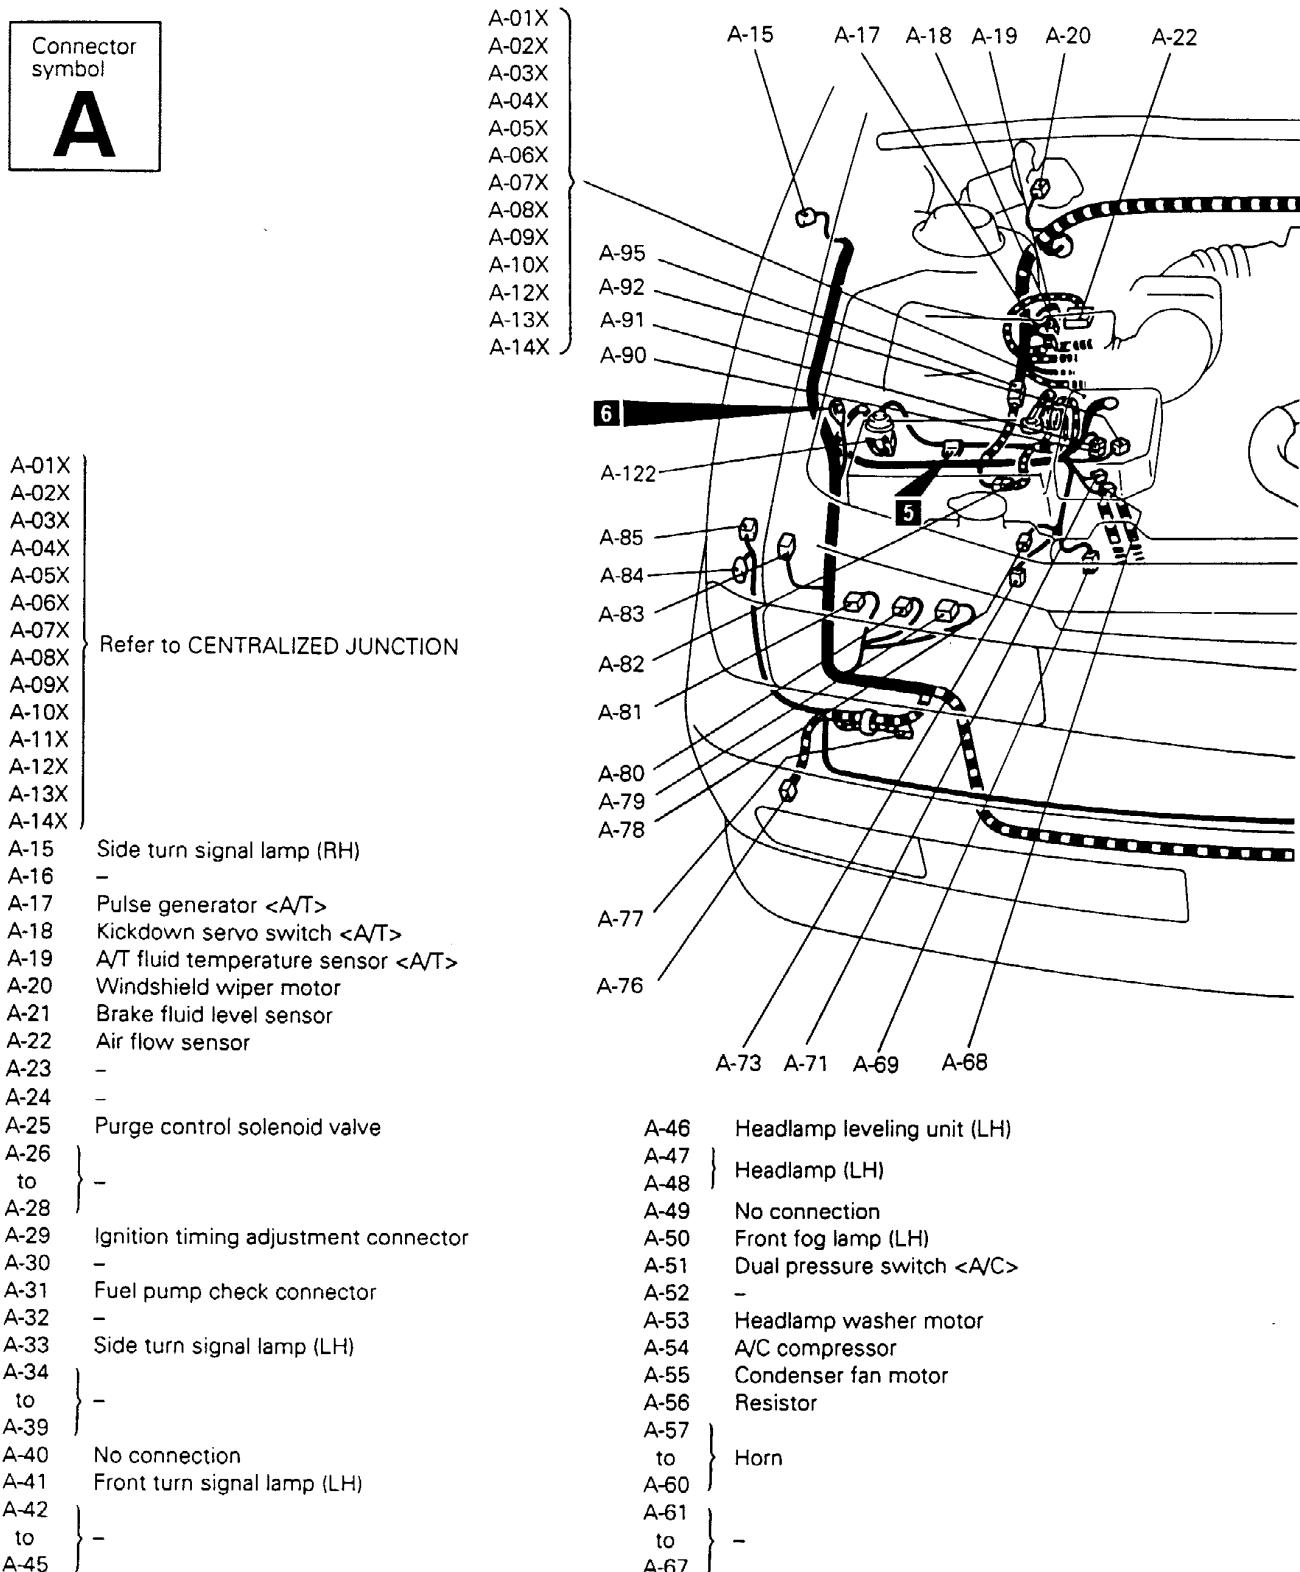

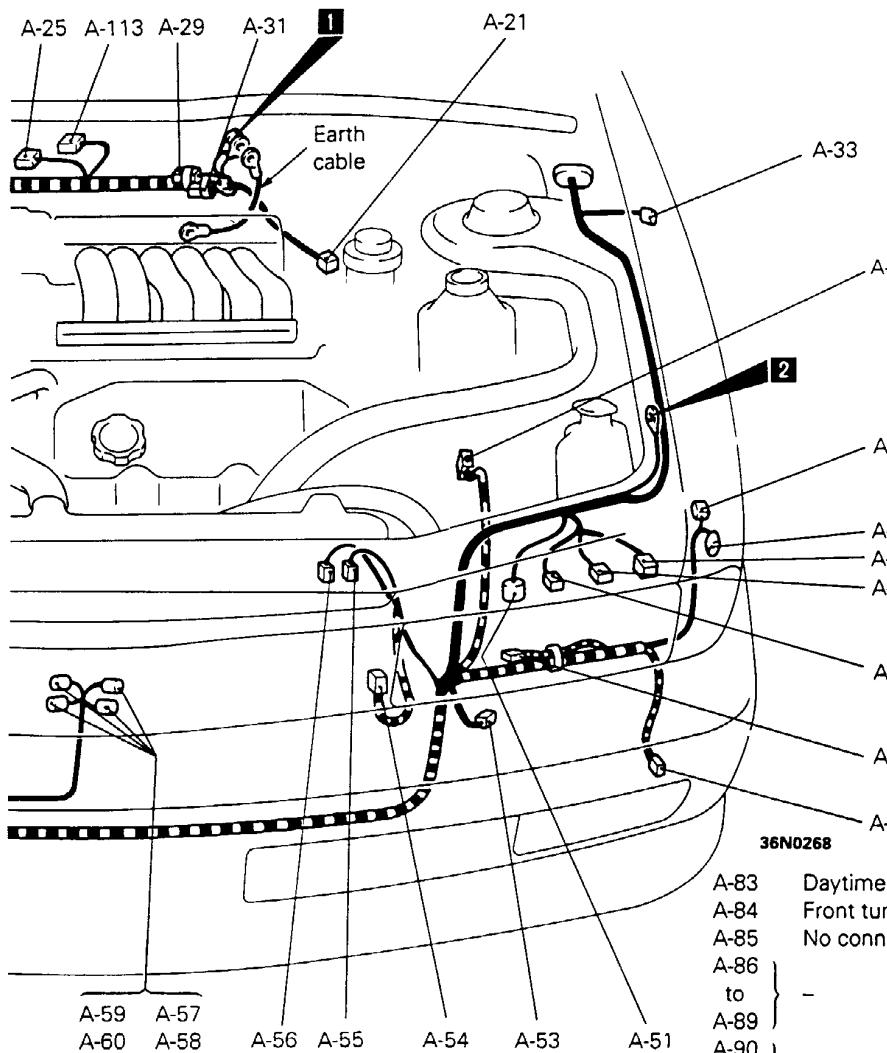



- | | | | | | | | | | |
|------|------|------|------|------|------|------|------|------|---------|
| A-59 | A-57 | A-60 | A-58 | A-56 | A-55 | A-54 | A-53 | A-51 | 36N0268 |
|------|------|------|------|------|------|------|------|------|---------|
- A-68 Daytime running lamp control unit or jumper connector
 A-69 Radiator fan motor
 A-70 –
 A-71 Daytime running lamp relay 2
 A-72 –
 A-73 Windshield washer motor
 A-74 –
 A-75 –
 A-76 Front fog lamp (RH)
 A-77 No connection
 A-78 Windshield washer fluid level sensor
 A-79 Headlamp (RH)
 A-80 Headlamp leveling unit (RH)
 A-81 Front wiring harness and battery cable combination
 A-82 Front wiring harness and control wiring harness combination
- A-83 Daytime running lamp relay 1
 A-84 Front turn signal lamp (RH)
 A-85 No connection
 A-86 to A-89 –
 A-90 to A-92 Joint connector (for rear fog lamp circuit)
 A-93 –
 A-94 –
 A-95 Front wiring harness and control wiring harness combination
 A-96 to A-112 –
 A-113 No connection
 A-114 to A-120 –
 A-121 Front impact sensor (LH)
 A-122 Front impact sensor (RH)
- Remark**
For details concerning the earth point (example: 1), refer to P.3-20.

2-2 R.H. drive vehicles with MPI-SOHC engine
<Vehicles without ABS built up to October 1991>

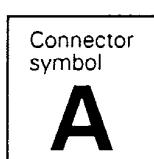



A-01X	Refer to CENTRALIZED JUNCTION
A-02X	
A-03X	
A-04X	
A-05X	
A-06X	
A-07X	
A-08X	
A-09X	
A-10X	
A-12X	
A-13X	
A-14X	
A-15	
A-16	
A-17	
A-18	
A-19	
A-20	
A-21	
A-22	
A-23	
A-24	
A-25	
A-26	
to	
A-28	
A-29	Ignition timing adjustment connector
A-30	–
A-31	Fuel pump check connector
A-32	–
A-33	Side turn signal lamp (LH)
A-34	–
to	
A-39	
A-40	No connection
A-41	Front turn signal lamp (LH)
A-42	–
to	
A-45	

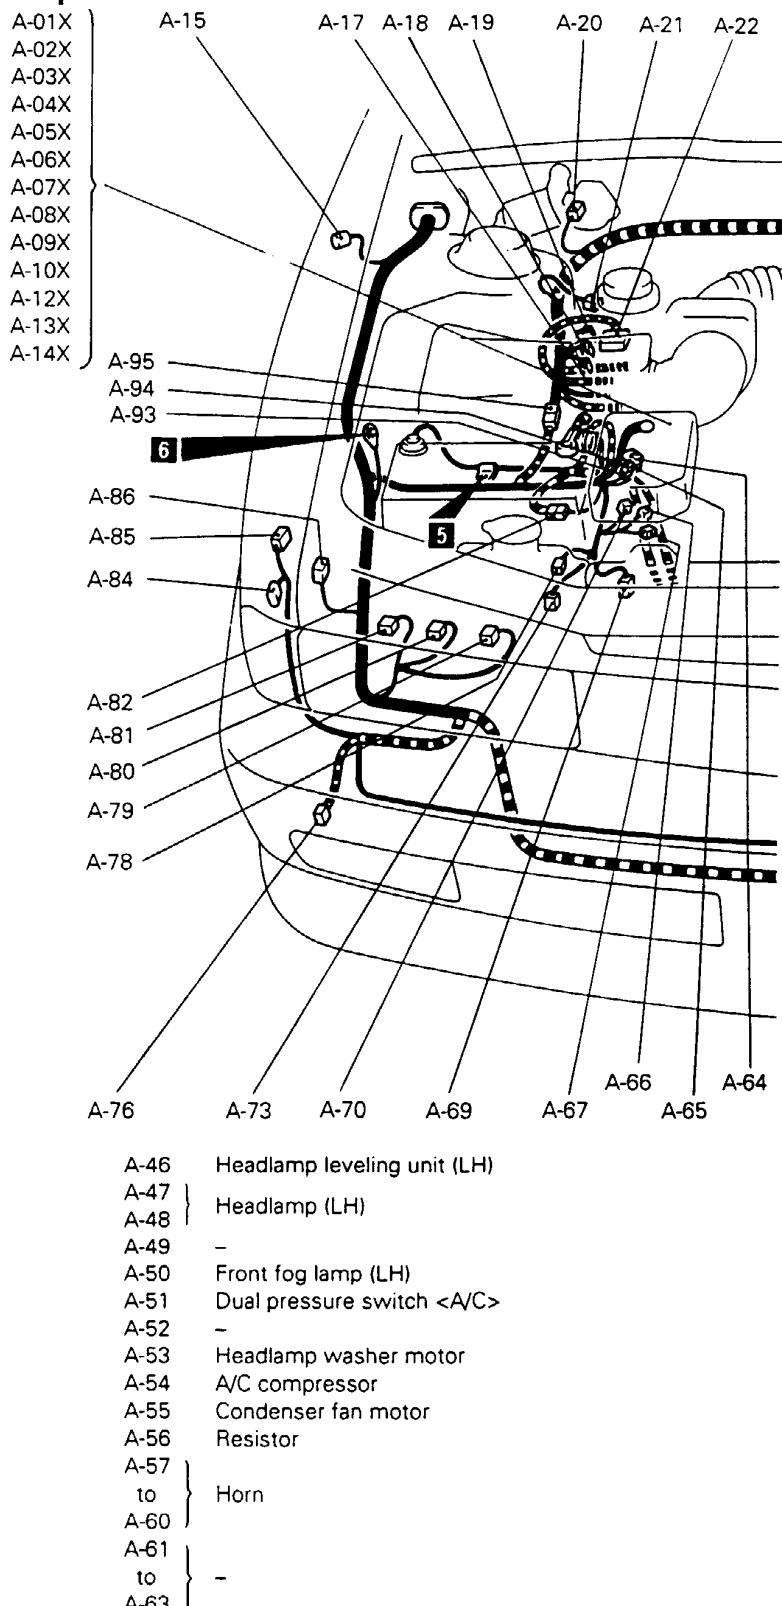

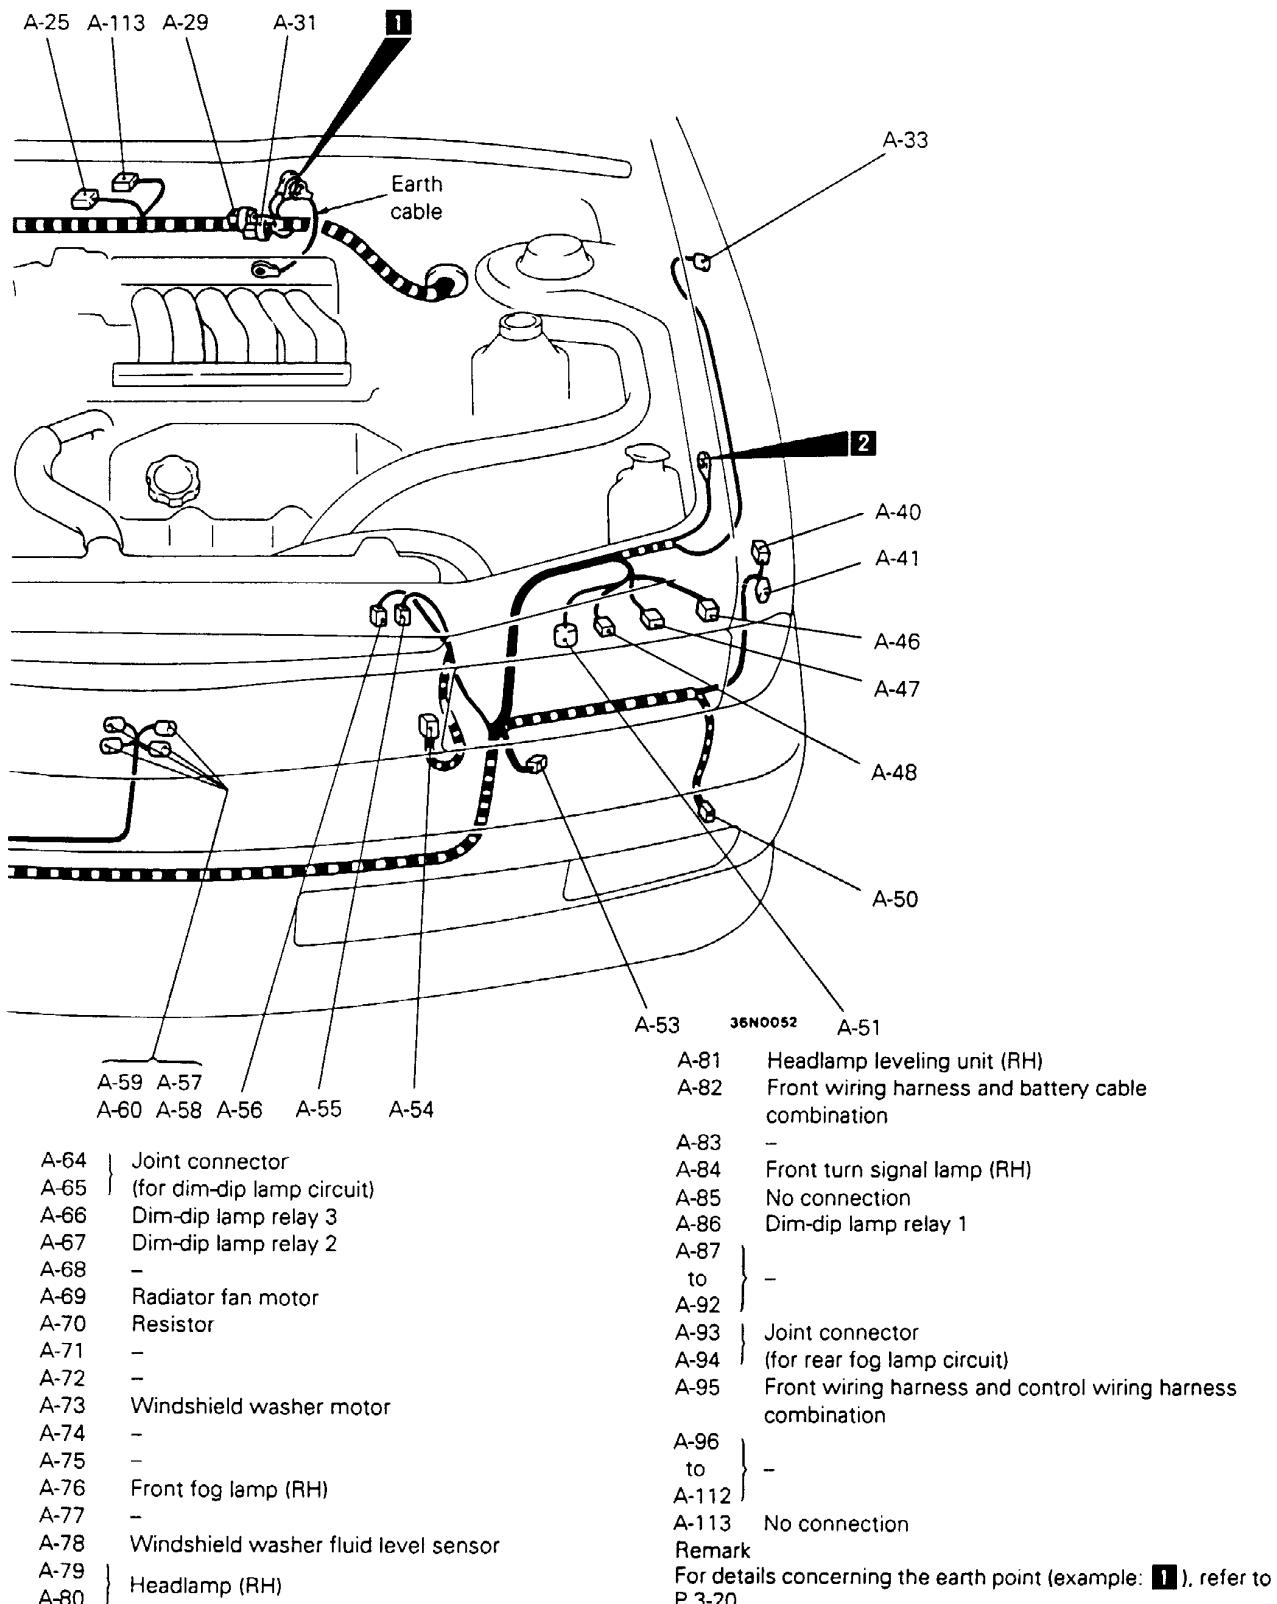

2-7-1 WIRING HARNESS CONFIGURATION DIAGRAMS – Engine Compartment

2-2 R.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS built from November 1991>

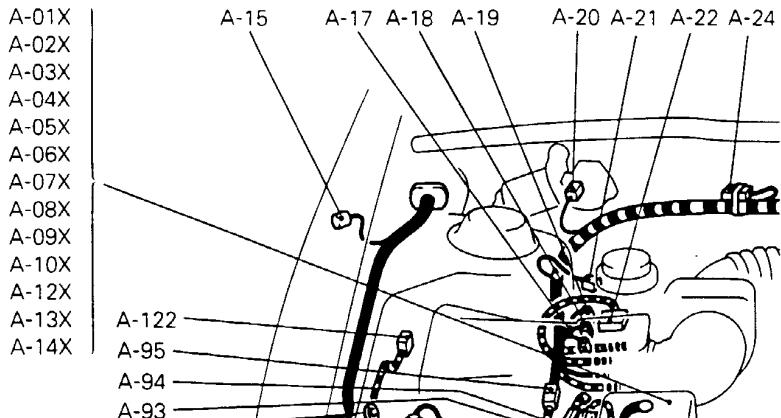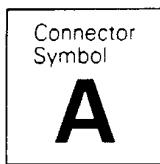


A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-12X
A-13X
A-14X

Refer to CENTRALIZED JUNCTION

A-15 Side turn signal lamp (RH)
A-16 –
A-17 Pulse generator <A/T>
A-18 Kickdown servo switch <A/T>
A-19 A/T fluid temperature sensor <A/T>
A-20 Windshield wiper motor
A-21 Brake fluid level sensor
A-22 Air flow sensor
A-23 –
A-24 No connection
A-25 Purge control solenoid valve
A-26 to –
A-28 –
A-29 Ignition timing adjustment connector
A-30 –
A-31 Fuel pump check connector
A-32 –
A-33 Side turn signal lamp (LH)
A-34 to –
A-40 –
A-41 Front turn signal lamp (LH)
A-42 to –
A-45 –
A-46 Headlamp leveling unit (LH)
A-47 Headlamp (LH)
A-48 –

A-49 –
A-50 Front fog lamp (LH)
A-51 Dual pressure switch <A/C>
A-52 –
A-53 Headlamp washer motor
A-54 A/C compressor
A-55 Condenser fan motor
A-56 Resistor
A-57 to Horn
A-60 –
A-61 to –
A-63 –
A-64 Joint connector
(for dim-dip lamp circuit)
A-65 Dim-dip lamp relay 3
A-66 Dim-dip lamp relay 2
A-67 –

WIRING HARNESS CONFIGURATION DIAGRAMS – Engine Compartment 2-7-2

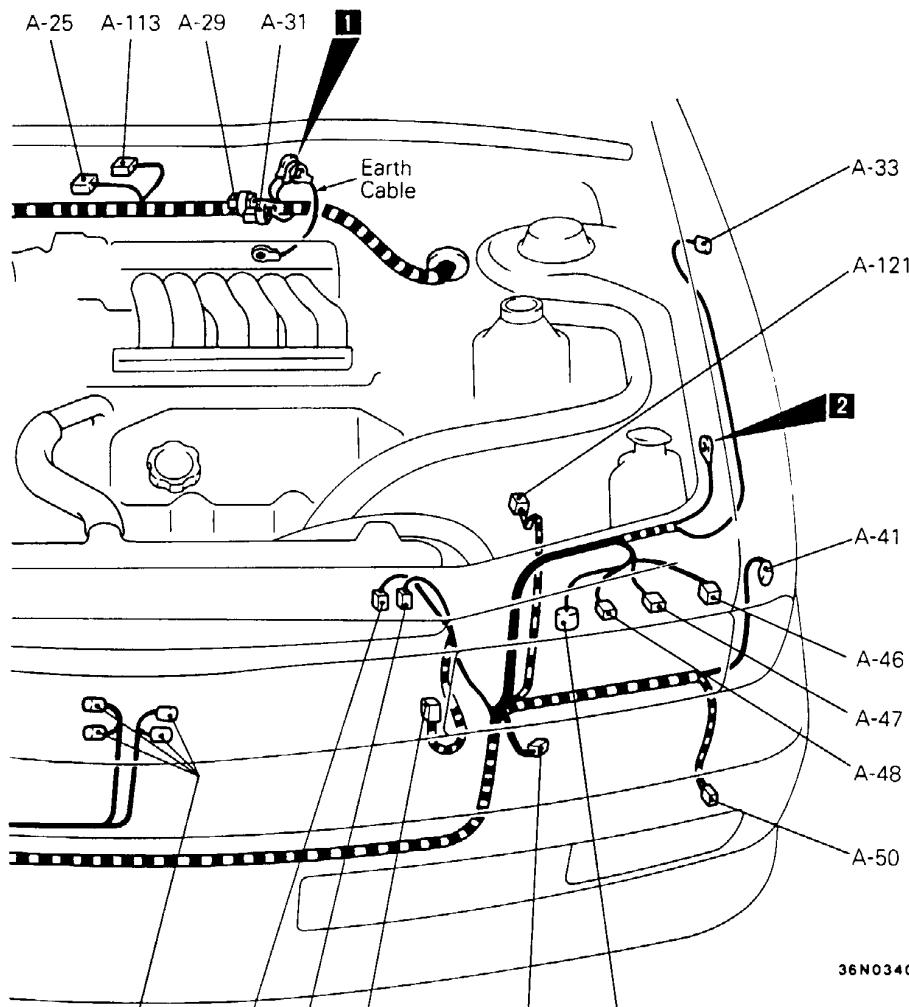



36N0340

A-59	A-57	A-85	–
A-60	A-58	A-86	Dim-dip lamp relay 1
A-70	A-56	A-87	–
A-71	A-55	A-88	–
A-72	A-54	A-89	–
A-73	Windshield washer motor	A-90	Joint connector
A-74	–	A-91	(for rear fog lamp circuit)
A-75	–	A-92	Front wiring harness and control wiring harness combination
A-76	Front fog lamp (RH)	A-93	–
A-77	–	A-94	–
A-78	Windshield washer fluid level sensor	A-95	–
A-79	–	A-96	–
A-80	Headlamp (RH)	A-97	–
A-81	Headlamp leveling unit (RH)	A-98	–
A-82	Front wiring harness and battery cable combination	A-99	–
A-83	–	A-100	–
A-84	Front turn signal lamp (RH)	A-101	Front impact sensor (LH) <SRS>
		A-102	Front impact sensor (RH) <SRS>

Remark
For details concerning the earth point (example: 1), refer to P.3-20.


2-3 L.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS>

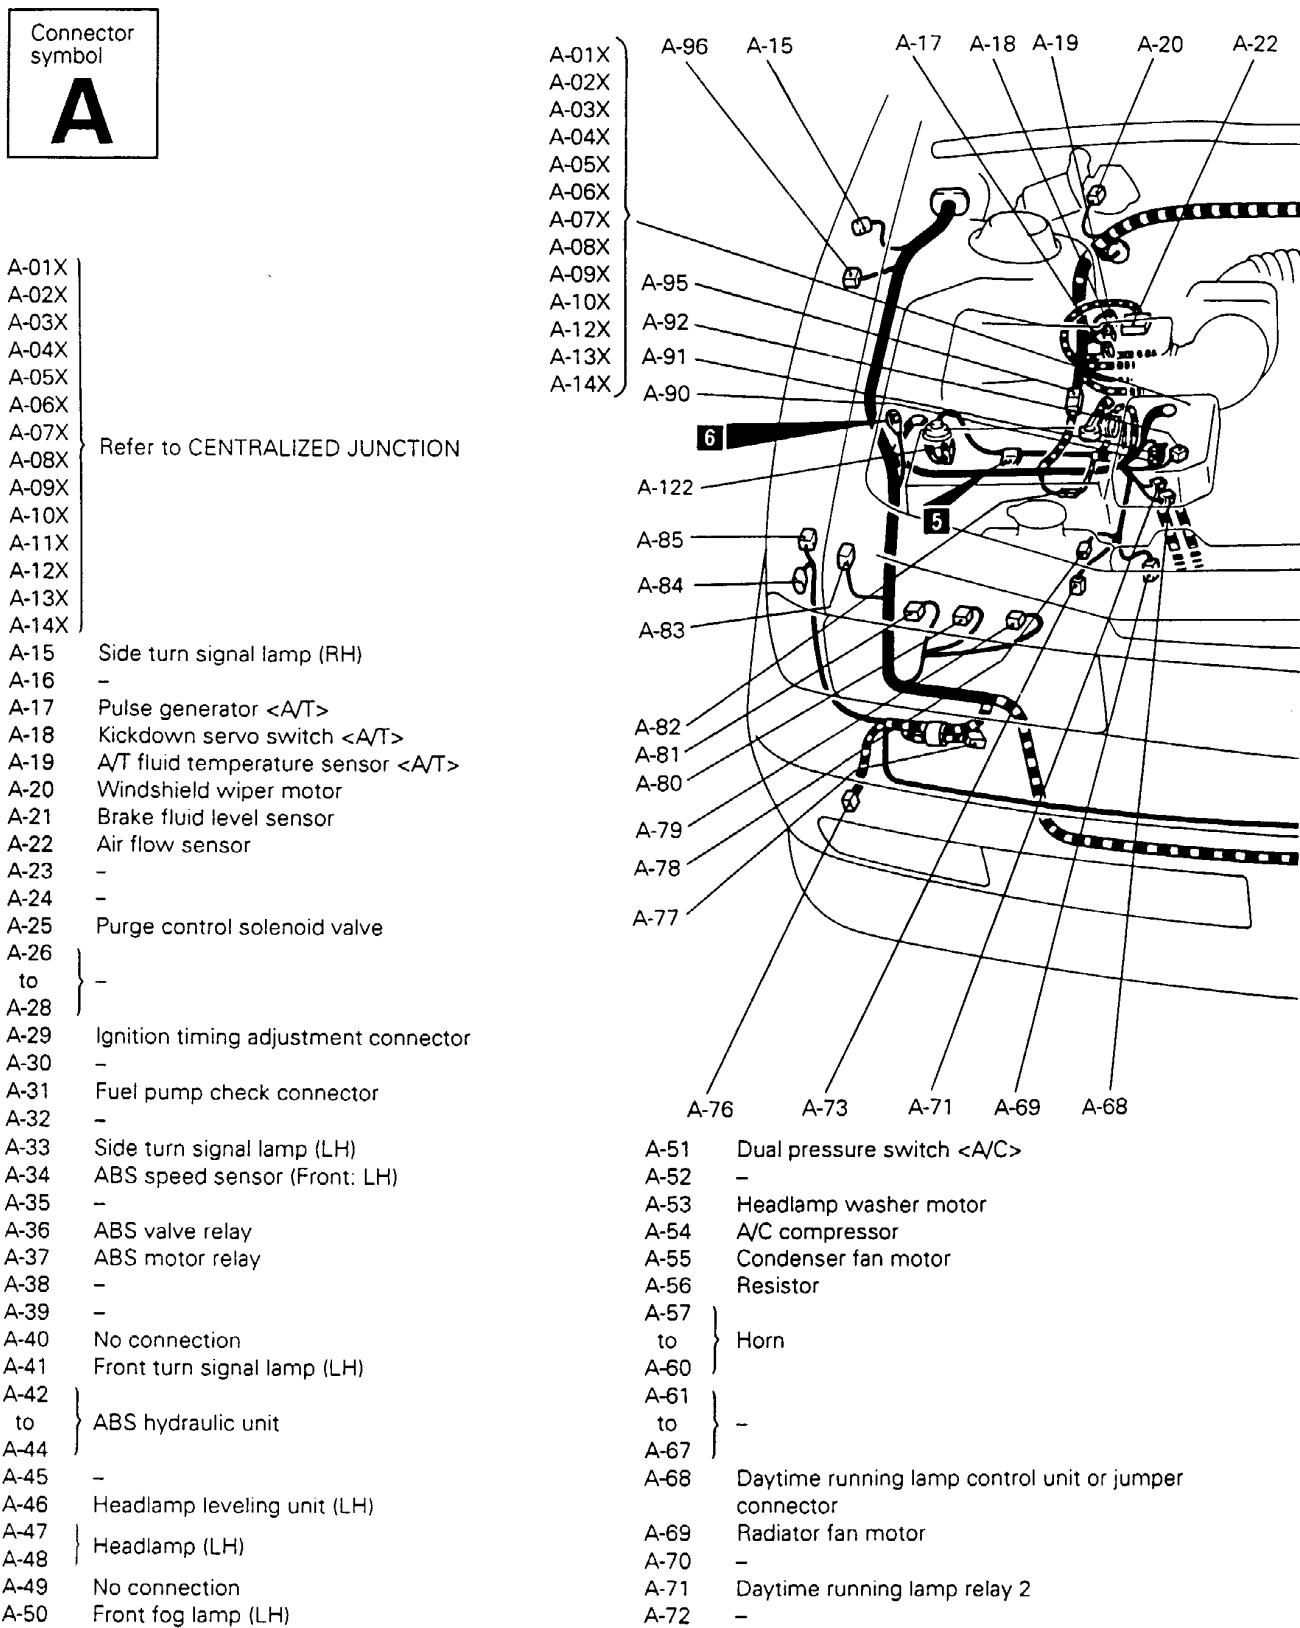


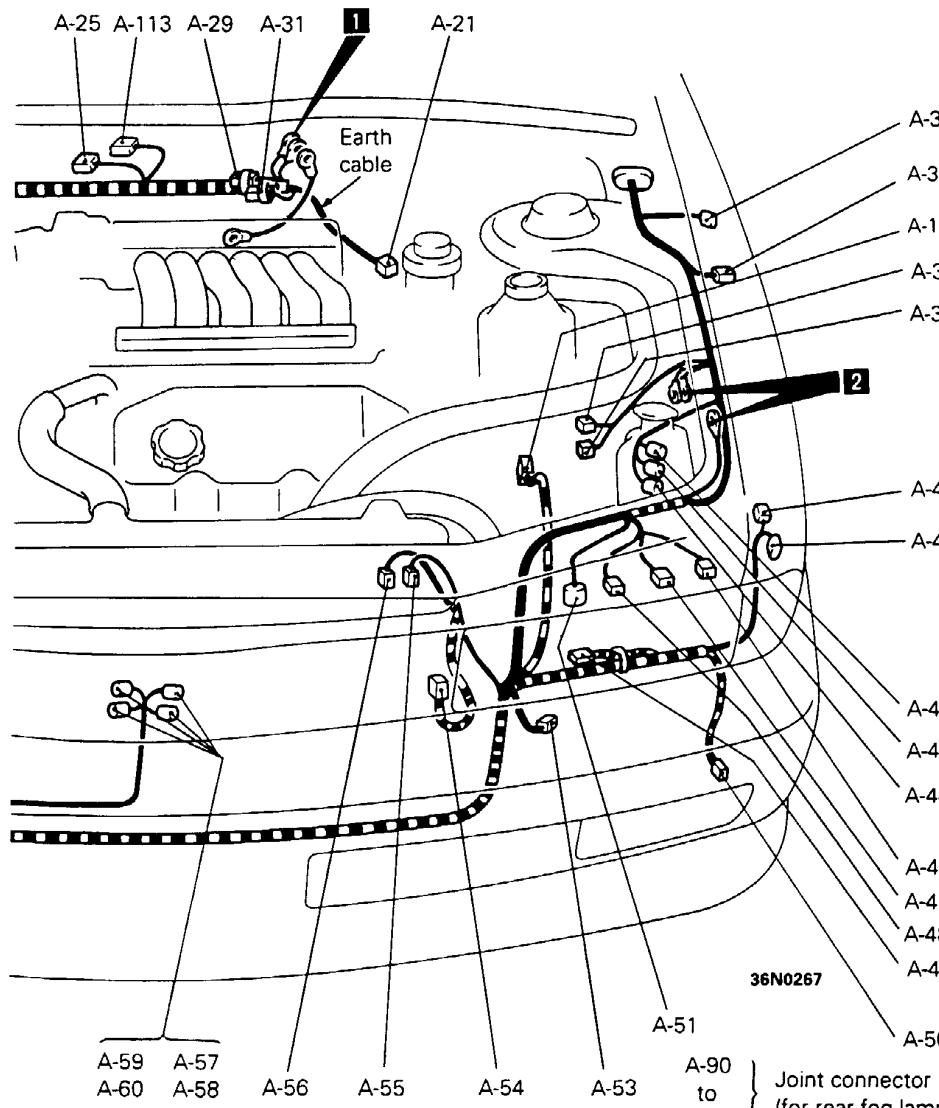

- | | | | |
|------|---|--------------------------|--|
| A-73 | Windshield washer motor | A-90 | Joint connector
(for rear fog lamp circuit) |
| A-74 | – | A-91 | |
| A-75 | – | A-92 | |
| A-76 | Front fog lamp (RH) | A-93 | – |
| A-77 | No connection | A-94 | – |
| A-78 | Windshield washer fluid level sensor | A-95 | Front wiring harness and control wiring harness
combination |
| A-79 | Headlamp (RH) | A-96 | ABS speed sensor (Front: RH) |
| A-80 | | A-97 | – |
| A-81 | Headlamp leveling unit (RH) | A-98 | |
| A-82 | Front wiring harness and battery cable
combination | A-99 | |
| A-83 | Daytime running lamp relay 1 | A-100 | |
| A-84 | Front turn signal lamp (RH) | A-101 | |
| A-85 | No connection | A-102 | |
| A-86 | – | A-103 | |
| A-87 | | A-104 | |
| A-88 | A-105 | A-106 | |
| A-89 | A-107 | A-108 | |
| | A-109 | A-109 | |
| | A-110 | A-110 | |
| | A-111 | A-111 | |
| | A-112 | A-112 | |
| | A-113 | No connection | |
| | A-114 | – | |
| | A-115 | | |
| | A-116 | | |
| | A-117 | | |
| | A-118 | | |
| | A-119 | | |
| | A-120 | | |
| | A-121 | Front impact sensor (LH) | |
| | A-122 | Front impact sensor (RH) | |
- Remark
For details concerning the earth point (example: 1), refer to P.3-20.

2-4 R.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS built up to October 1991>

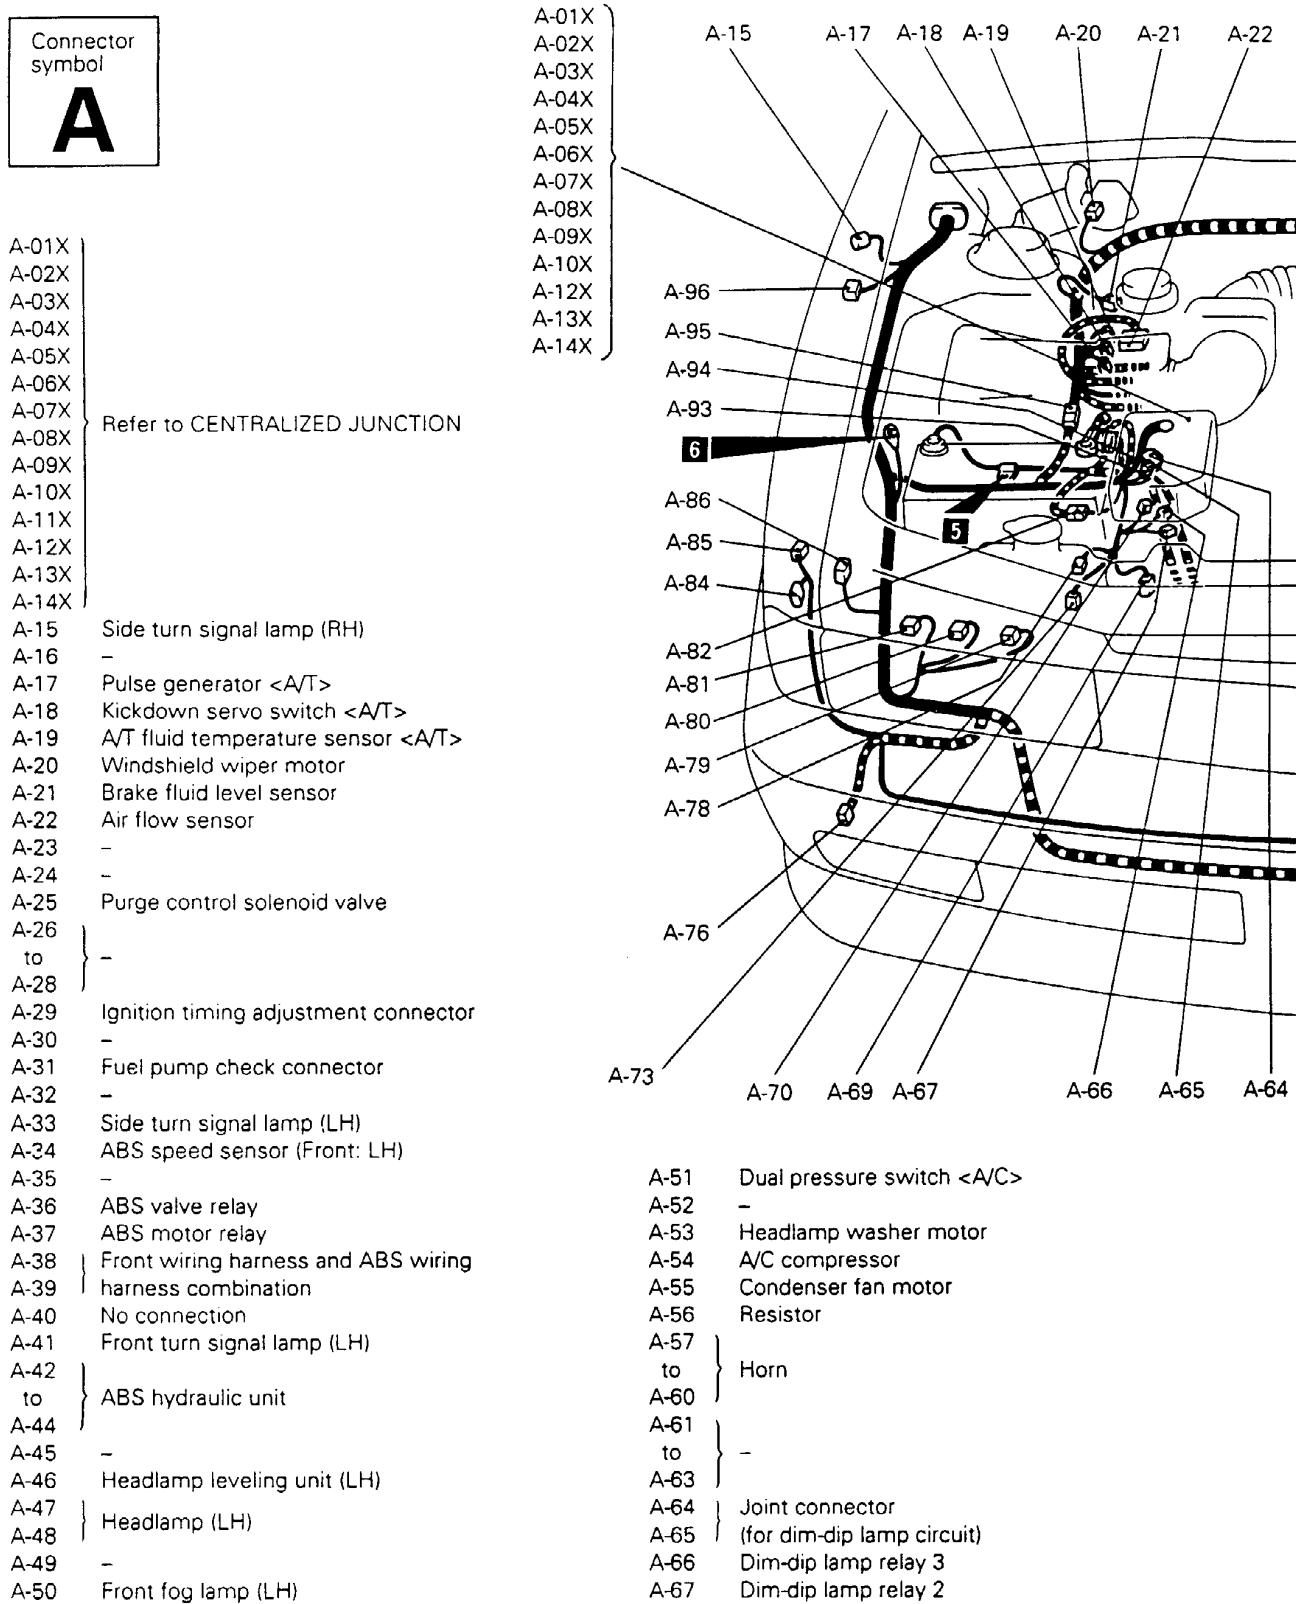


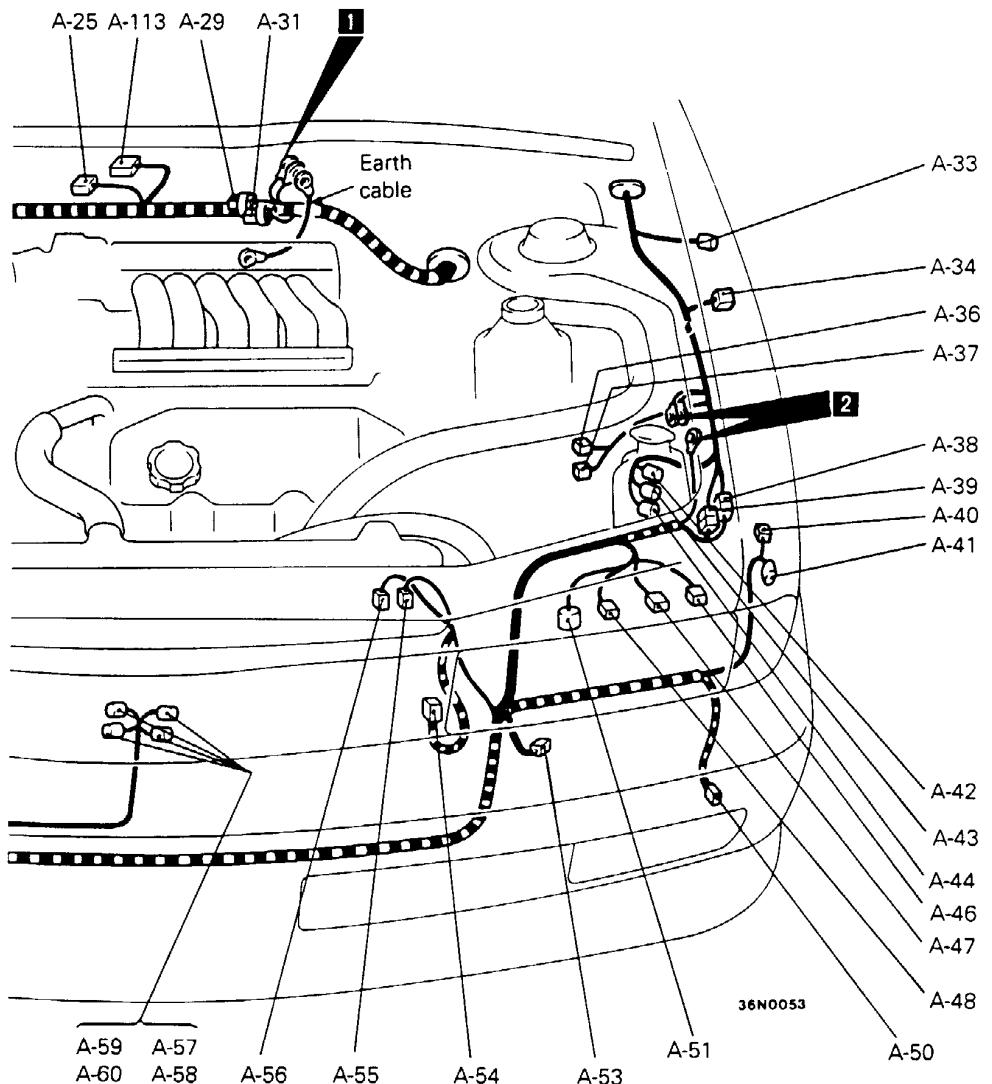

A-68	-	A-84	Front turn signal lamp (RH)
A-69	Radiator fan motor	A-85	No connection
A-70	Resistor	A-86	Dim-dip lamp relay 1
A-71	-	A-87	{ -
A-72	-	A-92	
A-73	Windshield washer motor	A-93	Joint connector
A-74	-	A-94	{ for rear fog lamp circuit)
A-75	-	A-95	Front wiring harness and control wiring harness combination
A-76	Front fog lamp (RH)	A-96	ABS speed sensor (Front: RH)
A-77	-	A-97	{ -
A-78	Windshield washer fluid level sensor	A-112	
A-79	Headlamp (RH)	A-113	No connection
A-80	Headlamp leveling unit (RH)	Remark	For details concerning the earth point (example: 1), refer to P.3-20.
A-81	Front wiring harness and battery cable combination		
A-82	-		
A-83	-		

2-11-1 WIRING HARNESS CONFIGURATION DIAGRAMS – Engine Compartment

2-4 R.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS built from November 1991>

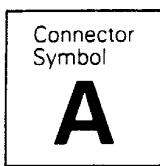

A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-11X
A-12X
A-13X
A-14X

Refer to CENTRALIZED JUNCTION


A-15 Side turn signal lamp (RH)
A-16 –
A-17 Pulse generator < A/T >
A-18 Kickdown servo switch < A/T >
A-19 A/T fluid temperature sensor < A/T >
A-20 Windshield wiper motor
A-21 Brake fluid level sensor
A-22 Air flow sensor
A-23 –
A-24 No connection
A-25 Purge control solenoid valve
A-26 to –
A-28 } –
A-29 Ignition timing adjustment connector
A-30 –
A-31 Fuel pump check connector
A-32 –
A-33 Side turn signal lamp (LH)
A-34 ABS speed sensor (Front: LH)
A-35 –
A-36 ABS valve relay
A-37 ABS motor relay
A-38 Front wiring harness and ABS wiring
A-39 harness combination
A-40 –
A-41 Front turn signal lamp (LH)
A-42 to ABS hydraulic unit
A-44 } –
A-45 –
A-46 Headlamp leveling unit (LH)
A-47 Headlamp (LH)
A-48 –
A-49 –
A-50 Front fog lamp (LH)
A-51 Dual pressure switch < A/C >
A-52 –

A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-11X
A-12X
A-13X
A-14X

A-15 A-17 A-18 A-19 A-20 A-21 A-22 A-24
A-96
A-122
A-95
A-94
A-93
6
A-86
A-84
A-82
A-81
A-80
A-79
A-78
A-76
A-73 A-70 A-69
A-67 A-66 A-65 A-64

A-53 Headlamp washer motor
A-54 A/C compressor
A-55 Condenser fan motor
A-56 Resistor
A-57 to Horn
A-60
A-61 to –
A-63 –
A-64 Joint connector
A-65 (for dim-dip lamp circuit)
A-66 Dim-dip lamp relay 3
A-67 Dim-dip lamp relay 2
A-68 –
A-69 Radiator fan motor
A-70 Resistor


WIRING HARNESS CONFIGURATION DIAGRAMS – Engine Compartment 2-11-2

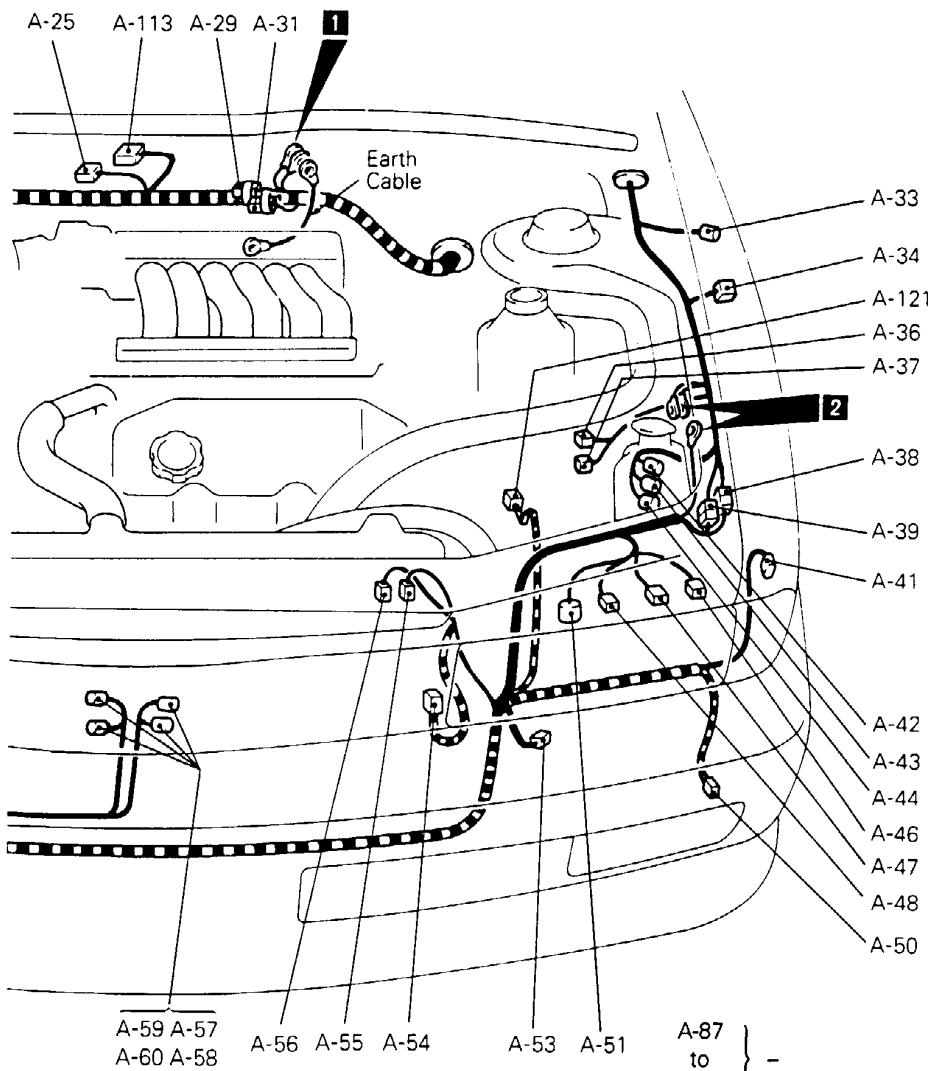

- A-71 | –
 A-72 | –
 A-73 Windshield washer motor
 A-74 | –
 A-75 | –
 A-76 Front fog lamp (RH)
 A-77 | –
 A-78 Windshield washer fluid level sensor
 A-79 | Headlamp (RH)
 A-80 | –
 A-81 Headlamp leveling unit (RH)
 A-82 Front wiring harness and battery cable combination
 A-83 | –
 A-84 Front turn signal lamp (RH)
 A-85 | –
 A-86 Dim-dip lamp relay 1
- A-87 to A-92 } –
 A-93 Joint connector (for rear fog lamp circuit)
 A-94 Front wiring harness and control wiring harness combination
 A-95 ABS speed sensor (Front: RH)
 A-96 | –
 A-97 to A-112 } –
 A-113 No connection
 A-114 to A-120 } –
 A-121 Front impact sensor (LH) <SRS>
 A-122 Front impact sensor (RH) <SRS>

Remark
For details concerning the earth point (example: 1), refer to P.3-20.

2-5 L.H. drive vehicles with MPI-DOHC engine

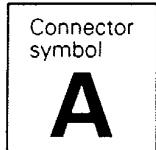

A-01X
 A-02X
 A-03X
 A-04X
 A-05X
 A-06X
 A-07X
 A-08X
 A-09X
 A-10X
 A-11X
 A-12X
 A-13X
 A-14X


Refer to CENTRALIZED JUNCTION

A-15 Side turn signal lamp (RH)
 A-16 ACTIVE-ECS front actuator (RH)
 A-17 Pulse generator <A/T>
 A-18 Kickdown servo switch <A/T>
 A-19 A/T fluid temperature sensor <A/T>
 A-20 Windshield wiper motor
 A-21 Brake fluid level sensor
 A-22 Air flow sensor
 A-23 ACTIVE-ECS front solenoid valve
 A-24 Auto-cruise control actuator
 A-25 Purge control solenoid valve
 A-26 Ventilation solenoid valve <TCL>
 A-27 Vacuum solenoid valve <TCL>
 A-28 EPS solenoid valve
 A-29 Ignition timing adjustment connector
 A-30 Engine speed detection connector
 A-31 Fuel pump check connector
 A-32 ACTIVE-ECS front actuator (LH)
 A-33 Side turn signal lamp (LH)
 A-34 ABS speed sensor (Front: LH)
 A-35 4VVS fluid level sensor
 A-36 ABS valve relay
 A-37 ABS motor relay
 A-38 –
 A-39 –
 A-40 No connection
 A-41 Front turn signal lamp (LH)
 A-42 to ABS hydraulic unit
 A-44
 A-45 ABS hydraulic unit <TCL>
 A-46 Headlamp leveling unit (LH)

A-01X
 A-02X
 A-03X
 A-04X
 A-05X
 A-06X
 A-07X
 A-08X
 A-09X
 A-10X
 A-11X
 A-12X
 A-13X
 A-14X


A-15 A-16 A-17 A-18 A-19 A-20 A-22 A-23 A-24
 A-96
 A-95
 A-92
 A-91
 A-90
 A-122
 A-89
 A-88
 A-87
 A-85
 A-84
 A-83
 A-82
 A-81
 A-80
 A-79
 A-78
 A-76
 A-75
 A-74 A-77 A-73 A-72 A-71 A-69 A-68 A-63 A-62 A-61

A-47 Headlamp (LH)
 A-48 No connection
 A-49 Front fog lamp (LH)
 A-50 Dual pressure switch <A/C>
 A-51 ACTIVE-ECS G sensor
 A-52 Headlamp washer motor
 A-53 –
 A-54 Condenser fan motor
 A-55 Resistor
 A-56 to Horn
 A-60 ACTIVE-ECS compressor
 A-61 ACTIVE-ECS exhaust solenoid valve
 A-62 ACTIVE-ECS front height sensor
 A-63 –
 A-64 to –
 A-67 –

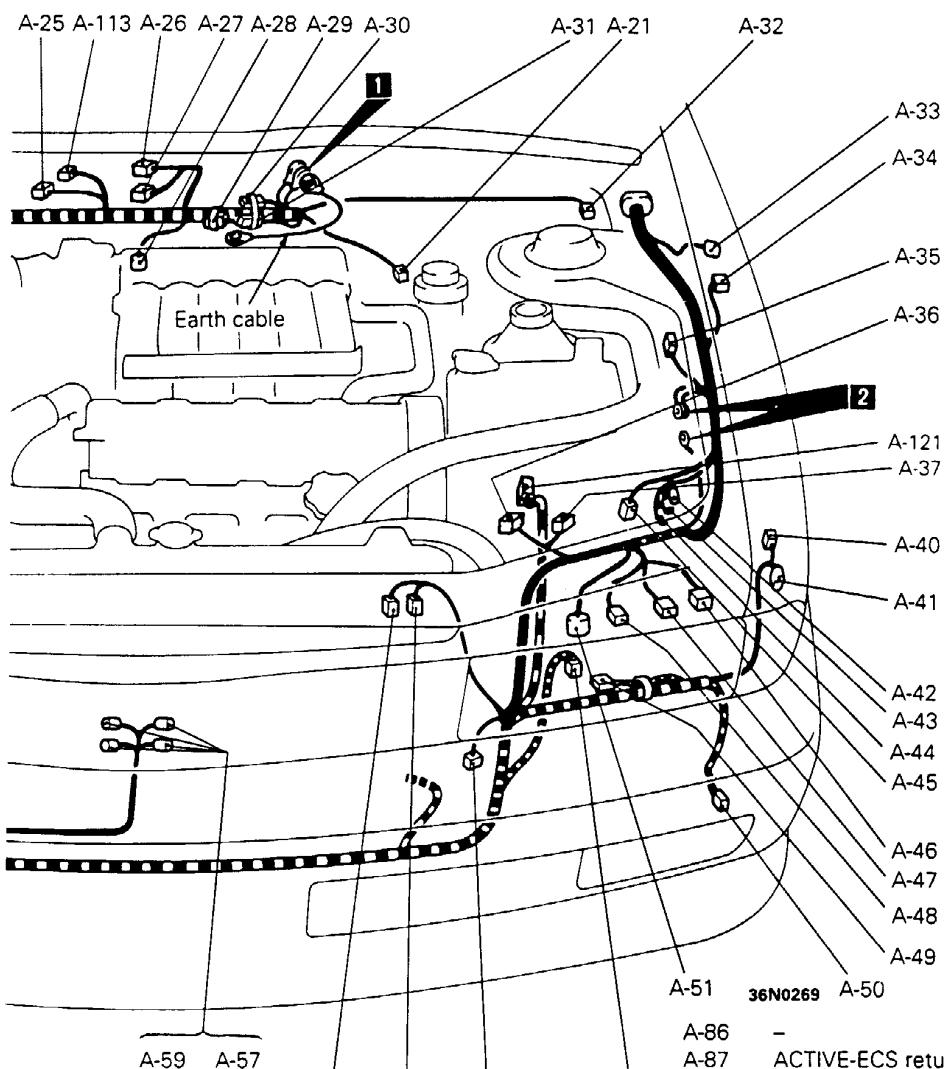

A-68	Daytime running lamp control unit or jumper connector	A-86 – A-87 ACTIVE-ECS return pump relay A-88 ACTIVE-ECS compressor relay A-89 ACTIVE-ECS solenoid valve relay
A-69	Radiator fan motor	A-90 } Joint connector A-70 – to A-92 } (for rear fog lamp circuit)
A-71	Daytime running lamp relay 2	A-93 – A-94 –
A-72	ACTIVE-ECS flow control solenoid valve	A-95 Front wiring harness and control wiring harness combination
A-73	Windshield washer motor	A-96 ABS speed sensor (Front: RH)
A-74	ACTIVE-ECS return pump	A-97 } – A-112 to A-113 } –
A-75	ACTIVE-ECS pressure switch	A-113 No connection
A-76	Front fog lamp (RH)	A-114 } – A-120 to A-121 } –
A-77	No connection	A-121 Front impact sensor (LH) A-122 Front impact sensor (RH)
A-78	Windshield washer fluid level sensor	
A-79	Headlamp (RH)	
A-80	Headlamp leveling unit (RH)	
A-81	Front wiring harness and battery cable combination	
A-83	Daytime running lamp relay 1	Remarks (1) For details concerning the earth point (example: 1), refer to P.3-20.
A-84	Front turn signal lamp (RH)	(2) The mark ★ shows the standard mounting position of wiring harness.
A-85	No connection	

2-6 R.H. drive vehicles with MPI-DOHC engine <Vehicles built up to October 1991>

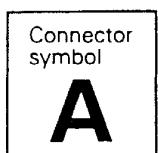



A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-11X
A-12X
A-13X
A-14X

Refer to CENTRALIZED JUNCTION

A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-11X
A-12X
A-13X
A-14X


- A-15 Side turn signal lamp (RH)
- A-16 ACTIVE-ECS front actuator (RH)
- A-17 Pulse generator <A/T>
- A-18 Kickdown servo switch <A/T>
- A-19 A/T fluid temperature sensor <A/T>
- A-20 Windshield wiper motor
- A-21 Brake fluid level sensor
- A-22 Air flow sensor
- A-23 ACTIVE-ECS front solenoid valve
- A-24 Auto-cruise control actuator
- A-25 Purge control solenoid valve
- A-26 Ventilation solenoid valve <TCL>
- A-27 Vacuum solenoid valve <TCL>
- A-28 EPS solenoid valve
- A-29 Ignition timing adjustment connector
- A-30 Engine speed detection connector
- A-31 Fuel pump check connector
- A-32 ACTIVE-ECS front actuator (LH)
- A-33 Side turn signal lamp (LH)
- A-34 ABS speed sensor (Front: LH)
- A-35 4WS fluid level sensor
- A-36 ABS valve relay
- A-37 ABS motor relay
- A-38 Front wiring harness and ABS wiring
- A-39 harness combination
- A-40 No connection
- A-41 Front turn signal lamp (LH)
- A-42 to ABS hydraulic unit
- A-44 ABS hydraulic unit <TCL>
- A-45 ABS hydraulic unit <TCL>
- A-46 Headlamp leveling unit (LH)

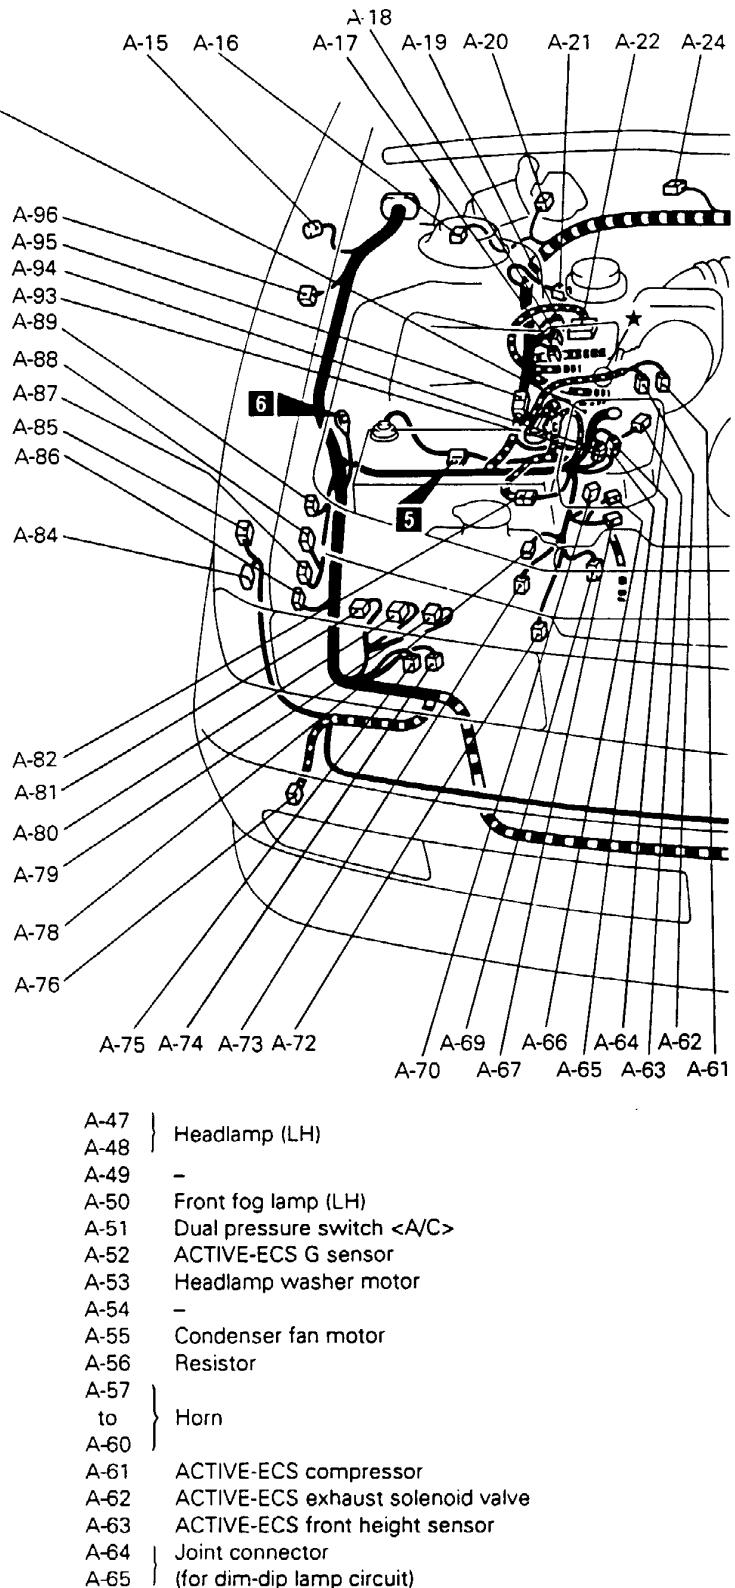

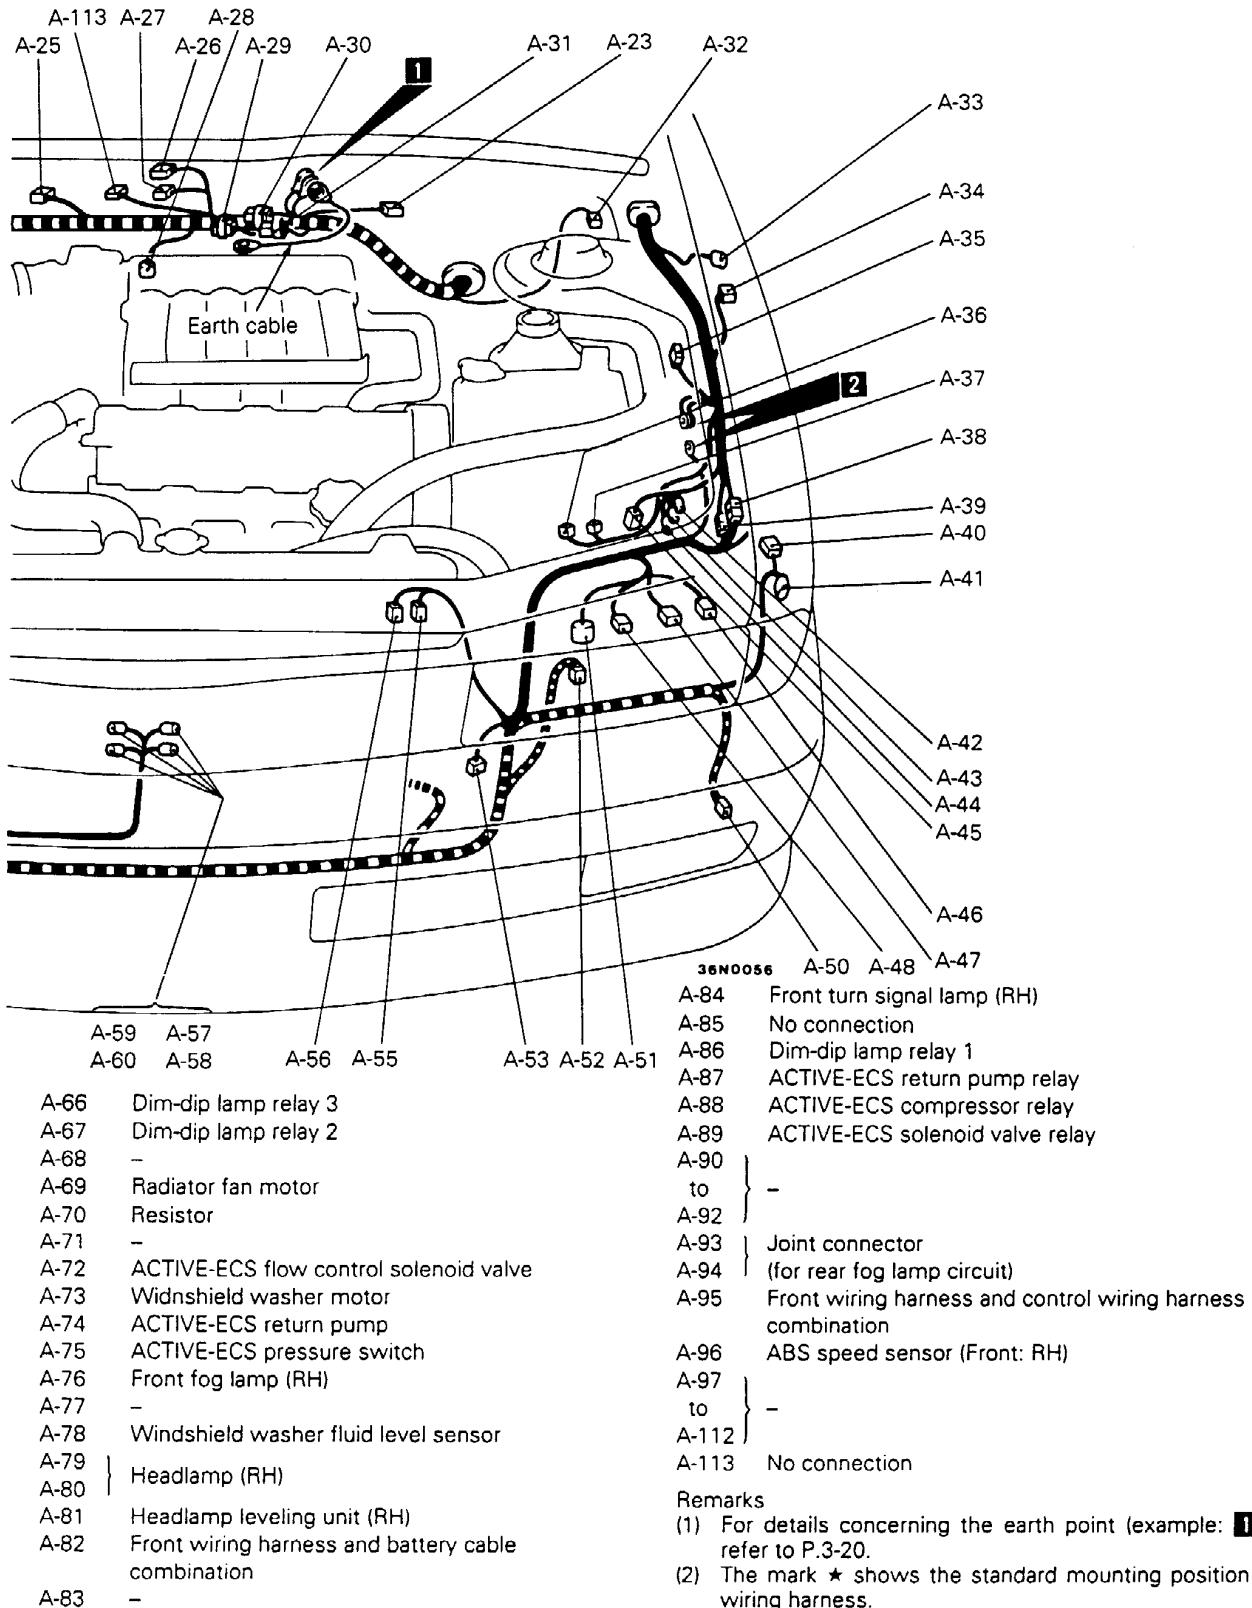

2-15-1 WIRING HARNESS CONFIGURATION DIAGRAMS – Engine Compartment

2-6 R.H. drive vehicles with MPI-DOHC engine <Vehicles built from November 1991>

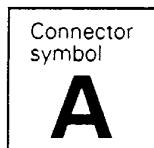


A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X


Refer to CENTRALIZED JUNCTION

A-08X
A-09X
A-10X
A-11X
A-12X
A-13X
A-14X

- A-15 Side turn signal lamp (RH)
 A-16 ACTIVE-ECS front actuator (RH)
 A-17 Pulse generator <AVT>
 A-18 Kickdown servo switch <AVT>
 A-19 A/T fluid temperature sensor <AVT>
 A-20 Windshield wiper motor
 A-21 Brake fluid level sensor
 A-22 Air flow sensor
 A-23 ACTIVE-ECS front solenoid valve
 A-24 Auto-cruise control actuator
 A-25 Purge control solenoid valve
 A-26 Ventilation solenoid valve <TCU>
 A-27 Vacuum solenoid valve <TCU>
 A-28 EPS solenoid valve
 A-29 Ignition timing adjustment connector
 A-30 Engine speed detection connector
 A-31 Fuel pump check connector
 A-32 ACTIVE-ECS front actuator (LH)
 A-33 Side turn signal lamp (LH)
 A-34 ABS speed sensor (Front: LH)
 A-35 4WS fluid level sensor
 A-36 ABS valve relay
 A-37 ABS motor relay
 A-38 Front wiring harness and ABS wiring
 A-39 harness combination
 A-40 –
 A-41 Front turn signal lamp (LH)
 A-42 to ABS hydraulic unit
 A-44 –
 A-45 ABS hydraulic unit <TCU>
 A-46 Headlamp leveling unit (LH)
 A-47 Headlamp (LH)
 A-48 –
 A-49 –
 A-50 Front fog lamp (LH)
 A-51 Dual pressure switch <AVC>

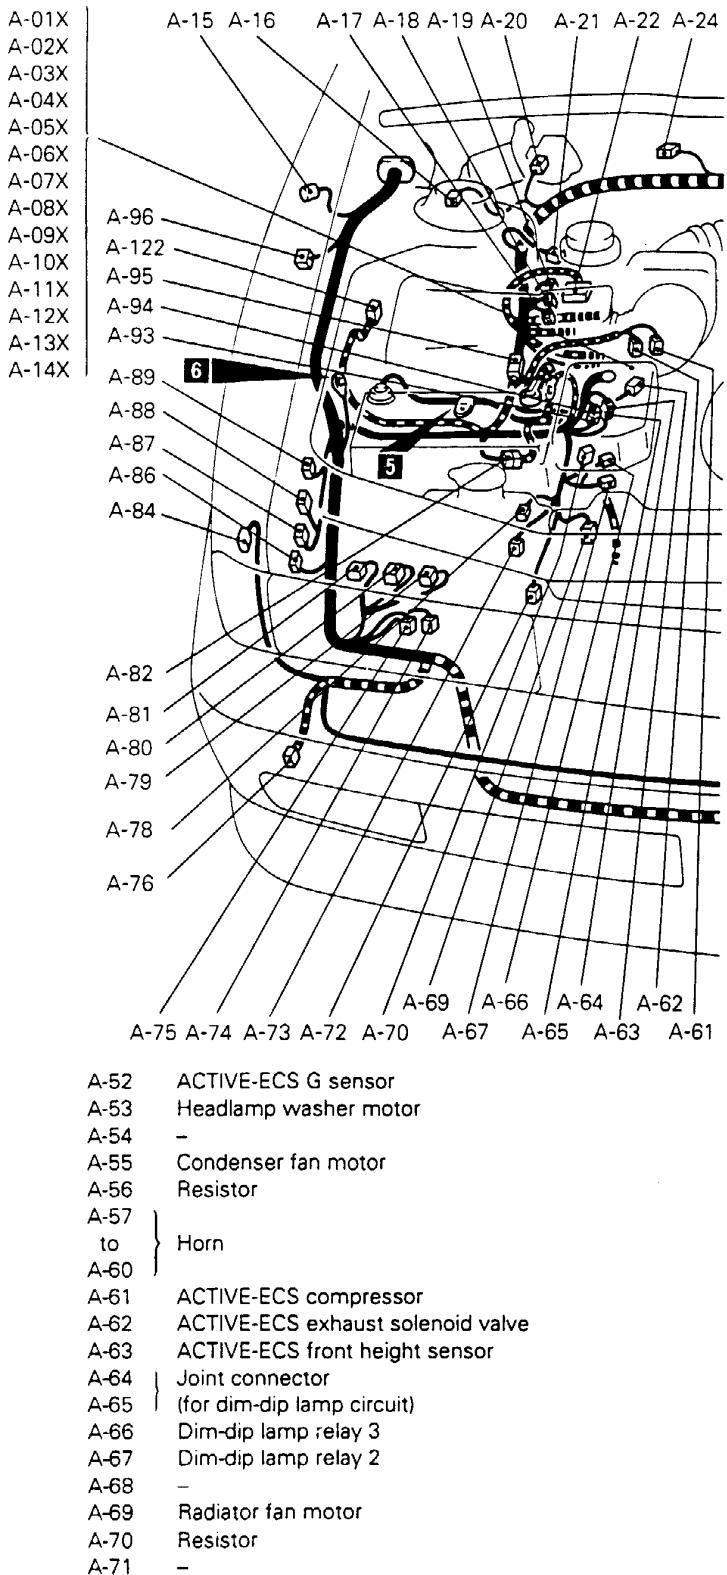


WIRING HARNESS CONFIGURATION DIAGRAMS – Engine Compartment 2-15-2

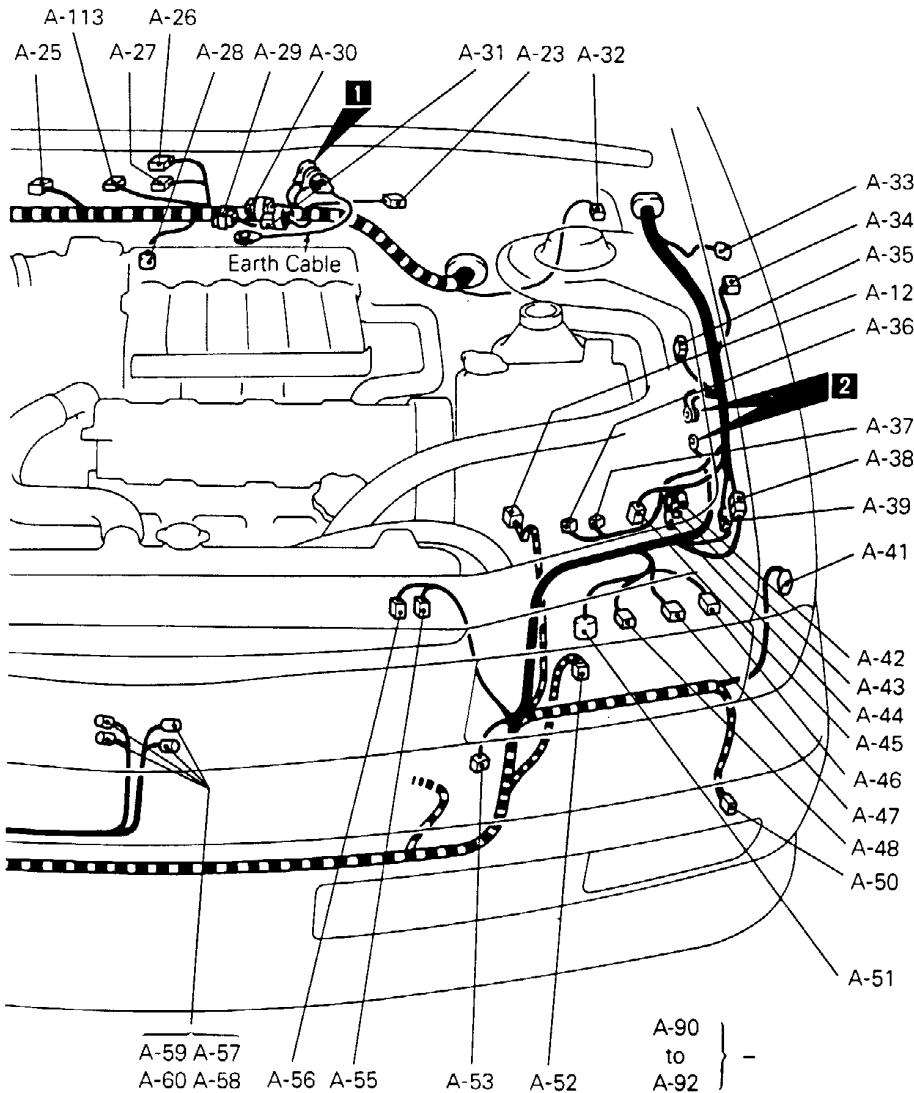

A-72	ACTIVE-ECS flow control solenoid valve	A-90	–
A-73	Windshield washer motor	A-92	–
A-74	ACTIVE-ECS return pump	A-93	Joint connector (for rear fog lamp circuit)
A-75	ACTIVE-ECS pressure switch	A-94	Front wiring harness and control wiring harness combination
A-76	Front fog lamp (RH)	A-95	ABS speed sensor (Front: RH)
A-77	–	A-96	–
A-78	Windshield washer fluid level sensor	A-97	–
A-79	Headlamp (RH)	A-98	–
A-80	Headlamp leveling unit (RH)	A-99	–
A-81	Headlamp leveling unit (RH)	A-100	–
A-82	Front wiring harness and battery cable combination	A-101	–
A-83	–	A-102	Front impact sensor (LH) <SRS>
A-84	Front turn signal lamp (RH)	A-103	Front impact sensor (RH) <SRS>
A-85	–		
A-86	Dim-dip lamp relay 1		Remarks
A-87	ACTIVE-ECS return pump relay		(1) For details concerning the earth point (example: 1), refer to P.3-20.
A-88	ACTIVE-ECS compressor relay		(2) The mark ★ shows the standard mounting position of wiring harness.
A-89	ACTIVE-ECS solenoid valve relay		


3 ENGINE AND TRANSMISSION

3-1 MPI-SOHC engine

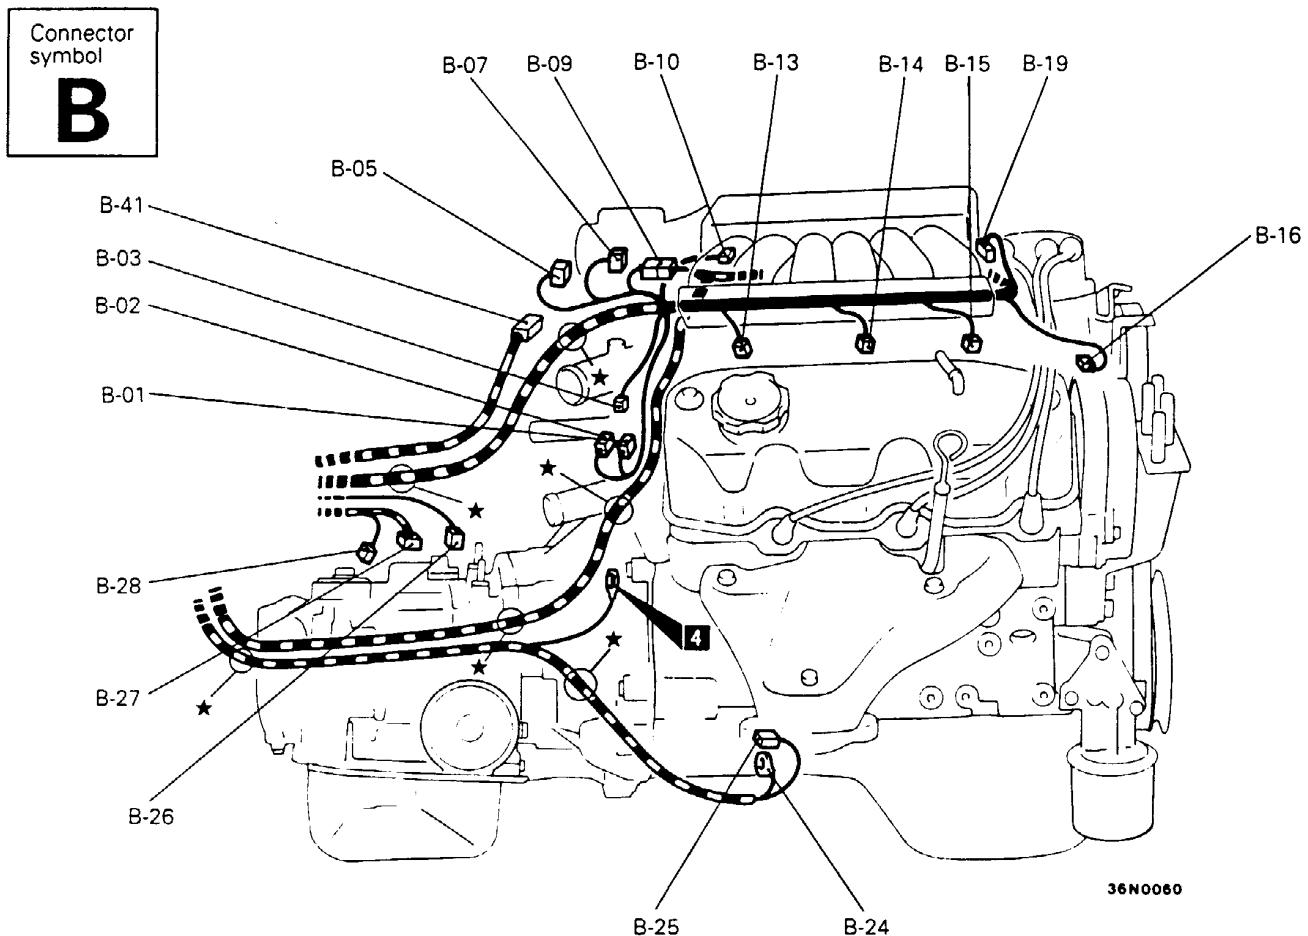


- | | | | | |
|------|---|------|------------------------------------|----------------|
| B-01 | Engine coolant temperature gauge unit | B-11 | Variable induction control servo | |
| B-02 | Engine coolant temperature sensor
(for engine control) | B-12 | B-13 | Injector No. 5 |
| B-03 | Engine coolant temperature switch
(for A/C compressor control) | B-14 | Injector No. 3 | |
| B-04 | Crank angle sensor and top dead center sensor | B-15 | Injector No. 1 | |
| B-05 | Idle speed control servo | B-16 | Power steering oil pressure switch | |
| B-06 | - | B-17 | Ignition coil | |
| B-07 | Throttle position sensor | B-18 | Capacitor | |
| B-08 | - | B-19 | Power transistor | |
| B-09 | Control wiring harness and injector wiring
harness combination | B-20 | - | |
| B-10 | Detonation sensor | B-21 | Alternator | |


Vehicles with air conditioner

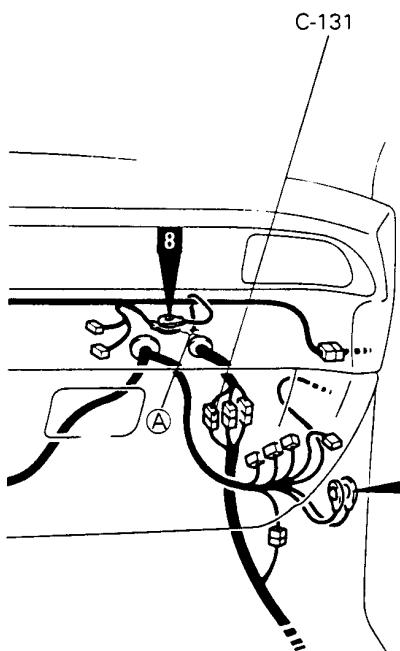

36N0062

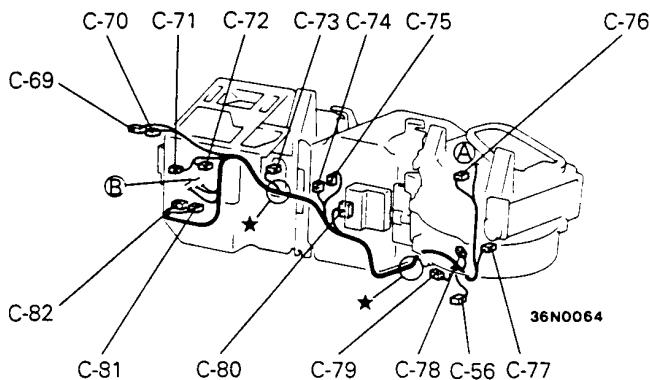

C-131

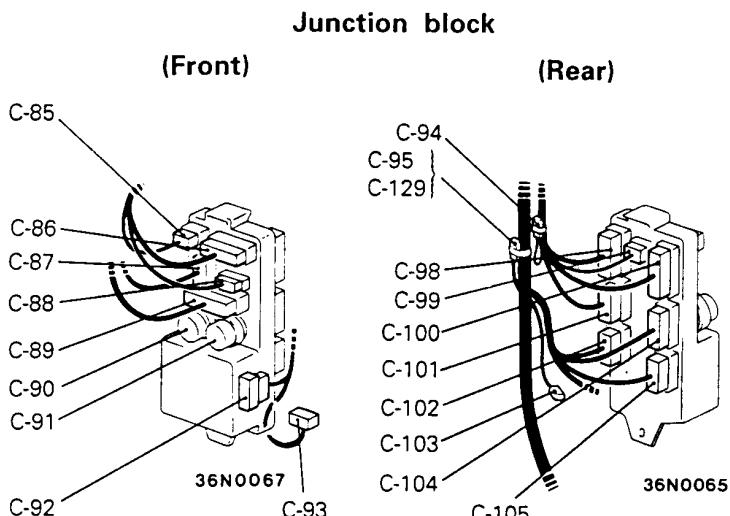

(Front)

(Rear)

36N0062

36N0067

36N0065


C-80	A/C belt lock controller <DOHC>	C-98	
C-81	A/C control unit	C-99	
C-82		C-100	Body wiring harness and junction
C-83	–	C-101	block combination
C-84	–	C-102	
C-85	Front wiring harness and junction	C-103	TCL valve relay
C-86	block combination	C-104	Body wiring harness and junction
C-87	Roof wiring harness and junction block	C-105	block combination
C-88	combination	C-106	TCL switch
C-89	Front wiring harness and junction block	C-107	–
C-90	combination	C-108	
C-91	Instrument panel wiring harness and	C-109	C-129 Diode (for power seat circuit)
C-92	junction block combination	C-130	–
C-93	Defogger relay	C-131	Front wiring harness and ACTIVE-ECS wiring
C-94	Blower motor relay	C-132	harness combination
C-95	Diagnosis connector		Body wiring harness and control wiring harness
C-96	Diagnosis connector <TCL>		combination
C-97	Diode <4WS>		
	Diode (for ACTIVE-ECS circuit)		
	–		
	–		

Remarks

- (1) For details concerning the earth point (example: 7), refer to P.3-21.
- (2) The mark ★ shows the standard mounting position of wiring harness.


4-1 L.H. drive vehicles <Vehicles built from April 1991>

Connector symbol
C -01
 to
 -40

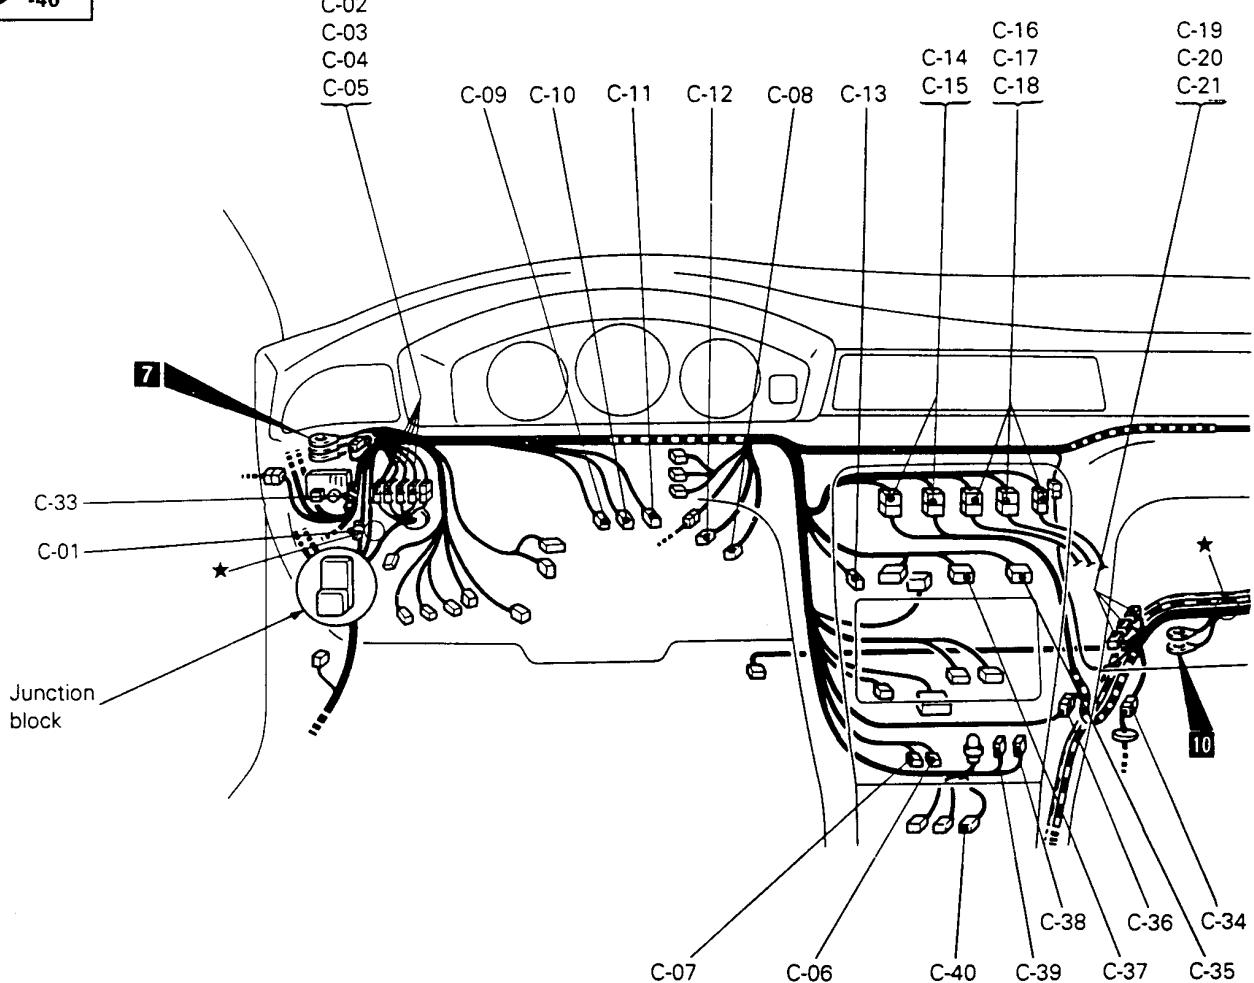

- C-01 Diode (for idle-up circuit) <DOHC>
- C-02 to C-04 Body wiring harness and front wiring harness combination
- C-05 Body wiring harness and front wiring harness combination <ABS>
- C-06 C-07 ETACS unit
- C-08 Accelerator pedal switch <A/T> *^B
- C-09 Stop lamp switch (4-pin) <Auto-cruise control> or no connection
- C-10 Stop lamp switch (2-pin) or no connection <Auto-cruise control>

- C-11 Clutch pedal switch <Auto-cruise control (M/T)>
- C-12 Headlamp leveling switch
- C-13 No connection
- C-14 to C-18 Body wiring harness and control wiring harness combination
- C-19 ELC-4A/T control unit
- C-20 ELC-4A/T control unit *^B
- C-21 Engine oil level relay
- C-22 Headlamp washer relay

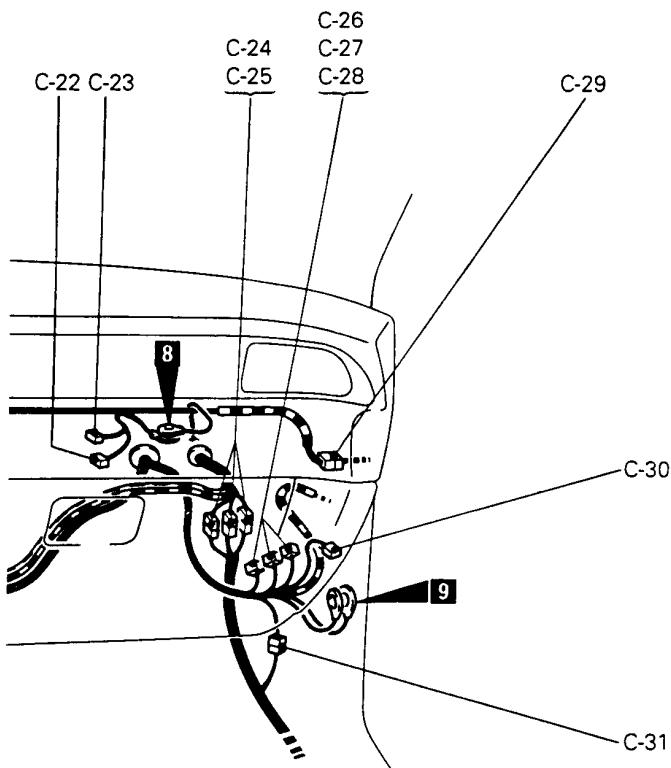

36N0329

C-24	Front wiring harness and
C-25	ACTIVE-ECS wiring harness combination
C-26	to
C-28	Engine control unit
C-29	Body wiring harness and front door wiring harness (RH) combination
C-30	Engine control relay
C-31	Control wiring harness and ACTIVE-ECS wiring harness combination
C-32	–
C-33	Diode (for ABS circuit)
C-34	Oxygen sensor


C-35	Rear fog lamp switch
C-36	Body wiring harness and control wiring harness combination <TCI>
C-37	Defogger switch
C-38	Cigarette lighter
C-39	Heated seat switch (RH)

Remarks


- (1) For details concerning the earth point (example: 7), refer to P.3-21.
- (2) The mark ★ shows the standard mounting position of wiring harness.
- (3) *B : Vehicles built up to October 1991.

4-1 L.H. drive vehicles <Vehicles built from April 1991>

Connector symbol
C -41
 to -144

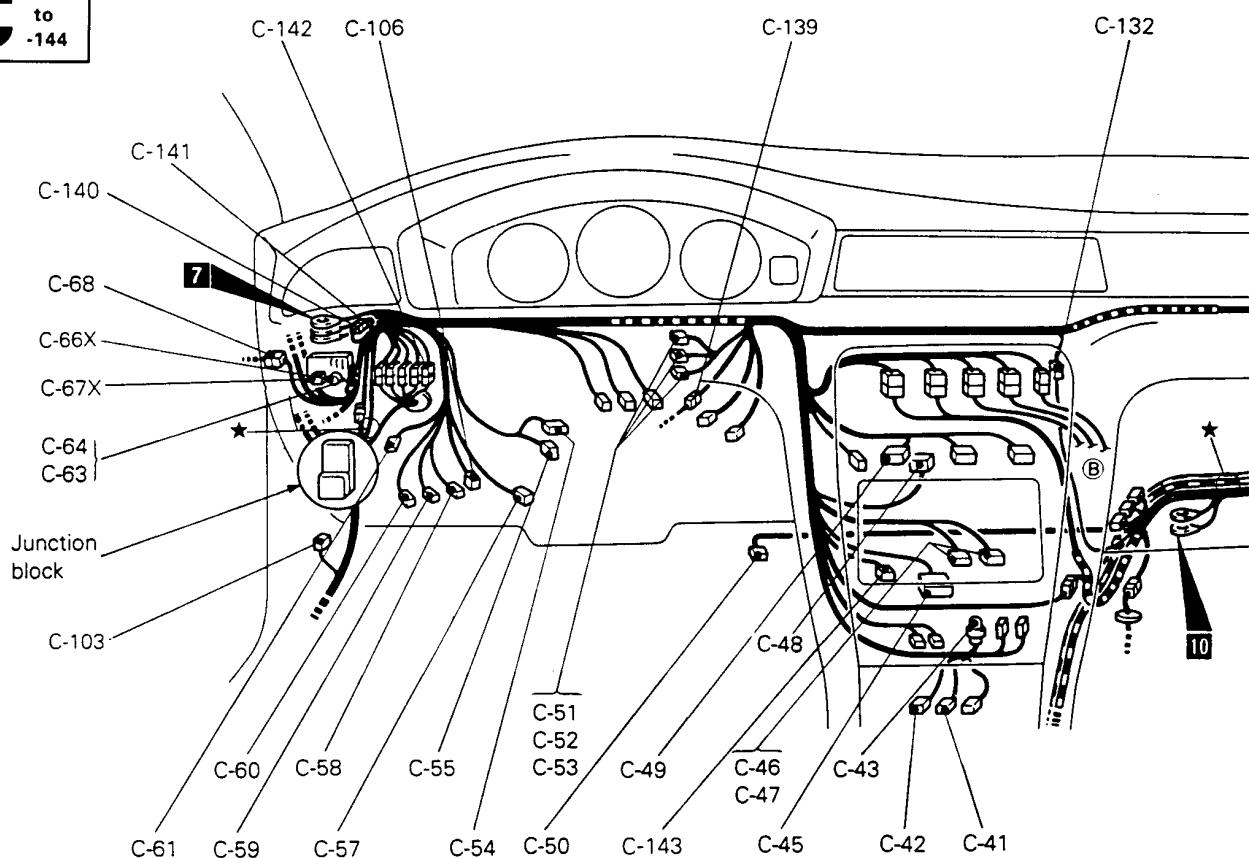


C-41	ACTIVE-ECS switch	C-61	No connection
C-42	Heated seat switch (LH)	C-62	–
C-43	Cigarette lighter illumination lamp	C-63	Diode (for ACTIVE-ECS circuit)
C-44	–	C-64	Diode (for headlamp circuit)
C-45	Auto-cruise control unit	C-65X to C-67X	Refer to CENTRALIZED JUNCTION
C-46	Audio	C-68	Body wiring harness and front door wiring harness (LH) combination
C-47	EPS control unit	C-69	A/C control panel assembly
C-48	Hazard warning switch	C-70	Mode selection damper control motor
C-49	Wide open throttle switch <A/T>	C-71	Air mixing damper control motor
C-50	Column switch	C-72	Power transistor
C-51	Ignition switch	C-73	Water temperature sensor
C-53	Key reminder switch	C-74	Fin thermo sensor
C-54	Foot lamp (RH)	C-75	Air inlet sensor
C-55	Foot lamp (LH)	C-76	Air selection damper control motor
C-56	Accessory socket	C-77	Blower motor
C-57	Rear wiper and washer switch	C-78	Blower motor high relay
C-58	–	C-79	–

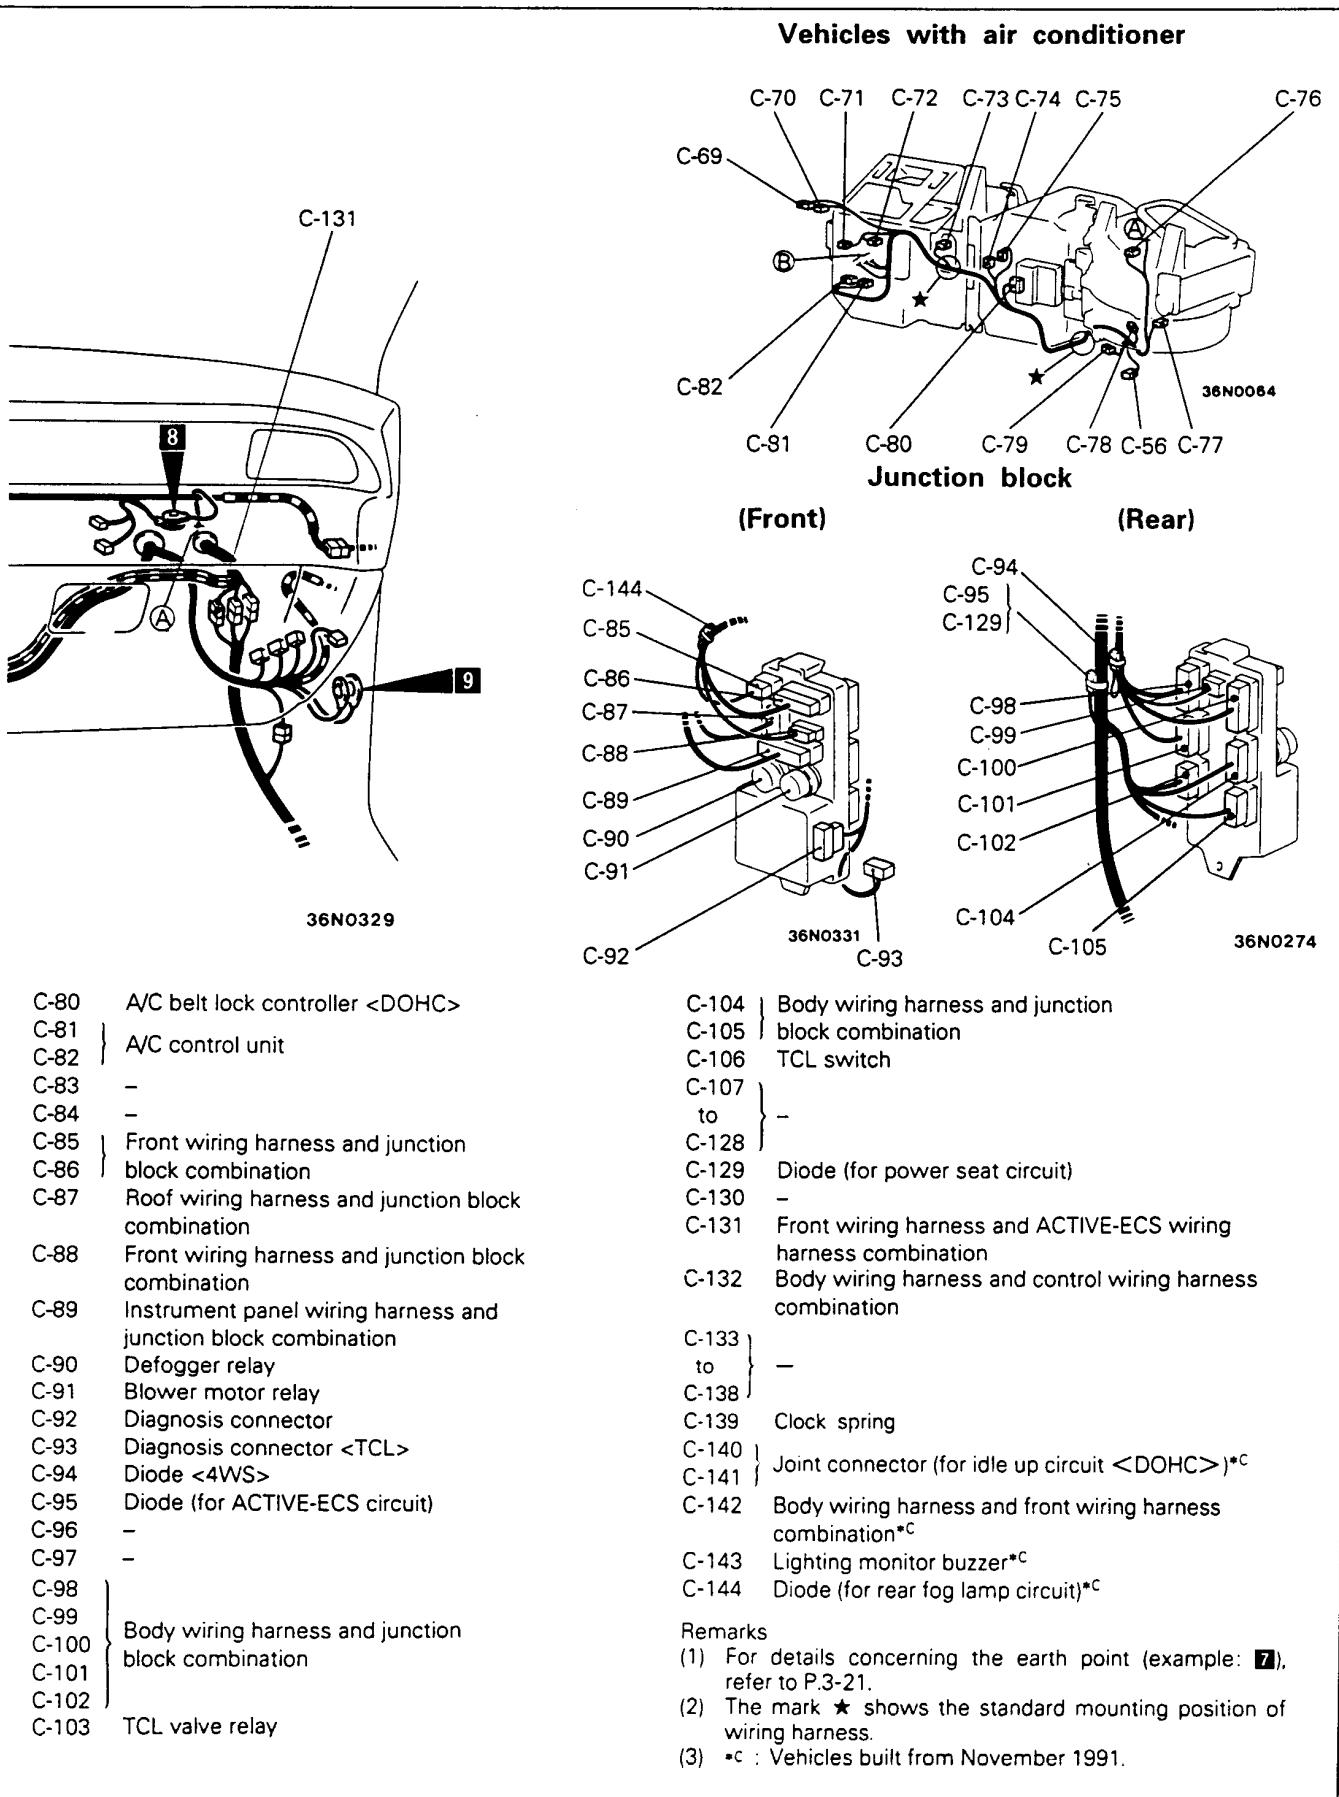


4-2 R.H. drive vehicles <Vehicles built up to March 1991>

Connector symbol
C -01
 to
 -40

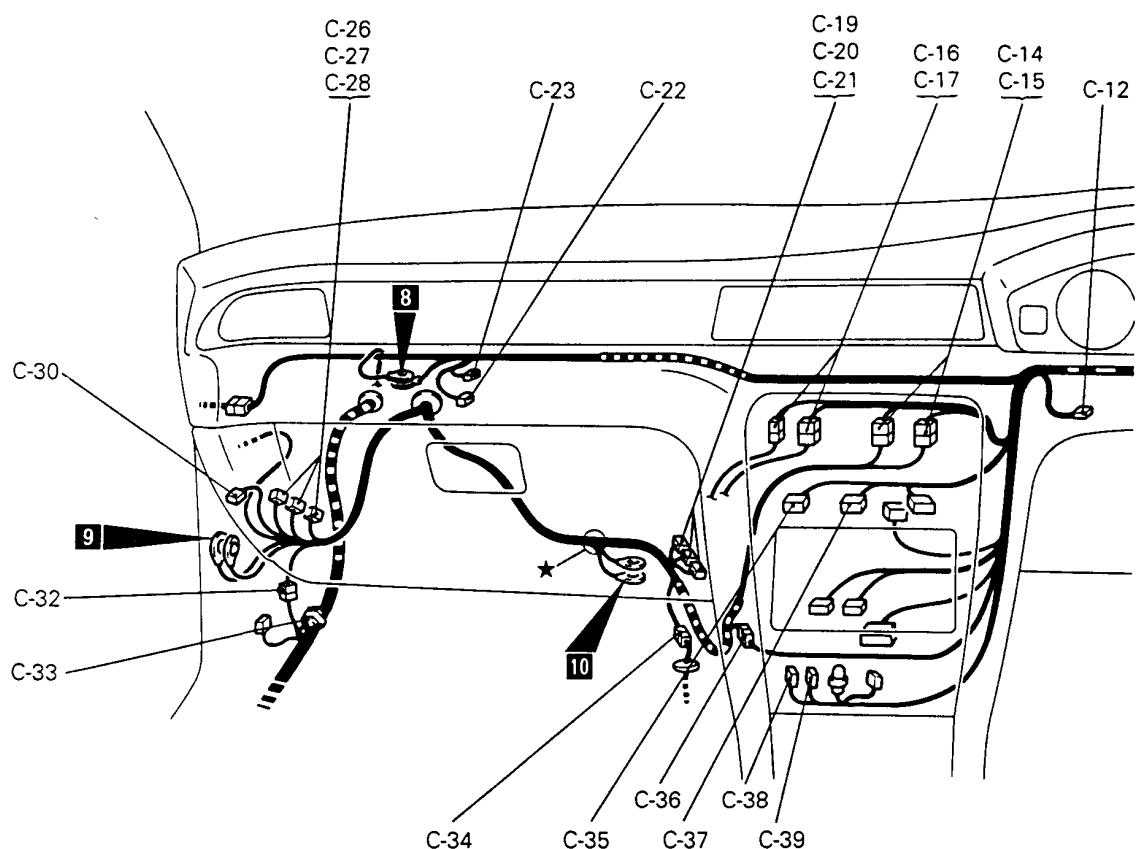

- | | | | |
|------|---|------|---|
| C-01 | Diode (for idle-up circuit) <DOHC> | C-11 | Clutch pedal switch <Auto-cruise control (M/T)> |
| C-02 | Body wiring harness and front wiring harness combination | C-12 | Headlamp leveling switch |
| to | | C-13 | - |
| C-04 | Body wiring harness and front wiring harness combination <ACTIVE-ECS> | C-14 | Body wiring harness and |
| C-05 | | C-15 | control wiring harness combination |
| C-06 | ETACS unit | C-16 | Body wiring harness and |
| C-07 | | C-17 | A/C wiring harness combination |
| C-08 | Accelerator pedal switch <A/T> | C-18 | - |
| C-09 | Stop lamp switch (4-pin) <Auto-cruise control> or no connection | C-19 | ELC-4A/T control unit |
| C-10 | Stop lamp switch (2-pin) or no connection <Auto-cruise control> | to | |
| | | C-21 | |
| | | C-22 | Engine oil level relay |
| | | C-23 | Headlamp washer relay |

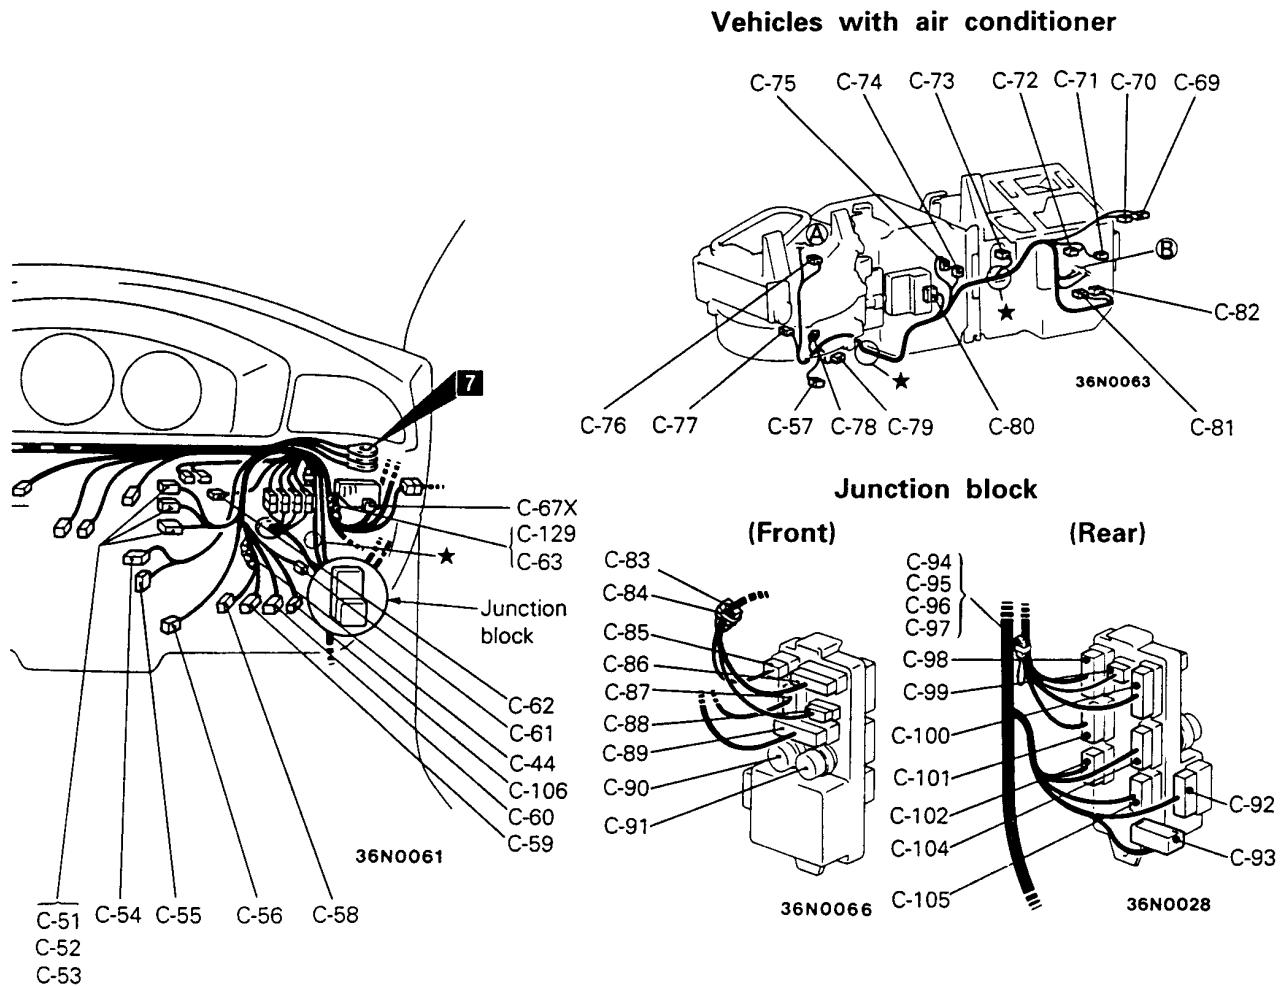


C-80	A/C belt lock controller <DOHC>	C-98	
C-81	A/C control unit	C-99	Body wiring harness and junction
C-82		C-100	block combination
C-83	Diode (for dim-dip lamp circuit)	C-101	
C-84		C-102	
C-85	Front wiring harness and junction	C-103	TCL valve relay
C-86	block combination	C-104	Body wiring harness and junction
C-87	Roof wiring harness and junction block	C-105	block combination
	combination	C-106	TCL switch
C-88	Front wiring harness and junction block	C-107	to
	combination	C-128	
C-89	Instrument panel wiring harness and junction block	C-129	Diode (for power seat circuit)
	combination		
C-90	Defogger relay		
C-91	Blower motor relay		
C-92	Diagnosis connector		
C-93	Diagnosis connector <TCL>		
C-94	Diode <4WS>		
C-95	Diode (for ACTIVE-ECS circuit)		
C-96	Diode (for dim-dip lamp circuit)		
C-97			


Remarks

- (1) For details concerning the earth point (example: 7), refer to P.3-21.
- (2) The mark ★ shows the standard mounting position of wiring harness.

4-2 R.H. drive vehicles <Vehicles built from April 1991 to October 1991>

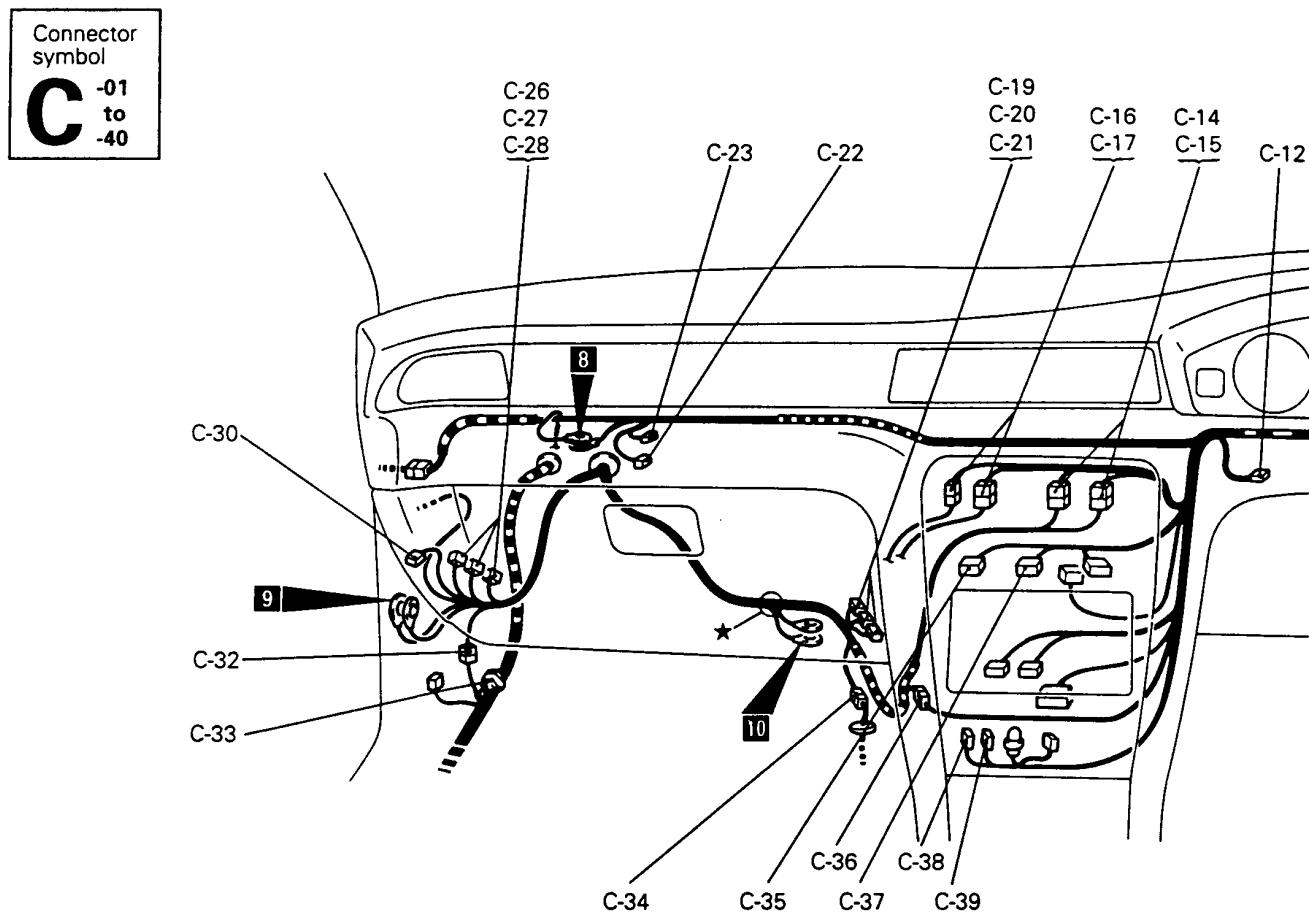

- | | | | |
|------------|---|------------|--|
| C-01 | Diode (for idle-up circuit) <DOHC> | C-11 | Clutch pedal switch <Auto-cruise control (M/T)> |
| C-02 | Body wiring harness and front wiring harness combination | C-12 | Headlamp leveling switch |
| to
C-04 | | C-13 | - |
| C-05 | Body wiring harness and front wiring harness combination <ACTIVE-ECS> | C-14 | Body wiring harness and control wiring harness combination |
| C-06 | ETACS unit | C-15 | |
| C-07 | | C-16 | Body wiring harness and |
| C-08 | Accelerator pedal switch <A/T> | C-17 | A/C wiring harness combination |
| C-09 | Stop lamp switch (4-pin) <Auto-cruise control> or no connection | C-18 | - |
| C-10 | Stop lamp switch (2-pin) or no connection <Auto-cruise control> | C-19 | ELC-4A/T control unit |
| | | to
C-21 | |
| | | C-22 | Engine oil level relay |
| | | C-23 | Headlamp washer relay |

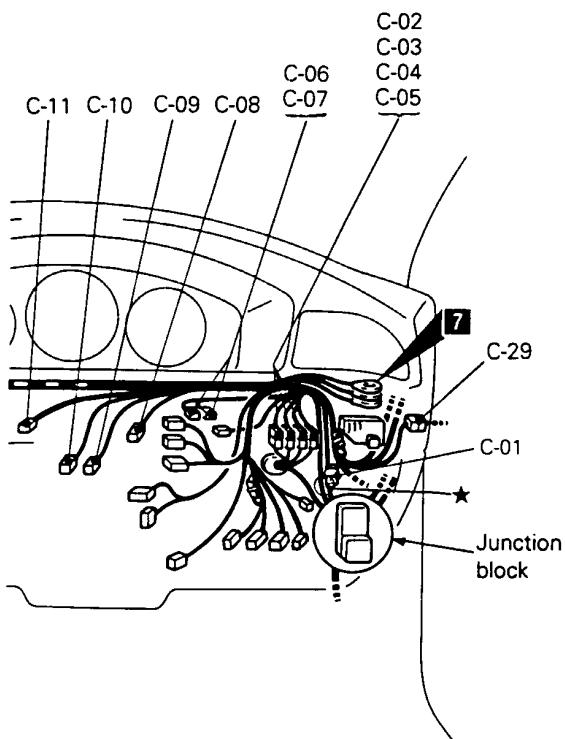

36N0266


C-24	–
C-25	–
C-26	Engine control unit
C-28	
C-29	Body wiring harness and front door wiring harness (RH) combination
C-30	Engine control relay
C-31	–
C-32	Control wiring harness and ABS wiring harness combination <TCL>
C-33	Diode (for ABS circuit)
C-34	Oxygen sensor

C-35	Rear fog lamp switch
C-36	Body wiring harness and control wiring harness combination <ACTIVE-ECS or Auto-cruise control>
C-37	Defogger switch
C-38	Cigarette lighter
C-39	
C-40	–

Remarks



- (1) For details concerning the earth point (example: 7), refer to P.3-21.
- (2) The mark ★ shows the standard mounting position of wiring harness.

4-2 R.H. drive vehicles <Vehicles built from April 1991 to October 1991>

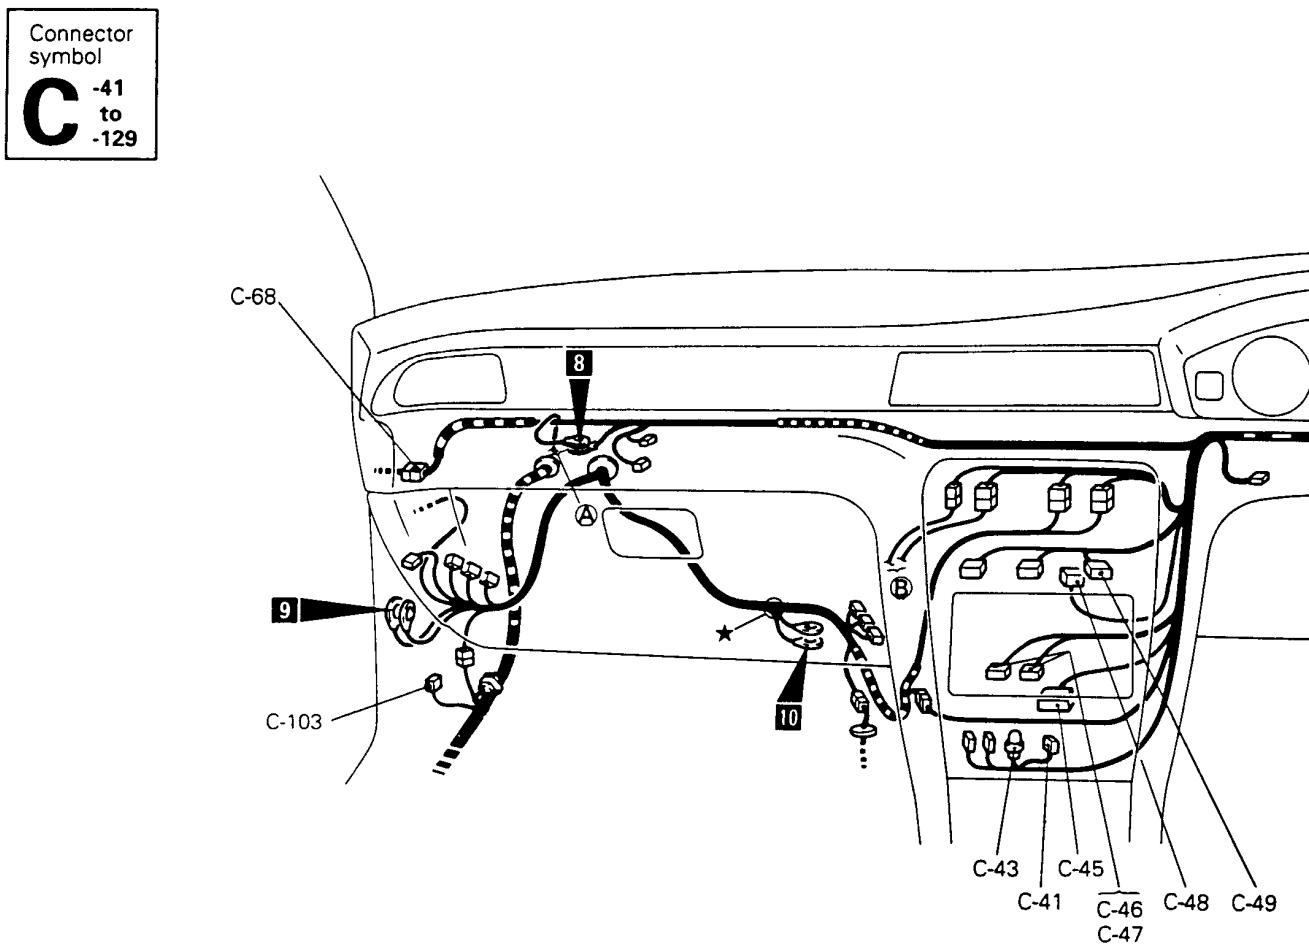

C-41	ACTIVE-ECS switch	C-61	No connection
C-42	–	C-62	Diode (for ACTIVE-ECS circuit)
C-43	Cigarette lighter illumination lamp	C-63	–
C-44	ACC spare connector	C-64	–
C-45	Auto-cruise control unit	C-65X	Refer to CENTRALIZED JUNCTION
C-46	Audio	to	
C-47		C-67X	
C-48	EPS control unit	C-68	Body wiring harness and front door wiring harness (LH) combination
C-49	Hazard warning switch	C-69	A/C control panel assembly
C-50	–	C-70	Mode selection damper control motor
C-51	–	C-71	Air mixing damper control motor
to	Column switch	C-72	Power transistor
C-53		C-73	Water temperature sensor
C-54	Ignition switch	C-74	Fin thermo sensor
C-55	Key reminder switch	C-75	Air inlet sensor
C-56	Foot lamp (RH)	C-76	Air selection damper control motor
C-57	Foot lamp (LH)	C-77	Blower motor
C-58	Accessory socket	C-78	Blower motor high relay
C-59		C-79	
C-60	Rear wiper and washer switch		


Vehicles with air conditioner

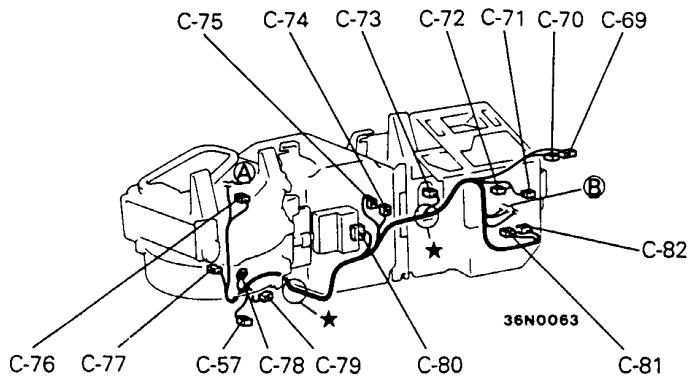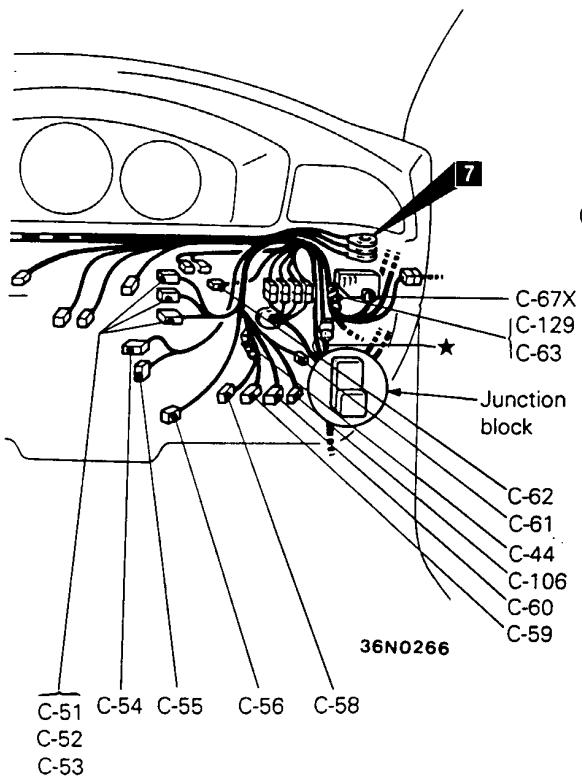

Junction block

(Front)

(Rear)

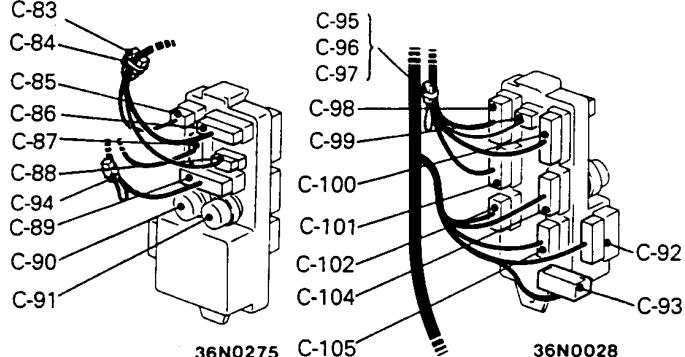

C-80	A/C belt lock controller <DOHC>	C-98	
C-81	A/C control unit	C-99	
C-82		C-100	Body wiring harness and junction block combination
C-83		C-101	
C-84	Diode (for dim-dip lamp circuit)	C-102	
C-85	Front wiring harness and junction block combination	C-103	TCL valve relay
C-86		C-104	Body wiring harness and junction block combination
C-87	Roof wiring harness and junction block combination	C-105	
C-88	Front wiring harness and junction block combination	C-106	TCL switch
C-89	Instrument panel wiring harness and junction block combination	C-107	to
C-90	Defogger relay	C-128	-
C-91	Blower motor relay	C-129	Diode (for power seat circuit)
C-92	Diagnosis connector		
C-93	Diagnosis connector <TCL>		
C-94	Diode <4WS>		
C-95	Diode (for ACTIVE-ECS circuit)		
C-96			
C-97	Diode (for dim-dip lamp circuit)		


Remarks

- REMARKS

 - (1) For details concerning the earth point (example: 7), refer to P.3-21.
 - (2) The mark ★ shows the standard mounting position of wiring harness.


2-27-5 WIRING HARNESS CONFIGURATION DIAGRAMS – Dash Panel

4-2 R.H. drive vehicles <Vehicles built from November 1991>

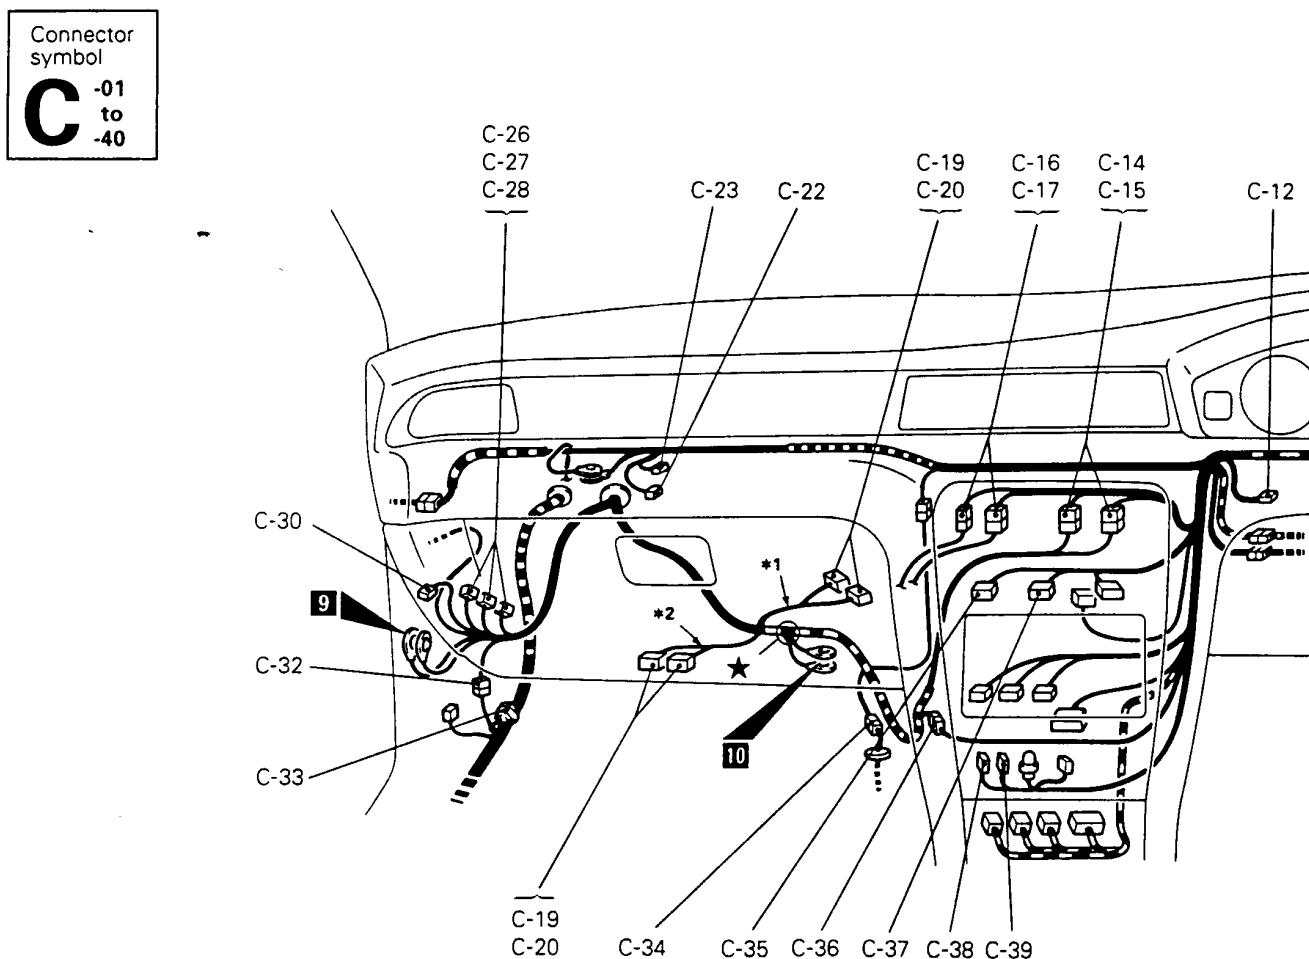

- | | | | |
|------|---|------|--|
| C-01 | Diode (for idle-up circuit) <DOHC> | C-11 | Clutch pedal switch <Auto-cruise control (M/T)> |
| C-02 | Body wiring harness and front wiring harness combination | C-12 | Headlamp leveling switch |
| to | | C-13 | - |
| C-04 | | C-14 | Body wiring harness and control wiring harness combination |
| C-05 | Body wiring harness and front wiring harness combination <ACTIVE-ECS> | C-15 | |
| C-06 | ETACS unit | C-16 | Body wiring harness and A/C wiring harness combination |
| C-07 | | C-17 | |
| C-08 | - | C-18 | - |
| C-09 | Stop lamp switch (4-pin) <Auto-cruise control> or no connection | C-19 | ELC-4A/T control unit |
| C-10 | Stop lamp switch (2-pin) or no connection <Auto-cruise control> | C-20 | |
| | | C-21 | - |
| | | C-22 | Engine oil level relay |
| | | C-23 | Headlamp washer relay |

WIRING HARNESS CONFIGURATION DIAGRAMS – Dash Panel 2-27-6

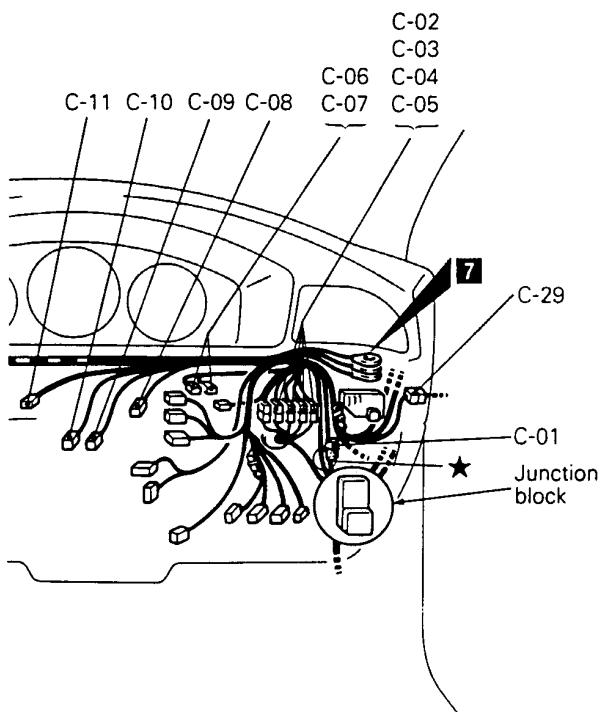

36N0345

C-24	Engine control unit	C-35	Rear fog lamp switch
C-25		C-36	Body wiring harness and control wiring harness combination
C-26		C-37	Defogger switch
to		C-38	Cigarette lighter
C-28		C-39	
C-29	Body wiring harness and front door wiring harness (RH) combination	C-40	–
C-30	Engine control relay		
C-31	–		
C-32	Control wiring harness and ABS wiring harness combination <TCL>		
C-33	Diode (for ABS circuit)		
C-34	Oxygen sensor		

C-35	Rear fog lamp switch
C-36	Body wiring harness and control wiring harness combination
C-37	Defogger switch
C-38	Cigarette lighter
C-39	
C-40	–


Remarks

- (1) For details concerning the earth point (example: 7), refer to P.3-20.
- (2) The mark ★ shows the standard mounting position of wiring harness.
- (3) *1 : Vehicles without SRS.
- (4) *2 : Vehicles with SRS.



2-27-7 WIRING HARNESS CONFIGURATION DIAGRAMS – Dash Panel

4-2 R.H. drive vehicles <Vehicles built from November 1991>


Connector
Symbol
C -41
to
-146

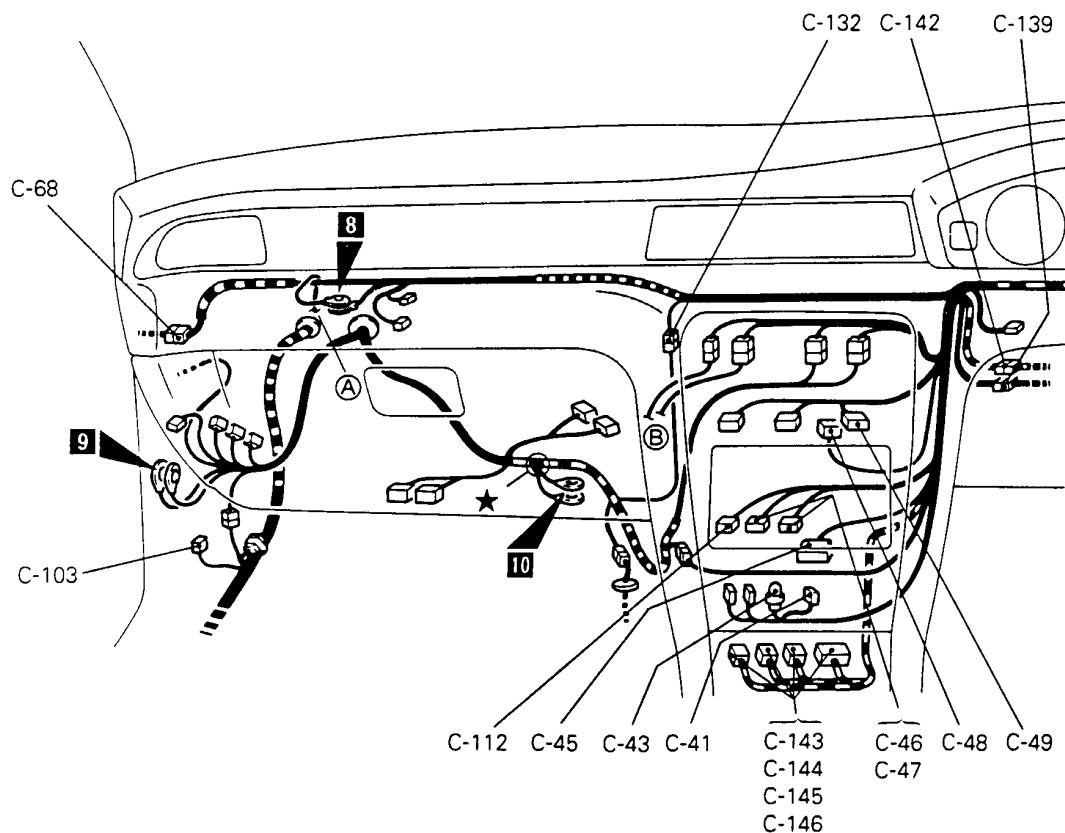

C-41	ACTIVE-ECS switch	C-65X to C-67X	Refer to CENTRALIZED JUNCTION
C-42	-	C-68	Body wiring harness and front door wiring harness (LH) combination
C-43	Cigarette lighter illumination lamp	C-69	A/C control panel assembly
C-44	ACC spare connector	C-70	A/C control panel assembly
C-45	Auto-cruise control unit	C-71	Mode selection damper control motor
C-46	RADIO	C-72	Air mixing damper control motor
C-47		C-73	Power transistor
C-48	EPS control unit	C-74	Water temperature sensor
C-49	Hazard warning switch	C-75	Fin thermo sensor
C-50	-	C-76	Air inlet sensor
C-51	Column switch	C-77	Air selection damper control motor
C-52		C-78	Blower motor
C-53	Ignition switch	C-79	Blower motor high relay
C-54	Key reminder switch	C-80	A/C belt lock controller <DOHC>
C-55	Foot lamp (RH)	C-81	A/C control unit
C-56	Foot lamp (LH)	C-82	A/C control unit
C-57	-	C-83	Diode (for dim-dip lamp circuit)
C-58	Accessory socket	C-84	Front wiring harness and junction
C-59		C-85	block combination
C-60	Rear wiper and washer switch	C-86	-
C-61	Lighting monitor buzzer		
C-62	-		
C-63	Diode (for ACTIVE-ECS circuit)		
C-64	-		

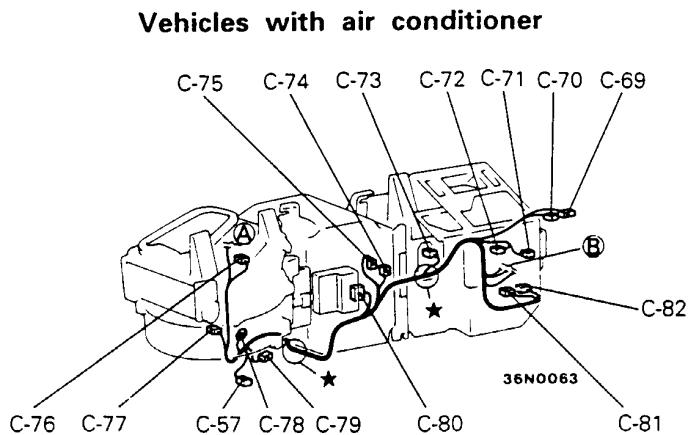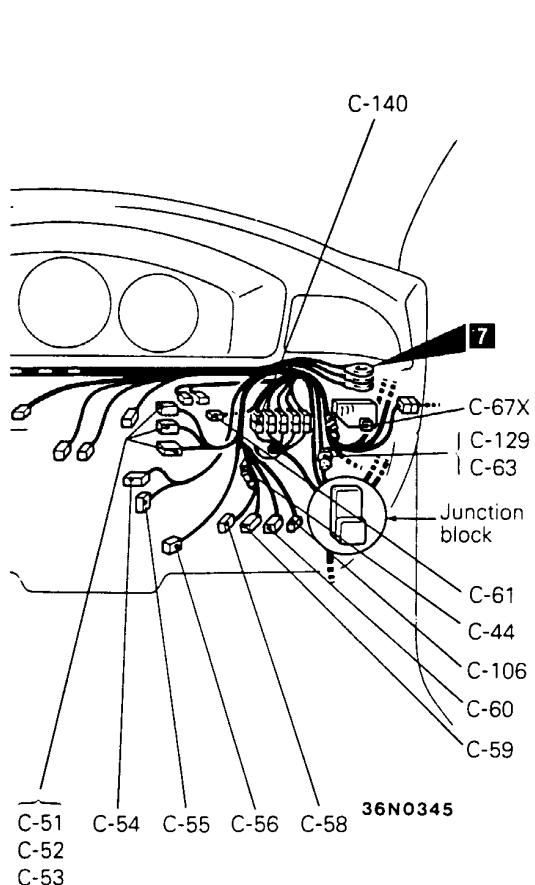

Junction block

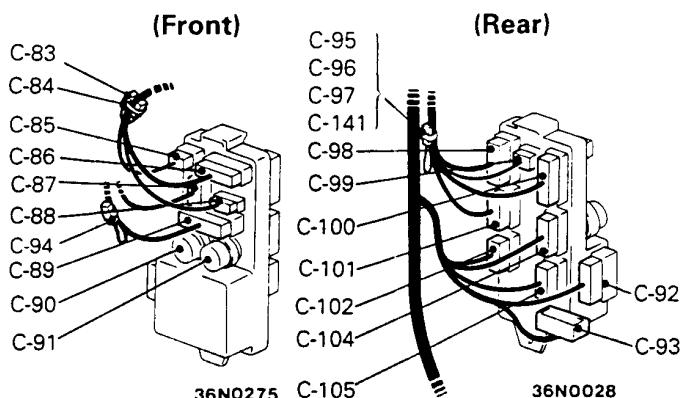




C-87	Roof wiring harness and junction block combination	C-112	No connection
C-88	Front wiring harness and junction block combination	C-113	to –
C-89	Instrument panel wiring harness and junction block combination	C-128	–
C-90	Defogger relay	C-129	Diode (for power seat circuit)
C-91	Blower motor relay	C-130	–
C-92	Diagnosis connector	C-131	–
C-93	Diagnosis connector <TCL>	C-132	Body wiring harness and control wiring harness combination
C-94	Diode <4WS>	C-133	–
C-95	Diode (for ACTIVE-ECS circuit)	C-138	–
C-96	–	C-139	Clock spring
C-97	Diode (for dim-dip lamp circuit)	C-140	Body wiring harness and front wiring harness combination
C-98	–	C-141	Diode (for rear fog lamp circuit)
to	Body wiring harness and junction block combination	C-142	Clock spring
C-102	–	C-143	–
C-103	TCL valve relay	C-144	SRS diagnosis unit
C-104	Body wiring harness and junction block combination	C-145	–
C-105	–	C-146	–
C-106	TCL switch		
C-107	–		
to	–		
C-111	–		

Remarks

- (1) For details concerning the earth point (example: 7), refer to P.3-20.
- (2) The mark ★ shows the standard mounting position of wiring harness.

5 INSTRUMENT PANEL

 5-1 L.H. drive vehicles

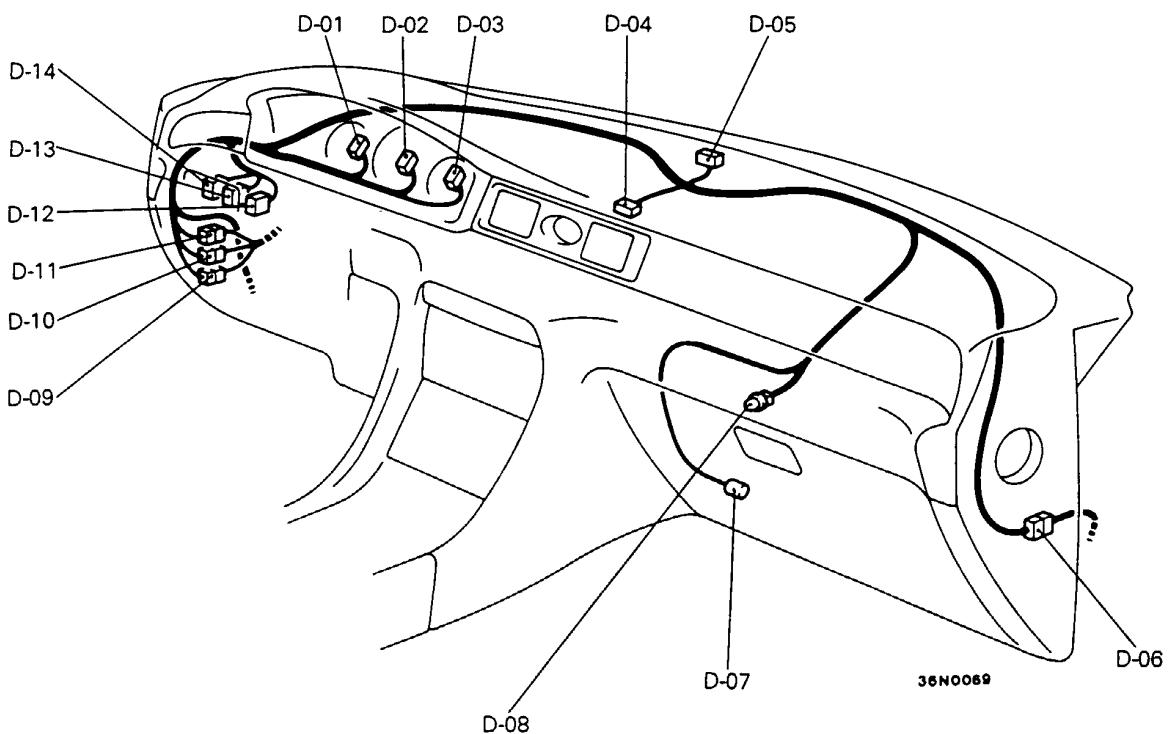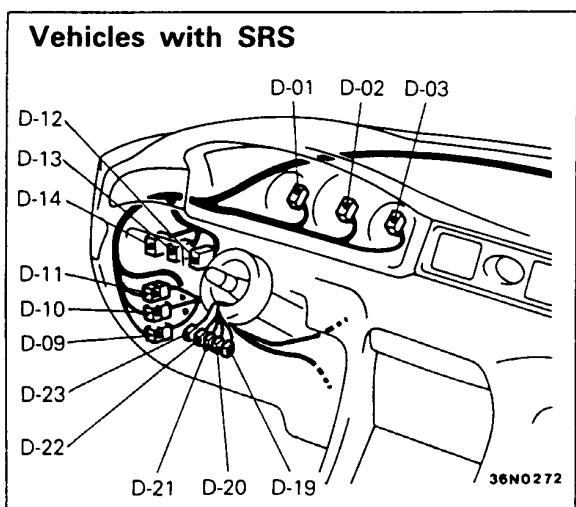



D-01	Combination meter	D-12	Rheostat
to		D-13	Front fog lamp switch
D-03		D-14	Auto-cruise control main switch or no connection
D-04	Clock	D-15	–
D-05	Photo sensor	D-18	
D-06	Control wiring harness and instrument panel wiring harness combination <A/T>	D-19	No connection
D-07	Glove box lamp switch	D-20	
D-08	Glove box lamp	D-21	Auto-cruise control switch
D-09	Body wiring harness and instrument panel wiring harness combination	D-22	Horn switch
to		D-23	Air bag module (squib)
D-11			

5-2 R.H. drive vehicles

Connector symbol



Vehicles with SRS

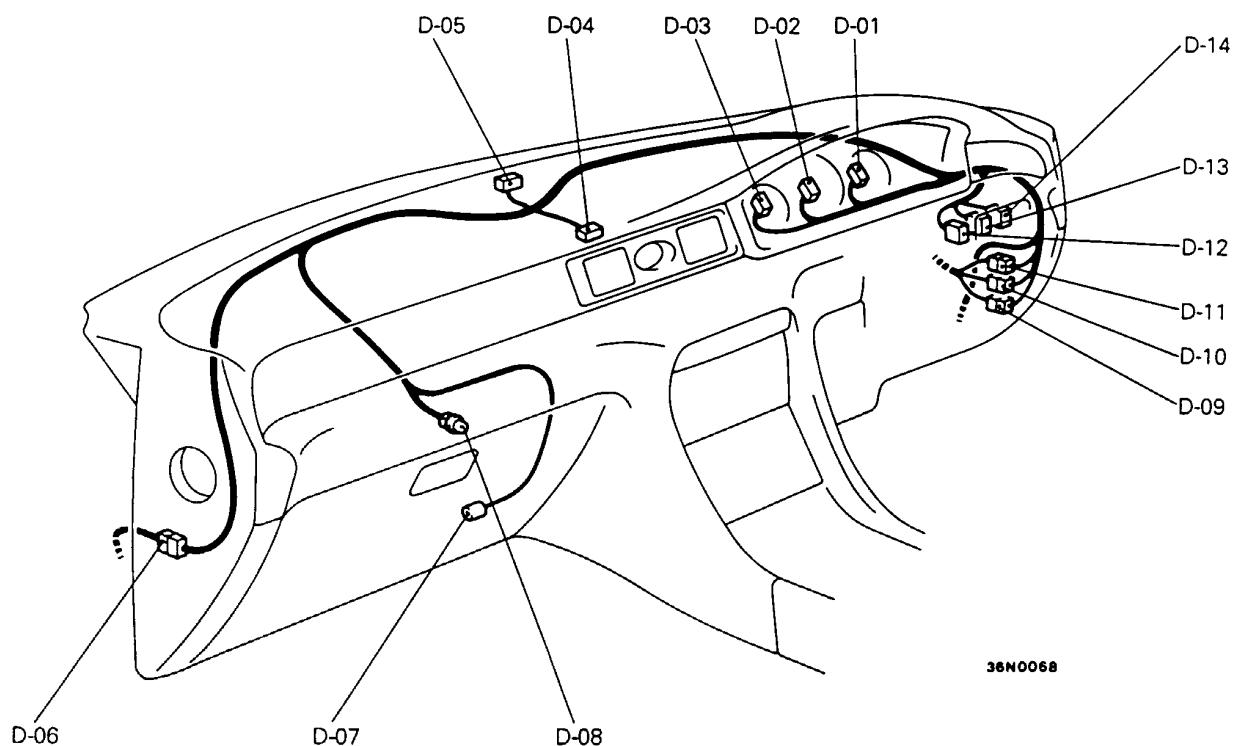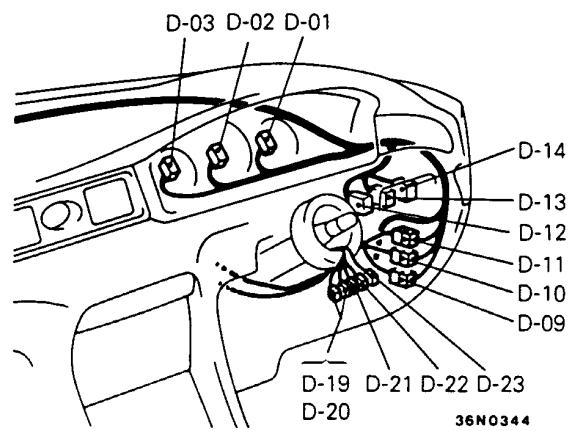


- | | | |
|------|--|---|
| D-01 | } | Combination meter |
| D-03 | | |
| D-04 | Clock | |
| D-05 | Photo sensor | |
| D-06 | Control wiring harness and instrument panel wiring harness combination < A/T > | |
| D-07 | Glove box lamp switch | |
| D-08 | Glove box lamp | |
| D-09 | } | Body wiring harness and instrument panel wiring harness combination |
| D-11 | | |

- | | | |
|------|--|---------------|
| D-12 | Rheostat | |
| D-13 | Front fog lamp switch | |
| D-14 | Auto-cruise control main switch or no connection | |
| D-15 | } | - |
| D-18 | | |
| D-19 | } | No connection |
| D-20 | | |
| D-21 | Auto-cruise control switch | |
| D-22 | Horn switch | |
| D-23 | Air bag module (squib) | |


6 INTERIOR

6-1 L.H. drive vehicles

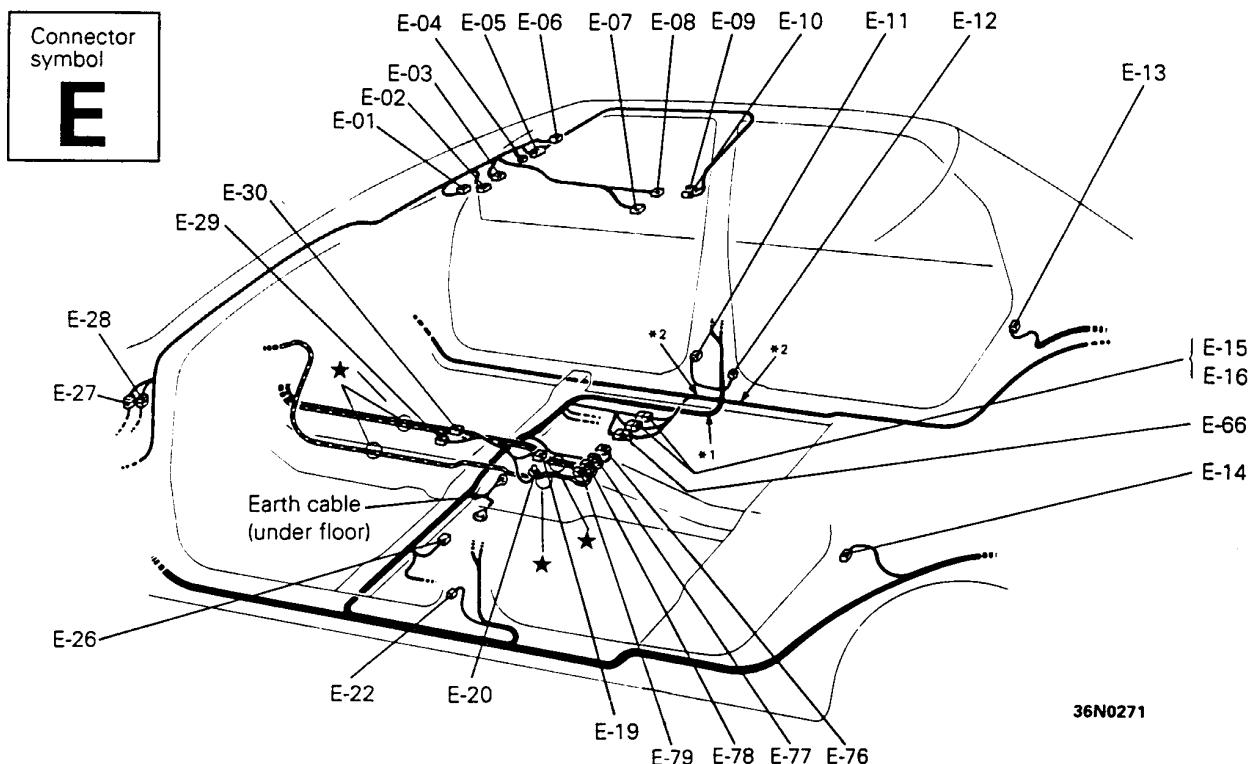

E-01	Sunroof motor	E-26	No connection
E-02	Map lamp <Vehicles without sunroof>	E-27	Body wiring harness and roof wiring harness combination
E-03	Room lamp <Vehicles with sunroof>	E-28	Body wiring harness and roof wiring harness combination <Power seat>
E-04	Power seat memory switch	E-29	Overdrive switch <A/T>
E-05	Roof wiring harness and interior temperature sensor joint harness combination <Vehicles with sunroof>	E-30	Power/Economy changeover switch <A/T>
E-06	Sunroof control unit	E-31	Front height adjusting motor (Passenger's side)
E-07	Interior temperature sensor <Vehicles without sunroof>	E-32	Front height limit switch (Passenger's side)
E-08	Room lamp <Vehicles without sunroof>	E-33	Power seat switch (Passenger's side)
E-09	Interior temperature sensor	E-34	Rear height limit switch (Passenger's side)
E-10	<Vehicles with sunroof>	E-35	Reclining position adjusting motor (Passenger's side)
E-11	Front door switch (RH)	E-36	Rear height adjusting motor (Passenger's side)
E-12	No connection	E-37	Seat back heater (Passenger's side)
E-13	Rear door switch (RH)	E-38	Body wiring harness and heated seat wiring harness combination (Passenger's side)
E-14	Rear door switch (LH)		
E-15	Body wiring harness and ACTIVE-ECS		
E-16	wiring harness combination		
E-17	–		
E-18	–		
E-19	Parking brake switch		
E-20	Front ashtray illumination lamp		
E-21	–		
E-22	Front door switch (LH)		
E-23	–		
E-25	–		

<Vehicles with power seat or heated seat>

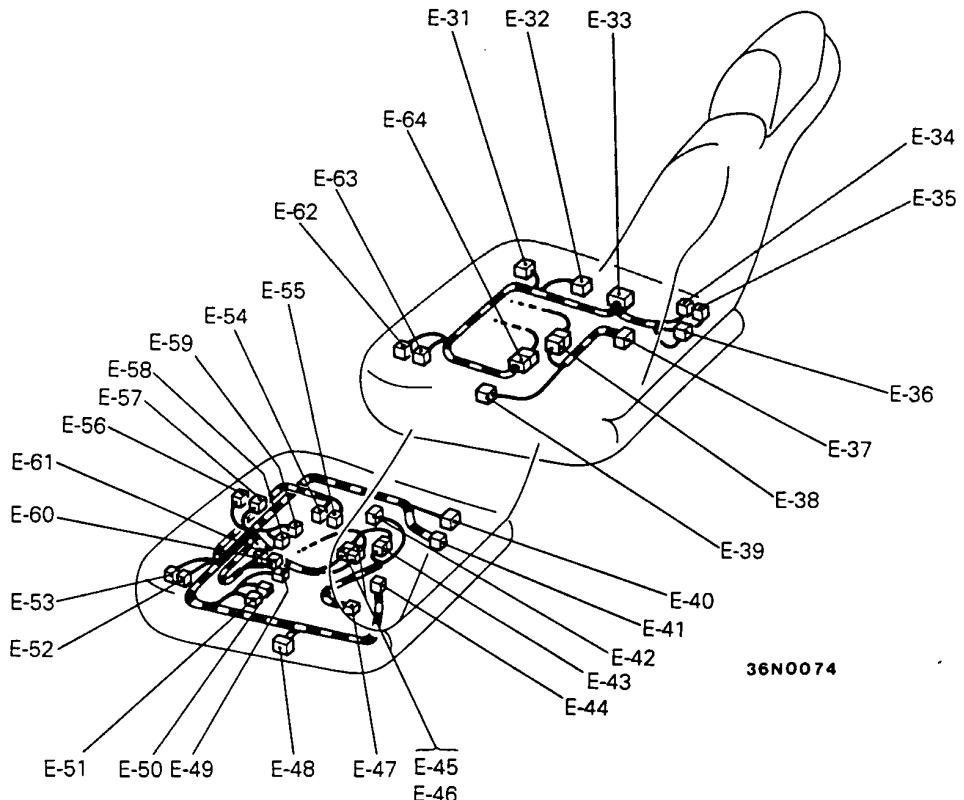



- E-39 Seat cushion heater (Passenger's side)
 E-40 Slide position limit switch (Driver's side)
 E-41 Reclining position limit switch (Driver's side)
 E-42 Seat cushion heater (Driver's side)
 E-43 Body wiring harness and heated seat wiring harness combination (Driver's side)
 E-44 Rear height limit switch (Driver's side)
 E-45 Body wiring harness and power seat wiring harness combination (Driver's side)
 E-46 }
 E-47 Seat back heater (Driver's side)
 E-48 Power seat switch (Driver's side)
 E-49 Reclining position adjusting motor/reclining position sensor (Driver's side)
 E-50 Rear height adjusting motor/rear height position sensor (Driver's side)
 E-51 Front height limit switch (Driver's side)
 E-52 Slide position sensor (Driver's side)
 E-53 Front height adjusting motor/front height position sensor (Driver's side)
 E-54 }
 E-55 Power seat control unit
 E-56 Power seat inspection connector
 E-57 Slide position adjusting motor (Driver's side)
 E-58 to }
 E-61 Power seat control unit

- E-62 Slide position limit switch (Passenger's side)
 E-63 Slide position adjusting motor (Passenger's side)
 E-64 Body wiring harness and power seat wiring harness combination (Passenger's side)
 E-65 –
 E-66 Body wiring harness and ACTIVE-ECS wiring harness combination
 E-67 to }
 E-75 –
 E-76 to }
 E-79 SRS diagnosis unit

Remarks


- (1) *1: Vehicles without ACTIVE-ECS.
- (2) *2: Vehicles with ACTIVE-ECS.
- (3) The mark ★ shows the standard mounting position of wiring harness.

6-2 R.H. drive vehicles

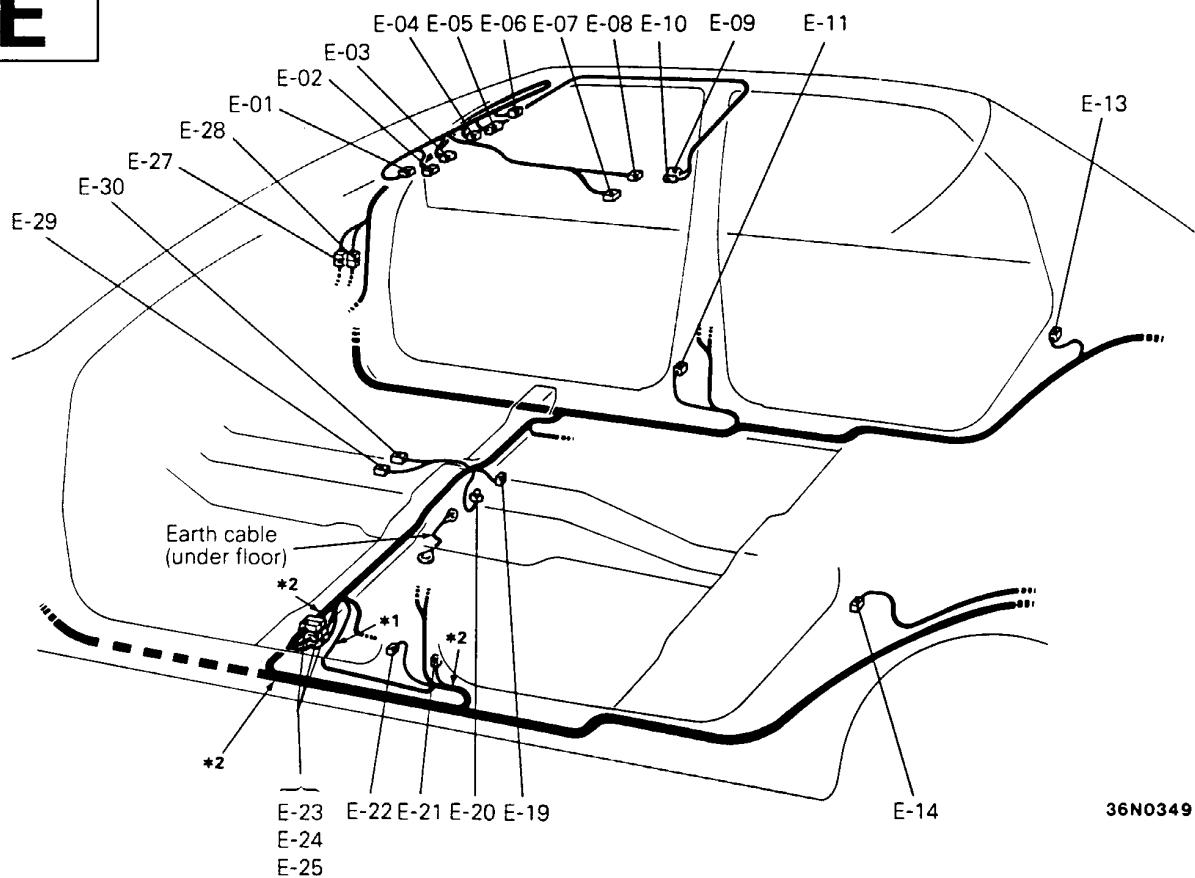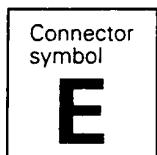

E-01	Sunroof motor	E-20	Front ashtray illumination lamp
E-02	Map lamp <Vehicles without sunroof>	E-21	No connection
E-03	Room lamp <Vehicles with sunroof>	E-22	Front door switch (LH)
E-04	Power seat memory switch	E-23	Body wiring harness and ABS wiring harness combination
E-05	Roof wiring harness and interior temperature sensor joint harness combination <Vehicles with sunroof>	E-24	
E-06	Sunroof control unit	E-25	–
E-07	Interior temperature sensor <Vehicles without sunroof>	E-26	–
E-08	Room lamp <Vehicles without sunroof>	E-27	Body wiring harness and roof wiring harness combination
E-09	Interior temperature sensor	E-28	Body wiring harness and roof wiring harness combination <Power seat>
E-10	<Vehicles with sunroof>	E-29	Overdrive switch <A/T>
E-11	Front door switch (RH)	E-30	Power/Economy changeover switch <A/T>
E-12	–	E-31	Front height adjusting motor (Passenger's side)
E-13	Rear door switch (RH)	E-32	Front height limit switch (Passenger's side)
E-14	Rear door switch (LH)	E-33	Power seat switch (Passenger's side)
E-15	–	E-34	Rear height limit switch (Passenger's side)
E-18		E-35	Reclining position adjusting motor (Passenger's side)
E-19	Parking brake switch	E-36	Rear height adjusting motor (Passenger's side)

<Vehicles with power seat>

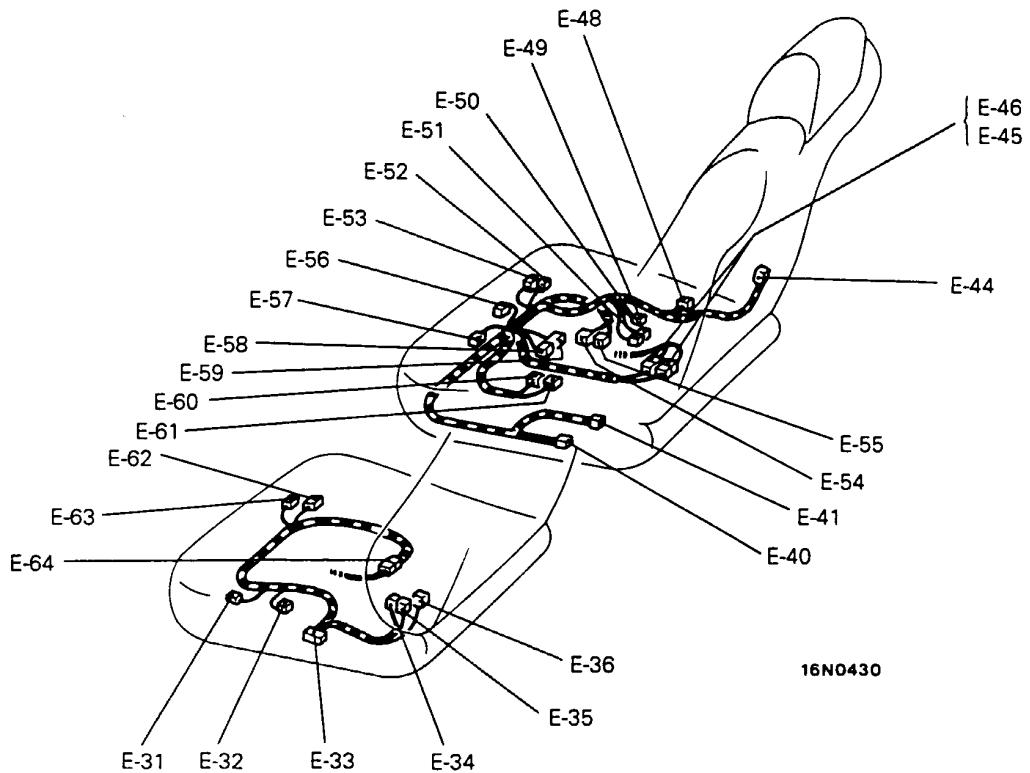

E-37 }
to -
E-39
E-40 Slide position limit switch (Driver's side)
E-41 Reclining position limit switch (Driver's side)
E-42 }
E-43 -
E-44 Rear height limit switch (Driver's side)
E-45 } Body wiring harness and power seat wiring
E-46 harness combination (Driver's side)
E-47 -
E-48 Power seat switch (Driver's side)
E-49 Reclining position adjusting motor/reclining
position sensor (Driver's side)
E-50 Rear height adjusting motor/rear height position
sensor (Driver's side)
E-51 Front height limit switch (Driver's side)
E-52 Slide position sensor (Driver's side)
E-53 Front height adjusting motor/front height position
sensor (Driver's side)


- E-54 } Power seat control unit
- E-55
- E-56 Power seat inspection connector
- E-57 Slide position adjusting motor (Driver's side)
- E-58 } to Power seat control unit
- E-61
- E-62 Slide position limit switch (Passenger's side)
- E-63 Slide position adjusting motor (Passenger's side)
- E-64 Body wiring harness and power seat wiring
harness combination (Passenger's side)

Remarks

- (1) *1 Vehicles without ABS built up to October 1991.
 (2) *2 Vehicles with ABS built up to October 1991 and vehicles built from November 1991.
 (3) The broken line (---): Vehicles with ABS.

7 DOOR

7-1 L.H. drive vehicles

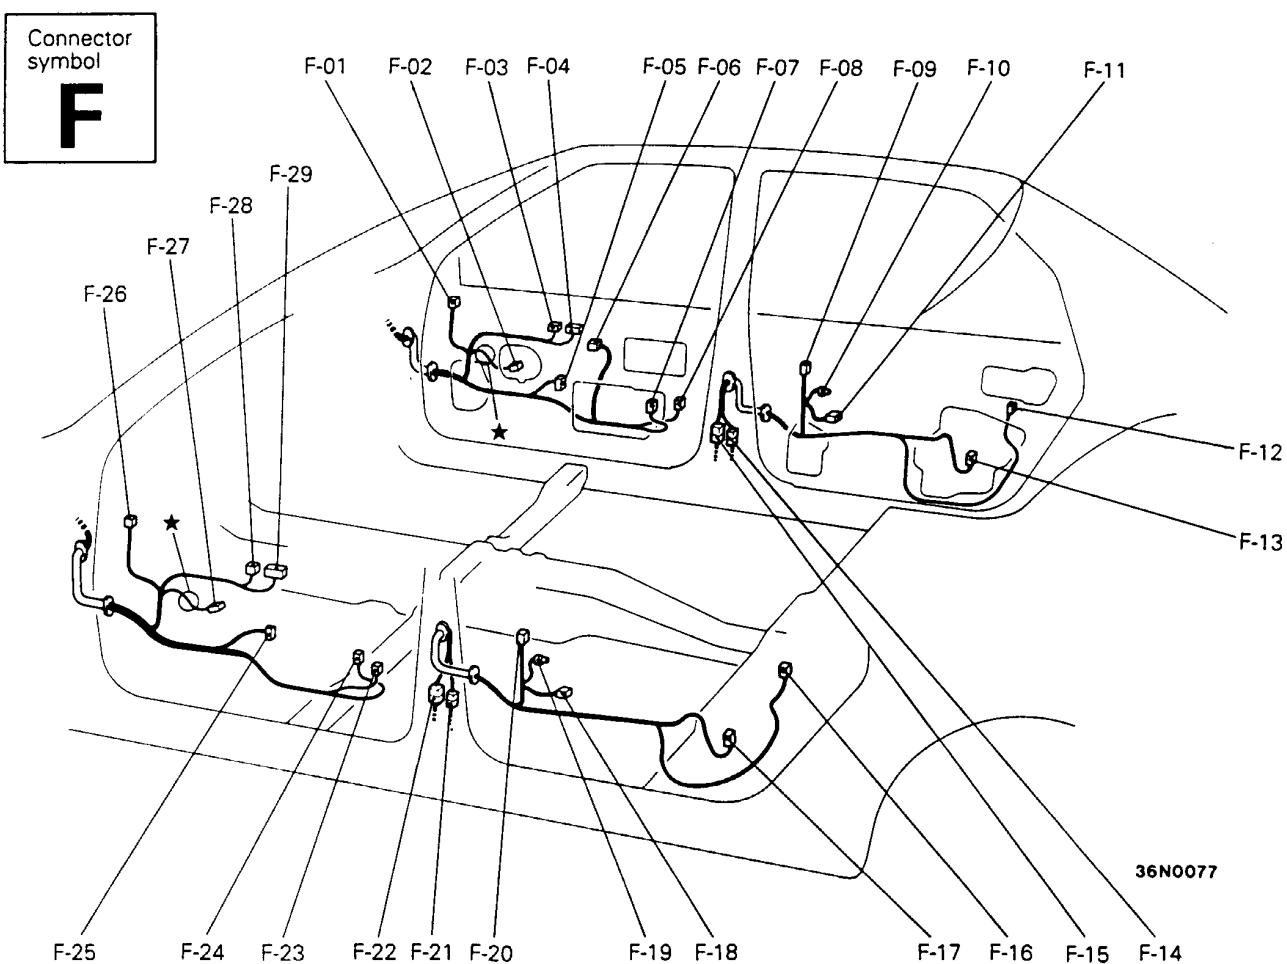


- F-01 Door mirror (R.H.)
- F-02 Door speaker (R.H.)
- F-03 } Door control unit (R.H.)
- F-04 } Power window motor (Front: R.H.)
- F-05 Door lock key cylinder switch
- F-06 Door lamp (Front: R.H.)
- F-07 Door lock actuator (Front: R.H.)
- F-08 Rear power window unit (R.H.)
- F-09 Rear ashtray illumination lamp (R.H.)
- F-10 Power window motor (Rear: R.H.)
- F-11 Door lock actuator (Rear: R.H.)
- F-12 Door lamp (Rear: R.H.)
- F-13 Body wiring harness and rear door wiring harness (R.H.) combination <Vehicles without ACTIVE-ECS> or ACTIVE-ECS wiring harness and rear door wiring harness (R.H.) combination <Vehicles with ACTIVE-ECS>

- F-16 Door lock actuator (Rear: L.H.)
- F-17 Door lamp (Rear: L.H.)
- F-18 Power window motor (Rear: L.H.)
- F-19 Rear ashtray illumination lamp (L.H.)
- F-20 Rear power window unit (L.H.)
- F-21 Body wiring harness and rear door wiring harness (L.H.) combination
- F-22 } Door lock actuator (Front: L.H.)
- F-23 Door lamp (Front: L.H.)
- F-24 Power window motor (Front: L.H.)
- F-25 Door mirror (L.H.)
- F-26 Door speaker (L.H.)
- F-27 } Door control unit (L.H.)
- F-28 } Power window motor (Front: R.H.)
- F-29 } Door lock actuator (Front: R.H.)

Remark
The mark ★ shows the standard mounting position of wiring harness.

7-2 R.H. drive vehicles

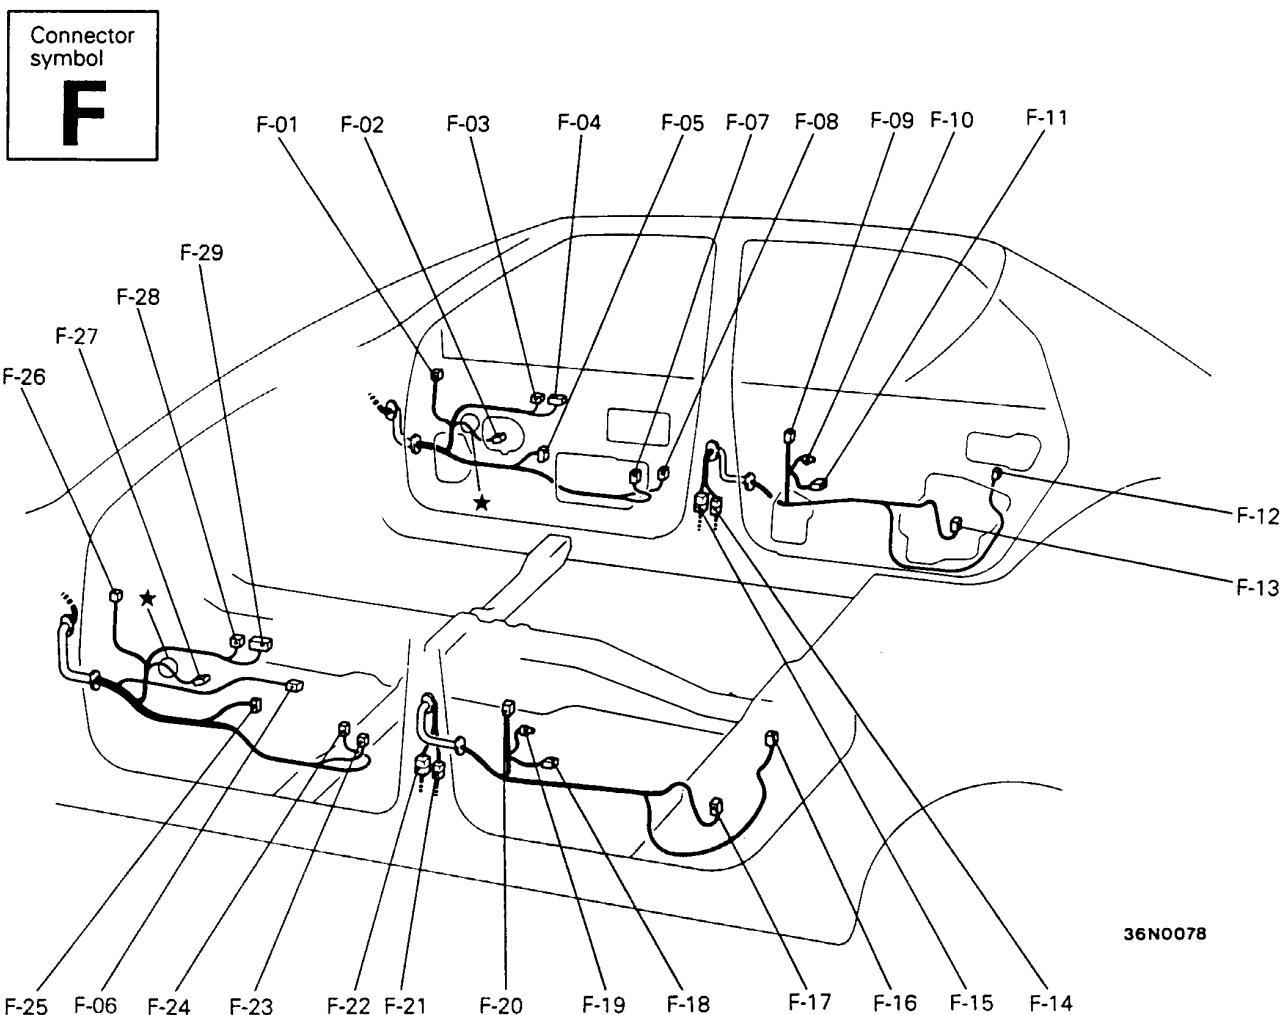

- F-01 Door mirror (R.H.)
- F-02 Door speaker (R.H.)
- F-03 | Door control unit (R.H.)
- F-04 | Door control unit (R.H.)
- F-05 Power window motor (Front: R.H.)
- F-06 Door lock key cylinder switch
- F-07 Door lamp (Front: R.H.)
- F-08 Door lock actuator (Front: R.H.)
- F-09 Rear power window unit (R.H.)
- F-10 Rear ashtray illumination lamp (R.H.)
- F-11 Power window motor (Rear: R.H.)
- F-12 Door lock actuator (Rear: R.H.)
- F-13 Door lamp (Rear: R.H.)
- F-14 | Body wiring harness and rear door wiring harness (R.H.) combination
- F-15 | Body wiring harness and rear door wiring harness (R.H.) combination
- F-16 Door lock actuator (Rear: L.H.)
- F-17 Door lamp (Rear: L.H.)


- F-18 Power window motor (Rear: L.H.)
- F-19 Rear ashtray illumination lamp (L.H.)
- F-20 Rear power window unit (L.H.)
- F-21 | Body wiring harness and rear door wiring harness (L.H.) combination <Vehicles without ABS built up to October 1991> or ABS wiring harness and rear door wiring harness (L.H.) combination <Vehicles with ABS built up to October 1991 and vehicles built from November 1991>
- F-22 | Body wiring harness and rear door wiring harness (L.H.) combination <Vehicles without ABS built up to October 1991> or ABS wiring harness and rear door wiring harness (L.H.) combination <Vehicles with ABS built up to October 1991 and vehicles built from November 1991>
- F-23 Door lock actuator (Front: L.H.)
- F-24 Door lamp (Front: L.H.)
- F-25 Power window motor (Front: L.H.)
- F-26 Door mirror (L.H.)
- F-27 Door speaker (L.H.)
- F-28 | Door control unit (L.H.)
- F-29 | Door control unit (L.H.)

Remark


The mark ★ shows the standard mounting position of wiring harness.

8 LUGGAGE COMPARTMENT

8-1 L.H. drive vehicles

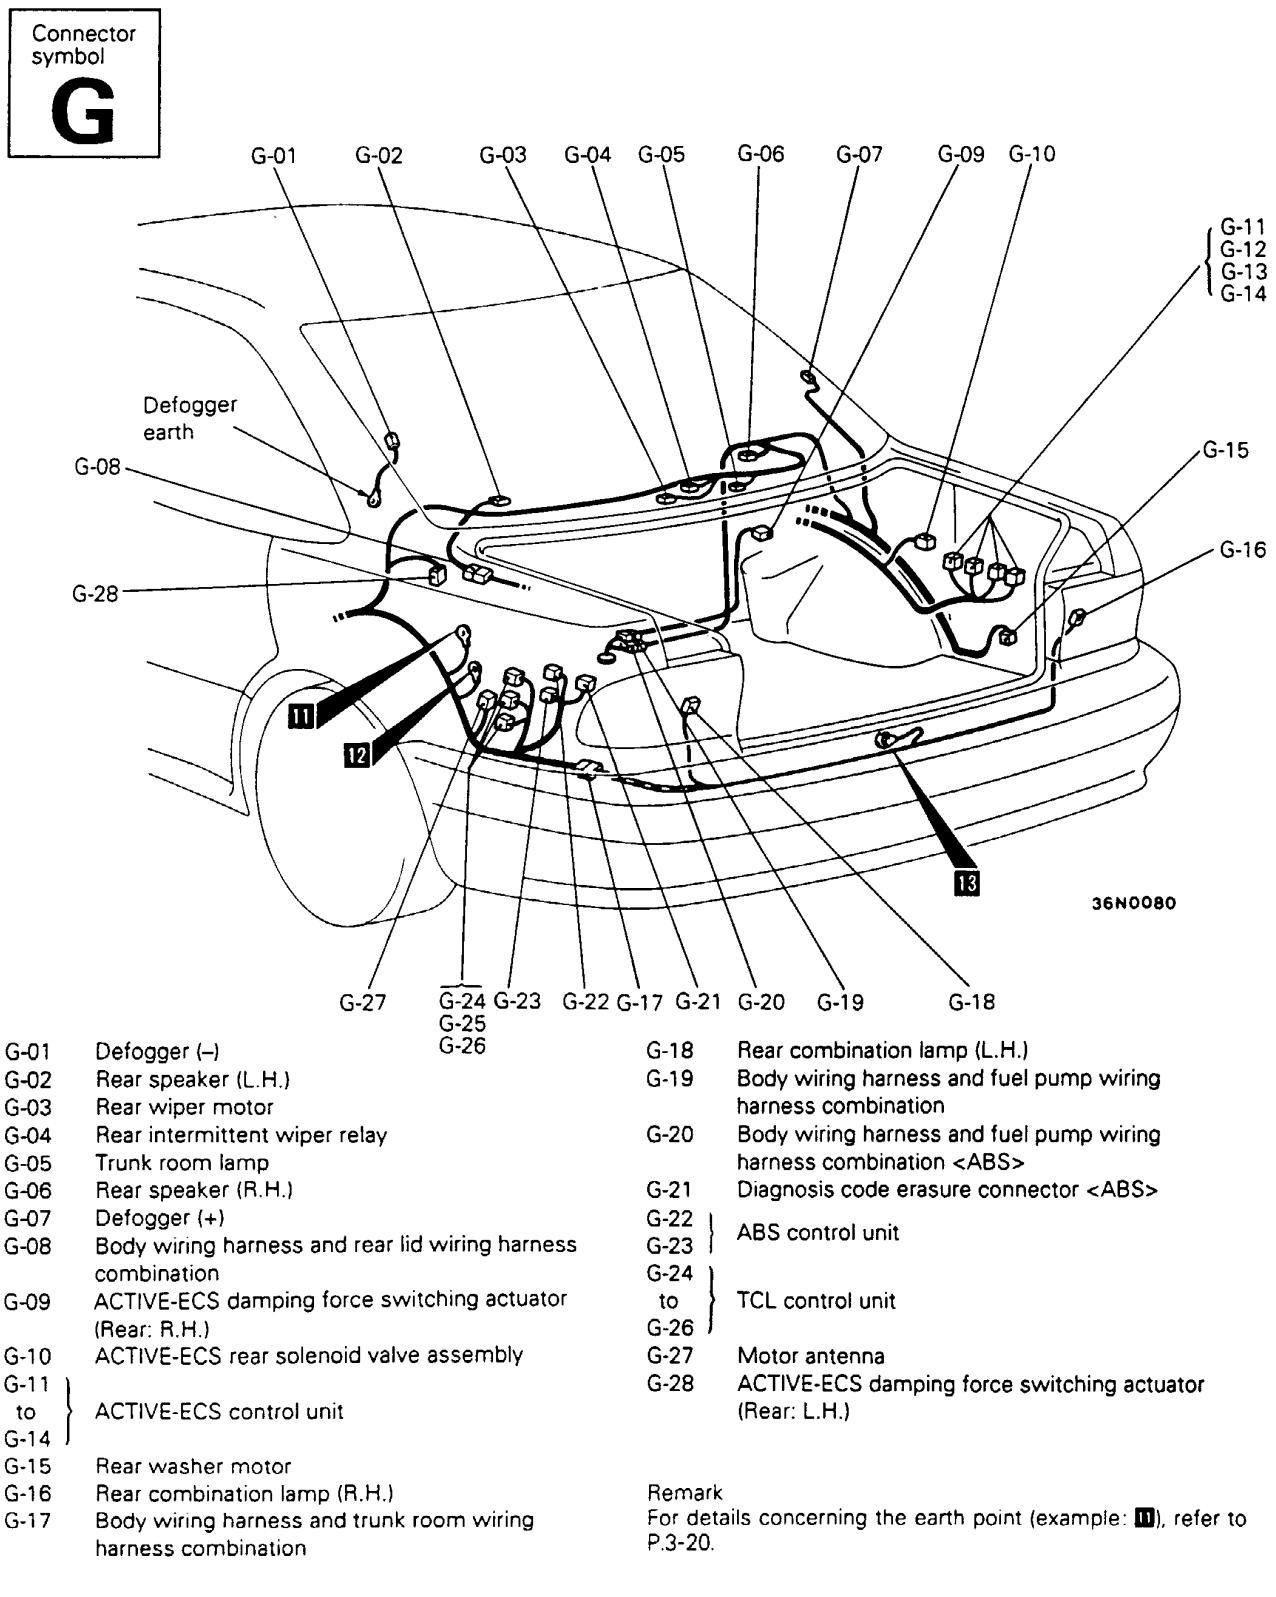

8-2 R.H. drive vehicles <Vehicles built up to October 1991>


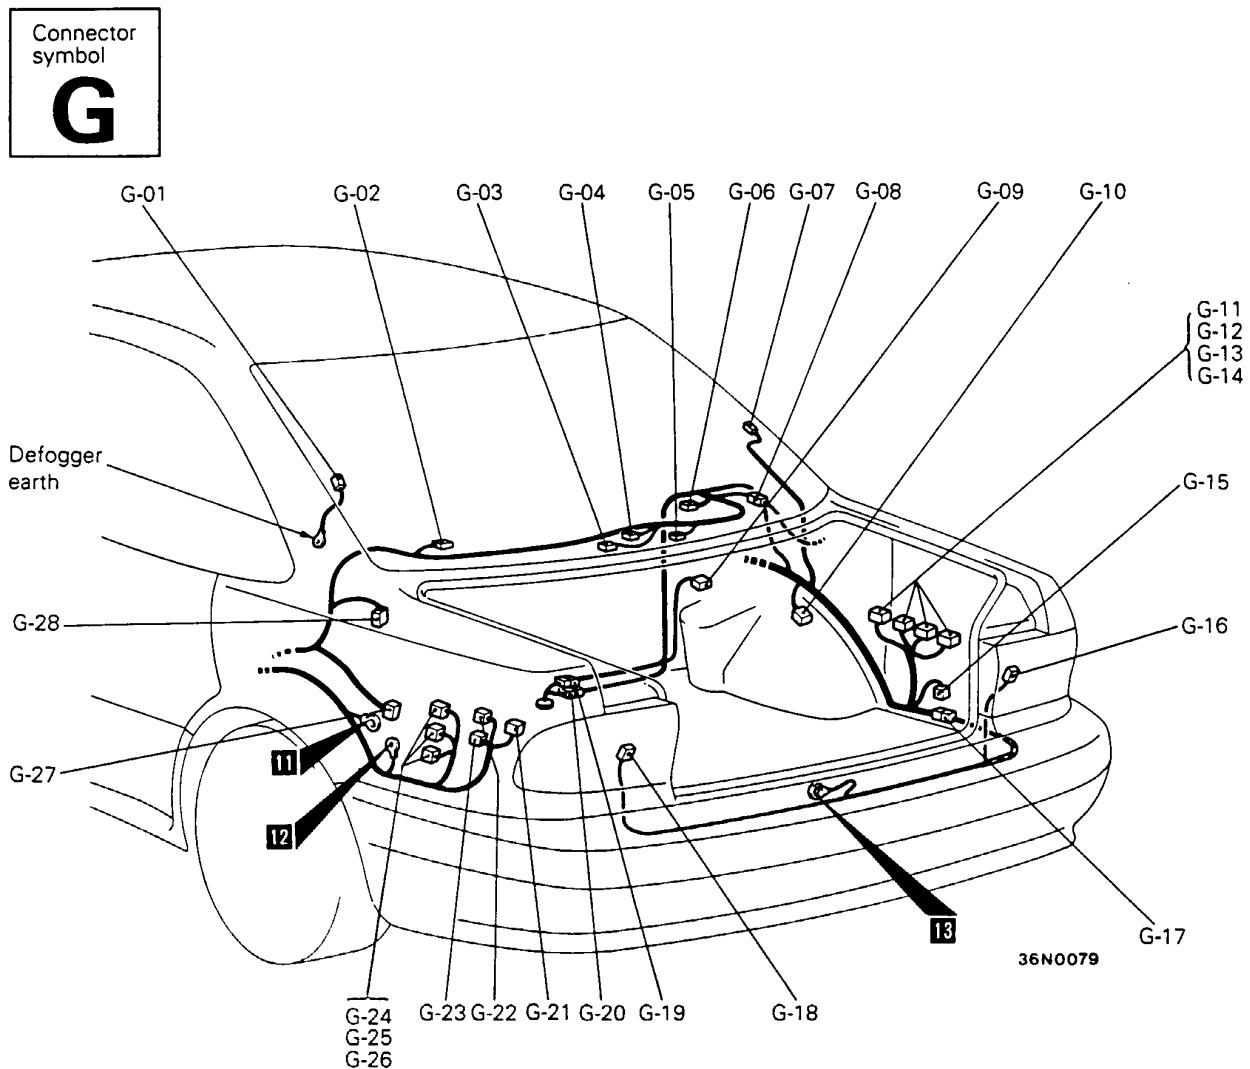


G-01	Defogger (-)	G-18	Rear combination lamp (L.H.)
G-02	Rear speaker (L.H.)	G-19	Body wiring harness and fuel pump wiring harness combination
G-03	Rear wiper motor	G-20	Body wiring harness and fuel pump wiring harness combination <ABS>
G-04	Rear intermittent wiper relay	G-21	Diagnosis code erasure connector <ABS>
G-05	Trunk room lamp	G-22	ABS control unit
G-06	Rear speaker (R.H.)	G-23	
G-07	Defogger (+)	G-24	TCL control unit
G-08	Body wiring harness and rear lid wiring harness combination	to G-26	
G-09	ACTIVE-ECS damping force switching actuator (Rear: R.H.)	G-27	Motor antenna
G-10	ACTIVE-ECS rear solenoid valve assembly	G-28	ACTIVE-ECS damping force switching actuator (Rear: L.H.)
G-11 to G-14	ACTIVE-ECS control unit		
G-15	Rear washer motor		
G-16	Rear combination lamp (R.H.)		
G-17	Body wiring harness and trunk room wiring harness combination		

Remark
For details concerning the earth point (example: 11), refer to P.3-20.

2-37-1 WIRING HARNESS CONFIGURATION DIAGRAMS – Luggage Compartment

8-2 R.H. drive vehicles <Vehicles built from November 1991>

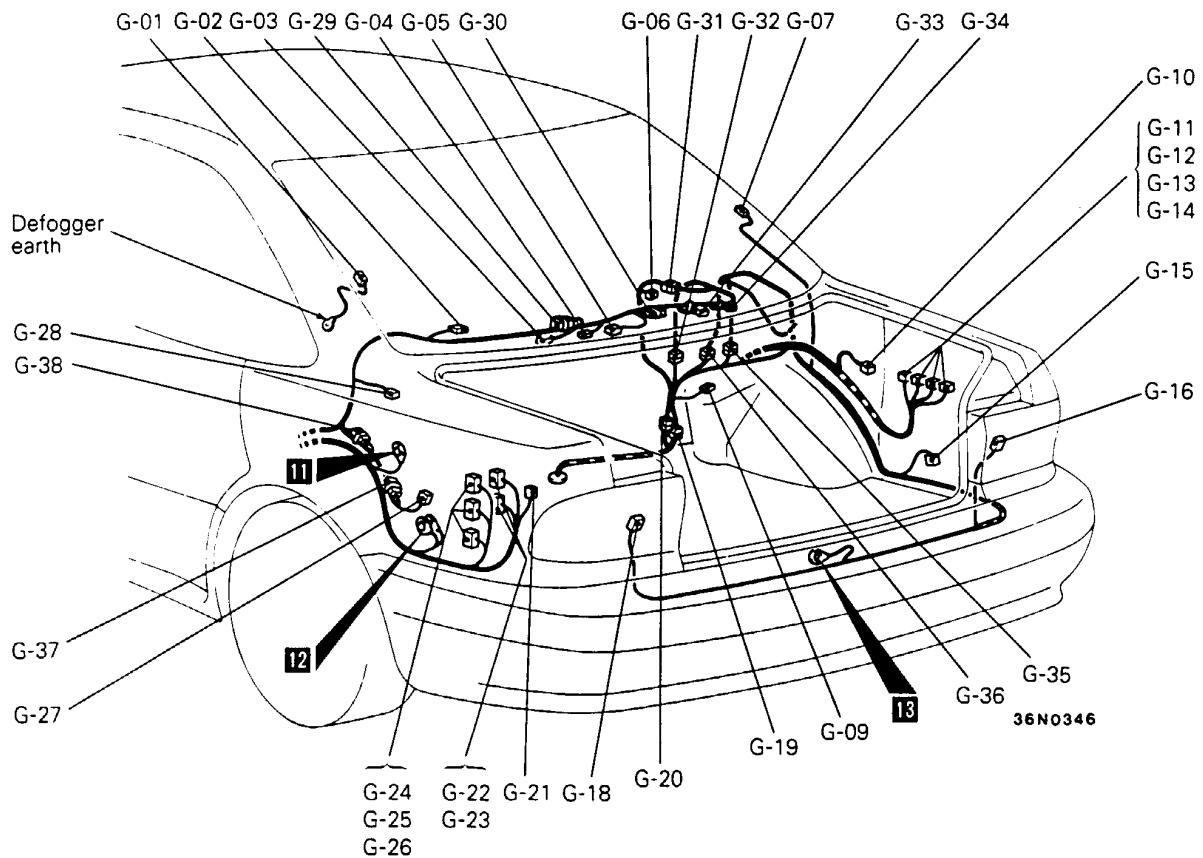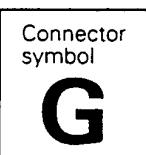

- | | | | |
|------|--|---|--|
| G-01 | Defogger (-) | G-21 | Diagnosis code erasure connector <ABS> |
| G-02 | Rear speaker (L.H.) | G-22 | ABS control unit |
| G-03 | Rear wiper motor | G-23 | |
| G-04 | Rear intermittent wiper relay | G-24 | TCL control unit |
| G-05 | Trunk room lamp | G-25 | |
| G-06 | Rear speaker (R.H.) | G-26 | Motor antenna |
| G-07 | Defogger (+) | G-27 | |
| G-08 | - | G-28 | ACTIVE-ECS damping force switching actuator (Rear: L.H.) |
| G-09 | ACTIVE-ECS damping force switching actuator (Rear: R.H.) | G-29 | No connection |
| G-10 | ACTIVE-ECS rear solenoid valve assembly | G-30 | |
| G-11 | ACTIVE-ECS control unit | G-31 | Body wiring harness and rear wiring harness combination |
| G-12 | | G-32 | |
| G-13 | G-33 | No connection | |
| G-14 | G-34 | | |
| G-15 | G-35 | Body wiring harness and rear lid wiring harness combination | |
| G-16 | G-36 | | |
| G-17 | G-37 | No connection | |
| G-18 | G-38 | | |
| G-19 | Remark
For details concerning the earth point (example: 11), refer to P.3-20. | | |
| G-20 | 36N0346 | | |


NOTES

9 TRUNK LID


Connector symbol



<L.H. drive vehicles>

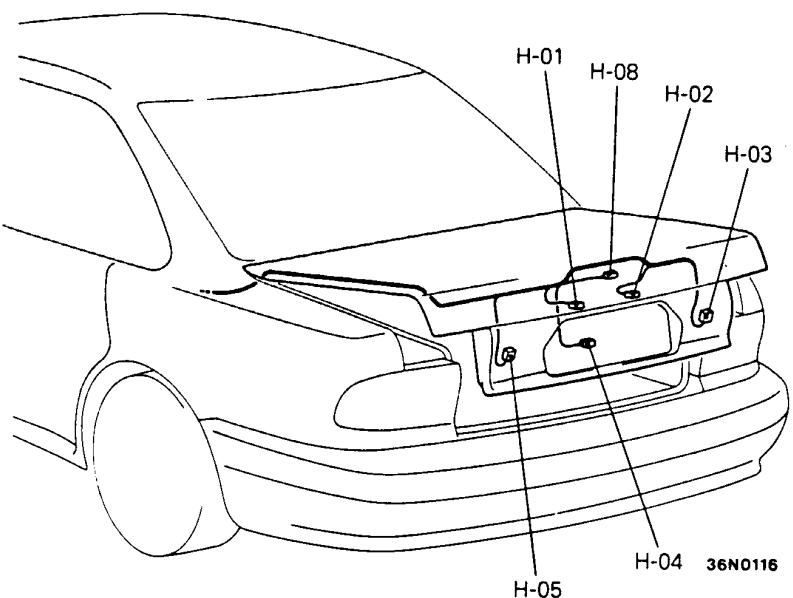

<R.H. drive vehicles>

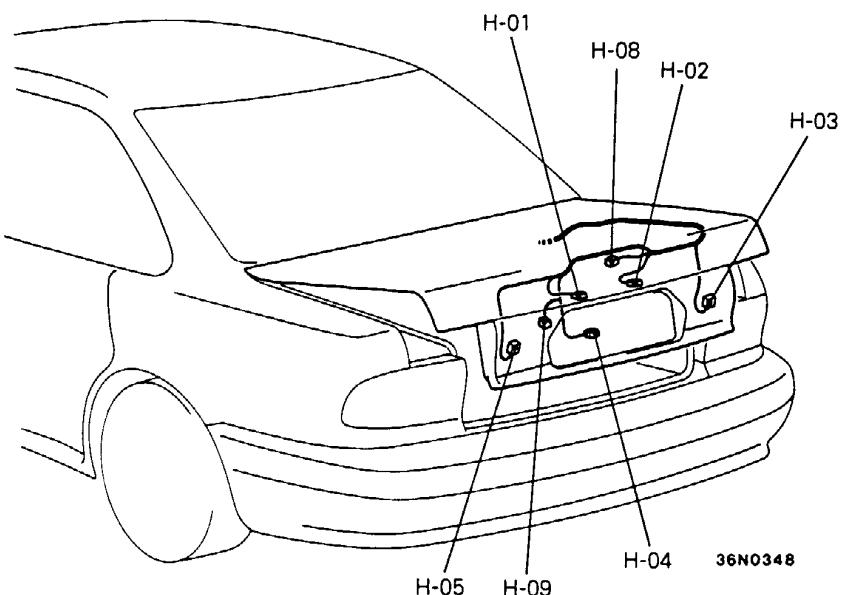

- H-01 License plate lamp (L.H.)
- H-02 License plate lamp (R.H.)
- H-03 Rear lid lamp (R.H.)
- H-04 Trunk room lamp switch
- H-05 Rear lid lamp (L.H.)

- H-06 —
- H-07 —
- H-08 High mounted stop lamp*^c
- H-09 No connection*^c

Remarks

*^c : Vehicles built from November 1991