

3 SINGLE PART INSTALLATION POSITION

RELAY	3- 2
CONTROL UNIT	3- 5
SENSOR	
MPI-SOHC	3-7-1
MPI-DOHC	3-11
DIODE	
Vehicles built up to March 1991	3-16
Vehicles built from April 1991	3-16-1
INSPECTION TERMINAL AND SPARE CONNECTOR	
FUSIBLE LINK AND FUSE	
EARTH CABLE	
EARTH	3-20





RELAY







Name	Symbol	Name	Symbol
ABS motor relay	without TCL	B	Dim-dip lamp relay 2
	with TCL	C	Dim-dip lamp relay 3
ABS valve relay	without TCL	B	Engine control relay
	with TCL	C	Engine oil level relay
ACTIVE-ECS compressor relay	F	Front fog lamp relay	A
ACTIVE-ECS relay	A	Headlamp relay	A
ACTIVE-ECS return pump relay	F	Headlamp washer relay	G
ACTIVE-ECS solenoid valve relay	F	Horn relay	J
A/C compressor relay	A	Power window relay	A
Alternator relay	A	Radiator fan motor relay (HI)	A
Blower motor relay	K	Radiator fan motor relay (LO-I)	A
Blower motor high relay	I	Radiator fan motor relay (LO-II)	A
Condenser fan motor relay (HI)	A	Rear fog lamp relay	A
Condenser fan motor relay (LO)	A	Rear intermittent wiper relay	O
Daytime running lamp relay 1	E	Rear power window unit	N
Daytime running lamp relay 2	D	Tail lamp relay	A
Defogger relay	K	TCL valve relay	L
Dim-dip lamp relay 1	E	Turn signal and hazard flasher unit	J
Windshield wiper relay			M

NOTE




The "Name" column is arranged in alphabetical order.





Engine compartment

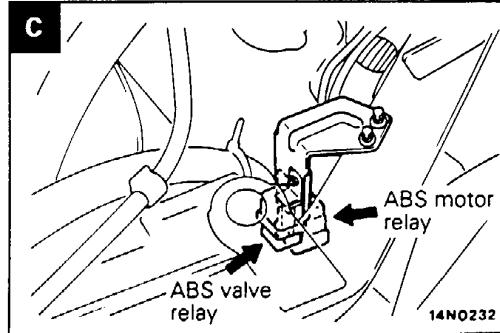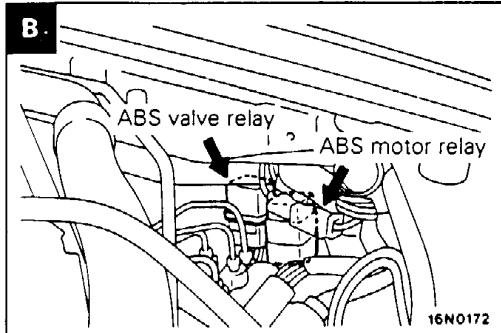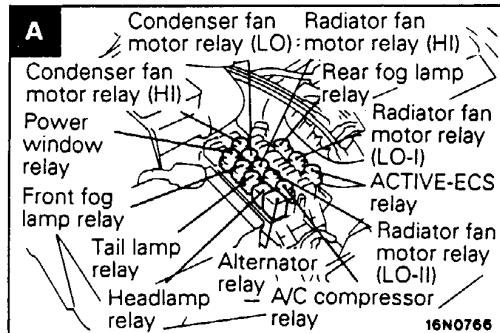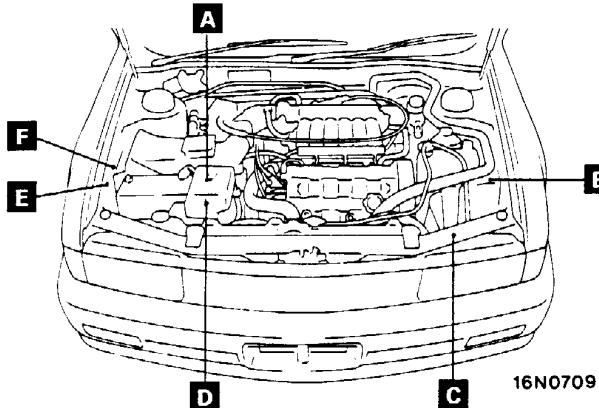

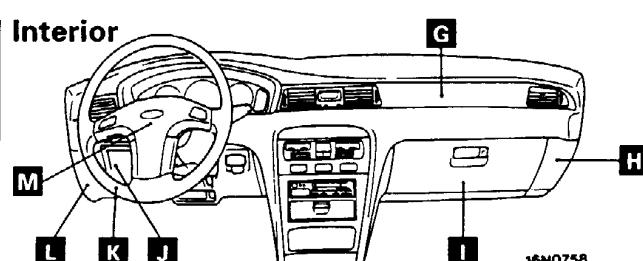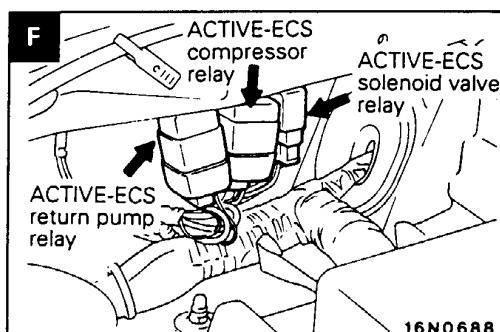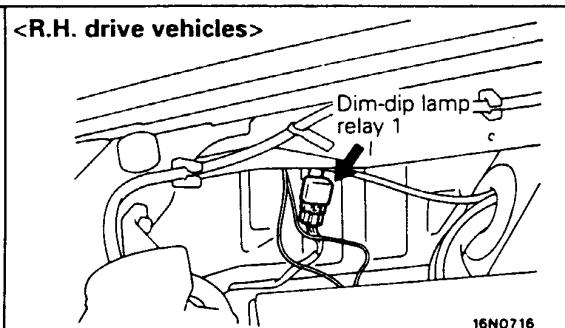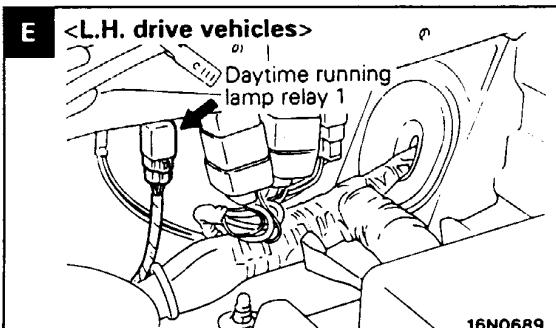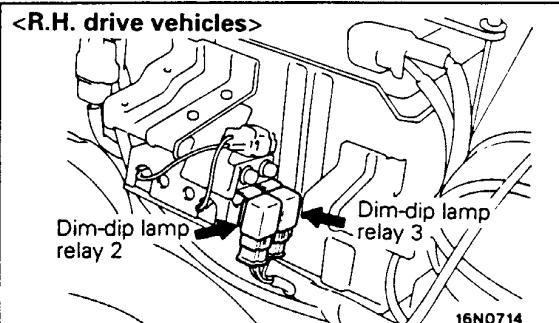
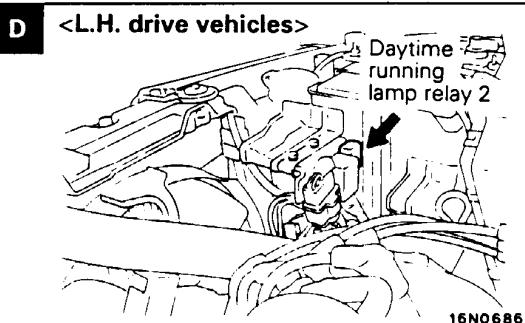


NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

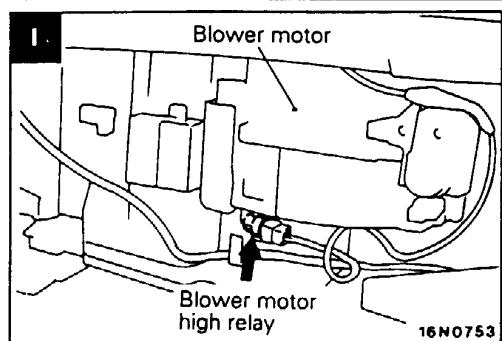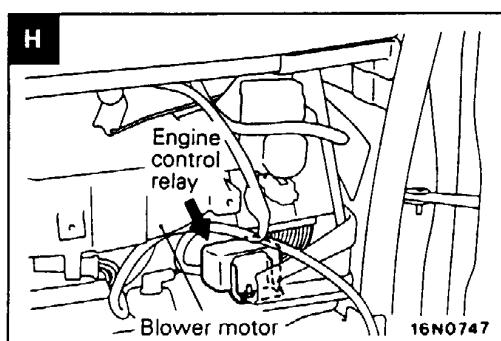
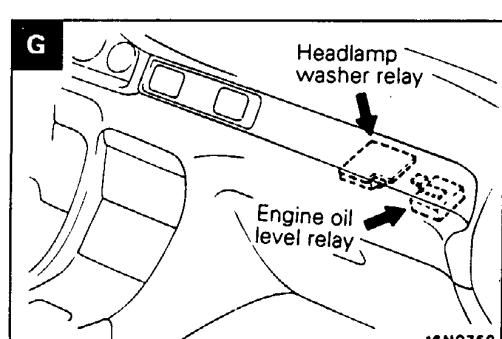


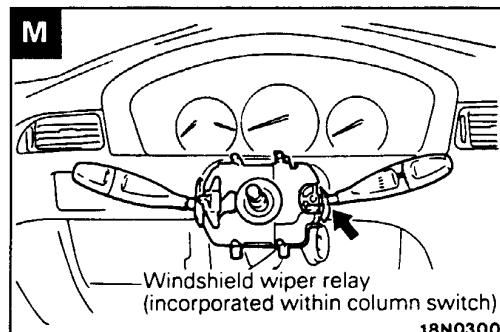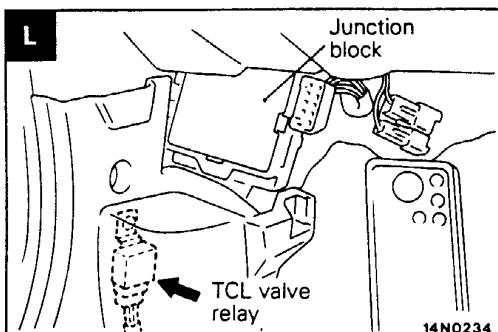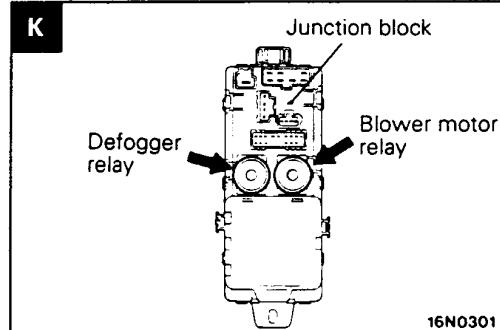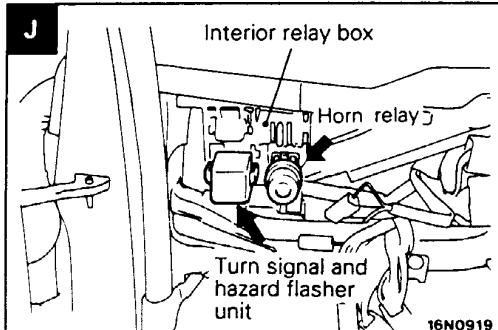

Rear door

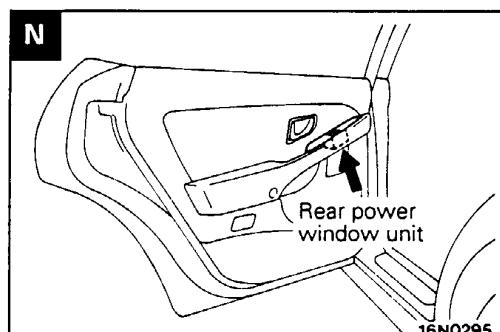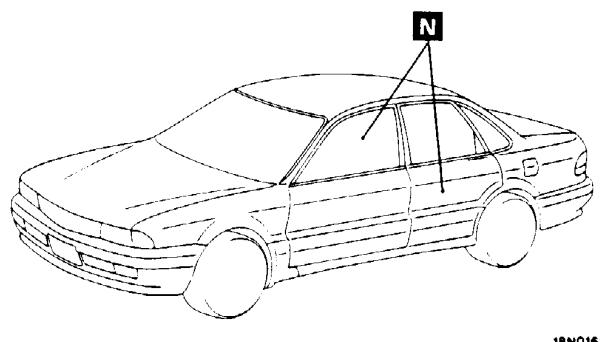

Luggage compartment

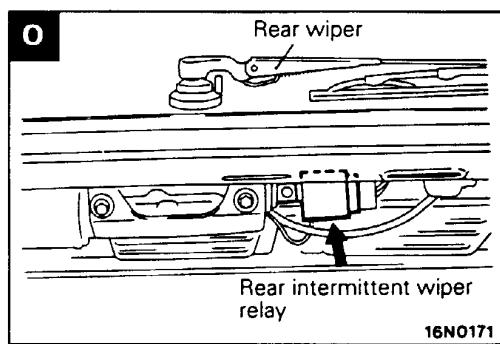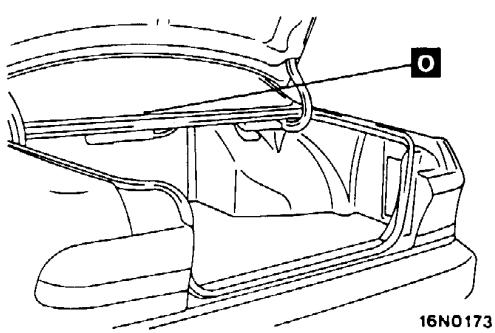


CONTROL UNIT

Name	Symbol	Name	Symbol
ABS control unit	N	Engine control unit	C
A/C belt lock controller <DOHC>	E	EPS control unit	B
A/C control unit	H	ETACS unit	L.H. drive vehicles
ACTIVE-ECS control unit	M		R.H. drive vehicles
Auto-cruise control unit	H	Motor antenna control unit	N
Daytime running lamp control unit	A	Power seat control unit	L
Door control unit	J	SRS diagnosis unit	L.H. drive vehicles
ELC-4A/T control unit	L.H. drive vehicles		R.H. drive vehicles
	F	Sun roof control unit	K
	G* ¹	TCL control unit	N
	F* ²		


NOTE

- (1) *¹ : Vehicles with SRS system.
- (2) *² : Vehicles without SRS system.
- (3) The "Name" column is arranged in alphabetical order.

Engine compartment

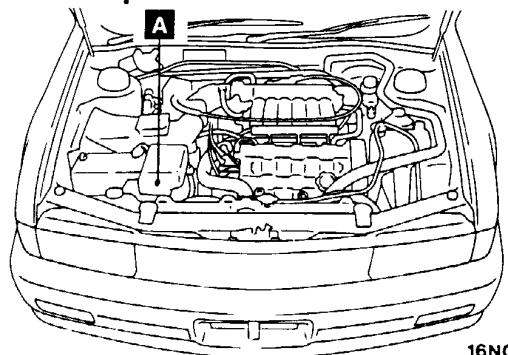


16N0709

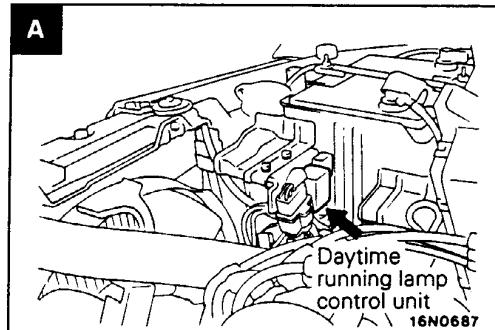


16N0687

Interior

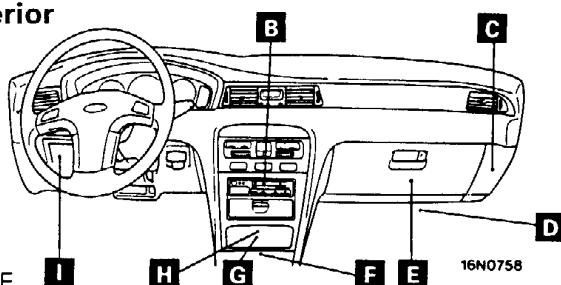


16N0758


NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

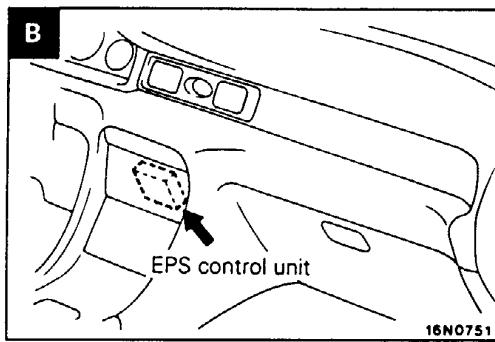






16N0751

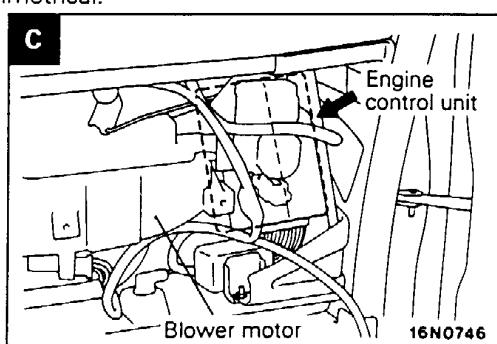


16N0746

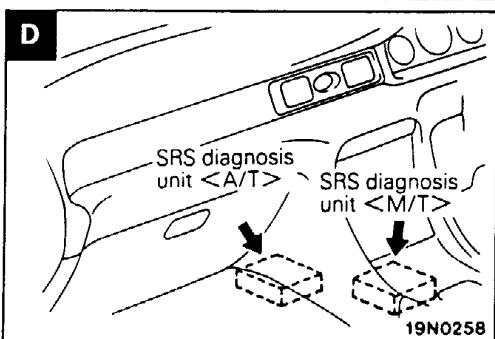

19N0258

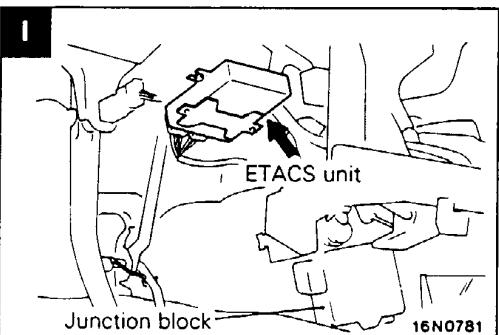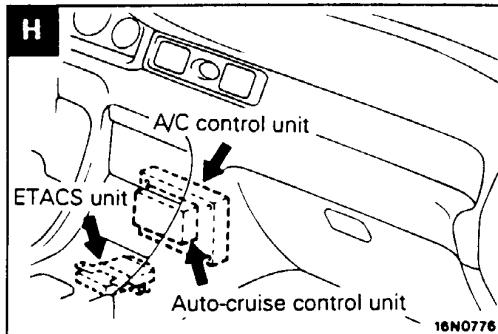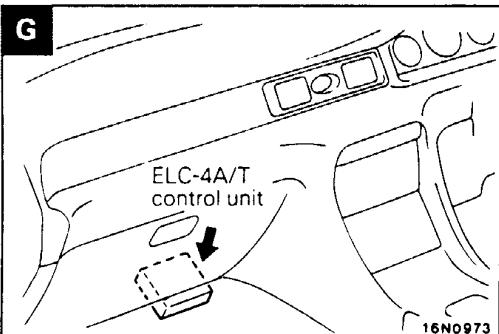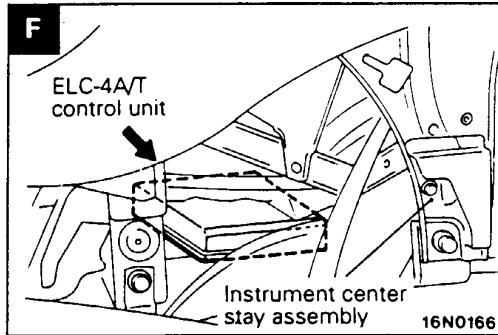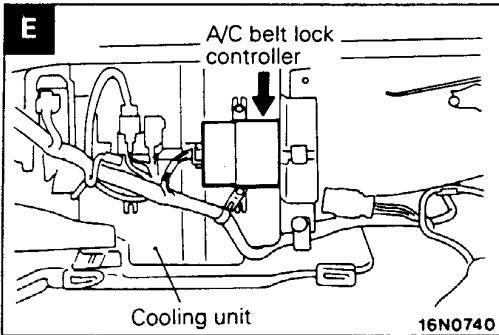




Front door and front seat

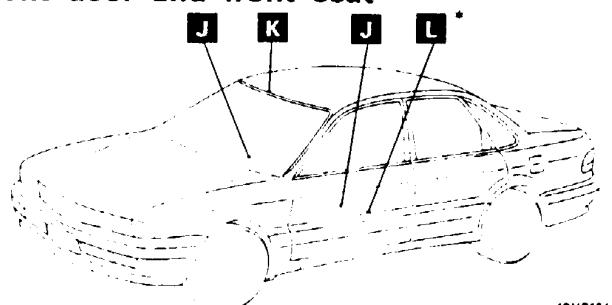




NOTE

For R.H. drive vehicles, only the positions indicated by the * is symmetrical.


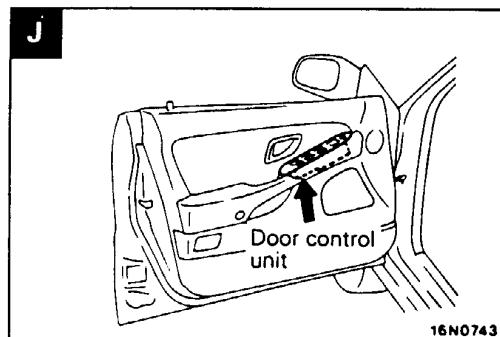


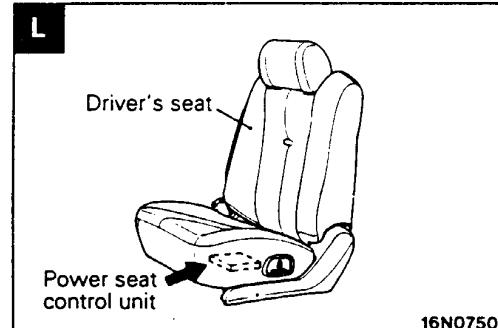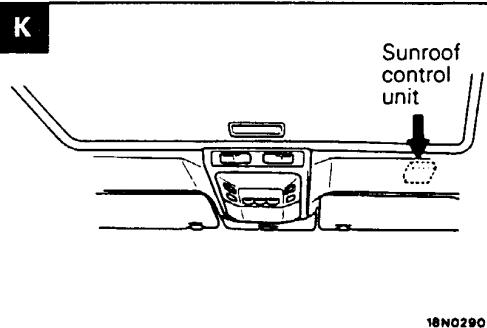

Luggage compartment

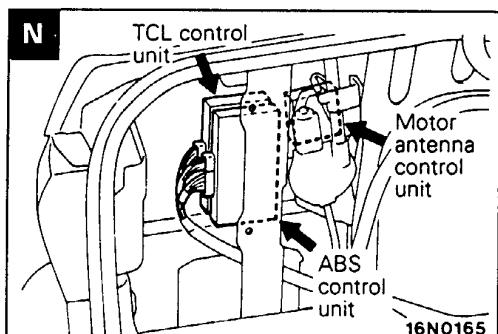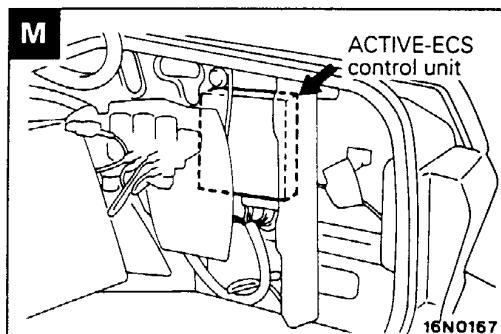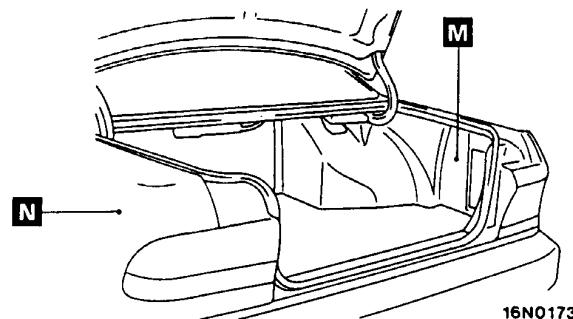

Floor console

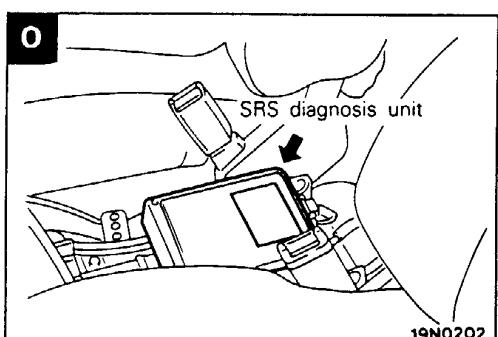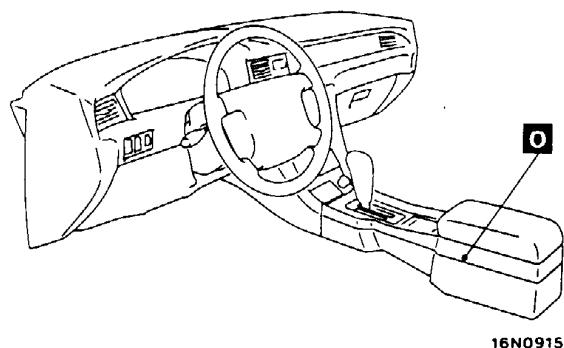

SENSOR**MPI-SOHC**

Name	Symbol	Name	Symbol
ABS speed sensor (Front)	P	Fin thermo sensor	M
ABS speed sensor (Rear)	R	Interior temperature sensor	O
Air flow sensor (with built-in barometric pressure sensor, intake air temperature sensor)	A	Oxygen sensor	Q
Air inlet sensor	L	Photo sensor	K
A/T fluid temperature sensor <A/T>	H	Thermo sensor (for cooling fan control)	G
Crank angle sensor and top dead center sensor	C	Thermostat	E
Detonation sensor	D	Throttle position sensor	B
Engine coolant temperature sensor (for engine control)	I	Indiction control valve position sensor	C
Engine coolant temperature switch (for A/C compressor control)	I	Vehicle speed sensor (Reed switch)	J
Engine oil level sensor	F	Water temperature sensor	N
Front impact sensor	R.H. L.H.	S T	

NOTE

The "Name" column is arranged in alphabetical order.





MPI-DOHC










Name	Symbol	Name	Symbol
ABS speed sensor (Front)	U	4WS fluid level sensor	D
ABS speed sensor (Rear)	X	Front height position sensor	S
Accelerator position sensor <Vehicles with TCL>	B	Front impact sensor	R.H.
ACTIVE-ECS front height sensor		Front impact sensor	L.H.
ACTIVE-ECS G sensor	H	Induction control valve position sensor	C
ACTIVE-ECS rear height sensor	Y	Interior temperature sensor	R
ACTIVE-ECS rear pressure sensor	T	Oxygen sensor	V
Air flow sensor (with built-in barometric pressure sensor, intake air temperature sensor)	A	Photo sensor	M
Air inlet sensor	N	Rear height position sensor	S
A/T fluid temperature sensor	J	Reclining position sensor	S
Crank angle sensor and top dead center sensor	B	Revolution pick-up sensor	G
Detonation sensor		Slide position sensor	S
Engine coolant temperature sensor (for engine control)	K	Steering wheel sensor <Active-ECS or TCL>	Q
Engine coolant temperature switch (for A/C compressor control)	K	Thermo sensor (for cooling fan control)	I
Engine oil level sensor		Thermostat	G
Fin thermo sensor	O	Throttle position sensor	B
		Vehicle speed sensor (Reed switch)	L
		Water temperature sensor	P

NOTE


The "Name" column is arranged in alphabetical order.

Engine compartment

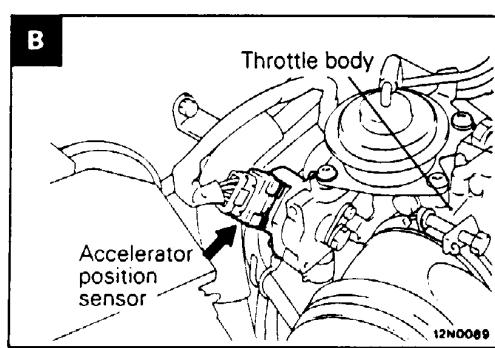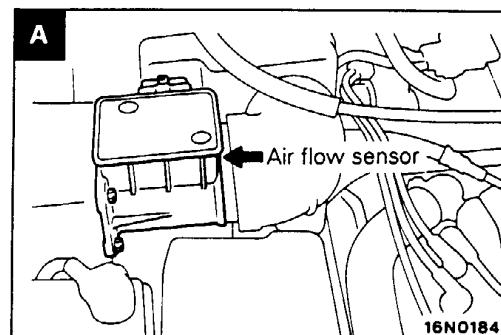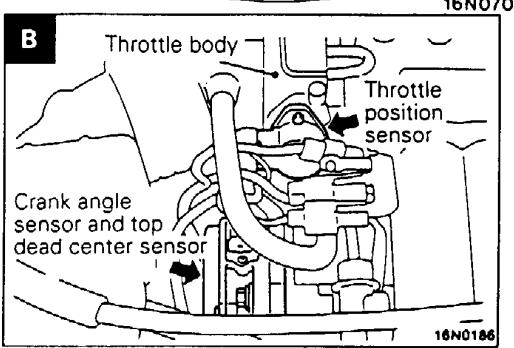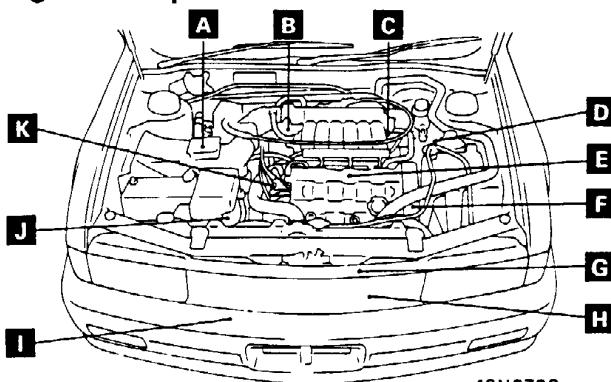


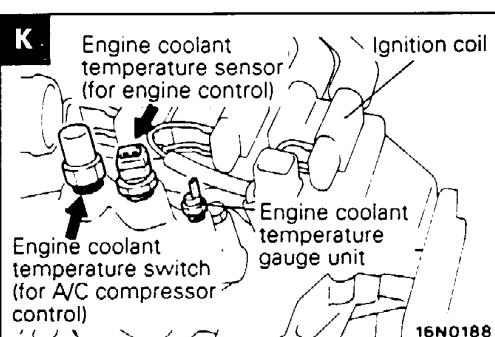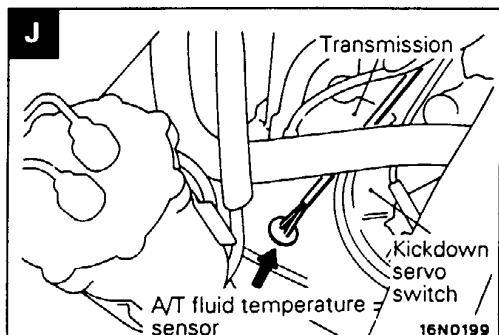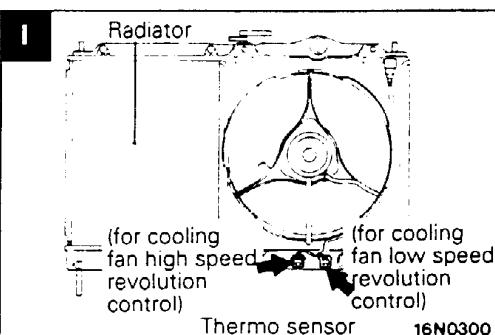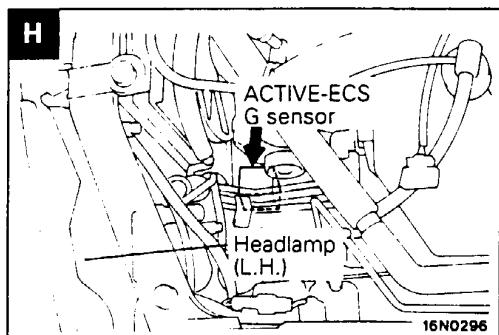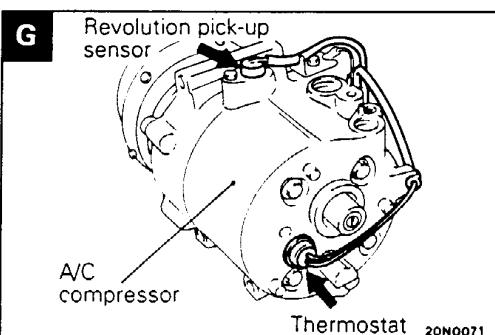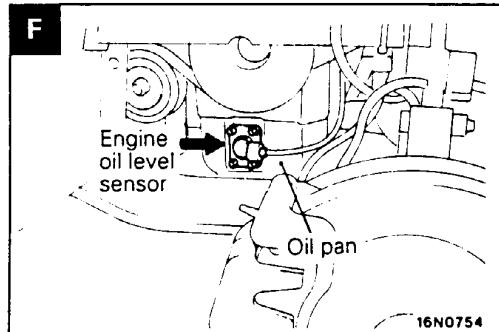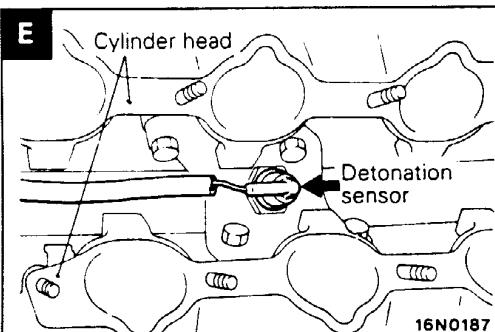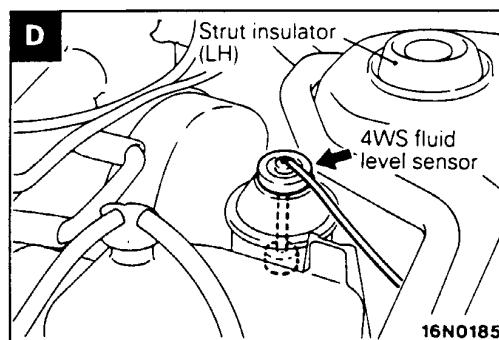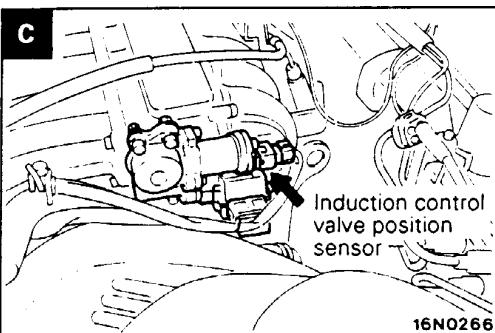


Interior

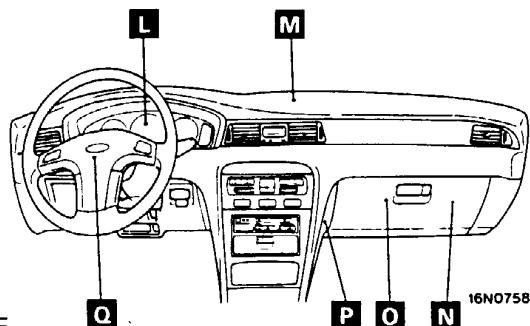


NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

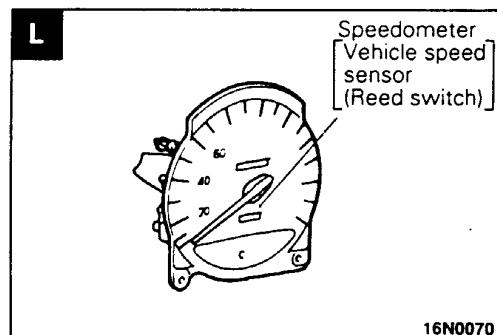


16N0070

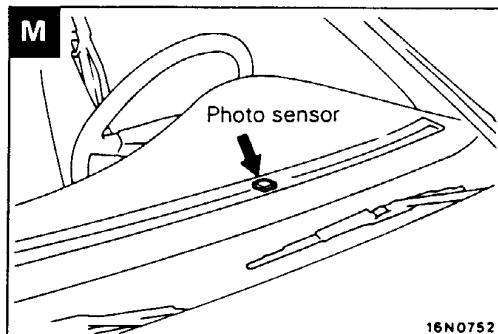


16N0752

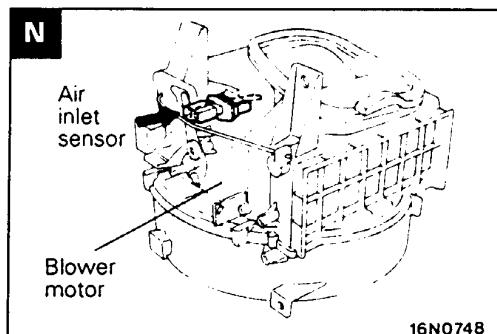


16N0748

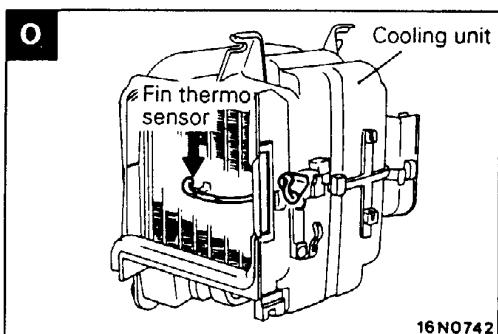

16N0742

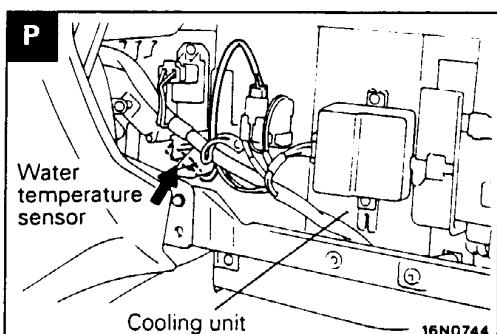


16N0744


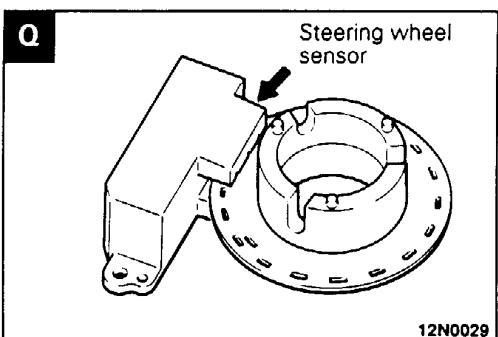


12N0029



Roof and front seat

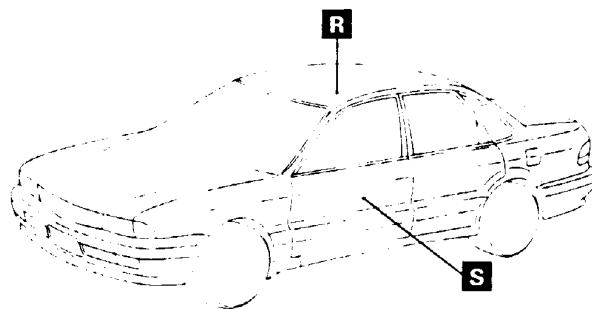



1BN0161

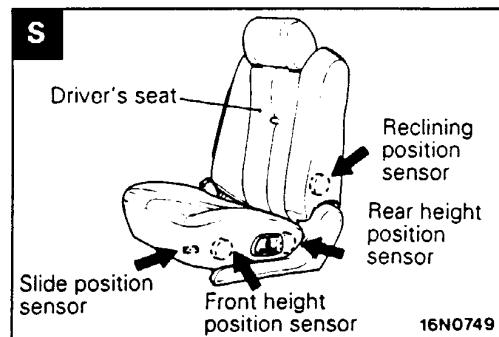
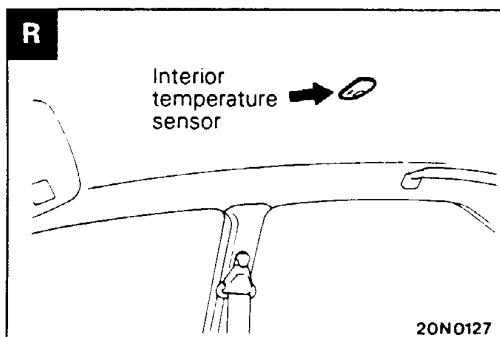


Luggage compartment


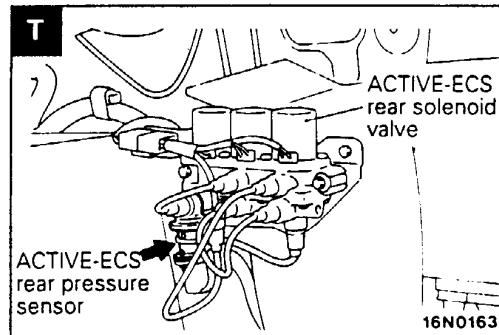
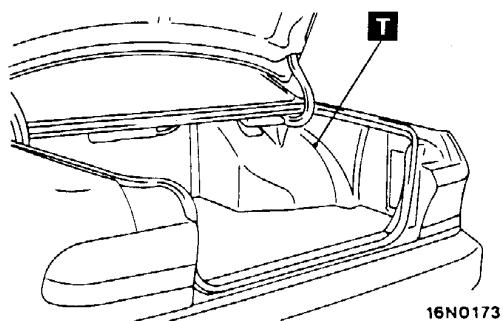


Under front floor


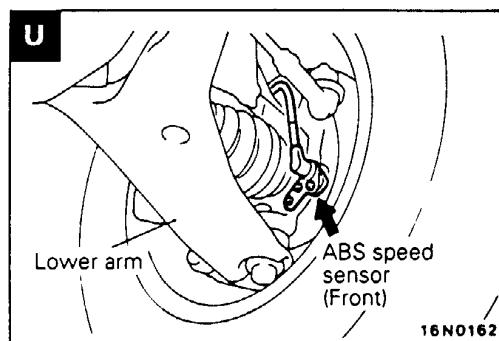
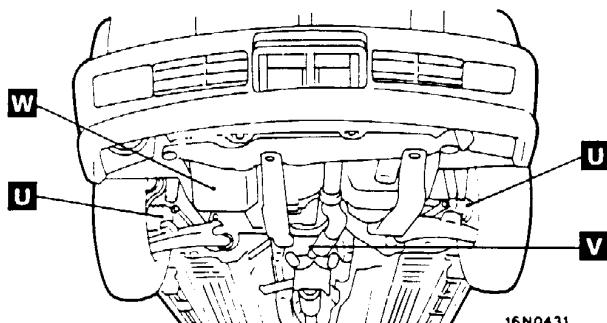


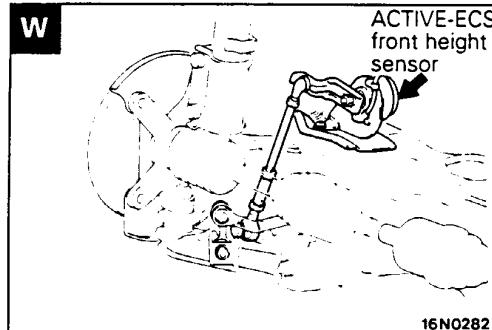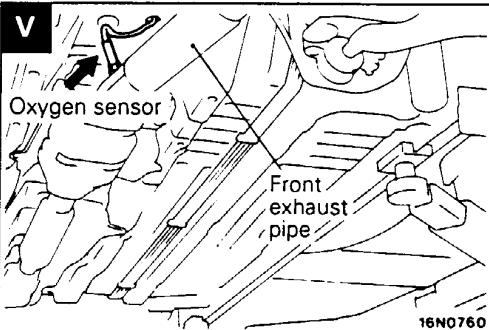

Under rear floor

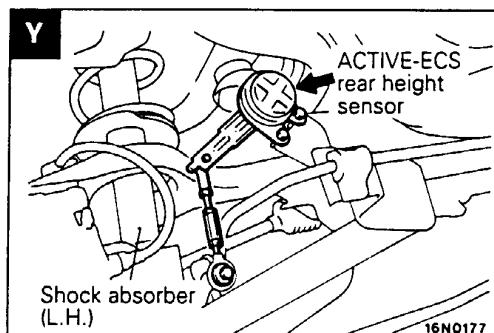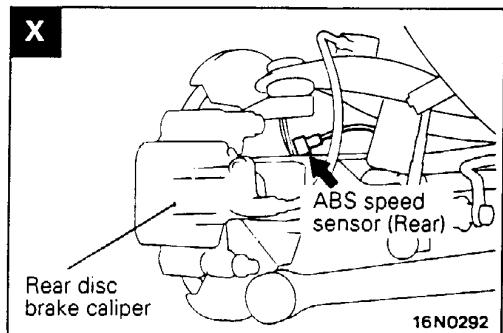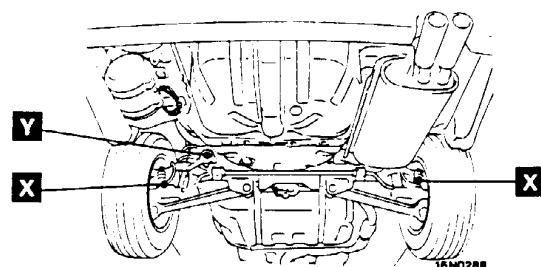

Under front floor

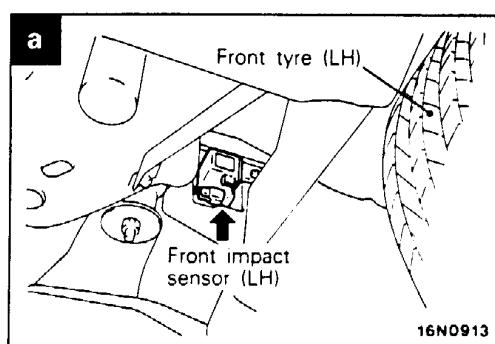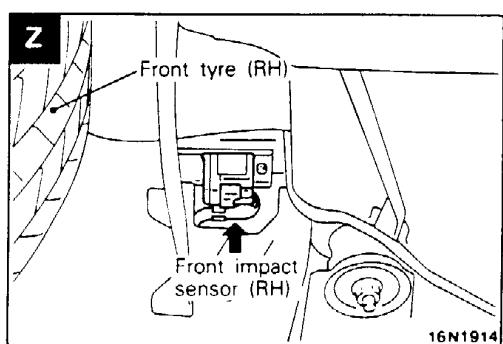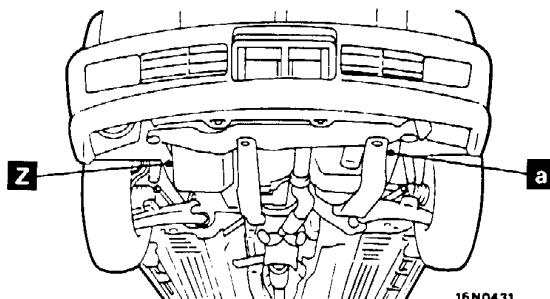

DIODE <Vehicles built up to March 1991>


Name	Symbol	Name	Symbol
Diode (for ABS circuit)* ¹	A	Diode (for dim-dip lamp circuit)* ²	D
Diode (for ABS circuit)* ²	B	Diode (for 4WS fluid level warning lamp circuit)	D
Diode (for ACTIVE-ECS circuit)	A	Diode (for headlamp circuit)* ¹	A
Diode (for ACTIVE-ECS circuit)	D	Diode (for idle-up circuit)	A
Diode (for dim-dip lamp circuit)* ²	C	Diode (for power seat circuit)	L.H. drive vehicles R.H. drive vehicles

NOTE


(1) *¹: L.H. drive vehicles.(2) *²: R.H. drive vehicles.

(3) The "Name" column is arranged in alphabetical order.

Interior

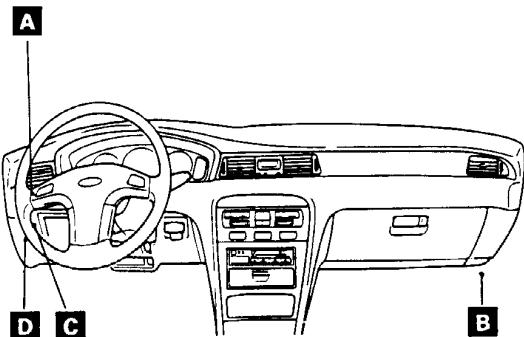


16N0758

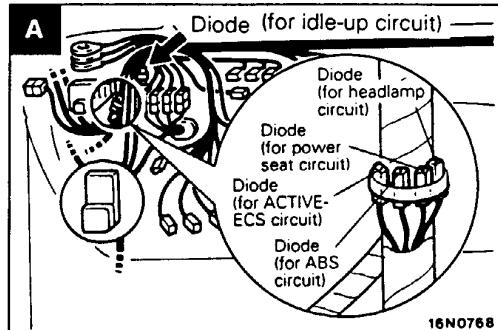


16N0768

NOTE


For R.H. drive vehicles, part installation positions are symmetrical.

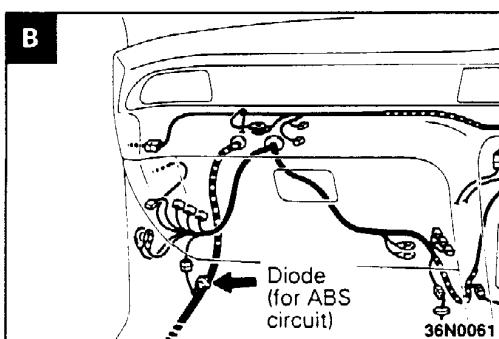


36N0061

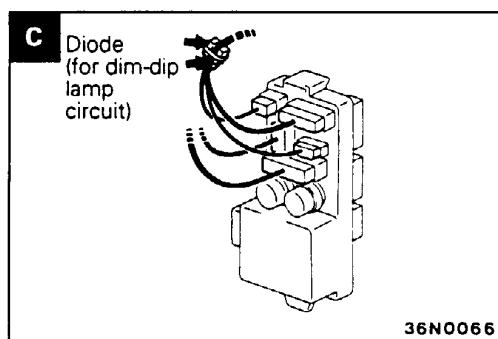

36N0066

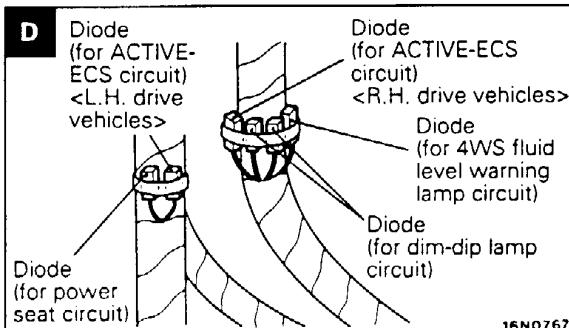

16N0767

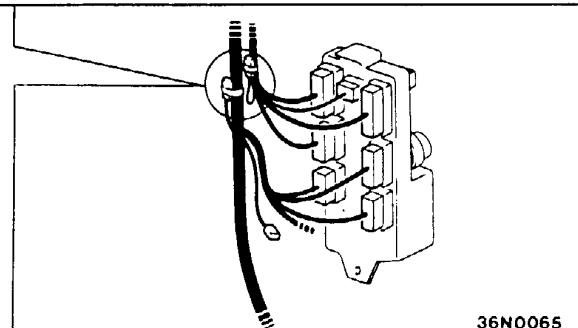

36N0065


DIODE <Vehicles built from April 1991>

Name	Symbol	Name	Symbol
Diode (for ABS circuit)*1	A	Diode (for headlamp circuit)*1	A
Diode (for ABS circuit)*2	B	Diode (for idle-up circuit)	D
Diode (for ACTIVE-ECS circuit)	A	Diode (for power seat circuit)	L.H. drive vehicles
Diode (for ACTIVE-ECS circuit)	D		R.H. drive vehicles
Diode (for dim-dip lamp circuit)*2	C	Diode (for rear fog lamp circuit)*1 <Vehicles built from November 1991>	C
Diode (for dim-dip lamp circuit)*2	D	Diode (for rear fog lamp circuit) <Vehicles built from November 1991>	L.H. drive vehicles
Diode (for 4WS fluid level warning lamp circuit)	L.H. drive vehicles	Diode (for rear fog lamp circuit) <Vehicles built from November 1991>	R.H. drive vehicles
	R.H. drive vehicles		D

NOTE





- (1) *1: L.H. drive vehicles.
- (2) *2: R.H. drive vehicles.
- (3) The "Name" column is arranged in alphabetical order.


Interior

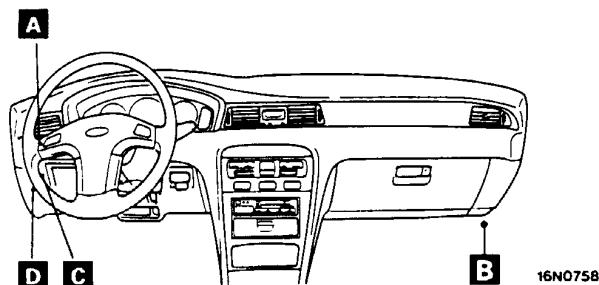


NOTE

For R.H. drive vehicles, part installation positions are symmetrical.

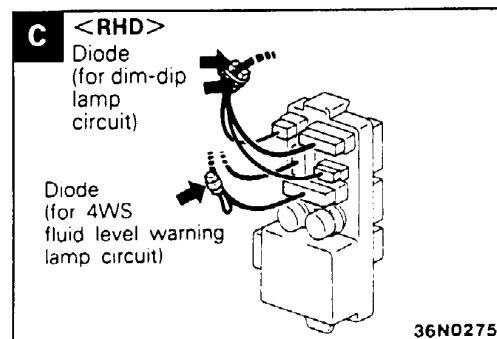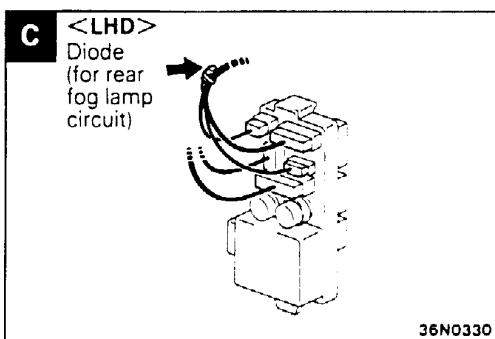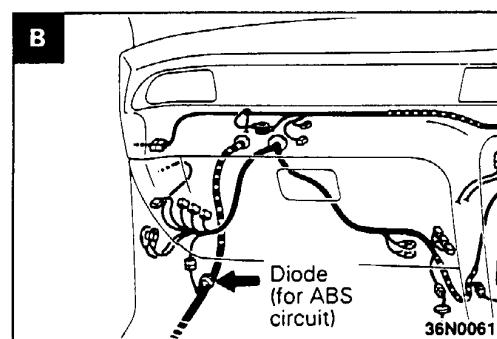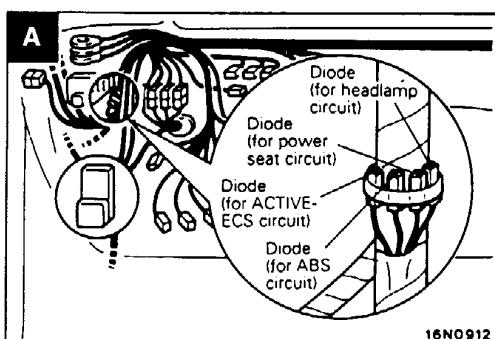

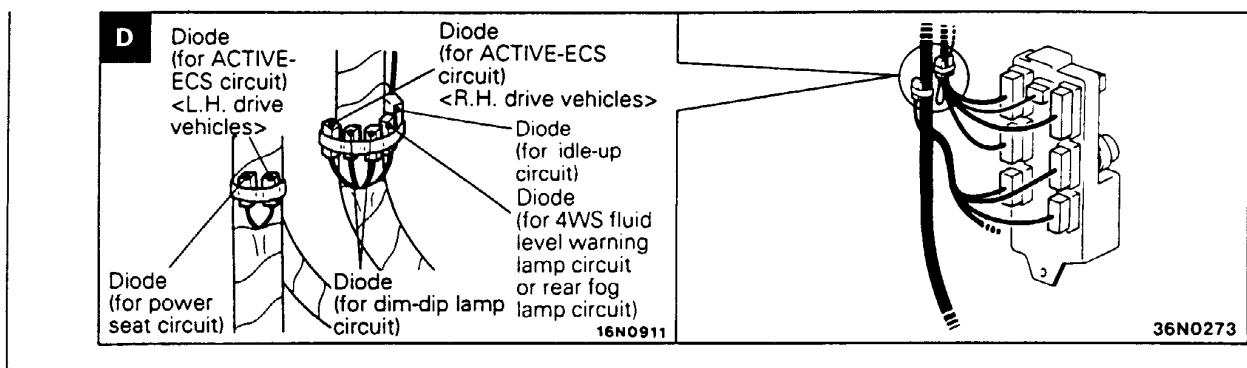


Interior

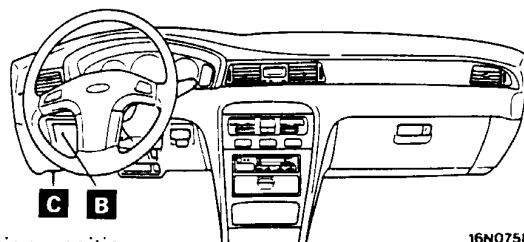


16N0758

NOTE

For R.H. drive vehicles, part installation positions are symmetrical.

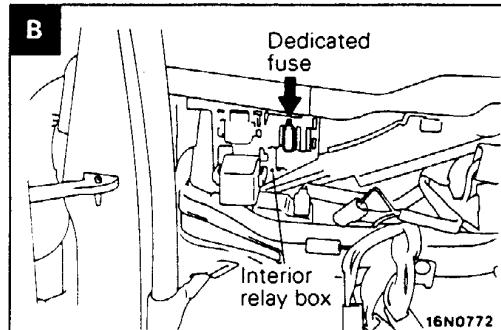


16N0772

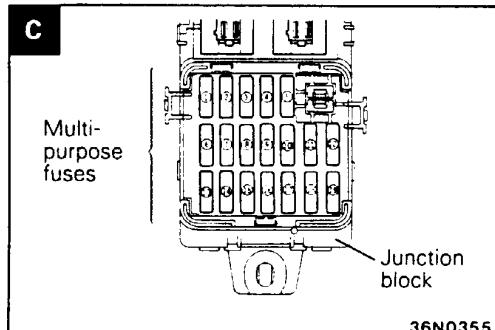

36N0355


EARTH CABLE

Engine compartment

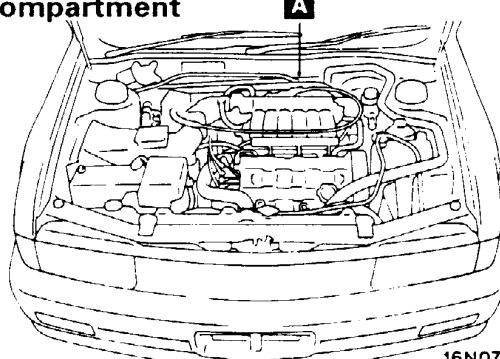


16N0709


Under rear floor

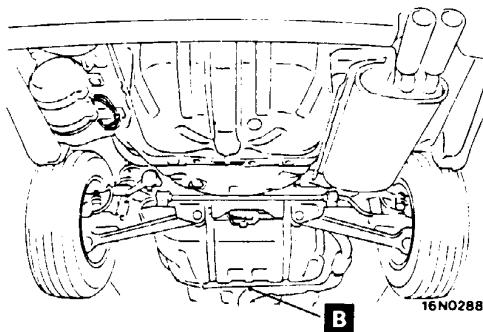


16N0288

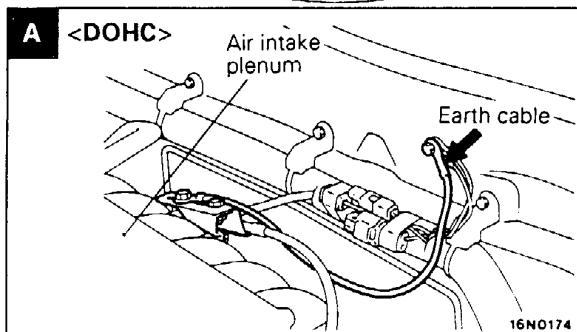

16N0174

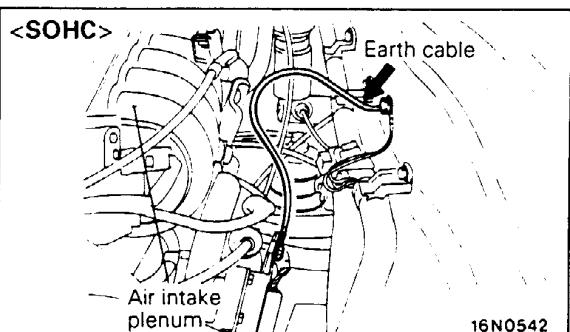


16N0542

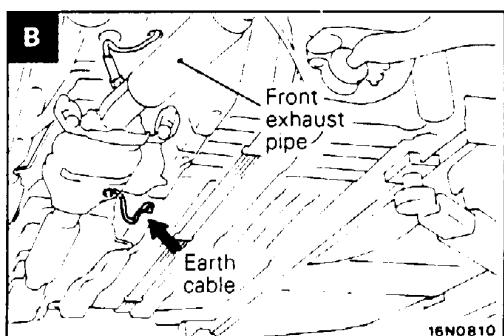

16N0810

EARTH

L.H. drive vehicles

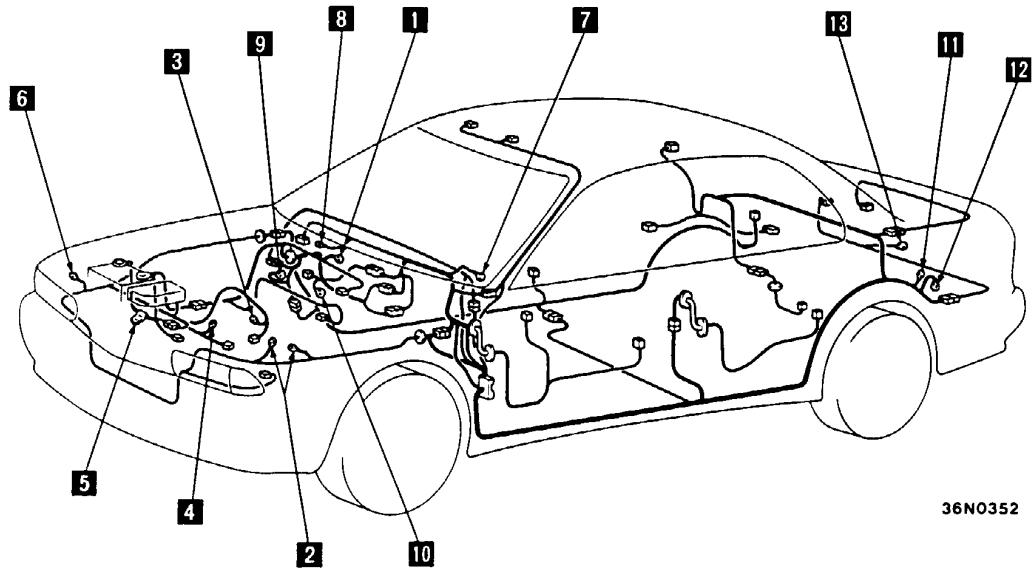

R.H. drive vehicles

