

3 SINGLE PART INSTALLATION POSITION

RELAY	3-2
CONTROL UNIT	3-6
SENSOR	
MPI-SOHC	3-7-2
MPI-DOHC	3-11
DIODE	
Vehicles built up to March 1991	3-16
Vehicles built from April 1991	3-16-1
INSPECTION TERMINAL AND SPARE CONNECTOR 3-17	
FUSIBLE LINK AND FUSE 3-18	
EARTH CABLE 3-19	
EARTH	3-20

RELAY


Name	Symbol	Name	Symbol
ABS motor relay	B	Engine control relay	H
	C	Engine oil level relay	G
ABS valve relay	B	Front fog lamp relay	A
	C	Headlamp relay	A
ACTIVE-ECS compressor relay	F	Headlamp washer relay	G
ACTIVE-ECS relay	A	Horn relay	L
ACTIVE-ECS return pump relay	F	Power window relay	A
ACTIVE-ECS solenoid valve relay	F	Radiator fan motor relay (HI)	A
A/C compressor relay	A	Radiator fan motor relay (LO-I)	A
Alternator relay	A	Radiator fan motor relay (LO-II)	A
Blower motor relay	K	Rear fog lamp relay	A
Blower motor high relay	I	Rear intermittent wiper relay	P
Condenser fan motor relay (HI)	A	Rear power window unit	O
Condenser fan motor relay (LO)	A	Starter relay*	F
Daytime running lamp relay 1	E	Tail lamp relay	A
Daytime running lamp relay 2	D	TCL valve relay	M
Defogger relay	K	Theft-alarm horn relay*	L.H. drive vehicles
Dim-dip lamp relay 1	E		R.H. drive vehicles
Dim-dip lamp relay 2	D	Turn signal and hazard flasher unit	L
Dim-dip lamp relay 3	D	Windshield wiper relay	N









NOTE



(1) The "Name" column is arranged in alphabetical order.

(2) * : Vehicles with theft-alarm system.







Engine compartment






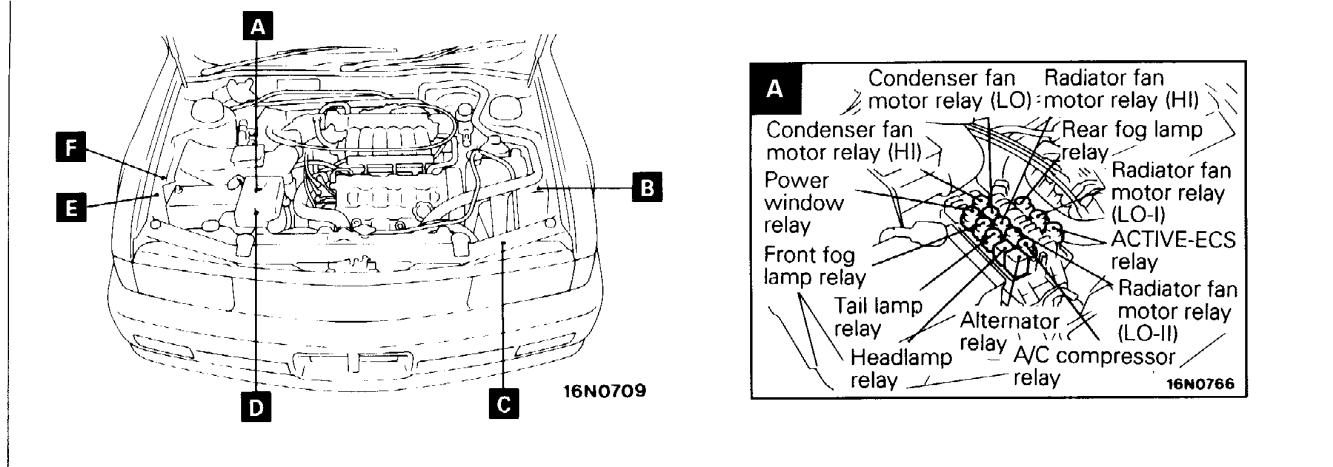


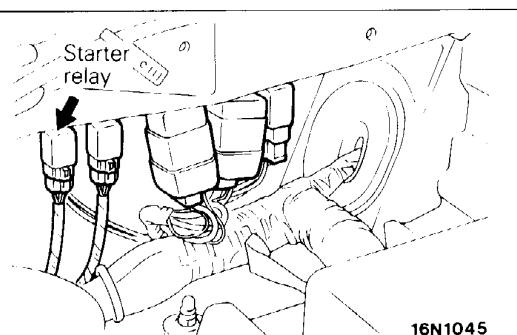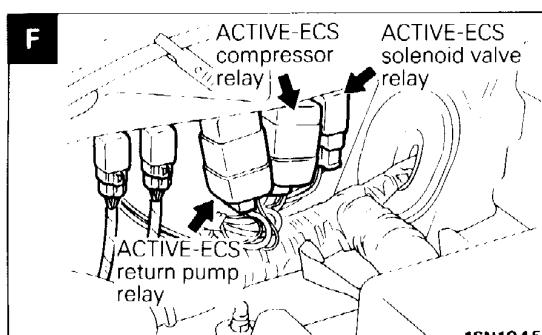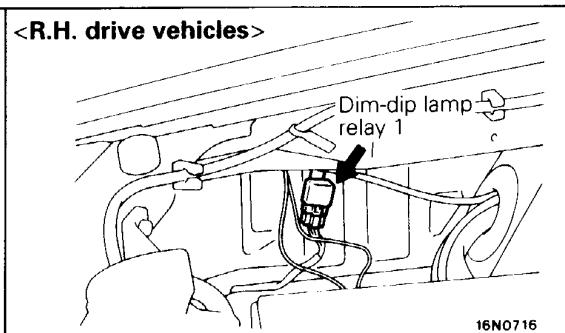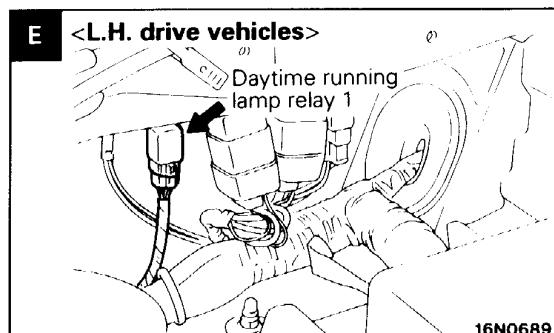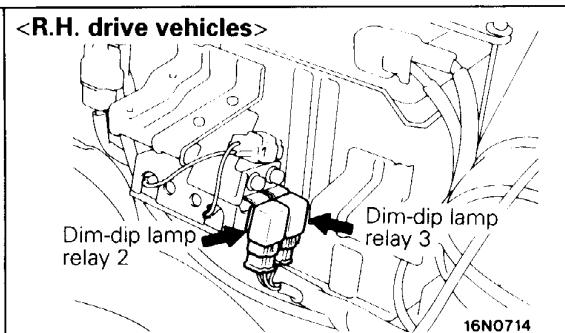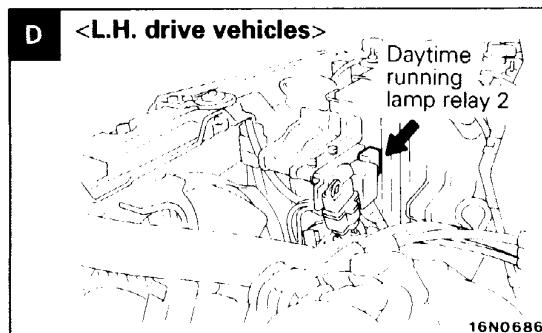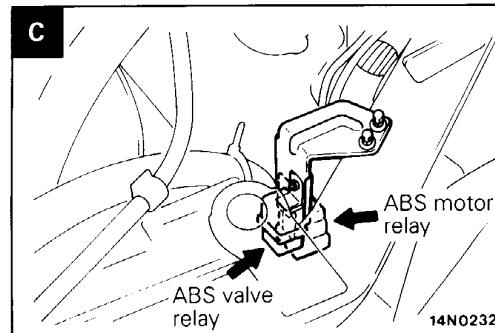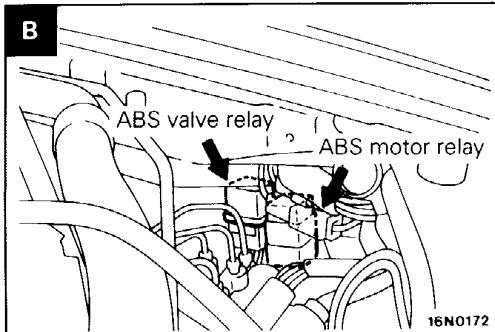

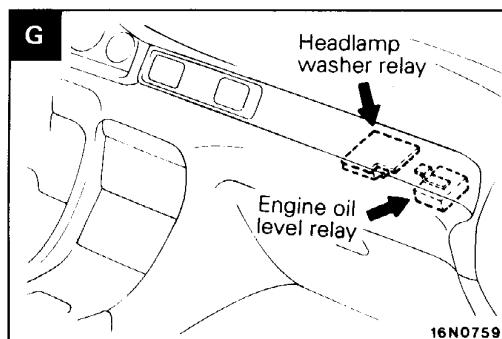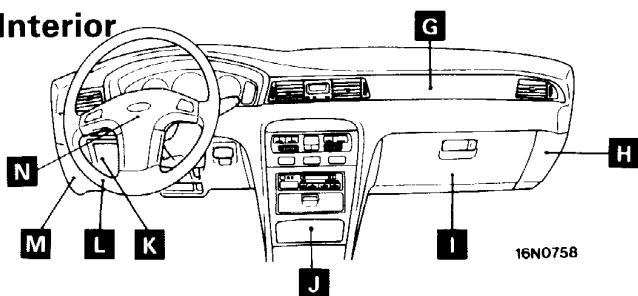Interior**NOTE**

For R.H. drive vehicles, part installation positions are symmetrical.

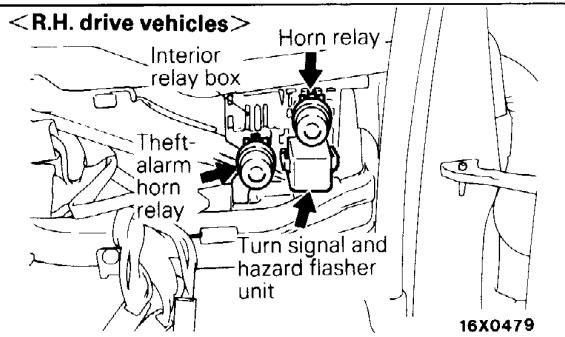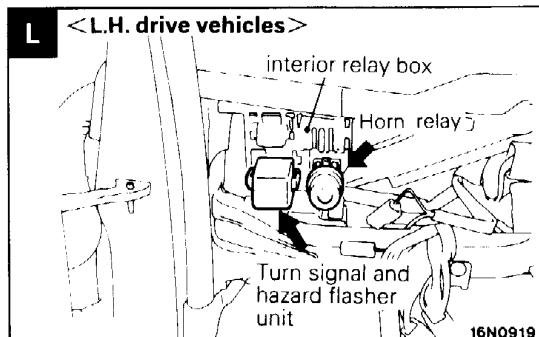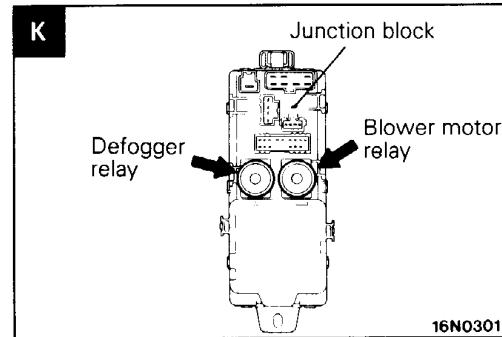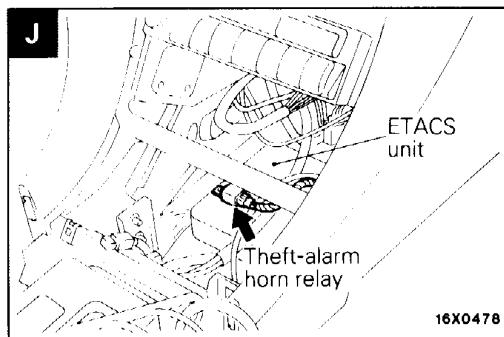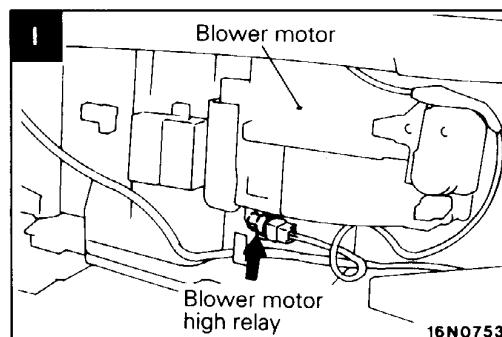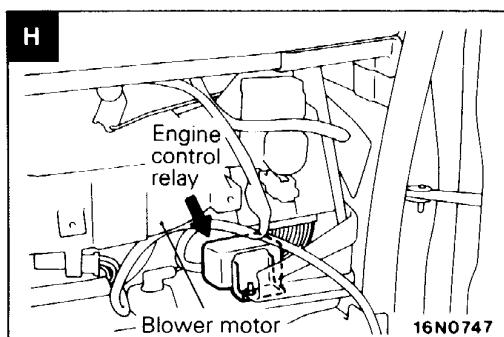

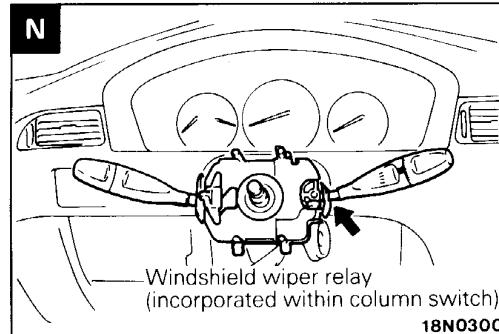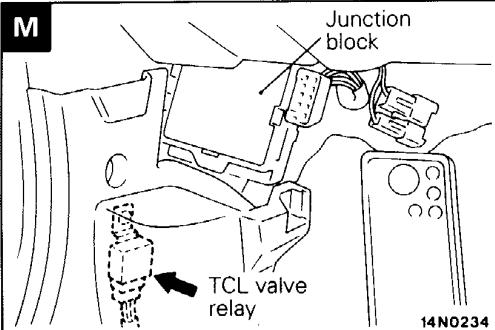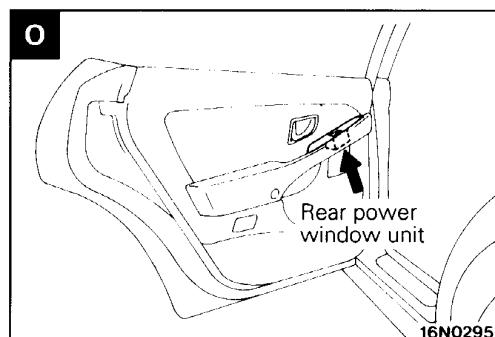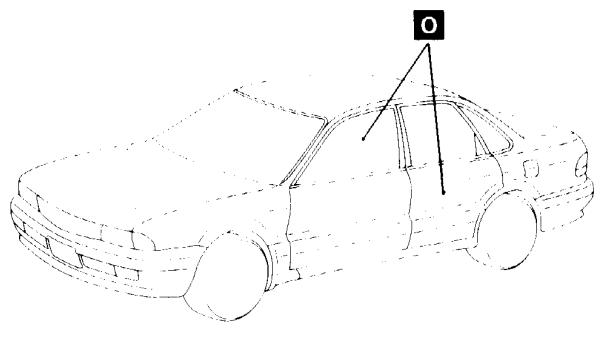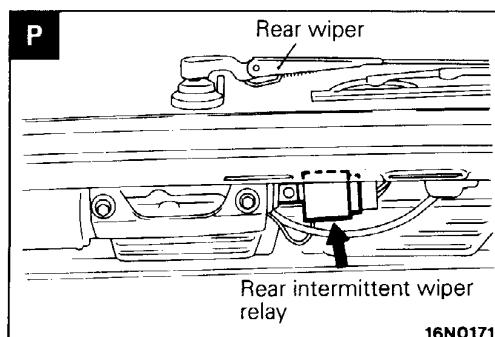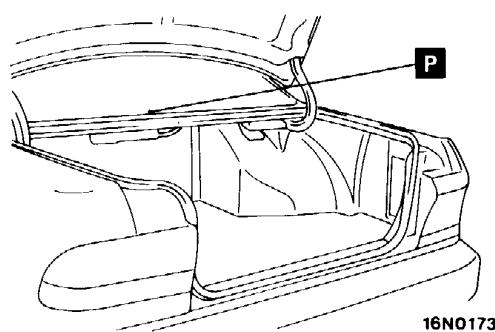**Rear door****Luggage compartment**


CONTROL UNIT

Name	Symbol	Name	Symbol
ABS control unit	N	Engine control unit	C
A/C belt lock controller <DOHC>	E	EPS control unit	B
A/C control unit	H	ETACS unit	L.H. drive vehicles
ACTIVE-ECS control unit	M		R.H. drive vehicles
Auto-cruise control unit	H	Motor antenna control unit	N
Daytime running lamp control unit	A	Power seat control unit	L
Door control unit	J	SRS diagnosis unit	L.H. drive vehicles
ELC-4A/T control unit	L.H. drive vehicles		R.H. drive vehicles
	F	Sun roof control unit	K
	G*¹	TCL control unit	N
	F*²		


NOTE

- (1) *¹ : Vehicles with SRS system.
(2) *² : Vehicles without SRS system.
(3) The "Name" column is arranged in alphabetical order.

Engine compartment

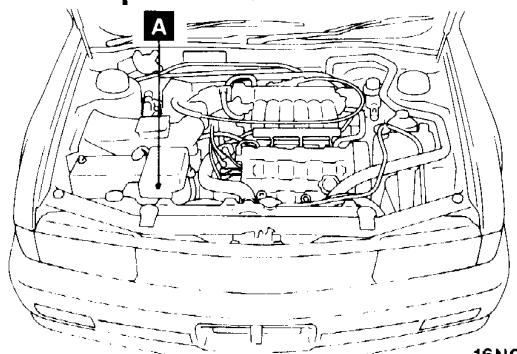


16N0709

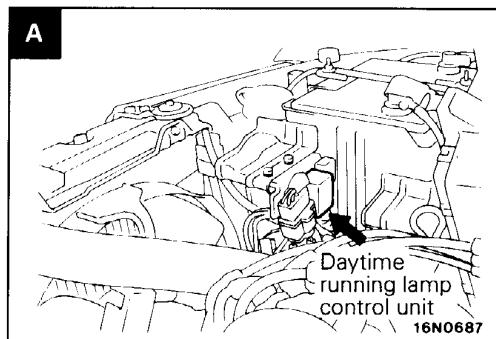


16N0687

Interior

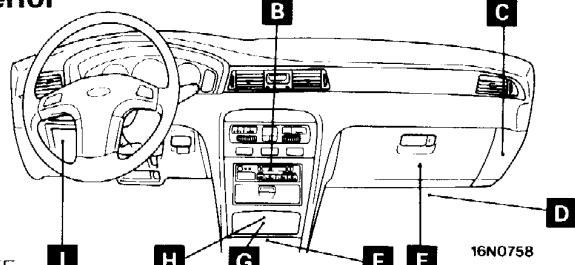


16N0758


NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

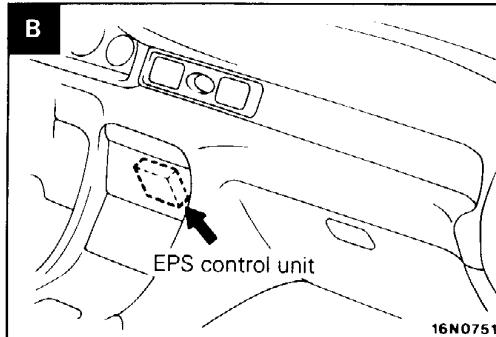






16N0751

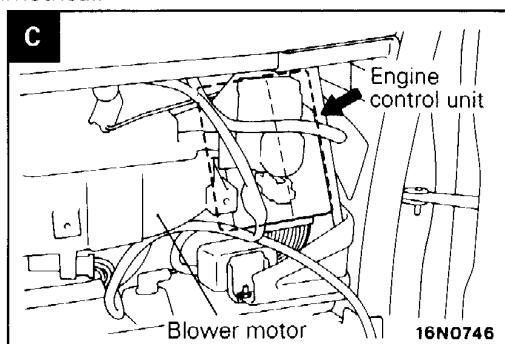


16N0746

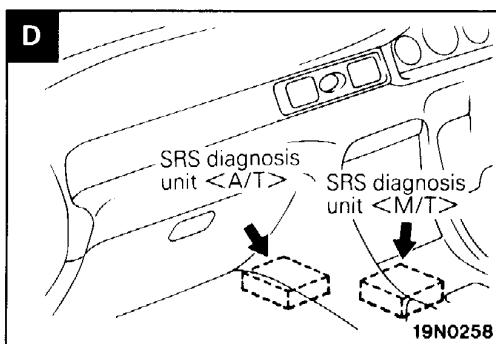

19N0258

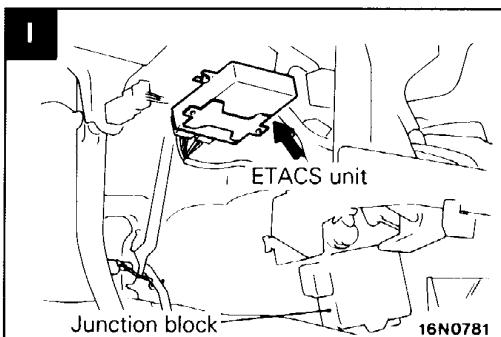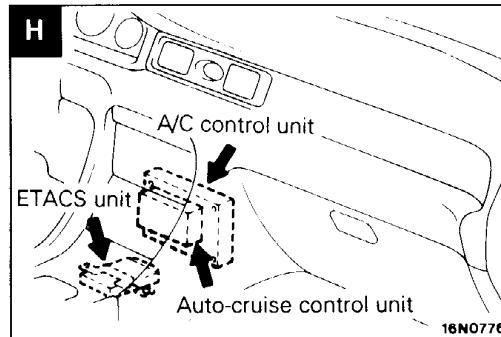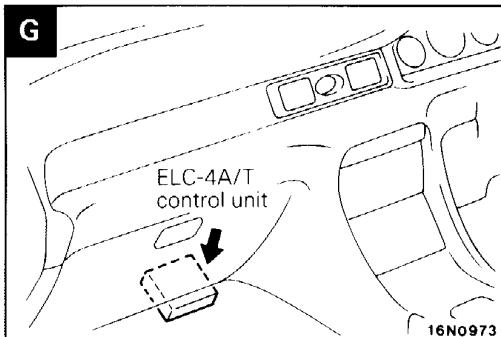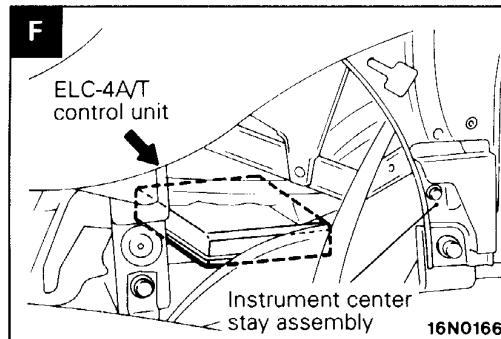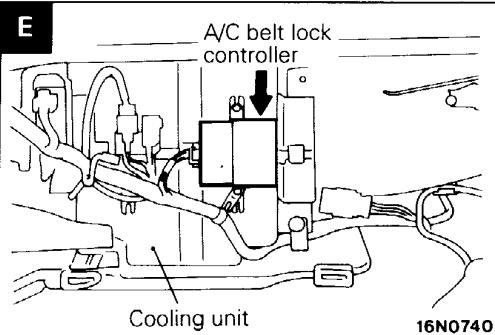


Front door and front seat


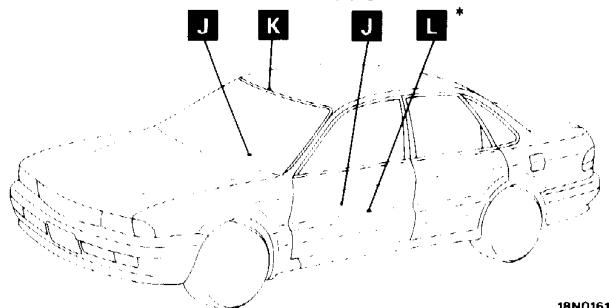


NOTE




For R.H. drive vehicles, only the positions indicated by the * is symmetrical.

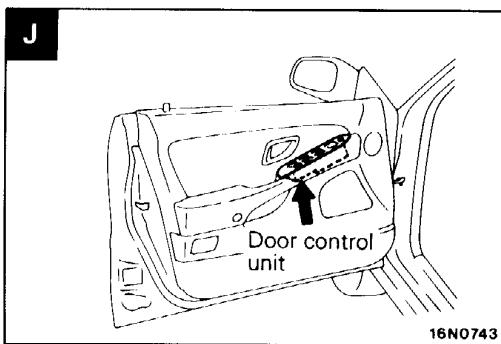



3-7-1 SINGLE PART INSTALLATION POSITION – Control Unit

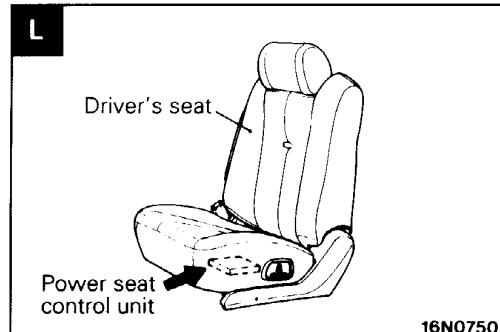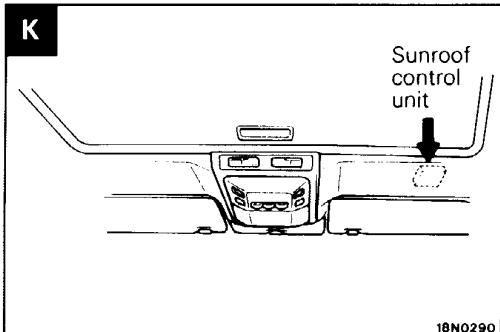

Luggage compartment

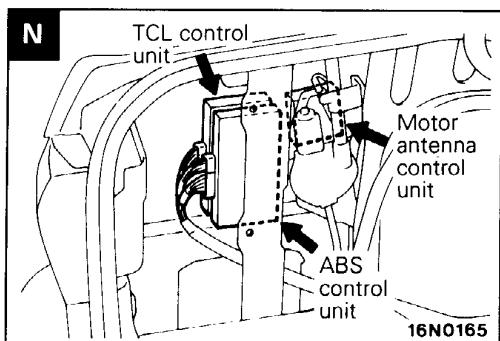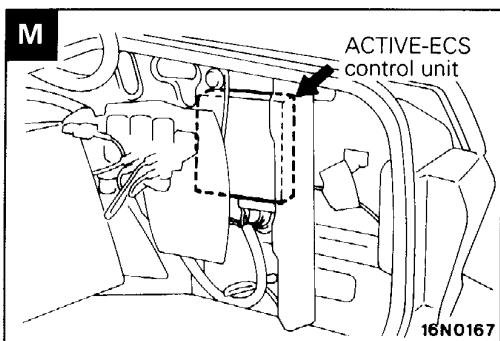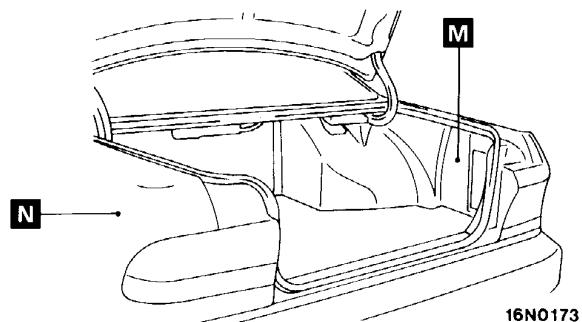

Floor console

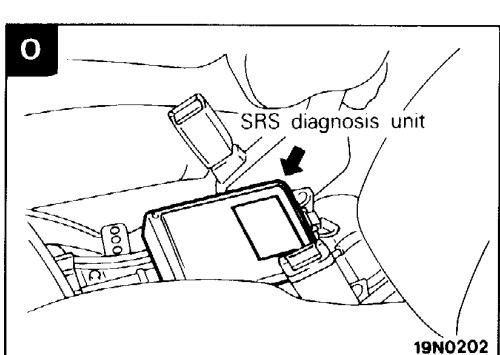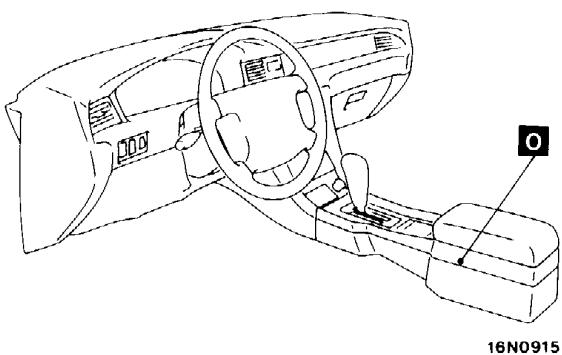


SENSOR**MPI-SOHC**


Name	Symbol	Name	Symbol
ABS speed sensor (Front)	P	Fin thermo sensor	M
ABS speed sensor (Rear)	R	Interior temperature sensor	O
Air flow sensor (with built-in barometric pressure sensor, intake air temperature sensor)	A	Oxygen sensor	Q
Air inlet sensor	L	Photo sensor	K
A/T fluid temperature sensor <A/T>	H	Thermo sensor (for cooling fan control)	G
Crank angle sensor and top dead center sensor	C	Thermostat	E
Detonation sensor	D	Throttle position sensor	B
Engine coolant temperature sensor (for engine control)	I	Indiction control valve position sensor	C
Engine coolant temperature switch (for A/C compressor control)	I	Vehicle speed sensor (Reed switch)	J
Engine oil level sensor	F	Water temperature sensor	N
Front impact sensor	R.H. L.H.	S T	

NOTE


The "Name" column is arranged in alphabetical order.

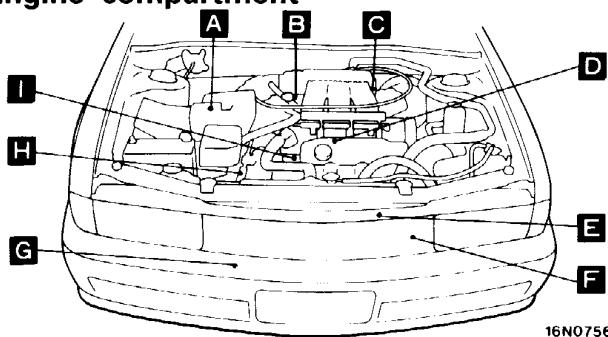Engine compartment


16N0756

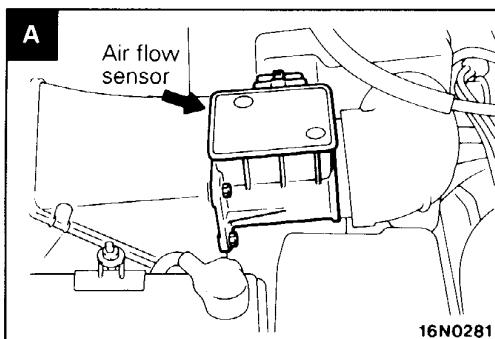


16N0281

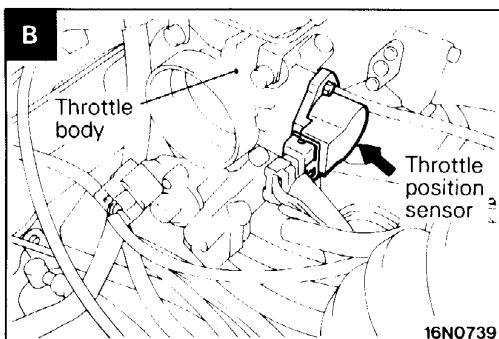


16N0739

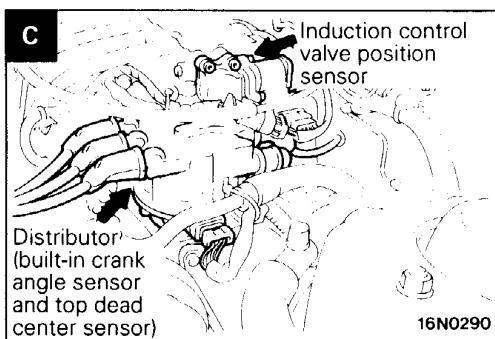


16N0290

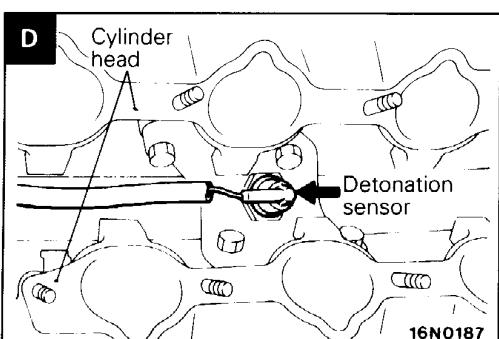


16N0187

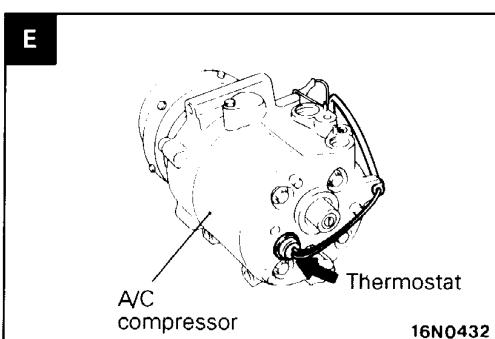


16N0432

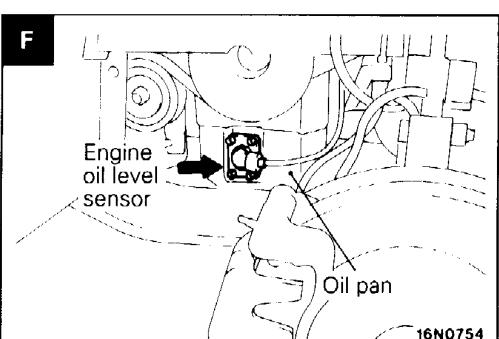


16N0754

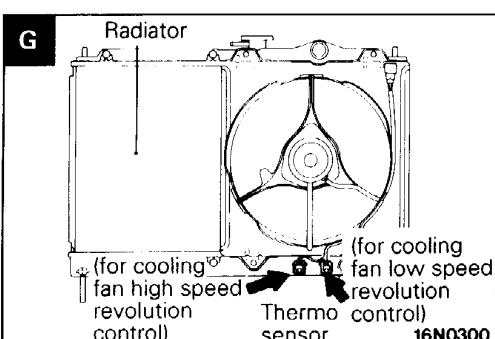

16N0300

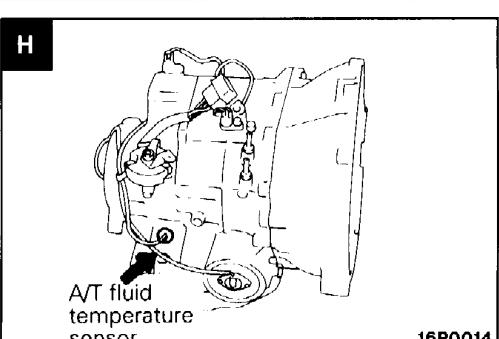

16P0014

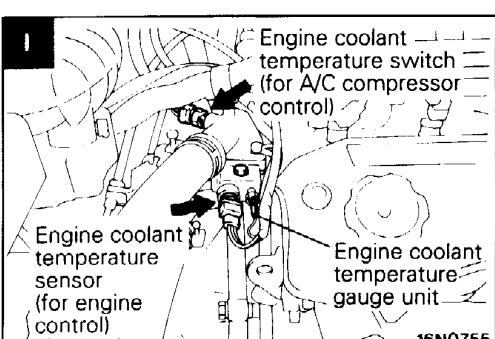

16N0755


DIODE <Vehicles built from April 1991>

Name		Symbol	Name		Symbol
Diode (for ABS circuit)	L.H. drive vehicles	A	Diode (for headlamp circuit)* ¹		A
	R.H. drive vehicles	B	Diode (for idle-up circuit)		D
Diode (for ACTIVE-ECS circuit)		A	Diode (for luggage compartment lamp circuit)* ³		D
Diode (for ACTIVE-ECS circuit)		D	Diode (for power seat circuit)	L.H. drive vehicles	D
Diode (for central door locking circuit)* ³	L.H. drive vehicles	D		R.H. drive vehicles	A
	R.H. drive vehicles	A	Diode (for rear fog lamp circuit)* ¹ <Vehicles built from November 1991>		C
Diode (for dim-dip lamp circuit)* ²		C	Diode (for rear fog lamp circuit)* ² <Vehicles built from November 1991>		D
Diode (for dim-dip lamp circuit)* ²		D	Diode (for starting circuit)* ³	L.H. drive vehicles	D
Diode (for 4WS fluid level warning lamp circuit)	L.H. drive vehicles	D		R.H. drive vehicles	A
	R.H. drive vehicles	C			

NOTE

(1) *¹: L.H. drive vehicles.(2) *²: R.H. drive vehicles.(3) *³: Vehicles with theft-alarm system.

(4) The "Name" column is arranged in alphabetical order.

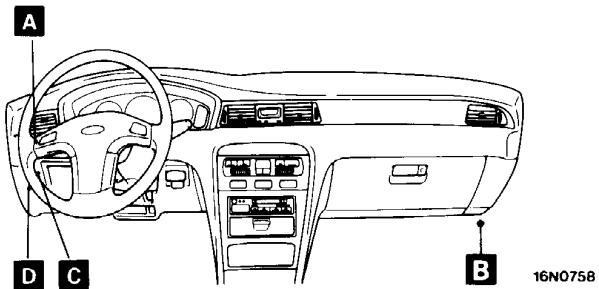Interior

NOTE

For R.H. drive vehicles, part installation positions are symmetrical.

