

2 WIRING HARNESS CONFIGURATION DIAGRAMS

1 OVERALL WIRING DIAGRAM

1-1 L.H. drive vehicles	2- 2
1-2 R.H. drive vehicles	2- 3

2 ENGINE COMPARTMENT A

2-1 L.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS>	2- 4
2-2 R.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS>	2- 6
2-3 L.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS>	2- 8
2-4 R.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS>	2-10
2-5 L.H. drive vehicles with MPI-DOHC engine	2-12
2-6 R.H. drive vehicles with MPI-DOHC engine.....	2-14

3 ENGINE AND TRANSMISSION B

3-1 MPI-SOHC engine	2-16
3-2 MPI-DOHC engine	2-18

4 DASH PANEL C

4-1 L.H. drive vehicles	2-20
4-2 R.H. drive vehicles	2-24

5 INSTRUMENT PANEL D

5-1 L.H. drive vehicles	2-28
5-2 R.H. drive vehicles	2-29

6 INTERIOR E

6-1 L.H. drive vehicles	2-30
6-2 R.H. drive vehicles	2-32

7 DOOR F

7-1 L.H. drive vehicles	2-34
7-2 R.H. drive vehicles	2-35

8 LUGGAGE COMPARTMENT G

8-1 L.H. drive vehicles	2-36
8-2 R.H. drive vehicles	2-37

9 TRUNK LID H

9.....	2-38
--------	------

10 UNDER REAR FLOOR J


10.....	2-39
---------	------

2-2 WIRING HARNESS CONFIGURATION DIAGRAMS – Overall Wiring Diagram


1 OVERALL WIRING DIAGRAM

1-1 L.H. drive vehicles

<Vehicles without ACTIVE-ECS>

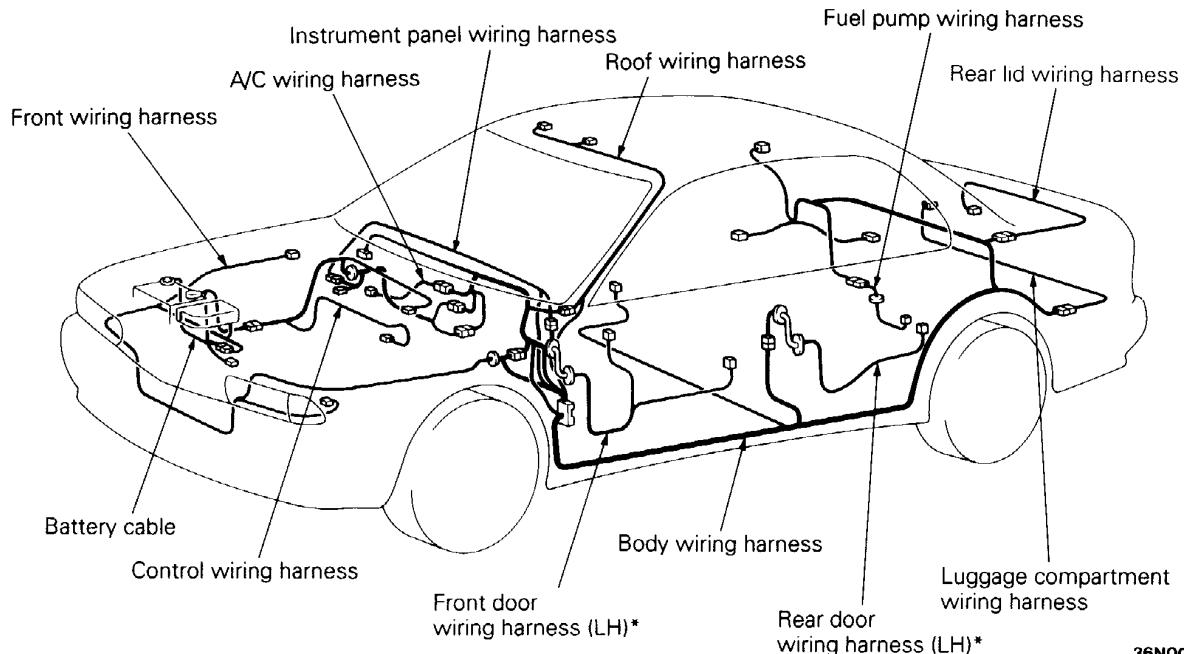

<Vehicles with ACTIVE-ECS>

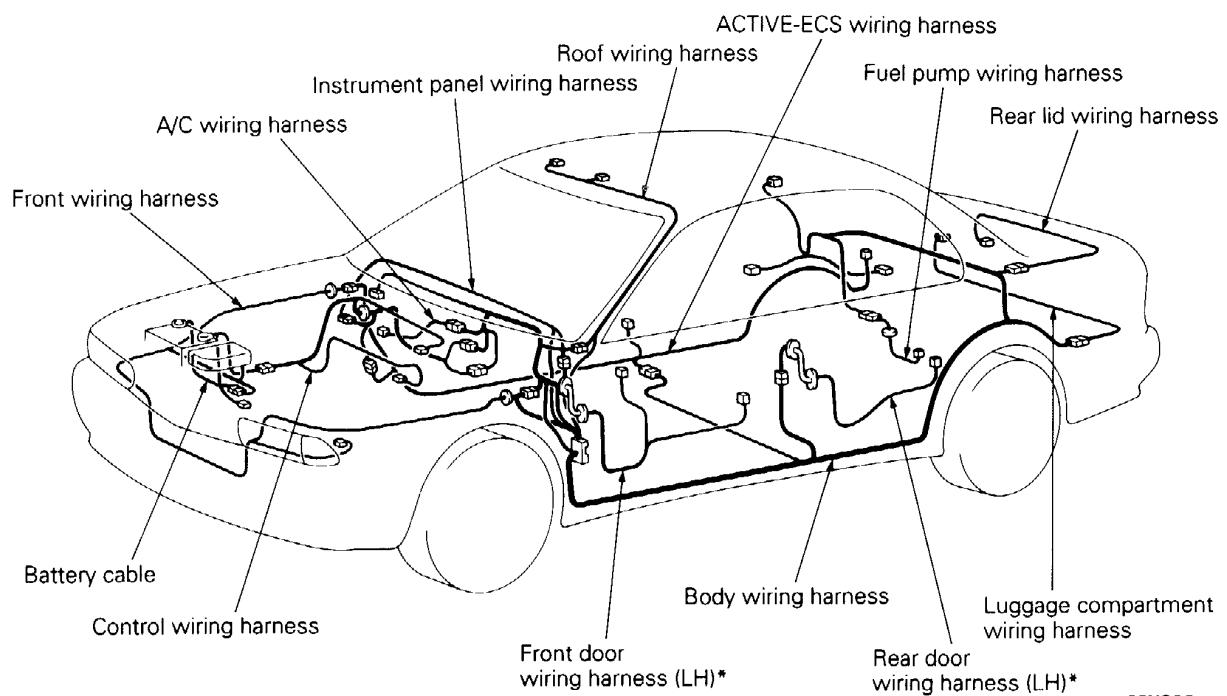


NOTE


- (1) These illustrations show only major wiring harnesses.
- (2) *: also equipped at the right side.

1-2 R.H. drive vehicles

<Vehicles without ABS>

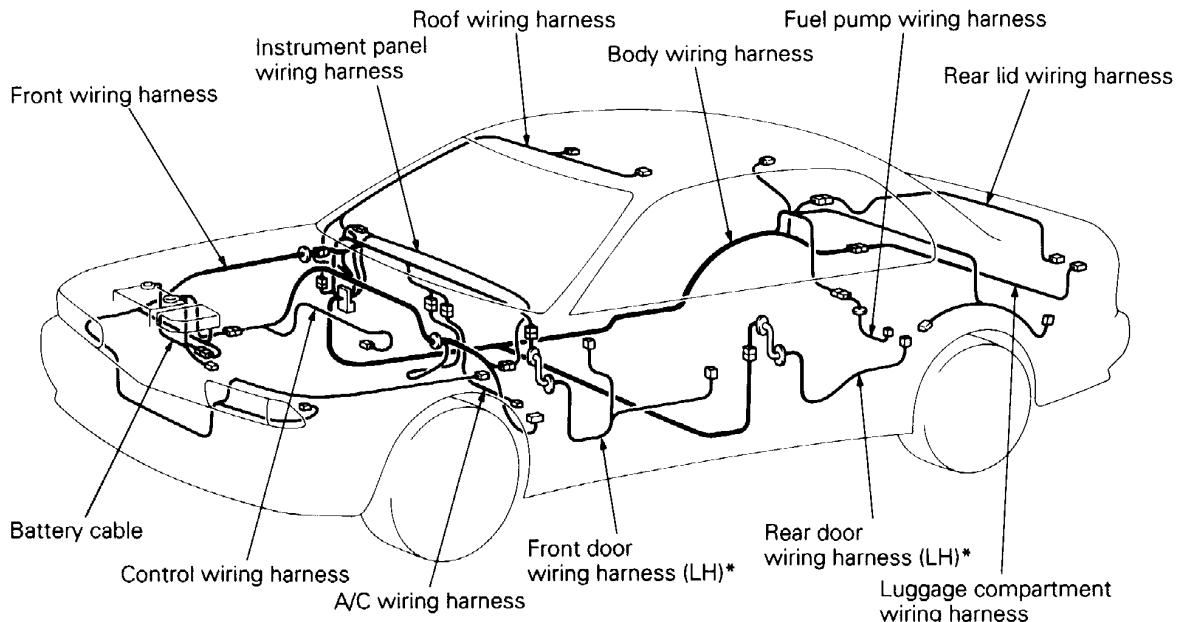

<Vehicles with ABS>

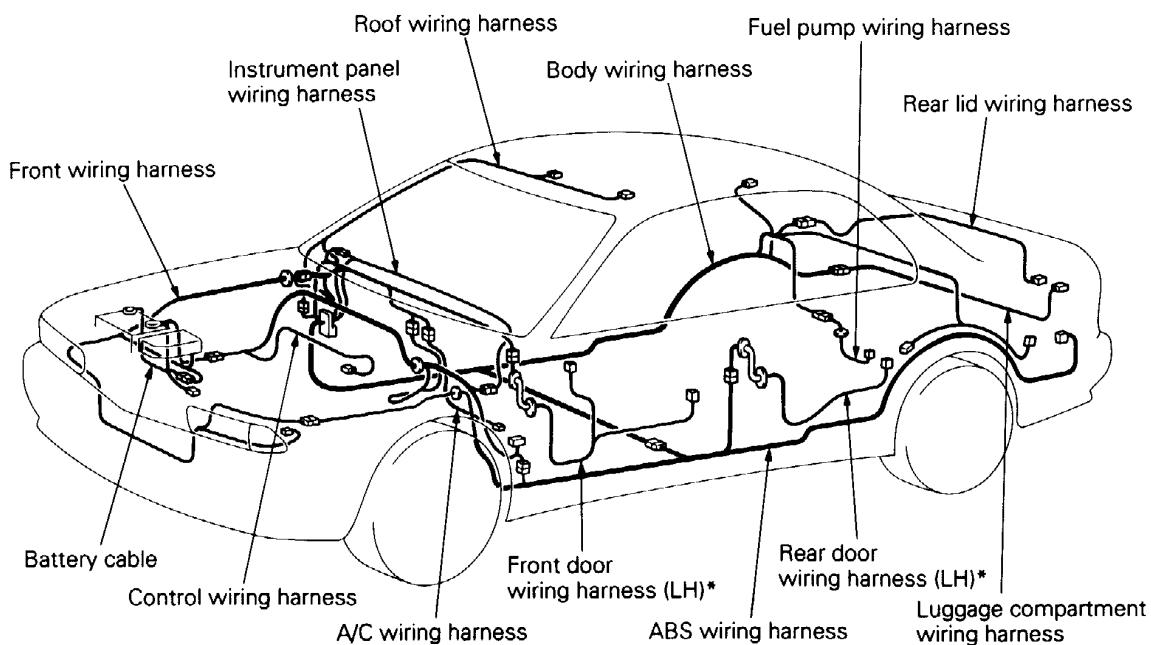


36N0048

NOTE

- (1) These illustrations show only major wiring harnesses.
- (2) *: also equipped at the right side.

2 ENGINE COMPARTMENT

2-1 L.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS>

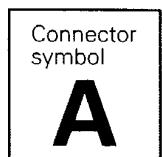


A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-12X
A-13X
A-14X


Refer to CENTRALIZED JUNCTION

A-15 Side turn signal lamp (RH)
A-16 –
A-17 Pulse generator <AT>
A-18 Kickdown servo switch <AT>
A-19 AT fluid temperature sensor <AT>
A-20 Windshield wiper motor
A-21 Brake fluid level sensor
A-22 Air flow sensor
A-23 –
A-24 –
A-25 Purge control solenoid valve
A-26 to –
A-28 –
A-29 Ignition timing adjustment connector
A-30 –
A-31 Fuel pump check connector
A-32 –
A-33 Side turn signal lamp (LH)
A-34 to –
A-39 –
A-40 No connection
A-41 Front turn signal lamp (LH)
A-42 to –
A-45 –

A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-12X
A-13X
A-14X

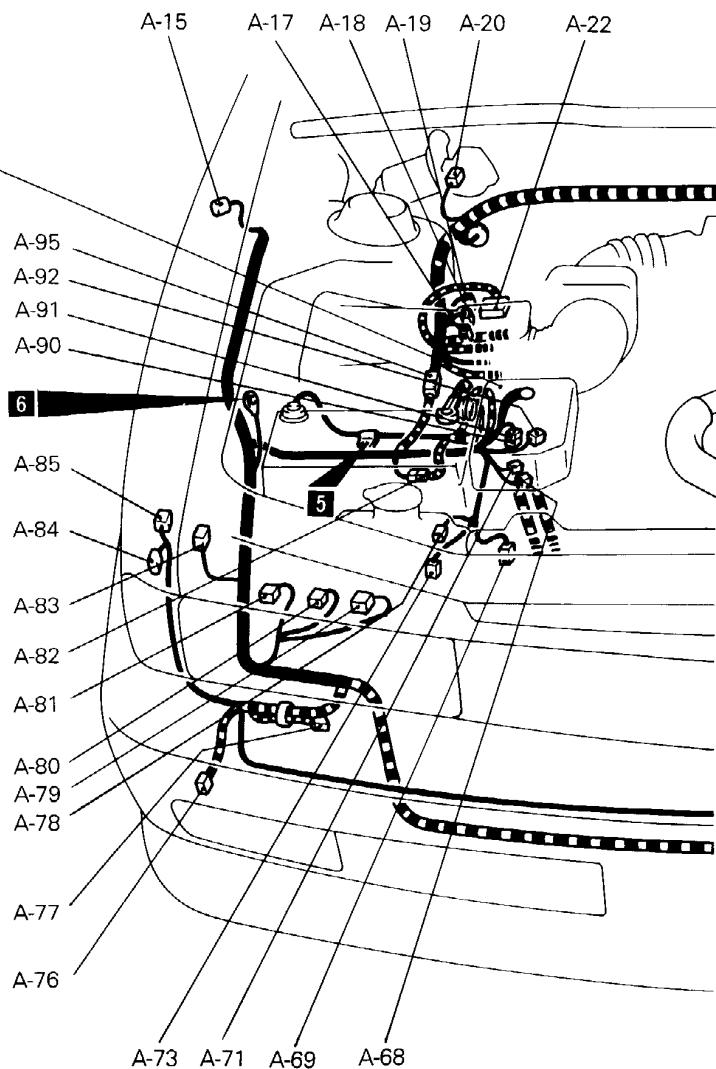

A-46 Headlamp leveling unit (LH)
A-47 Headlamp (LH)
A-48 –
A-49 No connection
A-50 Front fog lamp (LH)
A-51 Dual pressure switch <AC>
A-52 –
A-53 Headlamp washer motor
A-54 A/C compressor
A-55 Condenser fan motor
A-56 Resistor
A-57 to Horn
A-60 –
A-61 to –
A-67 –

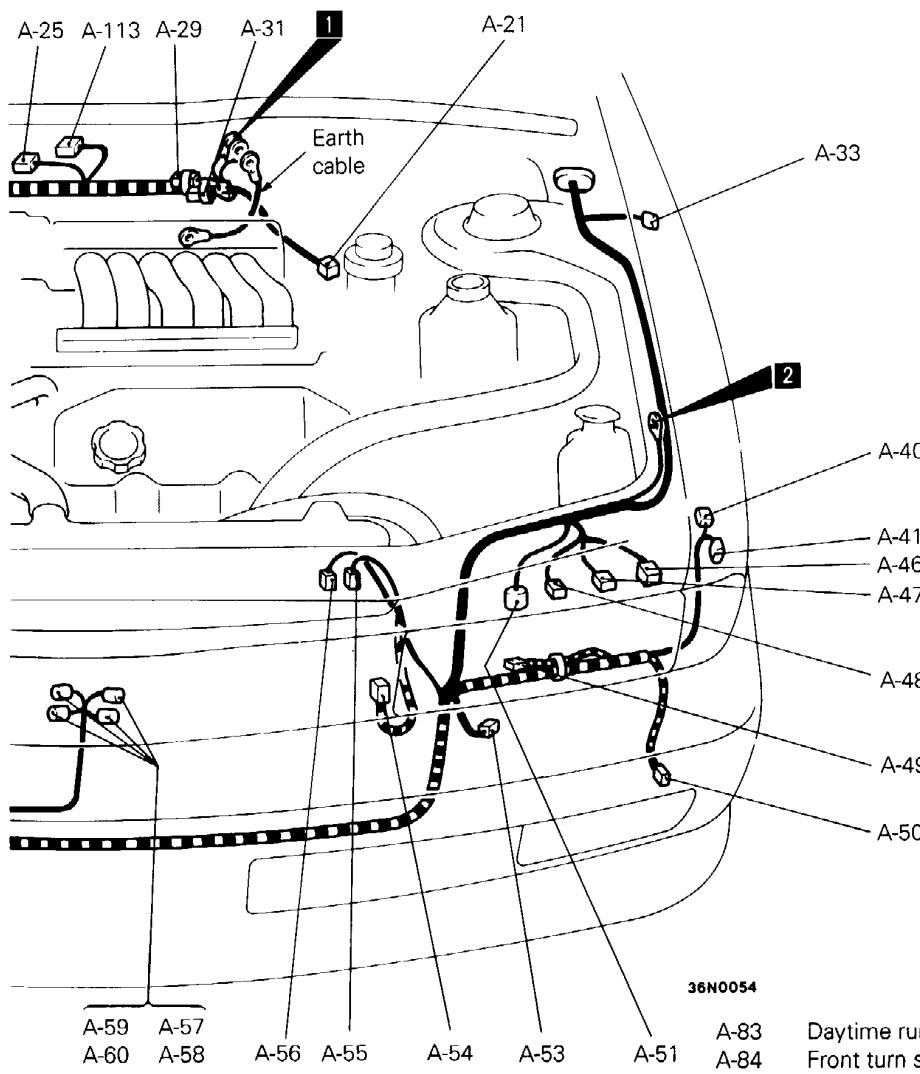


36N0054

A-68	Daytime running lamp control unit or jumper connector	A-83	Daytime running lamp relay 1
A-69	Radiator fan motor	A-84	Front turn signal lamp (RH)
A-70	–	A-85	No connection
A-71	Daytime running lamp relay 2	A-86	–
A-72	–	A-87	–
A-73	Windshield washer motor	A-88	–
A-74	–	A-89	Joint connector
A-75	–	A-90	(for rear fog lamp circuit)
A-76	Front fog lamp (RH)	A-91	–
A-77	No connection	A-92	–
A-78	Windshield washer fluid level sensor	A-93	–
A-79	–	A-94	–
A-80	Headlamp (RH)	A-95	Front wiring harness and control wiring harness combination
A-81	Headlamp leveling unit (RH)	A-96	–
A-82	Front wiring harness and battery cable combination	A-97	–
		A-112	–
		A-113	No connection

Remark
For details concerning the earth point (example: 1), refer to P.3-20.

2-6 WIRING HARNESS CONFIGURATION DIAGRAMS – Engine Compartment


2-2 R.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS>

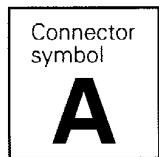


A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-12X
A-13X
A-14X

Refer to CENTRALIZED JUNCTION

- A-15 Side turn signal lamp (RH)
- A-16 –
- A-17 Pulse generator <A/T>
- A-18 Kickdown servo switch <A/T>
- A-19 A/T fluid temperature sensor <A/T>
- A-20 Windshield wiper motor
- A-21 Brake fluid level sensor
- A-22 Air flow sensor
- A-23 –
- A-24 –
- A-25 Purge control solenoid valve
- A-26 to –
- A-28 { –
- A-29 Ignition timing adjustment connector
- A-30 –
- A-31 Fuel pump check connector
- A-32 –
- A-33 Side turn signal lamp (LH)
- A-34 to –
- A-39 { –
- A-40 No connection
- A-41 Front turn signal lamp (LH)
- A-42 to –
- A-45 { –

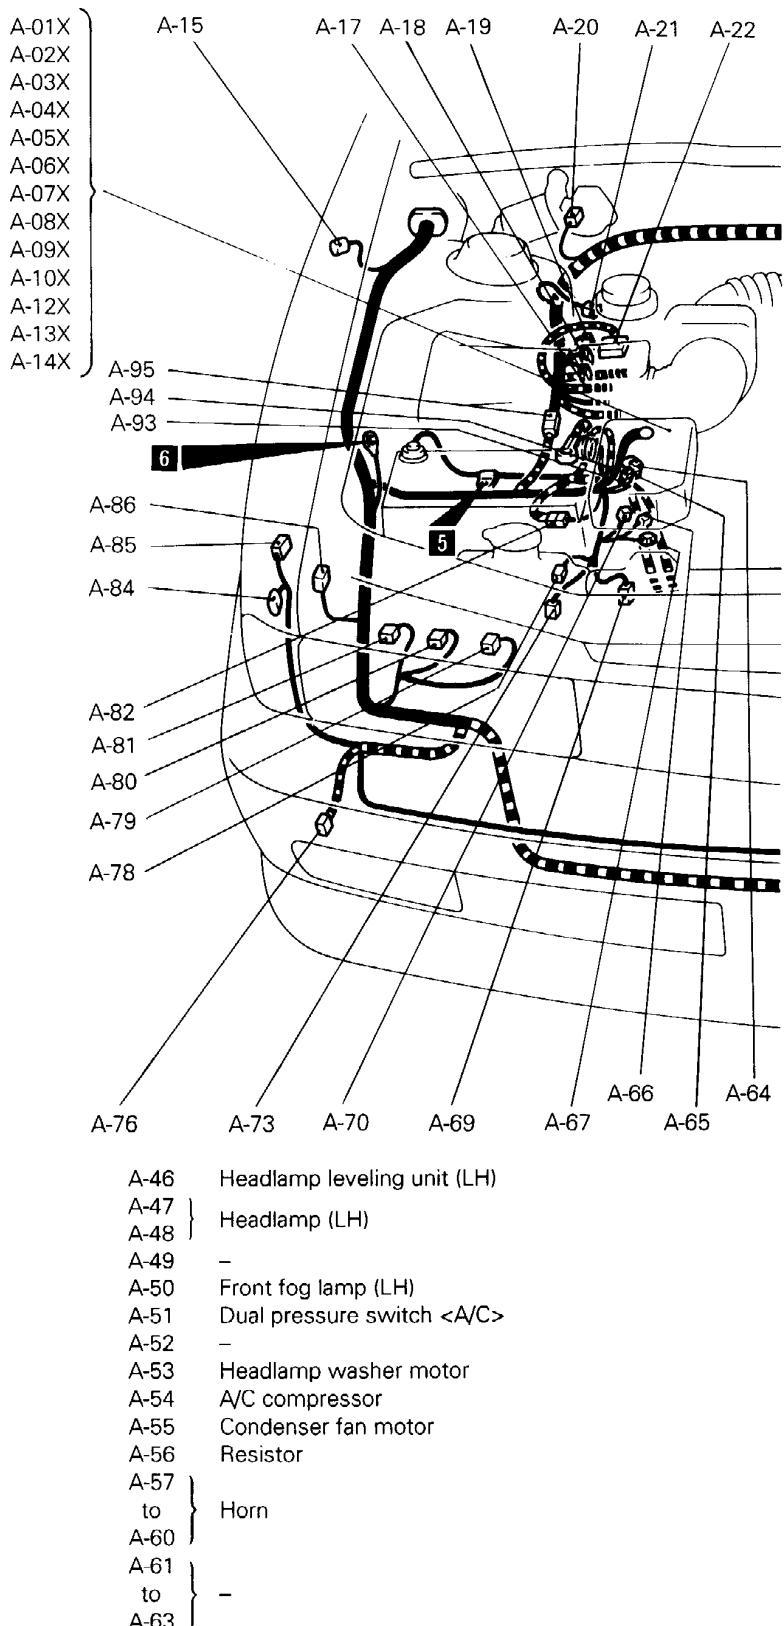


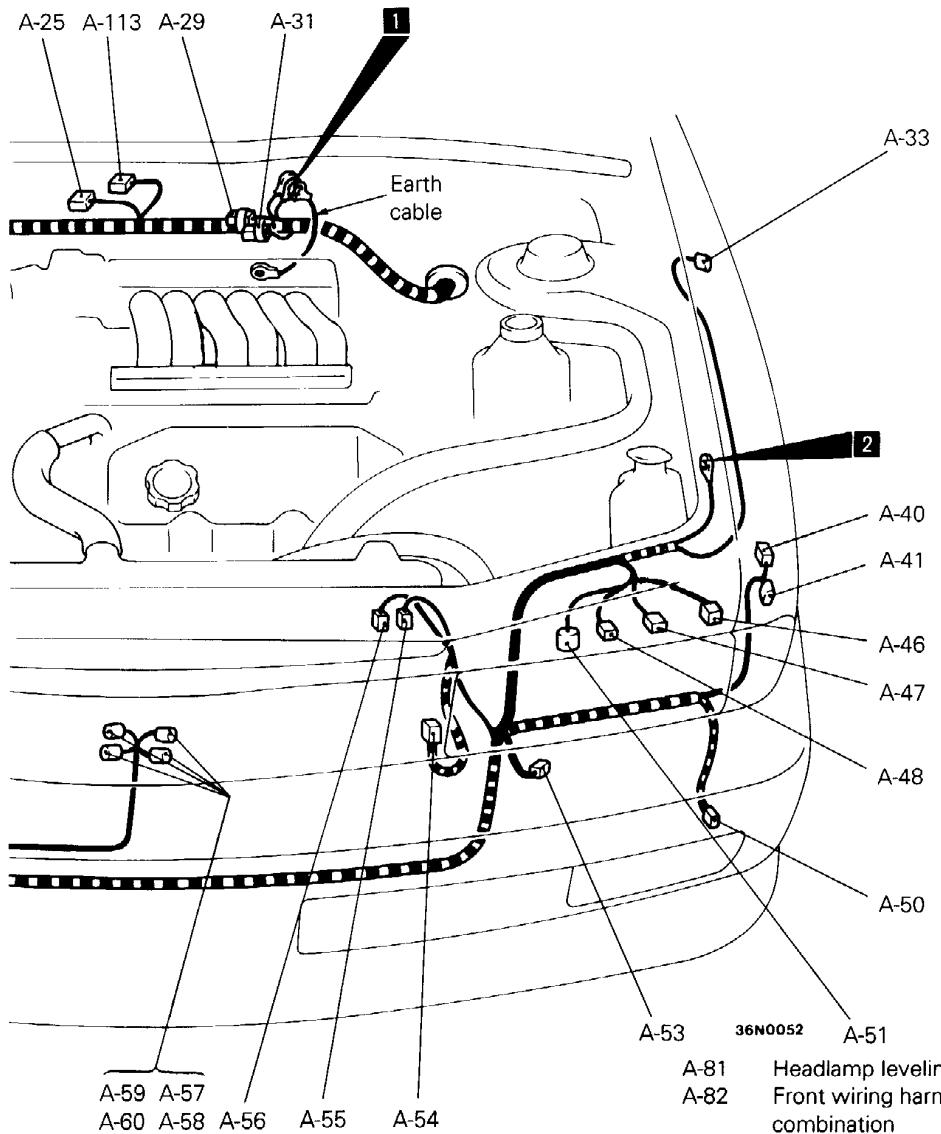

- A-64 | Joint connector
- A-65 | (for dim-dip lamp circuit)
- A-66 Dim-dip lamp relay 3
- A-67 Dim-dip lamp relay 2
- A-68 –
- A-69 Radiator fan motor
- A-70 Resistor
- A-71 –
- A-72 –
- A-73 Windshield washer motor
- A-74 –
- A-75 –
- A-76 Front fog lamp (RH)
- A-77 –
- A-78 Windshield washer fluid level sensor
- A-79 | Headlamp (RH)
- A-80 |

- A-81 Headlamp leveling unit (RH)
- A-82 Front wiring harness and battery cable combination
-
- A-83 –
- A-84 Front turn signal lamp (RH)
- A-85 No connection
- A-86 Dim-dip lamp relay 1
- A-87 } –
- A-88 to A-92 }
- A-89 | Joint connector
- A-90 | (for rear fog lamp circuit)
- A-91 | Front wiring harness and control wiring harness combination
- A-92 } –
- A-93 to A-112 }
- A-94 | No connection
- Remark
- For details concerning the earth point (example: 1), refer to P.3-20.


2-3 L.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS>

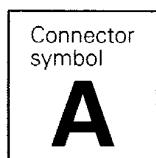


A-01X
 A-02X
 A-03X
 A-04X
 A-05X
 A-06X
 A-07X
 A-08X
 A-09X
 A-10X
 A-11X
 A-12X
 A-13X
 A-14X

Refer to CENTRALIZED JUNCTION

A-15 Side turn signal lamp (RH)
 A-16 –
 A-17 Pulse generator <AT>
 A-18 Kickdown servo switch <AT>
 A-19 A/T fluid temperature sensor <AT>
 A-20 Windshield wiper motor
 A-21 Brake fluid level sensor
 A-22 Air flow sensor
 A-23 –
 A-24 –
 A-25 Purge control solenoid valve
 A-26 to A-28 –
 A-29 Ignition timing adjustment connector
 A-30 –
 A-31 Fuel pump check connector
 A-32 –
 A-33 Side turn signal lamp (LH)
 A-34 ABS speed sensor (Front: LH)
 A-35 –
 A-36 ABS valve relay
 A-37 ABS motor relay
 A-38 –
 A-39 –
 A-40 No connection
 A-41 Front turn signal lamp (LH)
 A-42 to A-44 ABS hydraulic unit
 A-45 –
 A-46 Headlamp leveling unit (LH)
 A-47 Headlamp (LH)
 A-48 –
 A-49 No connection
 A-50 Front fog lamp (LH)

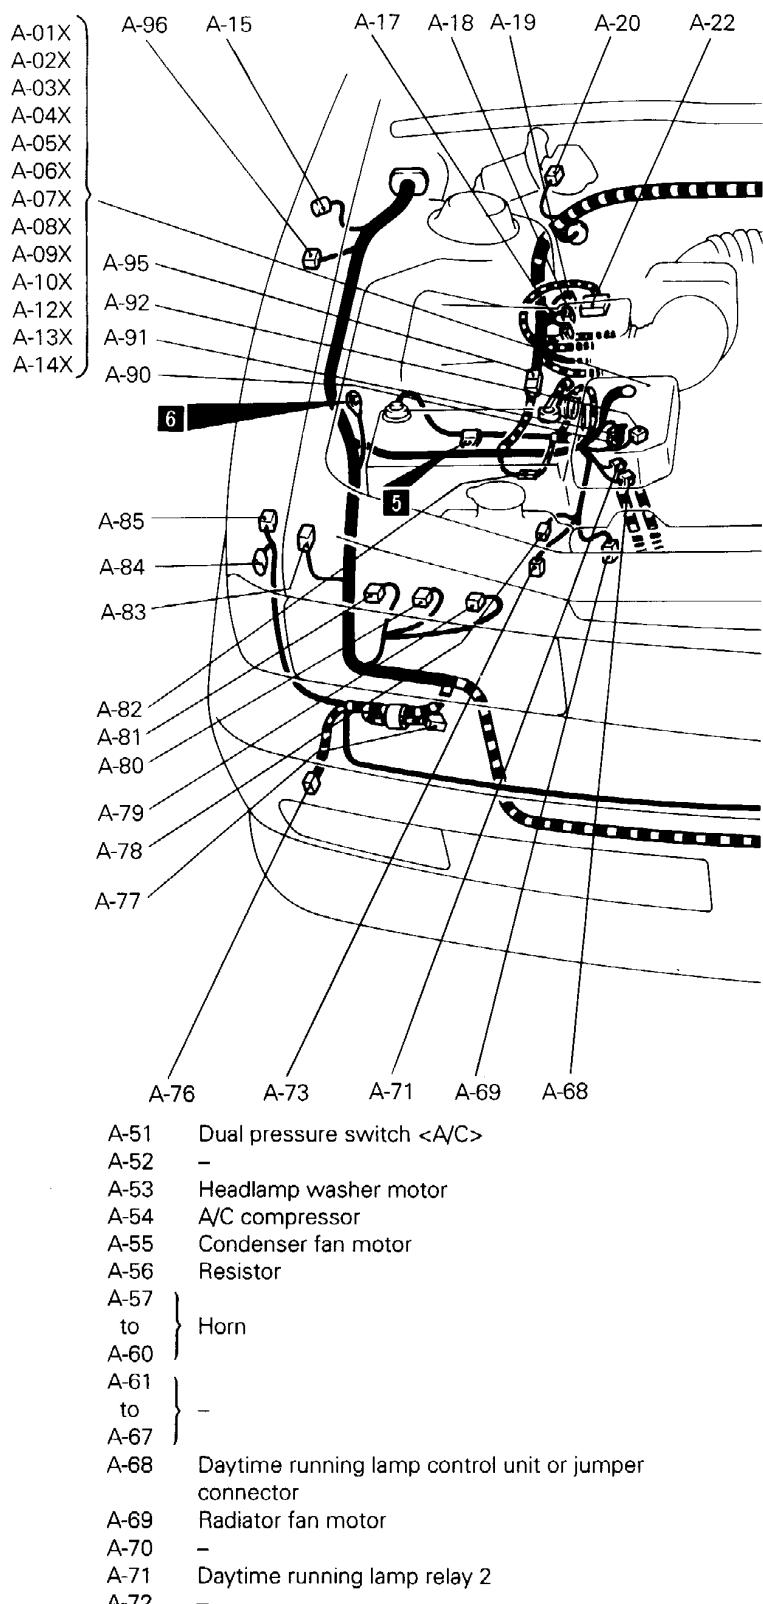

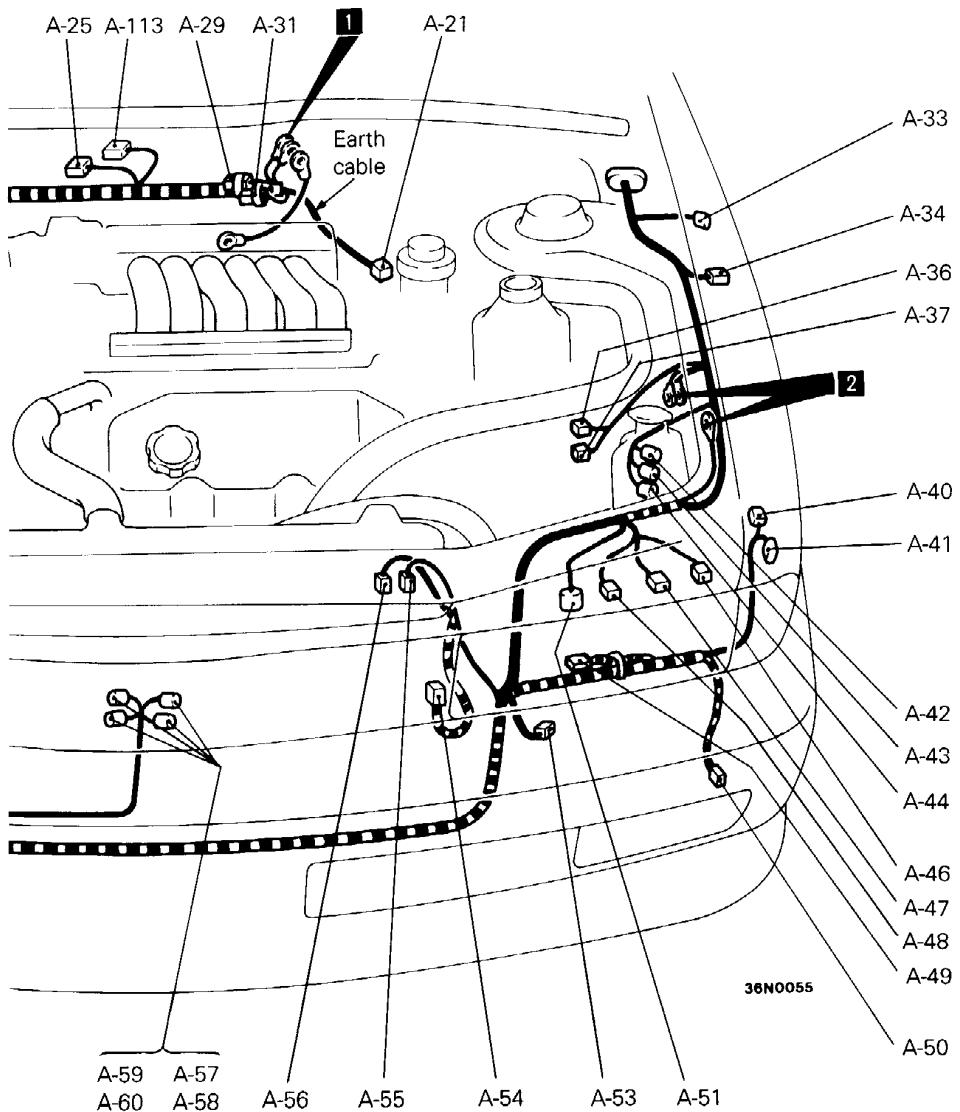


A-73	Windshield washer motor	A-90	Joint connector
A-74	–	A-91	{ (for rear fog lamp circuit)
A-75	–	A-92	
A-76	Front fog lamp (RH)	A-93	–
A-77	No connection	A-94	–
A-78	Windshield washer fluid level sensor	A-95	Front wiring harness and control wiring harness combination
A-79	Headlamp (RH)	A-96	ABS speed sensor (Front: RH)
A-80	Headlamp leveling unit (RH)	A-97	–
A-81	Front wiring harness and battery cable combination	A-112	–
A-82	Daytime running lamp relay 1	A-113	No connection
A-83	Front turn signal lamp (RH)		
A-84	No connection		
A-85	–		
A-86	–		
A-89	–		

Remark

For details concerning the earth point (example: 1), refer to P.3-20.

2-10 WIRING HARNESS CONFIGURATION DIAGRAMS – Engine Compartment

2-4 R.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS>

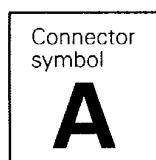


A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-12X
A-13X
A-14X

Refer to CENTRALIZED JUNCTION

- A-15 Side turn signal lamp (RH)
 A-16 –
 A-17 Pulse generator <AT>
 A-18 Kickdown servo switch <AT>
 A-19 AT fluid temperature sensor <AT>
 A-20 Windshield wiper motor
 A-21 Brake fluid level sensor
 A-22 Air flow sensor
 A-23 –
 A-24 –
 A-25 Purge control solenoid valve
 A-26 to A-28 –
 A-29 Ignition timing adjustment connector
 A-30 –
 A-31 Fuel pump check connector
 A-32 –
 A-33 Side turn signal lamp (LH)
 A-34 ABS speed sensor (Front: LH)
 A-35 –
 A-36 ABS valve relay
 A-37 ABS motor relay
 A-38 Front wiring harness and ABS wiring harness combination
 A-39 –
 A-40 No connection
 A-41 Front turn signal lamp (LH)
 A-42 to A-44 ABS hydraulic unit
 A-45 –
 A-46 Headlamp leveling unit (LH)
 A-47 Headlamp (LH)
 A-48 –
 A-49 –
 A-50 Front fog lamp (LH)

A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-12X
A-13X
A-14X


- A-15
A-17
A-18
A-19
A-20
A-21
A-22
A-96
A-95
A-94
A-93
6
A-86
A-85
A-84
A-82
A-81
A-80
A-79
A-78
A-76
A-73
A-70
A-69
A-67
A-66
A-65
A-64
A-51 Dual pressure switch <AC>
 A-52 –
 A-53 Headlamp washer motor
 A-54 AC compressor
 A-55 Condenser fan motor
 A-56 Resistor
 A-57 to A-60 Horn
 A-61 to A-63 –
 A-64 Joint connector (for dim-dip lamp circuit)
 A-65 Dim-dip lamp relay 3
 A-66 Dim-dip lamp relay 2
 A-67 Dim-dip lamp relay 2

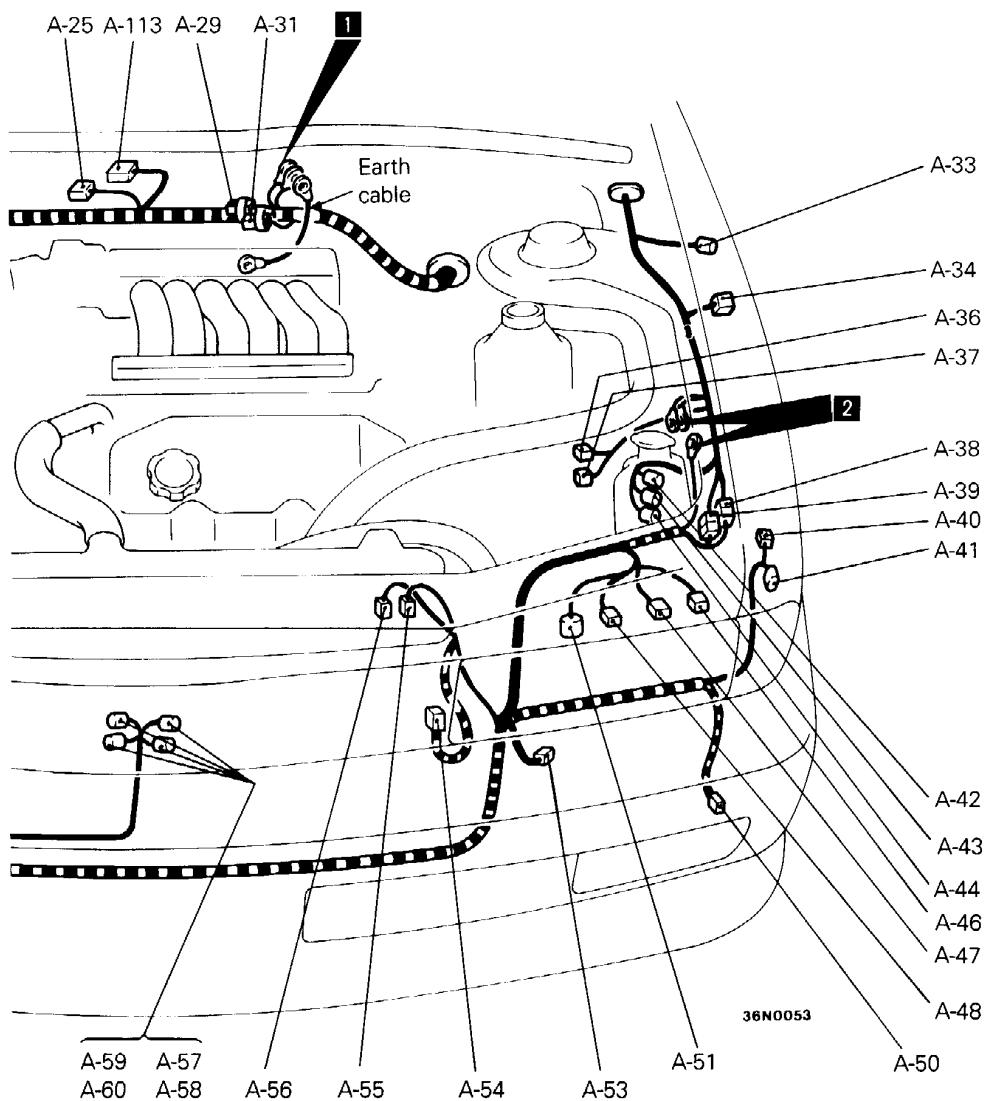

- | | |
|------|--|
| A-68 | - |
| A-69 | Radiator fan motor |
| A-70 | Resistor |
| A-71 | - |
| A-72 | - |
| A-73 | Windshield washer motor |
| A-74 | - |
| A-75 | - |
| A-76 | Front fog lamp (RH) |
| A-77 | - |
| A-78 | Windshield washer fluid level sensor |
| A-79 | Headlamp (RH) |
| A-80 | Headlamp leveling unit (RH) |
| A-81 | Front wiring harness and battery cable combination |
| A-82 | - |
| A-83 | - |

- | | | |
|-------|---|---|
| A-84 | Front turn signal lamp (RH) | |
| A-85 | No connection | |
| A-86 | Dim-dip lamp relay 1 | |
| A-87 | to
A-92 | - |
| A-88 | | |
| A-89 | Joint connector
(for rear fog lamp circuit) | |
| A-90 | | |
| A-91 | Front wiring harness and control wiring harness combination | |
| A-92 | | |
| A-93 | ABS speed sensor (Front: RH) | |
| A-94 | | |
| A-95 | | |
| A-96 | | |
| A-97 | to
A-112 | - |
| A-98 | | |
| A-99 | | |
| A-100 | | |
| A-101 | | |
| A-102 | | |
| A-103 | | |
| A-104 | | |
| A-105 | | |
| A-106 | | |
| A-107 | | |
| A-108 | | |
| A-109 | | |
| A-110 | | |
| A-111 | | |
| A-112 | | |
| A-113 | No connection | |
- Remark
For details concerning the earth point (example: 1), refer to P.3-20.

2-5 L.H. drive vehicles with MPI-DOHC engine

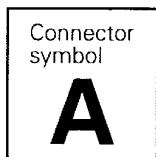


A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-11X
A-12X
A-13X
A-14X


Refer to CENTRALIZED JUNCTION

A-15 Side turn signal lamp (RH)
A-16 ACTIVE-ECS front actuator (RH)
A-17 Pulse generator <A/T>
A-18 Kickdown servo switch <A/T>
A-19 A/T fluid temperature sensor <A/T>
A-20 Windshield wiper motor
A-21 Brake fluid level sensor
A-22 Air flow sensor
A-23 ACTIVE-ECS front solenoid valve
A-24 Auto-cruise control actuator
A-25 Purge control solenoid valve
A-26 Ventilation solenoid valve <TCL>
A-27 Vacuum solenoid valve <TCL>
A-28 EPS solenoid valve
A-29 Ignition timing adjustment connector
A-30 Engine speed detection connector
A-31 Fuel pump check connector
A-32 ACTIVE-ECS front actuator (LH)
A-33 Side turn signal lamp (LH)
A-34 ABS speed sensor (Front: LH)
A-35 4WS fluid level sensor
A-36 ABS valve relay
A-37 ABS motor relay
A-38 -
A-39 -
A-40 No connection
A-41 Front turn signal lamp (LH)
A-42 to A-44 } ABS hydraulic unit



A-01X
A-02X
A-03X
A-04X
A-05X
A-06X
A-07X
A-08X
A-09X
A-10X
A-11X
A-12X
A-13X
A-14X

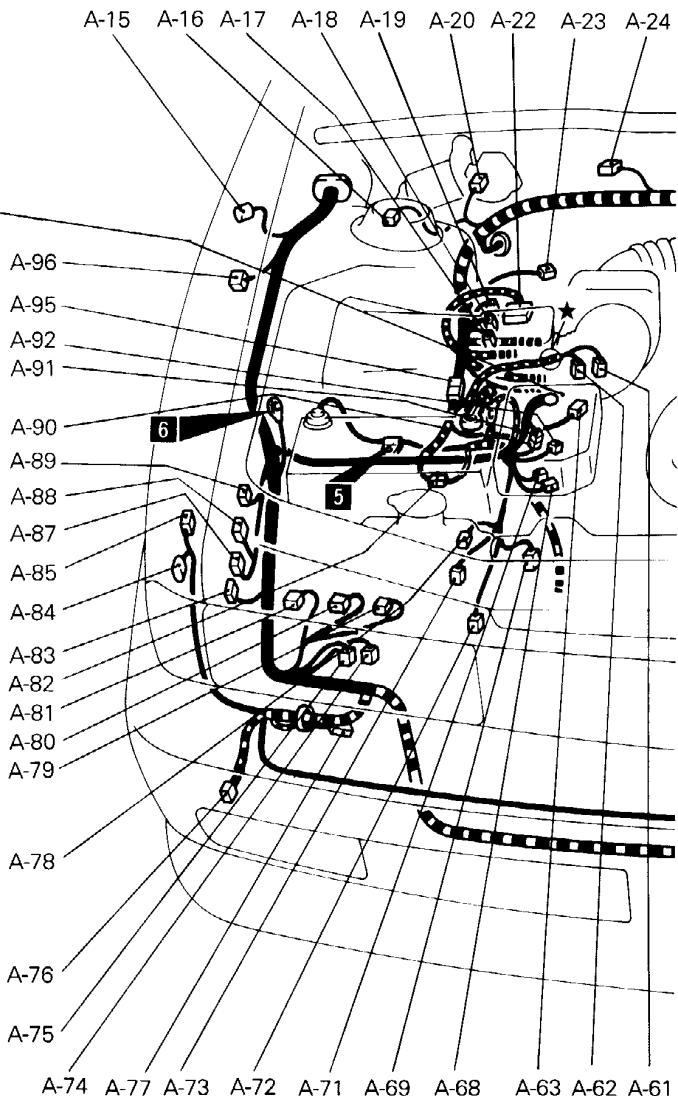


A-45 ABS hydraulic unit <TCL>
A-46 Headlamp leveling unit (LH)
A-47 } Headlamp (LH)
A-48 }
A-49 No connection
A-50 Front fog lamp (LH)
A-51 Dual pressure switch <A/C>
A-52 ACTIVE-ECS G sensor
A-53 Headlamp washer motor
A-54 -
A-55 Condenser fan motor
A-56 Resistor
A-57 to A-60 } Horn
A-61 ACTIVE-ECS compressor
A-62 ACTIVE-ECS exhaust solenoid valve
A-63 ACTIVE-ECS front height sensor

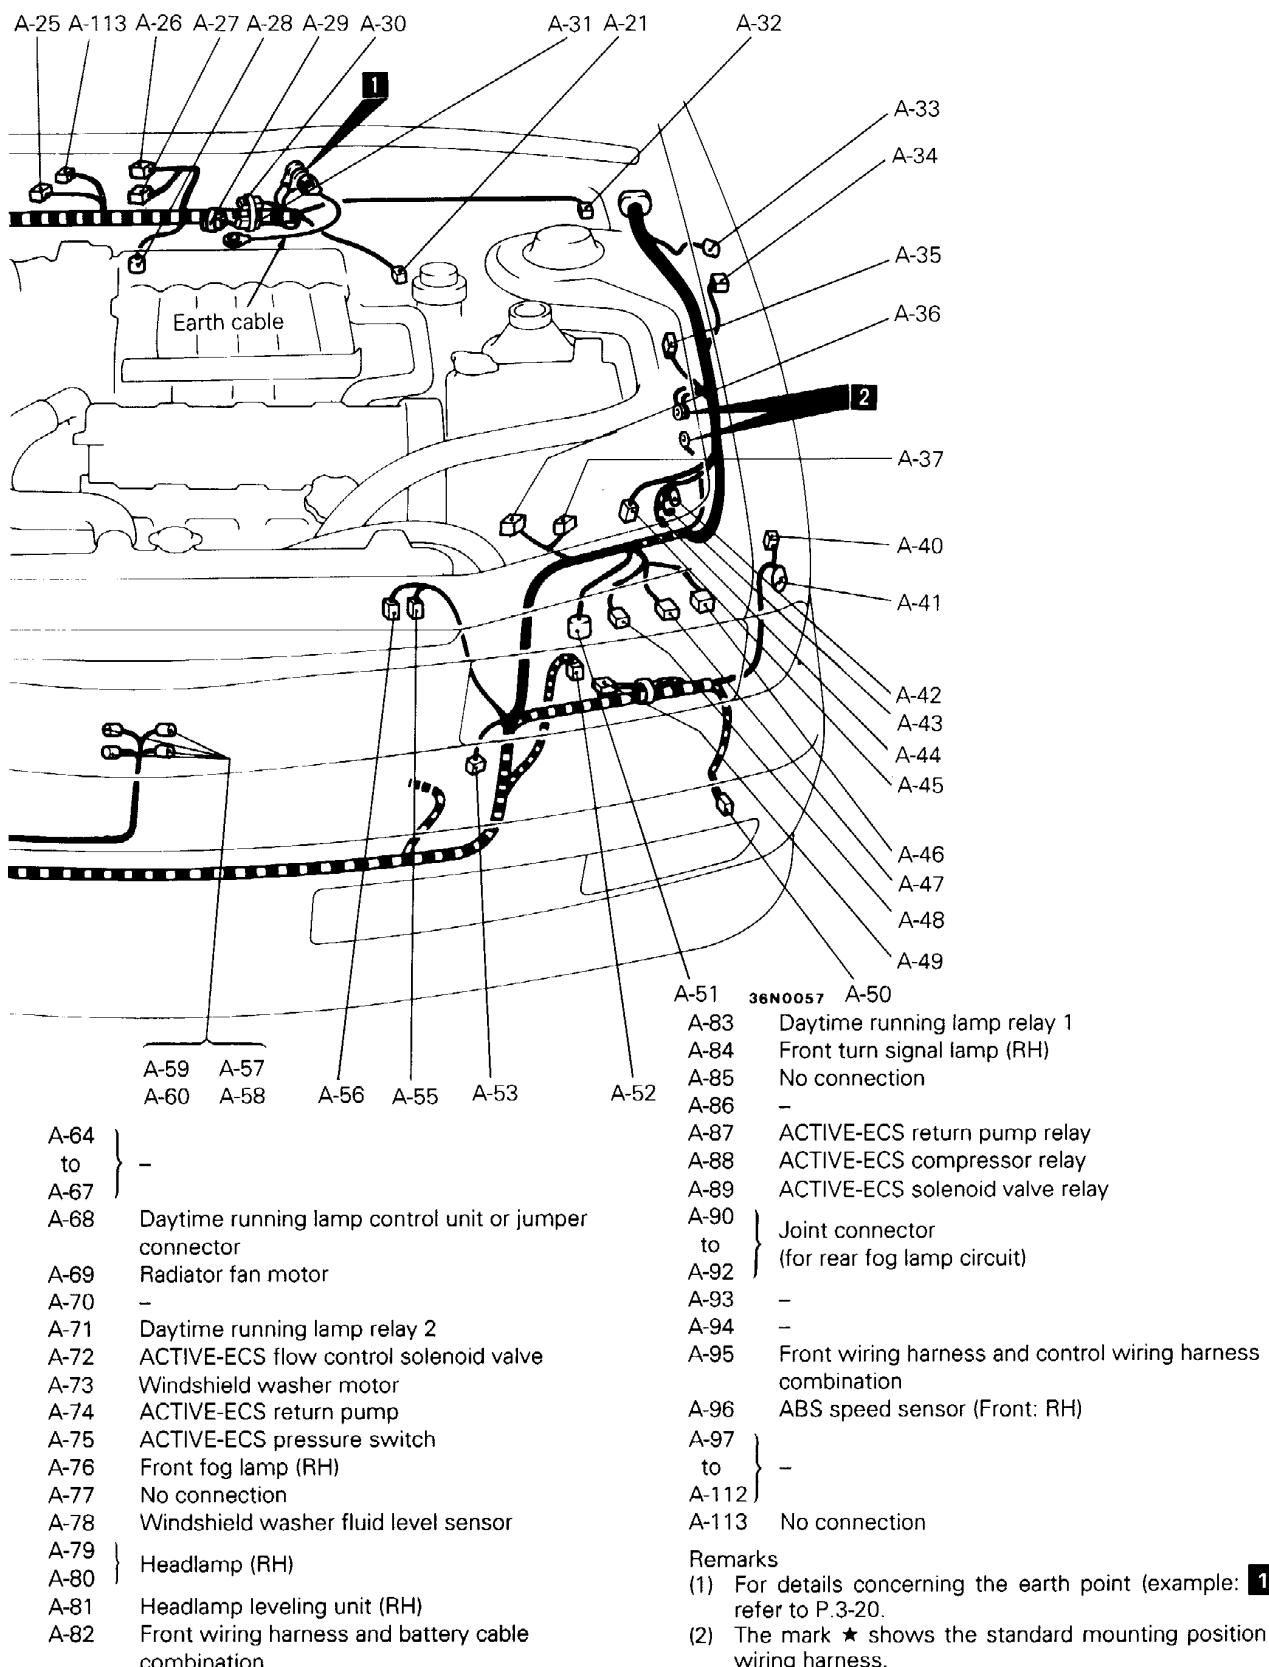

2-6 R.H. drive vehicles with MPI-DOHC engine

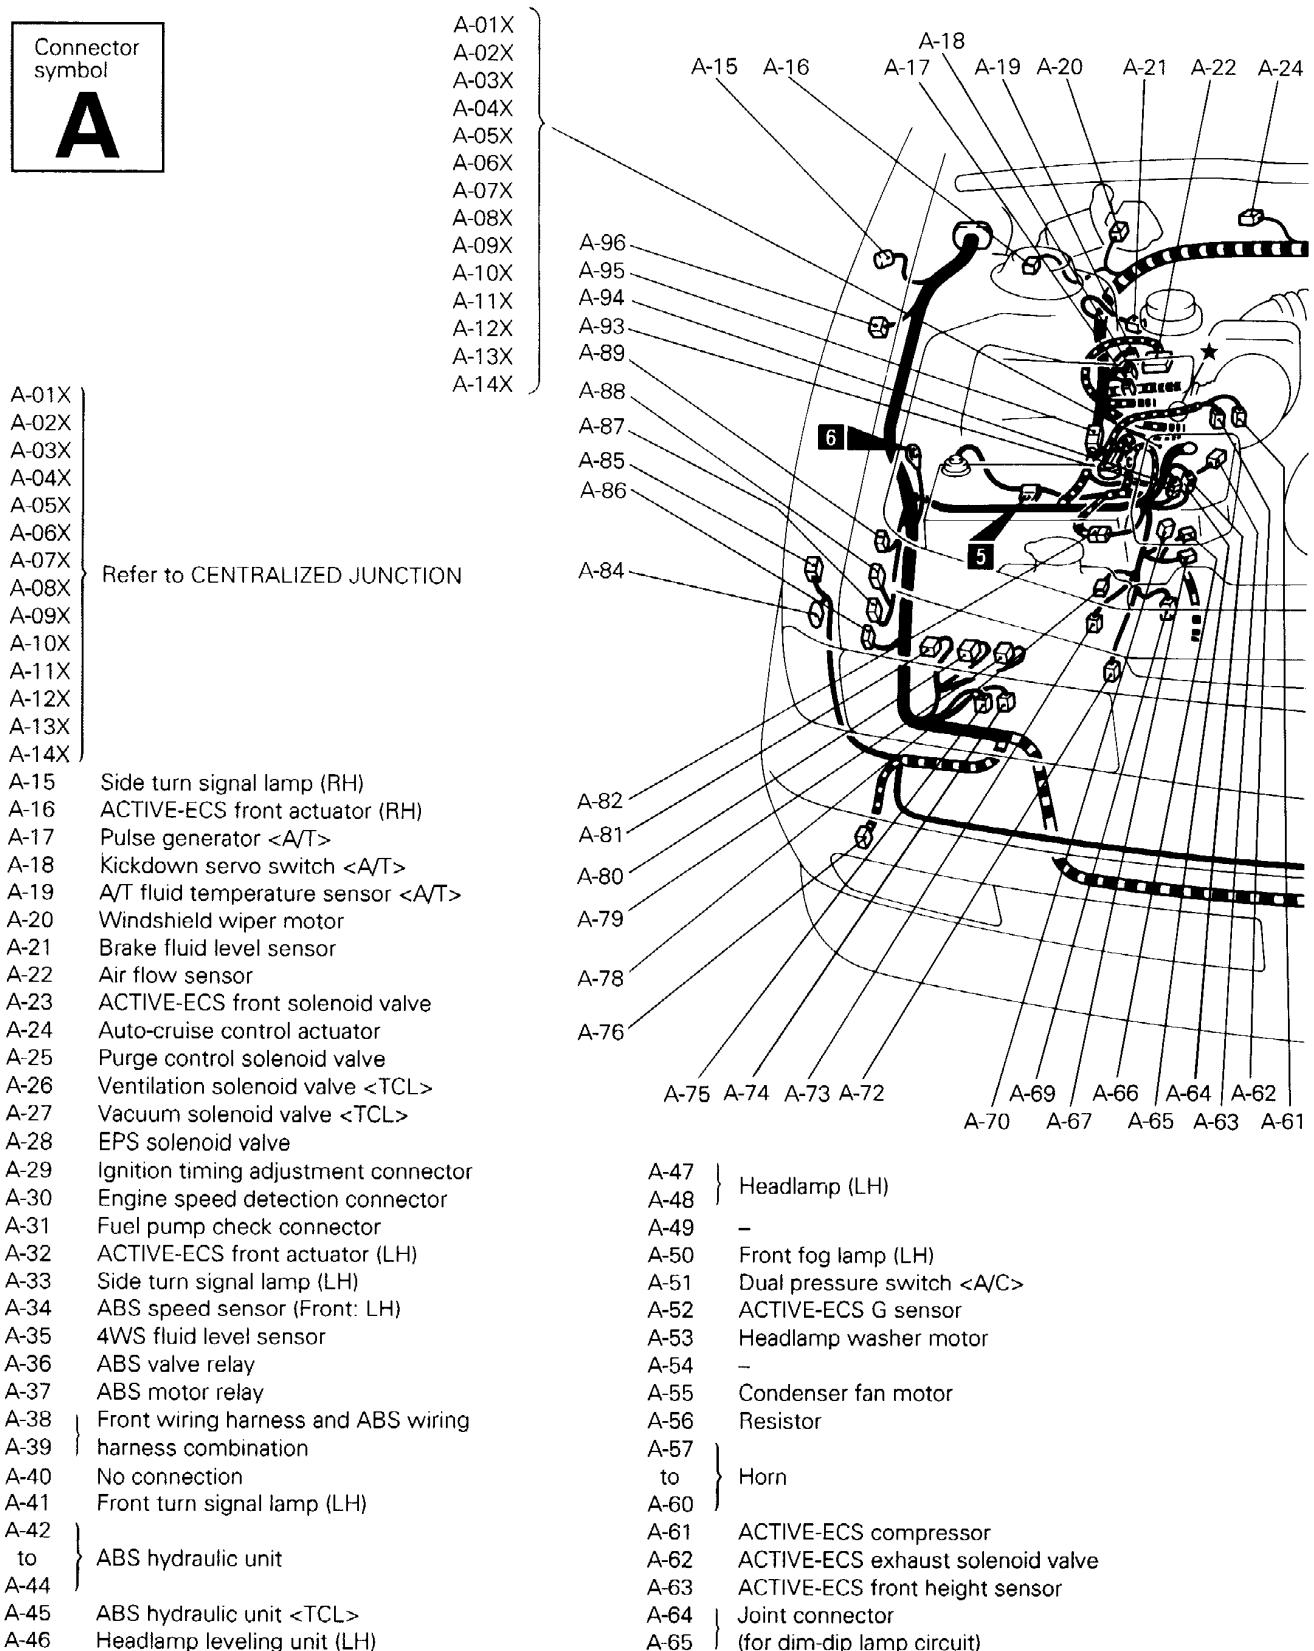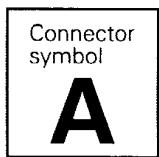

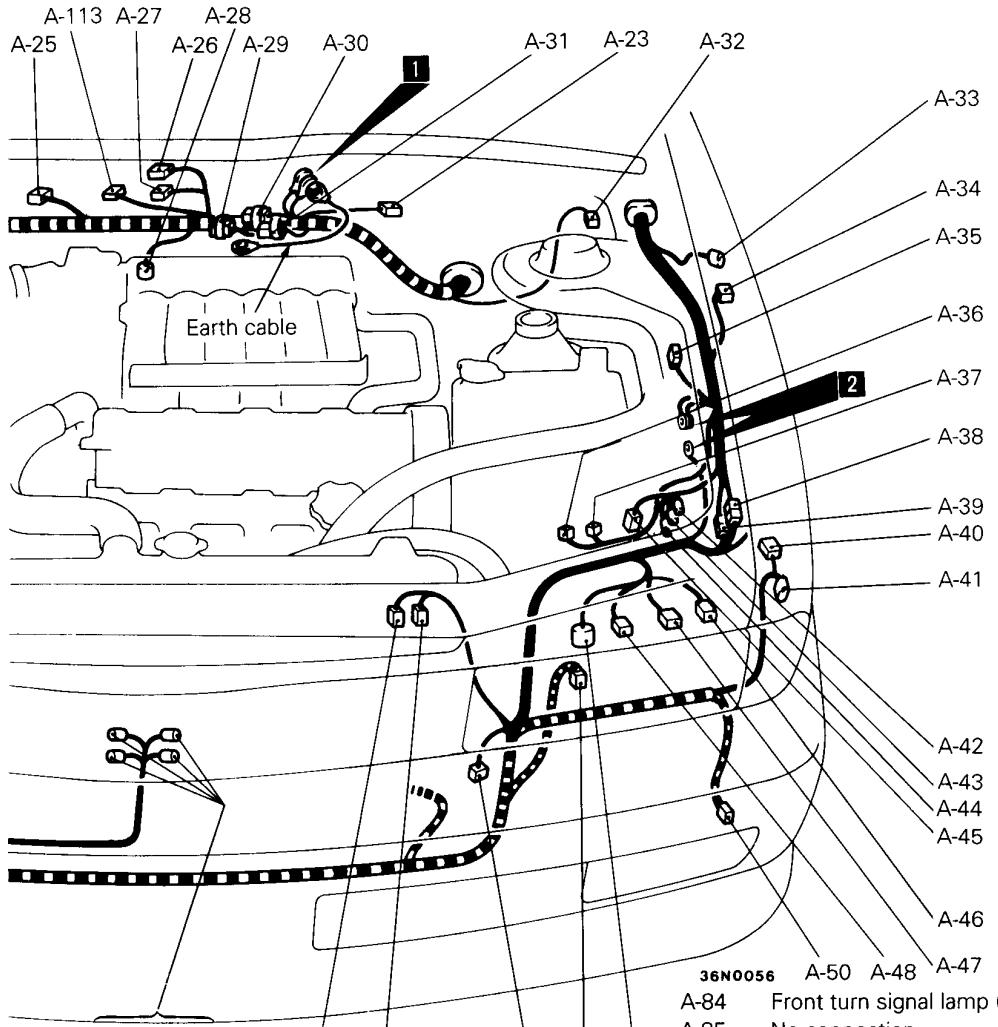

A-66 Dim-dip lamp relay 3
 A-67 Dim-dip lamp relay 2
 A-68 –
 A-69 Radiator fan motor
 A-70 Resistor
 A-71 –
 A-72 ACTIVE-ECS flow control solenoid valve
 A-73 Windshield washer motor
 A-74 ACTIVE-ECS return pump
 A-75 ACTIVE-ECS pressure switch
 A-76 Front fog lamp (RH)
 A-77 –
 A-78 Windshield washer fluid level sensor
 A-79 Headlamp (RH)
 A-80 Headlamp leveling unit (RH)
 A-81 Front wiring harness and battery cable combination
 A-82 –
 A-83 –


36N0056 A-50 A-48 A-47
 A-84 Front turn signal lamp (RH)
 A-85 No connection
 A-86 Dim-dip lamp relay 1
 A-87 ACTIVE-ECS return pump relay
 A-88 ACTIVE-ECS compressor relay
 A-89 ACTIVE-ECS solenoid valve relay
 A-90 to –
 A-91 to –
 A-92 Joint connector
 A-93 (for rear fog lamp circuit)
 A-94 Front wiring harness and control wiring harness combination
 A-95 –
 A-96 ABS speed sensor (Front: RH)
 A-97 to –
 A-98 to –
 A-99 to –
 A-100 to –
 A-101 to –
 A-102 to –
 A-103 to –
 A-104 to –
 A-105 to –
 A-106 to –
 A-107 to –
 A-108 to –
 A-109 to –
 A-110 to –
 A-111 to –
 A-112 to –
 A-113 No connection

Remarks


- (1) For details concerning the earth point (example: 1), refer to P.3-20.
- (2) The mark ★ shows the standard mounting position of wiring harness.

3 ENGINE AND TRANSMISSION

3-1 MPI-SOHC engine

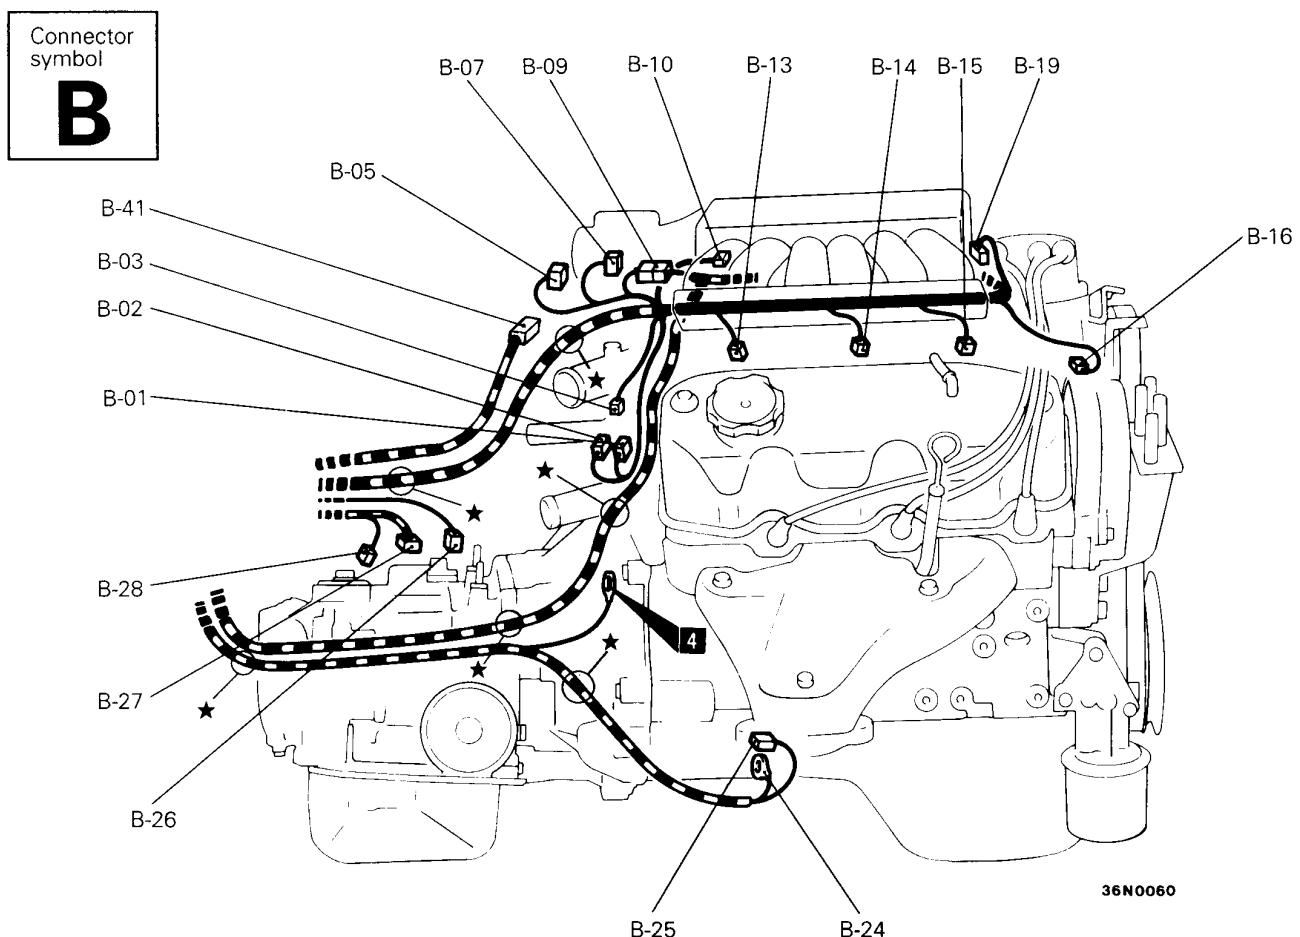

- | | | | |
|------|---|------|------------------------------------|
| B-01 | Engine coolant temperature gauge unit | B-11 | Variable induction control servo |
| B-02 | Engine coolant temperature sensor
(for engine control) | B-12 | |
| B-03 | Engine coolant temperature switch
(for A/C compressor control) | B-13 | Injector No. 5 |
| B-04 | Crank angle sensor and top dead center sensor | B-14 | Injector No. 3 |
| B-05 | Idle speed control servo | B-15 | Injector No. 1 |
| B-06 | - | B-16 | Power steering oil pressure switch |
| B-07 | Throttle position sensor | B-17 | Ignition coil |
| B-08 | - | B-18 | Capacitor |
| B-09 | Control wiring harness and injector wiring
harness combination | B-19 | Power transistor |
| B-10 | Detonation sensor | B-20 | - |
| | | B-21 | Alternator |
| | | B-22 | |

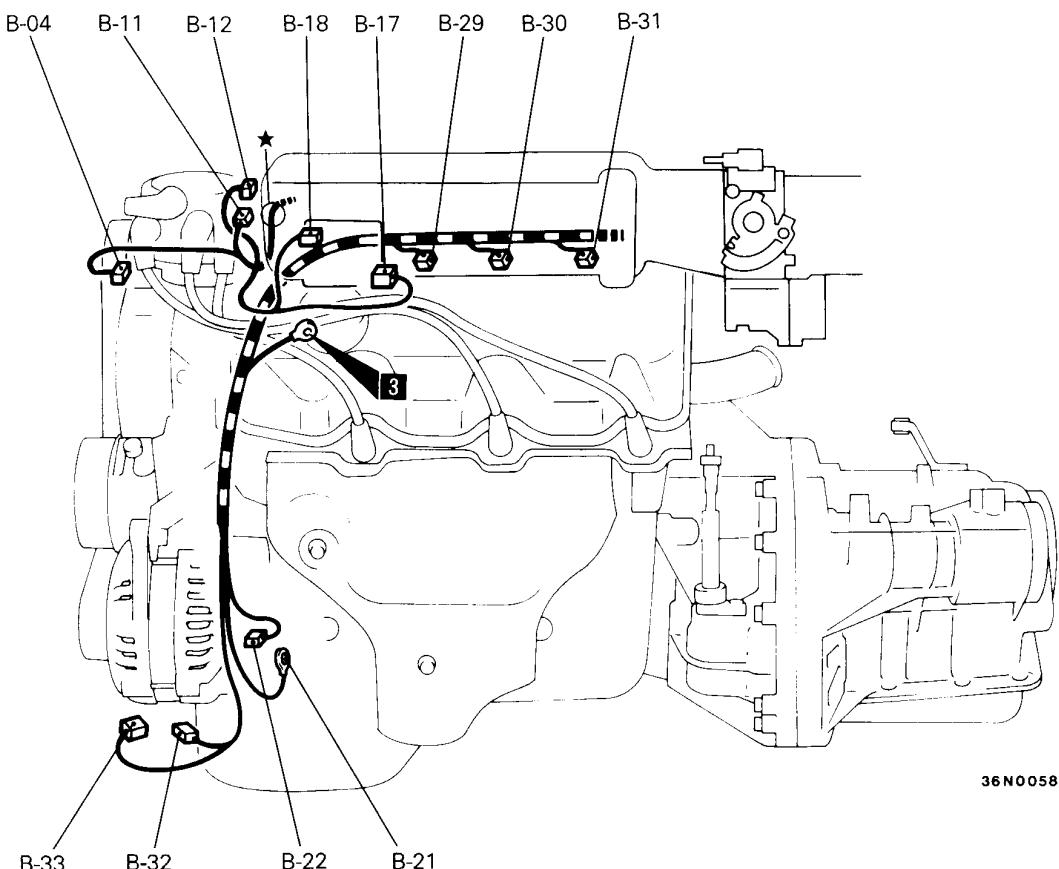


B-23	-
B-24	Starter
B-25	
B-26	Back-up lamp switch <M/T>
B-27	Inhibitor switch <A/T>
B-28	ELC-4AT control solenoid valve
B-29	Injector No. 2
B-30	Injector No. 4
B-31	Injector No. 6
B-32	Engine oil pressure switch
B-33	Engine oil level sensor

B-34	to	-
B-40		
B-41	No connection	


Remarks

- (1) For details concerning the earth point (example: 3), refer to P.3-20.
- (2) The mark ★ shows the standard mounting position of wiring harness.

3-2 MPI-DOHC engine

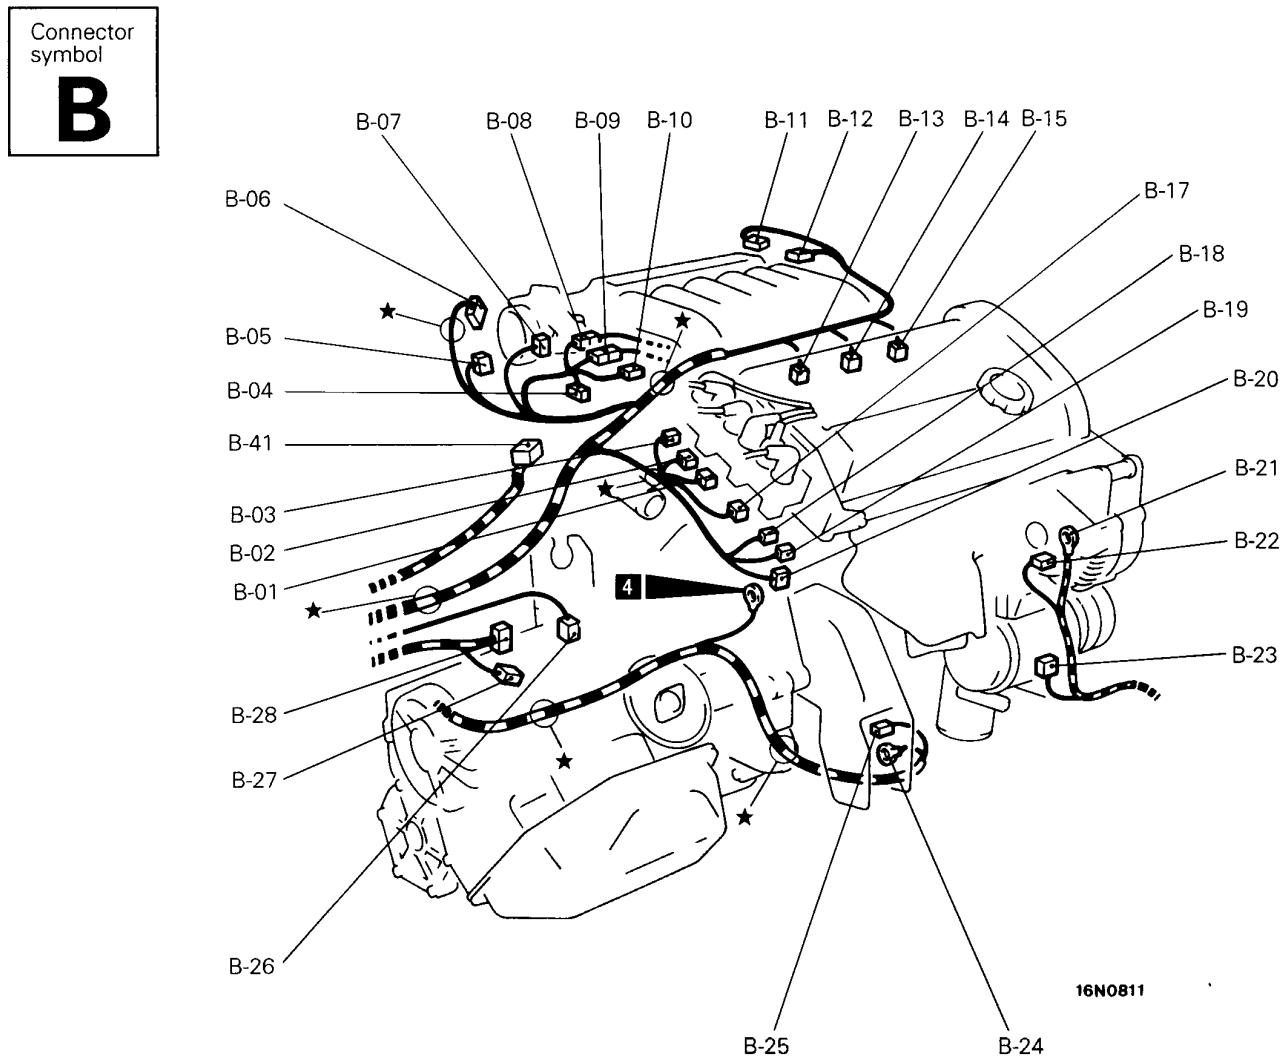

- | | | | |
|------|---|------|------------------------------------|
| B-01 | Engine coolant temperature gauge unit | B-11 | Variable induction control servo |
| B-02 | Engine coolant temperature sensor
(for engine control) | B-12 | |
| B-03 | Engine coolant temperature switch
(for A/C compressor control) | B-13 | Injector No. 5 |
| B-04 | Crank angle sensor and top dead center sensor | B-14 | Injector No. 3 |
| B-05 | Idle speed control servo | B-15 | Injector No. 1 |
| B-06 | Accelerator position sensor <TCL> | B-16 | Power steering oil pressure switch |
| B-07 | Throttle position sensor | B-17 | Ignition coil |
| B-08 | Control wiring harness and oil pressure wiring
harness combination | B-18 | Capacitor |
| B-09 | Control wiring harness and injector wiring harness
combination | B-19 | Power transistor |
| B-10 | Detonation sensor | B-20 | |
| | | B-21 | Alternator |
| | | B-22 | |
| | | B-23 | A/C compressor |

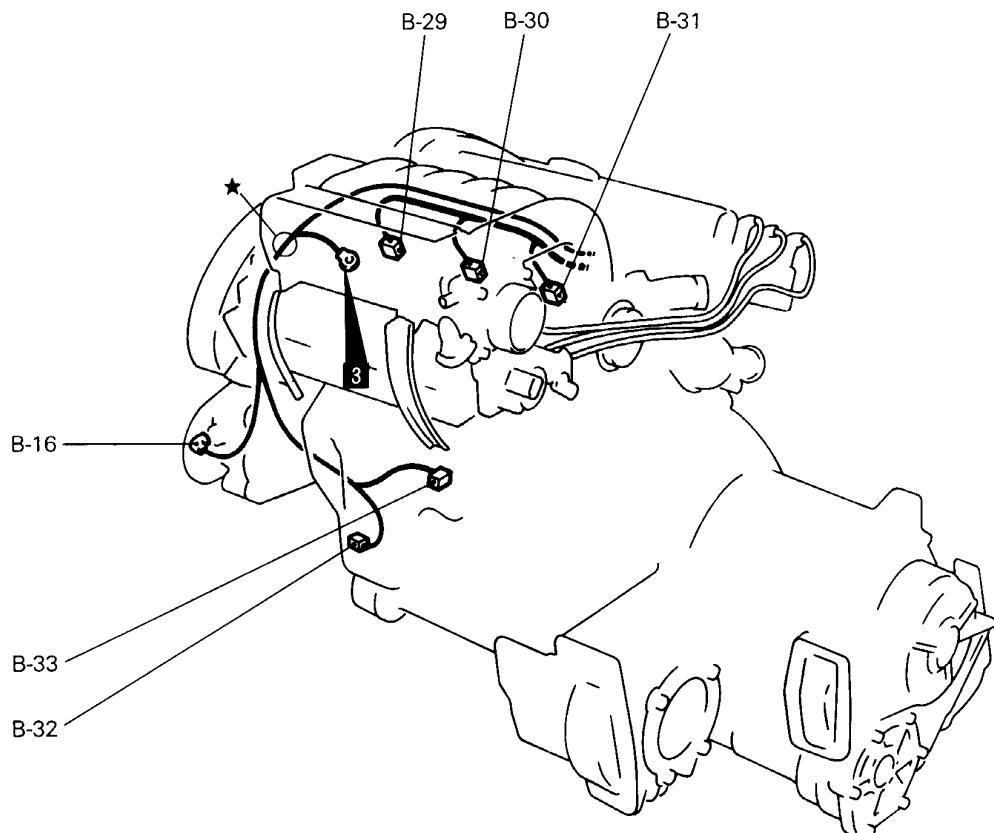


- B-24 } Starter
- B-25 }
- B-26 Back-up lamp switch < M/T >
- B-27 Inhibitor switch < A/T >
- B-28 ELC-4A/T control solenoid valve
- B-29 Injector No. 2
- B-30 Injector No. 4
- B-31 Injector No. 6
- B-32 Engine oil pressure switch
- B-33 Engine oil level sensor
- B-34 to B-40 } –
- B-41 No connection

Remarks


- (1) For details concerning the earth point (example: 3), refer to P.3-20.
- (2) The mark ★ shows the standard mounting position of wiring harness.

4 DASH PANEL

4-1 L.H. drive vehicles

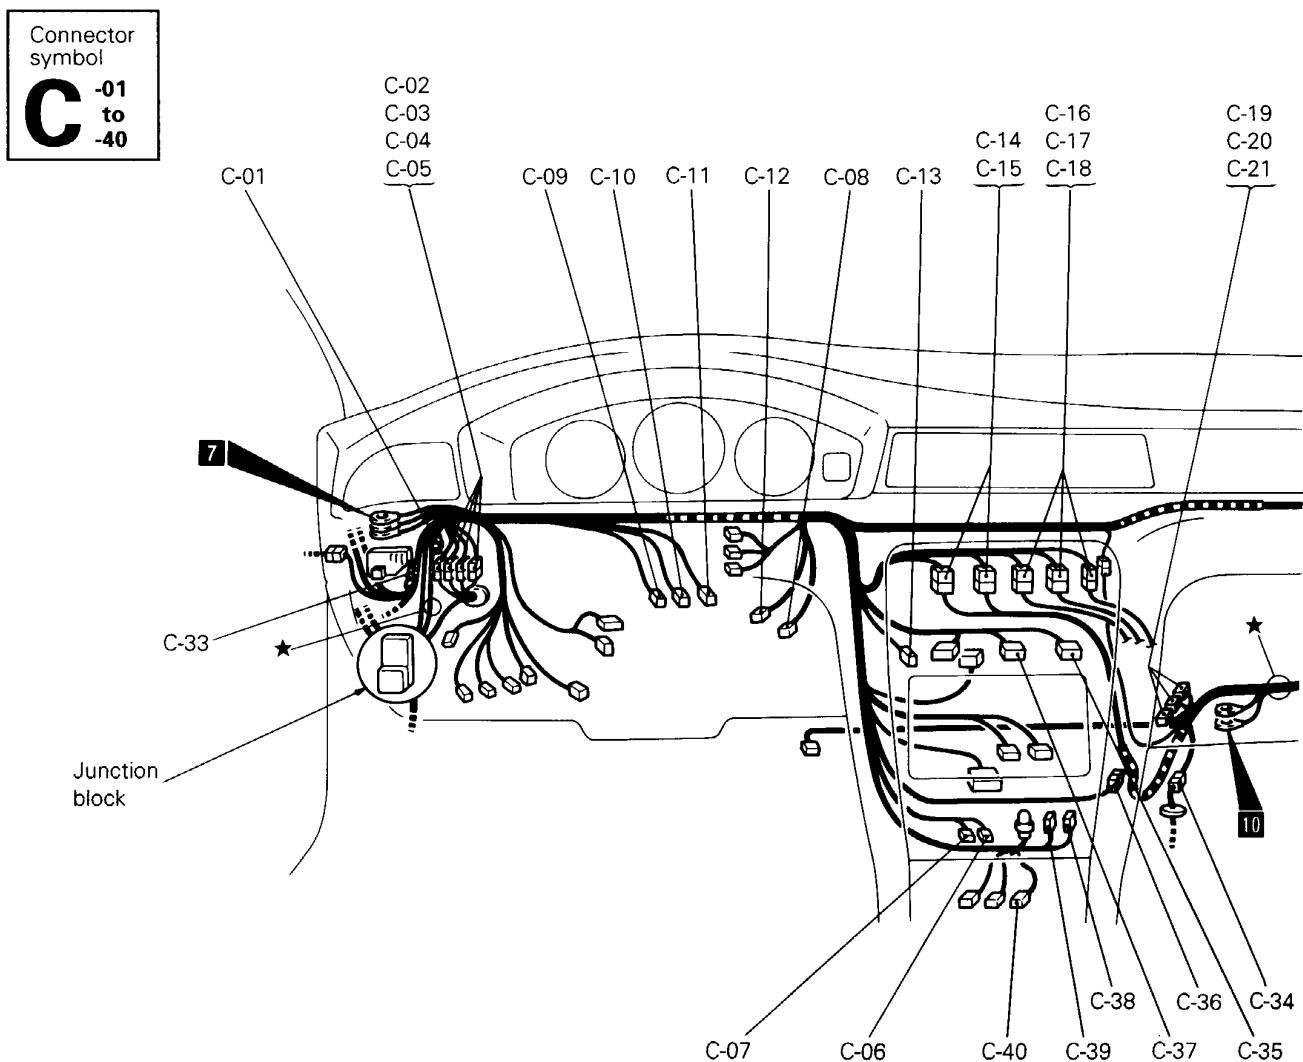

- | | | | |
|------------|---|------|--|
| C-01 | Diode (for idle-up circuit) <DOHC> | C-11 | Clutch pedal switch <Auto-cruise control (M/T)> |
| C-02 | Body wiring harness and front wiring harness combination | C-12 | Headlamp leveling switch |
| to
C-04 | | C-13 | No connection |
| C-05 | Body wiring harness and front wiring harness combination <ABS> | C-14 | Body wiring harness and control wiring harness combination |
| C-06 | ETACS unit | C-15 | |
| C-07 | | C-16 | Body wiring harness and A/C wiring harness combination |
| C-08 | Accelerator pedal switch <A/T> | C-17 | ELC-4A/T control unit |
| C-09 | Stop lamp switch (4-pin) <Auto-cruise control> or no connection | C-18 | |
| C-10 | Stop lamp switch (2-pin) or no connection <Auto-cruise control> | C-19 | |
| | | C-20 | Engine oil level relay
Headlamp washer relay |
| | | C-21 | |
| | | C-22 | |
| | | C-23 | |

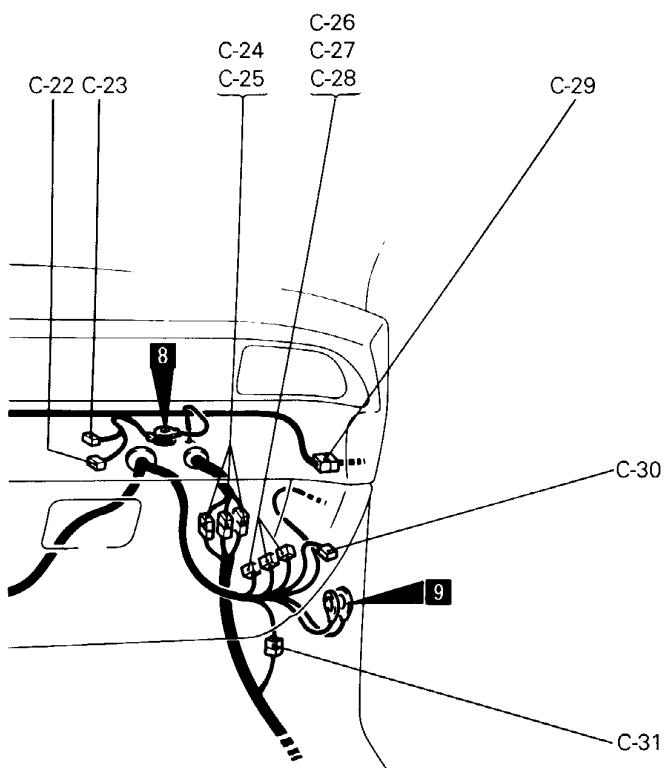

36N0062

- C-24 Front wiring harness and
ACTIVE-ECS wiring harness combination
- C-25 –
- C-26 Engine control unit
- to –
- C-28 –
- C-29 Body wiring harness and front door wiring harness
(RH) combination
- C-30 Engine control relay
- C-31 Control wiring harness and ACTIVE-ECS wiring
harness combination
- C-32 –
- C-33 Diode (for ABS circuit)
- C-34 Oxygen sensor


- C-35 Rear fog lamp switch
- C-36 Body wiring harness and control wiring harness
combination <TCL>
- C-37 Defogger switch
- C-38 Cigarette lighter
- C-39 –
- C-40 Heated seat switch (RH)

Remarks


- (1) For details concerning the earth point (example: 7), refer to P.3-21.
- (2) The mark ★ shows the standard mounting position of wiring harness.

4-1 L.H. drive vehicles

Connector symbol
C -41
to
-132

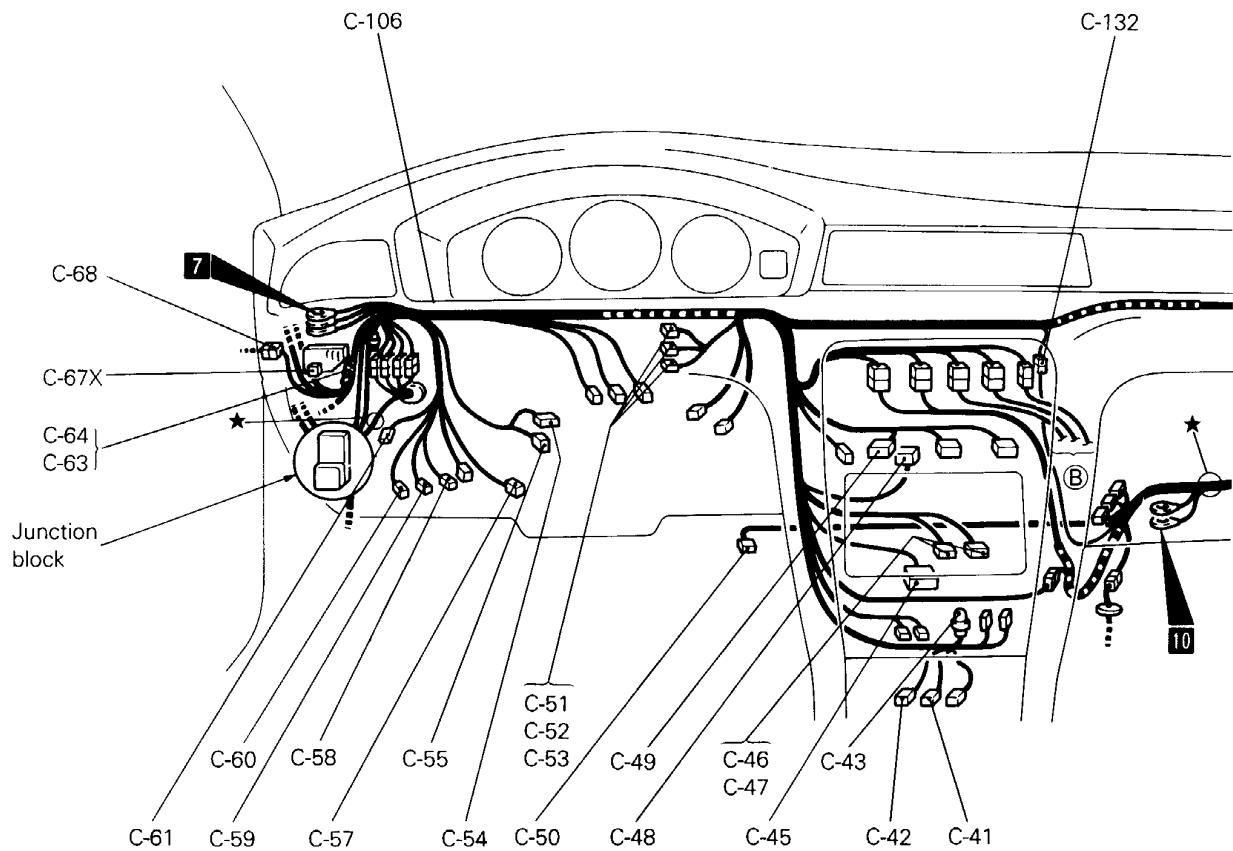


C-41	ACTIVE-ECS switch	C-61	No connection
C-42	Heated seat switch (LH)	C-62	-
C-43	Cigarette lighter illumination lamp	C-63	Diode (for ACTIVE-ECS circuit)
C-44	-	C-64	Diode (for headlamp circuit)
C-45	Auto-cruise control unit	C-65X } to C-67X }	Refer to CENTRALIZED JUNCTION
C-46	Audio	C-68	Body wiring harness and front door wiring harness (LH) combination
C-47		C-69	A/C control panel assembly
C-48	EPS control unit	C-70	
C-49	Hazard warning switch	C-71	Mode selection damper control motor
C-50	Wide open throttle switch <A/T>	C-72	Air mixing damper control motor
C-51	Column switch	C-73	Power transistor
C-53		C-74	Water temperature sensor
C-54	Ignition switch	C-75	Fin thermo sensor
C-55	Key reminder switch	C-76	Air inlet sensor
C-56	Foot lamp (RH)	C-77	Air selection damper control motor
C-57	Foot lamp (LH)	C-78	Blower motor
C-58	Accessory socket	C-79	Blower motor high relay
C-59			
C-60	Rear wiper and washer switch		

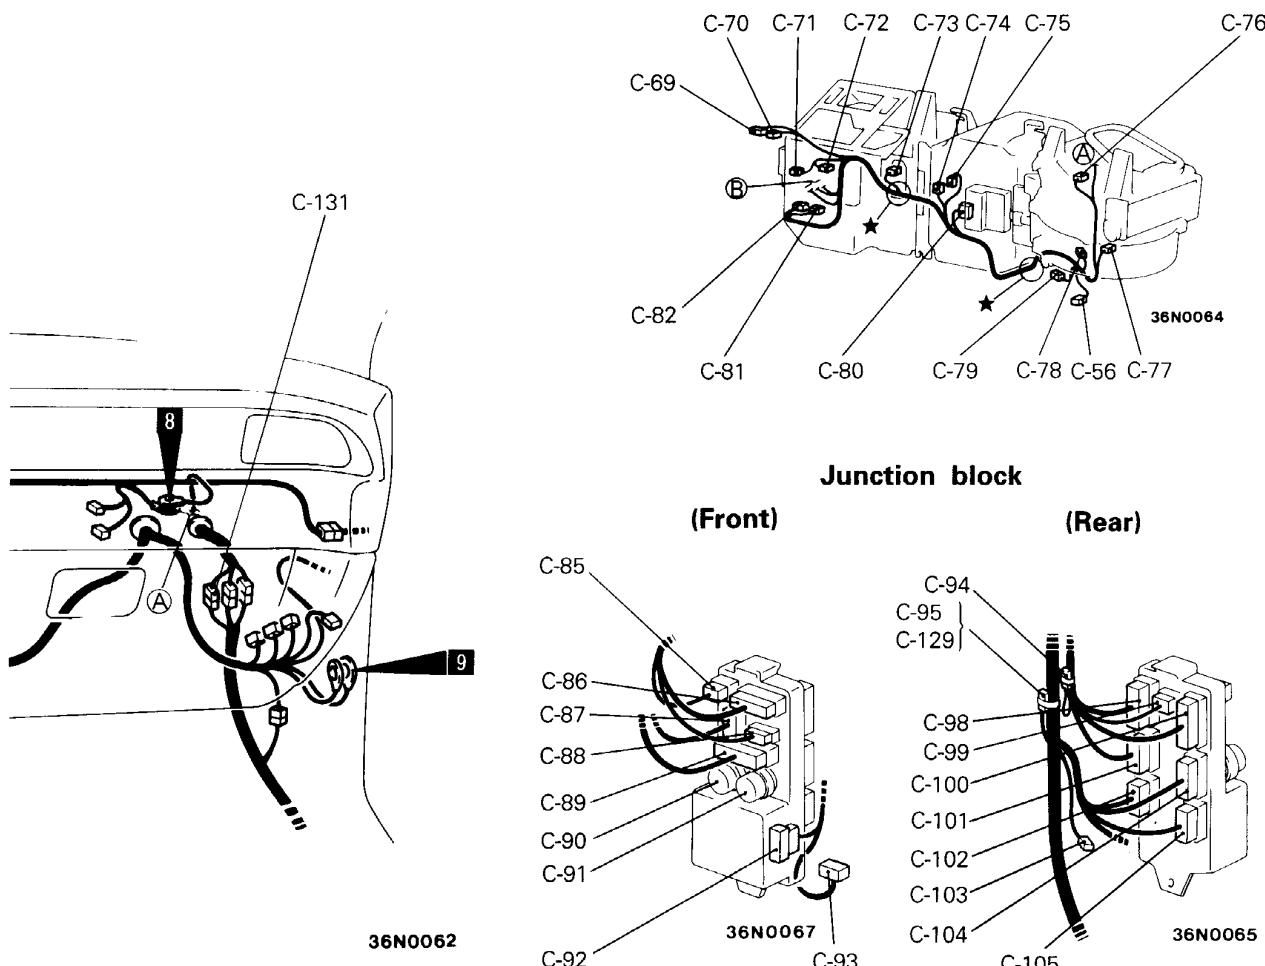
Vehicles with air conditioner

C-80	A/C belt lock controller <DOHC>	C-98	
C-81	A/C control unit	C-99	Body wiring harness and junction block combination
C-82		C-100	
C-83	C-101		
C-84	C-102		
C-85	C-103	TCL valve relay	
C-86	C-104	Body wiring harness and junction block combination	
C-87	C-105	C-105	
C-88	C-106	TCL switch	
C-89	C-107	–	
C-90	to		
C-91	C-128	C-129	
C-92		Diode (for power seat circuit)	
C-93	C-130	–	
C-94	C-131	Front wiring harness and ACTIVE-ECS wiring harness combination	
C-95	C-132	Body wiring harness and control wiring harness combination	
C-96		Remarks	
C-97		(1) For details concerning the earth point (example: 7), refer to P.3-21.	
		(2) The mark ★ shows the standard mounting position of wiring harness.	

4-2 R.H. drive vehicles

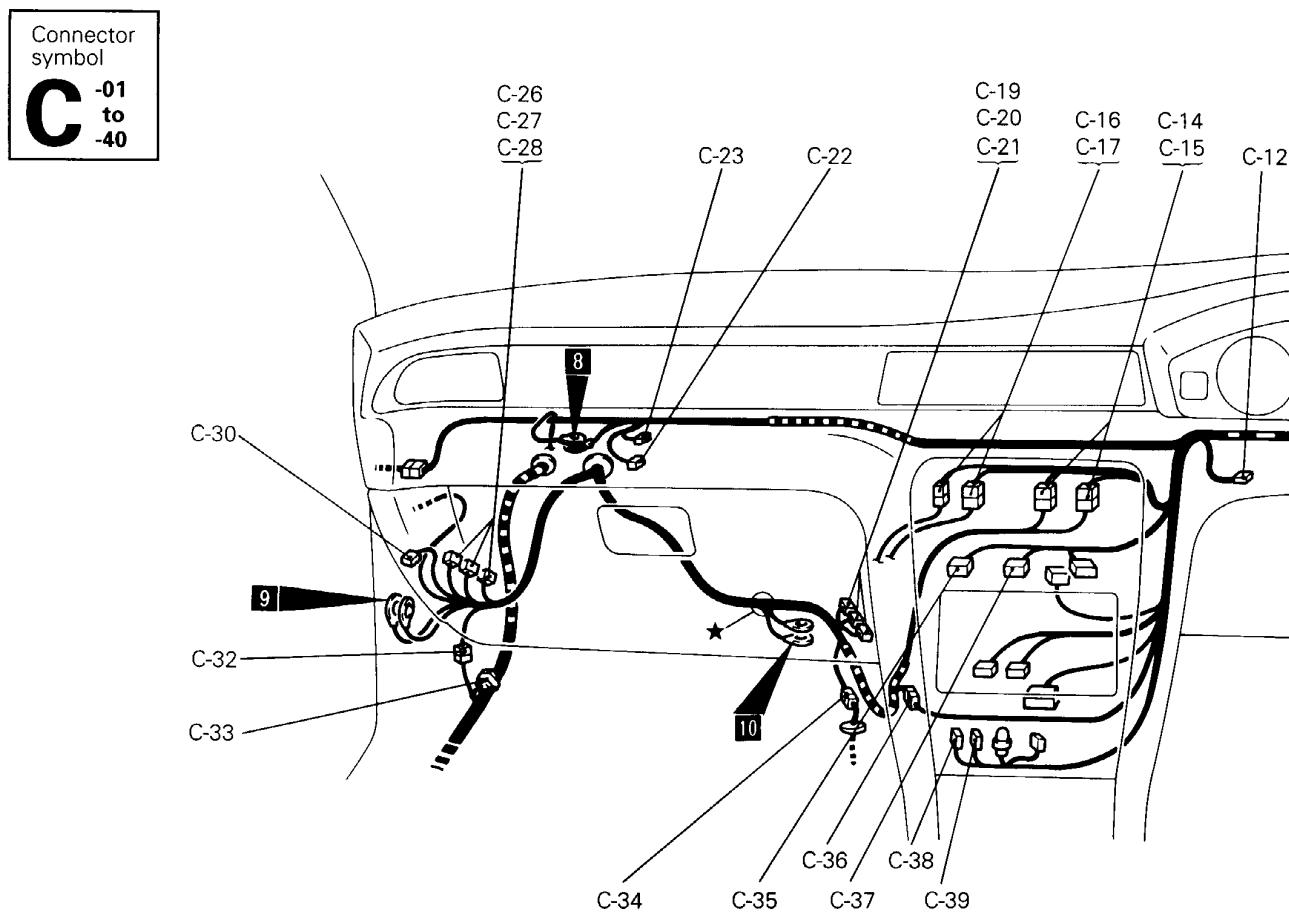

- | | | | |
|------|---|------|--|
| C-01 | Diode (for idle-up circuit) <DOHC> | C-11 | Clutch pedal switch <Auto-cruise control (M/T)> |
| C-02 | Body wiring harness and front wiring harness combination | C-12 | Headlamp leveling switch |
| to | | C-13 | – |
| C-04 | | C-14 | Body wiring harness and control wiring harness combination |
| C-05 | Body wiring harness and front wiring harness combination <ACTIVE-ECS> | C-15 | |
| C-06 | ETACS unit | C-16 | Body wiring harness and |
| C-07 | | C-17 | A/C wiring harness combination |
| C-08 | Accelerator pedal switch <A/T> | C-18 | – |
| C-09 | Stop lamp switch (4-pin) <Auto-cruise control> or no connection | C-19 | ELC-4A/T control unit |
| C-10 | Stop lamp switch (2-pin) or no connection <Auto-cruise control> | C-20 | |
| | | C-21 | |
| | | C-22 | Engine oil level relay |
| | | C-23 | Headlamp washer relay |

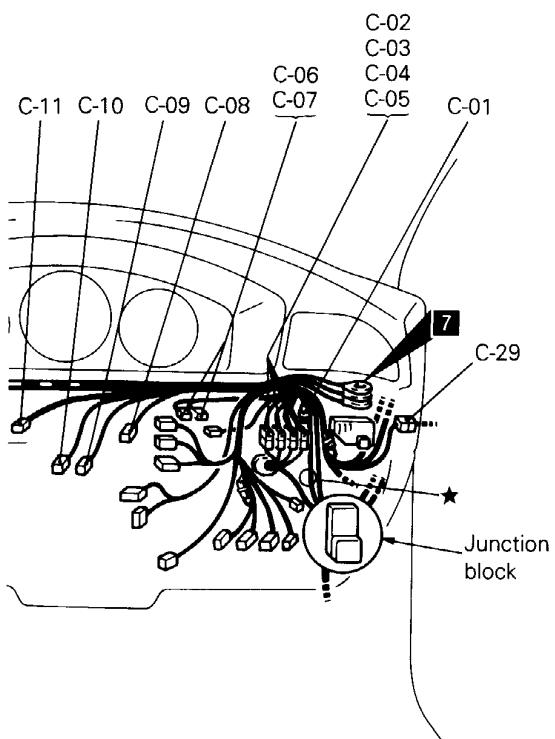

36N0061

C-24	-
C-25	-
C-26 to C-28	{ Engine control unit
C-29	Body wiring harness and front door wiring harness (RH) combination
C-30	Engine control relay
C-31	-
C-32	Control wiring harness and ABS wiring harness combination <TCL>
C-33	Diode (for ABS circuit)
C-34	Oxygen sensor


C-35	Rear fog lamp switch
C-36	Body wiring harness and control wiring harness combination <ACTIVE-ECS or Auto-cruise control>
C-37	Defogger switch
C-38	{ Cigarette lighter
C-39	-
C-40	-

Remarks

- (1) For details concerning the earth point (example: 7), refer to P.3-21.
- (2) The mark ★ shows the standard mounting position of wiring harness.



4-2 R.H. drive vehicles

Connector symbol
C -41
to
-129

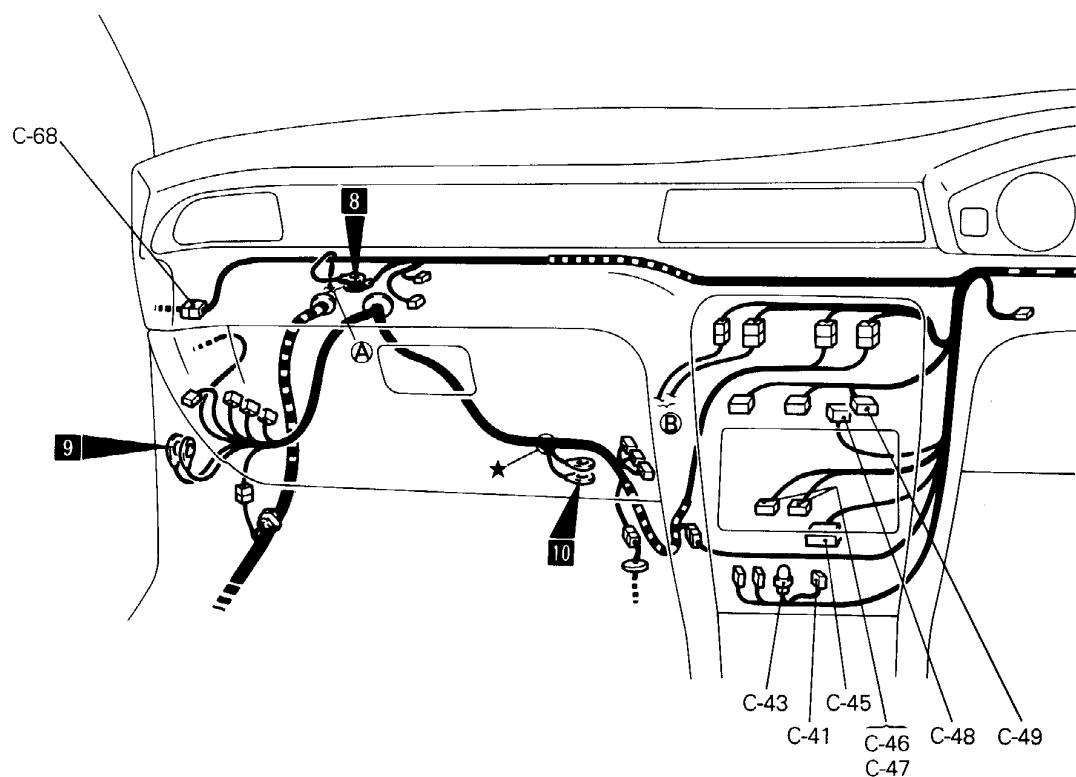

C-41	ACTIVE-ECS switch	C-61	No connection
C-42	-	C-62	{ Diode (for ACTIVE-ECS circuit)
C-43	Cigarette lighter illumination lamp	C-63	
C-44	ACC spare connector	C-64	-
C-45	Auto-cruise control unit	C-65X	{ Refer to CENTRALIZED JUNCTION
C-46	Audio	to	
C-47		C-67X	
C-48	EPS control unit	C-68	Body wiring harness and front door wiring harness (LH) combination
C-49	Hazard warning switch	C-69	{ A/C control panel assembly
C-50	-	C-70	
C-51	Column switch	C-71	Mode selection damper control motor
C-52		C-72	Air mixing damper control motor
C-53		C-73	Power transistor
C-54	Ignition switch	C-74	Water temperature sensor
C-55	Key reminder switch	C-75	Fin thermo sensor
C-56	Foot lamp (RH)	C-76	Air inlet sensor
C-57	Foot lamp (LH)	C-77	Air selection damper control motor
C-58	Accessory socket	C-78	Blower motor
C-59		C-79	Blower motor high relay
C-60	Rear wiper and washer switch		


Vehicles with air conditioner

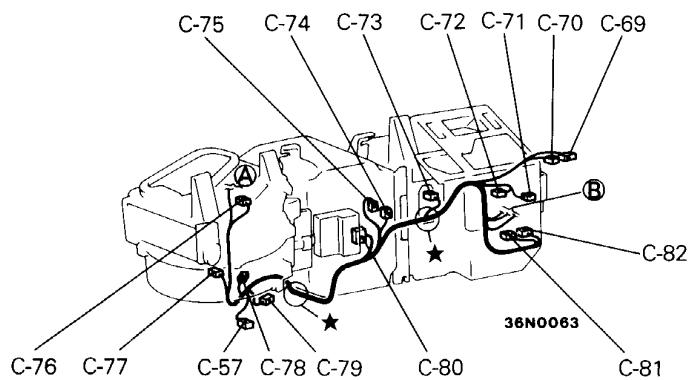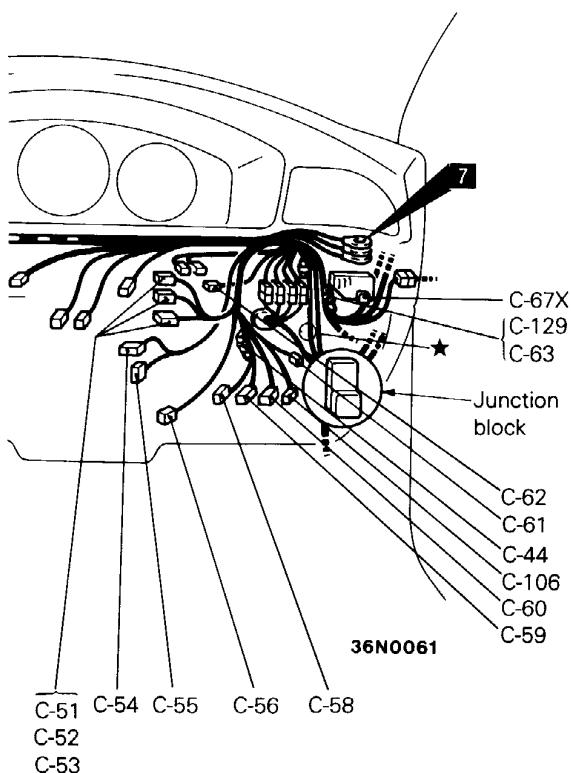

Junction block

(Front)

(Rear)

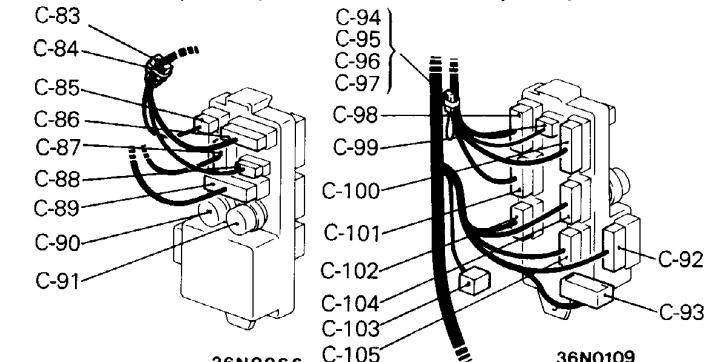

C-80	A/C belt lock controller <DOHC>	C-98	
C-81	A/C control unit	C-99	
C-82		C-100	Body wiring harness and junction block combination
C-83		C-101	
C-84	Diode (for dim-dip lamp circuit)	C-102	
C-85	Front wiring harness and junction block combination	C-103	TCL valve relay
C-86		C-104	Body wiring harness and junction block combination
C-87	Roof wiring harness and junction block combination	C-105	
C-88	Front wiring harness and junction block combination	C-106	TCL switch
C-89	Instrument panel wiring harness and junction block combination	C-107	to
C-90	Defogger relay	C-128	-
C-91	Blower motor relay	C-129	Diode (for power seat circuit)
C-92	Diagnosis connector		
C-93	Diagnosis connector <TCL>		
C-94	Diode <4WS>		
C-95	Diode (for ACTIVE-ECS circuit)		
C-96			
C-97	Diode (for dim-dip lamp circuit)		

Remarks


- REMARKS**

 - (1) For details concerning the earth point (example: 7), refer to P.3-21.
 - (2) The mark ★ shows the standard mounting position of wiring harness.

5 INSTRUMENT PANEL

5-1 L.H. drive vehicles



Connector symbol

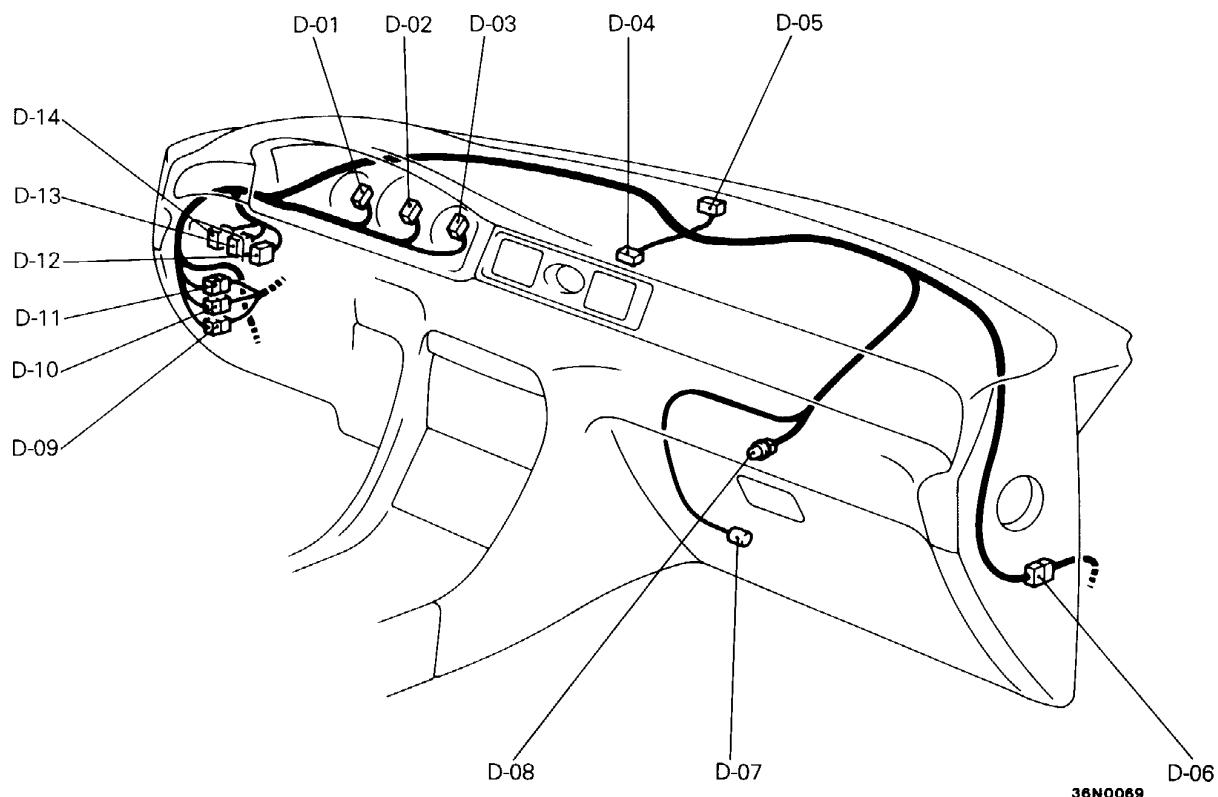

- | | |
|--------------------|--|
| D-01
to
D-03 | Combination meter |
| D-04 | Clock |
| D-05 | Photo sensor |
| D-06 | Control wiring harness and instrument panel
wiring harness combination <AT> |
| D-07 | Glove box lamp switch |
| D-08 | Glove box lamp |

- | | |
|--------------------|--|
| D-09
to
D-11 | Body wiring harness and
instrument panel wiring harness combination |
| D-12 | Rheostat |
| D-13 | Front fog lamp switch |
| D-14 | Auto-cruise control main switch or
no connection |


5-2 R.H. drive vehicles

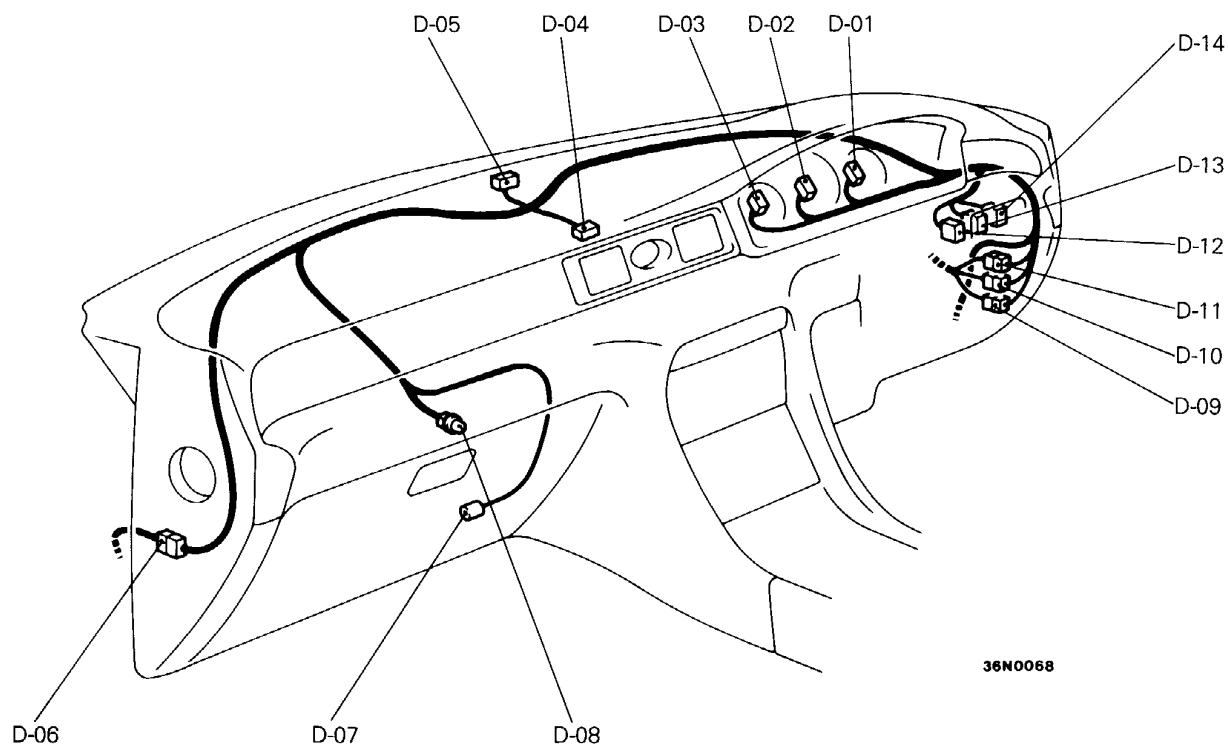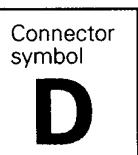

- | | |
|---|---|
| D-01
to
D-03 } Combination meter | D-09
to
D-11 } Body wiring harness and
instrument panel wiring harness combination |
| D-04 Clock | D-12 Rheostat |
| D-05 Photo sensor | D-13 Front fog lamp switch |
| D-06 Control wiring harness and instrument panel wiring
harness combination <AT> | D-14 Auto-cruise control main switch or
no connection |
| D-07 Glove box lamp switch | |
| D-08 Glove box lamp | |


6 INTERIOR

6-1 L.H. drive vehicles

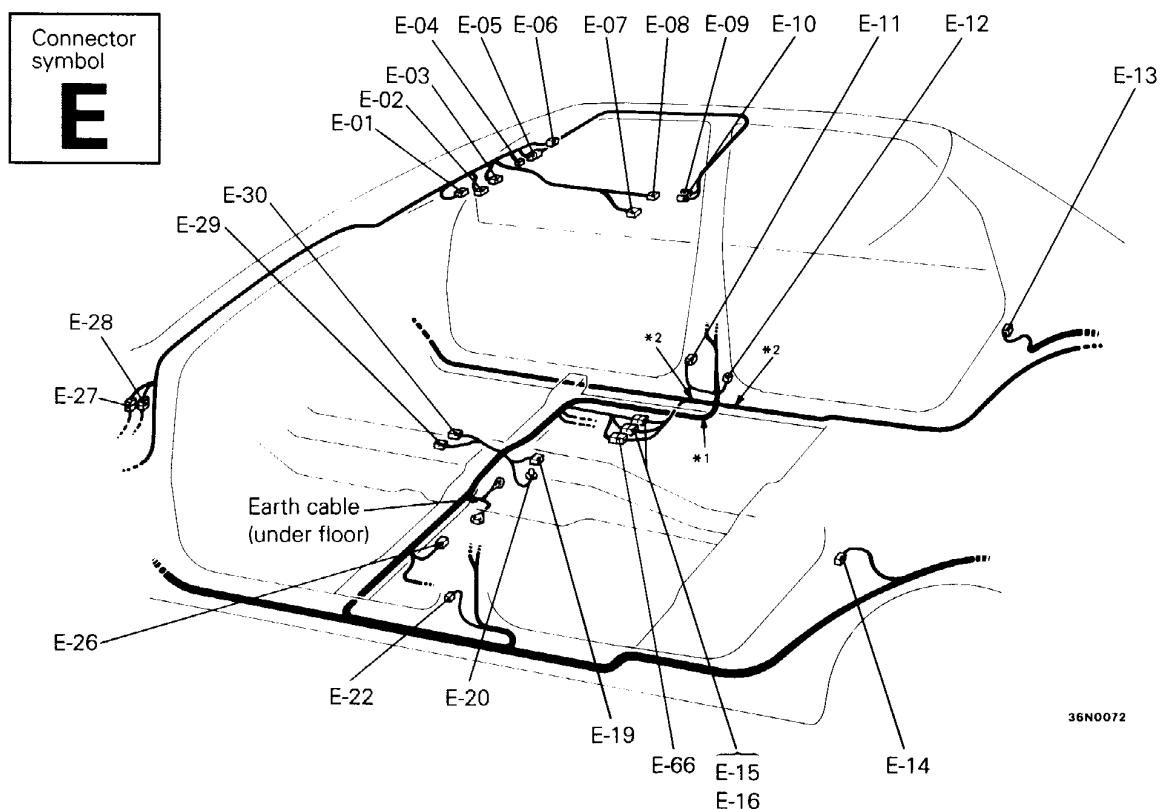

- | | | | |
|------|---|------|---|
| E-01 | Sunroof motor | E-26 | No connection |
| E-02 | Map lamp <Vehicles without sunroof> | E-27 | Body wiring harness and roof wiring harness combination |
| E-03 | Room lamp <Vehicles with sunroof> | E-28 | Body wiring harness and roof wiring harness combination <Power seat> |
| E-04 | Power seat memory switch | E-29 | Overdrive switch <AT> |
| E-05 | Roof wiring harness and interior temperature sensor joint harness combination <Vehicles with sunroof> | E-30 | Power/Economy changeover switch <AT> |
| E-06 | Sunroof control unit | E-31 | Front height adjusting motor (Passenger's side) |
| E-07 | Interior temperature sensor <Vehicles without sunroof> | E-32 | Front height limit switch (Passenger's side) |
| E-08 | Room lamp <Vehicles without sunroof> | E-33 | Power seat switch (Passenger's side) |
| E-09 | Interior temperature sensor | E-34 | Rear height limit switch (Passenger's side) |
| E-10 | <Vehicles with sunroof> | E-35 | Reclining position adjusting motor (Passenger's side) |
| E-11 | Front door switch (RH) | E-36 | Rear height adjusting motor (Passenger's side) |
| E-12 | No connection | E-37 | Seat back heater (Passenger's side) |
| E-13 | Rear door switch (RH) | E-38 | Body wiring harness and heated seat wiring harness combination (Passenger's side) |
| E-14 | Rear door switch (LH) | | |
| E-15 | Body wiring harness and ACTIVE-ECS | | |
| E-16 | wiring harness combination | | |
| E-17 | – | | |
| E-18 | – | | |
| E-19 | Parking brake switch | | |
| E-20 | Front ashtray illumination lamp | | |
| E-21 | – | | |
| E-22 | Front door switch (LH) | | |
| E-23 | – | | |
| E-24 | – | | |
| E-25 | – | | |

<Vehicles with power seat or heated seat>

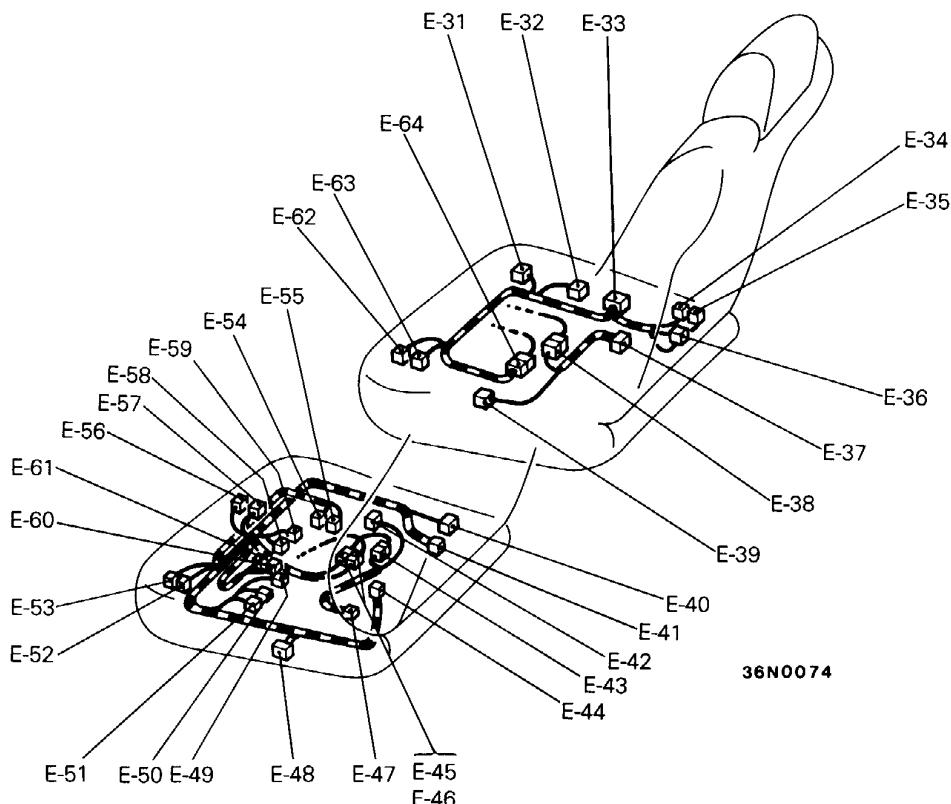


- | | | | |
|------|--|------|--|
| E-39 | Seat cushion heater (Passenger's side) | E-62 | Slide position limit switch (Passenger's side) |
| E-40 | Slide position limit switch (Driver's side) | E-63 | Slide position adjusting motor (Passenger's side) |
| E-41 | Reclining position limit switch (Driver's side) | E-64 | Body wiring harness and power seat wiring harness combination (Passenger's side) |
| E-42 | Seat cushion heater (Driver's side) | E-65 | - |
| E-43 | Body wiring harness and heated seat wiring harness combination (Driver's side) | E-66 | Body wiring harness and ACTIVE-ECS wiring harness combination |
| E-44 | Rear height limit switch (Driver's side) | | |
| E-45 | Body wiring harness and power seat wiring harness combination (Driver's side) | | |
| E-46 | harness combination (Driver's side) | | |
| E-47 | Seat back heater (Driver's side) | | |
| E-48 | Power seat switch (Driver's side) | | |
| E-49 | Reclining position adjusting motor/reclining position sensor (Driver's side) | | |
| E-50 | Rear height adjusting motor/rear height position sensor (Driver's side) | | |
| E-51 | Front height limit switch (Driver's side) | | |
| E-52 | Slide position sensor (Driver's side) | | |
| E-53 | Front height adjusting motor/front height position sensor (Driver's side) | | |
| E-54 | Power seat control unit | | |
| E-55 | Power seat inspection connector | | |
| E-56 | Slide position adjusting motor (Driver's side) | | |
| E-57 | | | |
| E-58 | Power seat control unit | | |
| to | | | |
| E-61 | | | |

Remarks


- (1) *¹: Vehicles without ACTIVE-ECS.
- (2) *²: Vehicles with ACTIVE-ECS.

6-2 R.H. drive vehicles

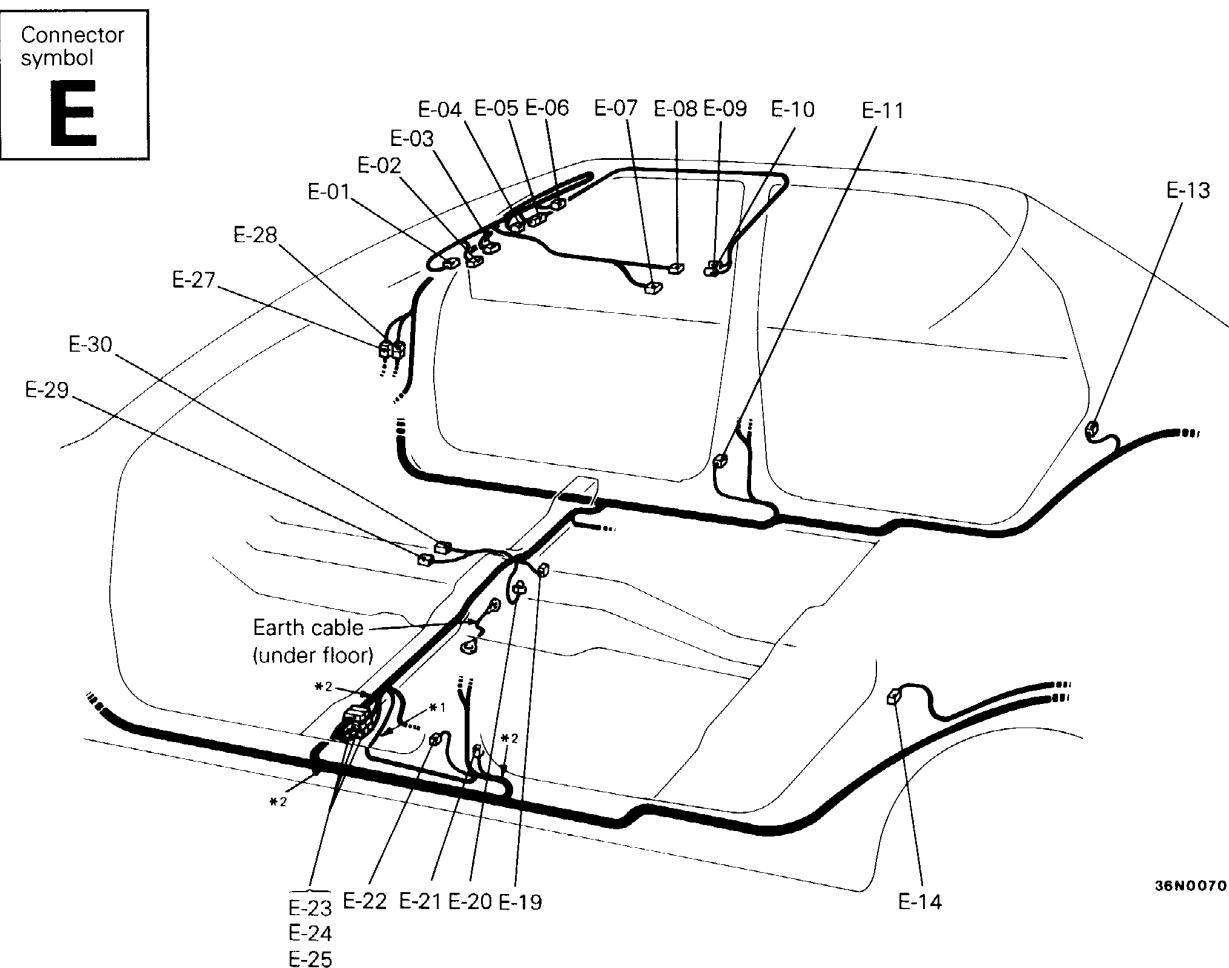

- | | | | |
|------|---|--|---|
| E-01 | Sunroof motor | E-20 | Front ashtray illumination lamp |
| E-02 | Map lamp <Vehicles without sunroof> | E-21 | No connection |
| E-03 | Room lamp <Vehicles with sunroof> | E-22 | Front door switch (LH) |
| E-04 | Power seat memory switch | E-23 | Body wiring harness and ABS
wiring harness combination |
| E-05 | Roof wiring harness and interior temperature
sensor joint harness combination
<Vehicles with sunroof> | E-24 | |
| E-06 | Sunroof control unit | E-25 | – |
| E-07 | Interior temperature sensor
<Vehicles without sunroof> | E-26 | – |
| E-08 | Room lamp <Vehicles without sunroof> | E-27 | Body wiring harness and roof wiring harness
combination |
| E-09 | Interior temperature sensor
<Vehicles with sunroof> | E-28 | Body wiring harness and roof wiring harness
combination <Power seat> |
| E-10 | | E-29 | Overdrive switch <A/T> |
| E-11 | Front door switch (RH) | E-30 | Power/Economy changeover switch <A/T> |
| E-12 | – | E-31 | Front height adjusting motor (Passenger's side) |
| E-13 | Rear door switch (RH) | E-32 | Front height limit switch (Passenger's side) |
| E-14 | Rear door switch (LH) | E-33 | Power seat switch (Passenger's side) |
| E-15 | – | E-34 | Rear height limit switch (Passenger's side) |
| E-18 | | E-35 | Reclining position adjusting motor (Passenger's
side) |
| E-19 | E-36 | Rear height adjusting motor (Passenger's side) | |

<Vehicles with power seat>

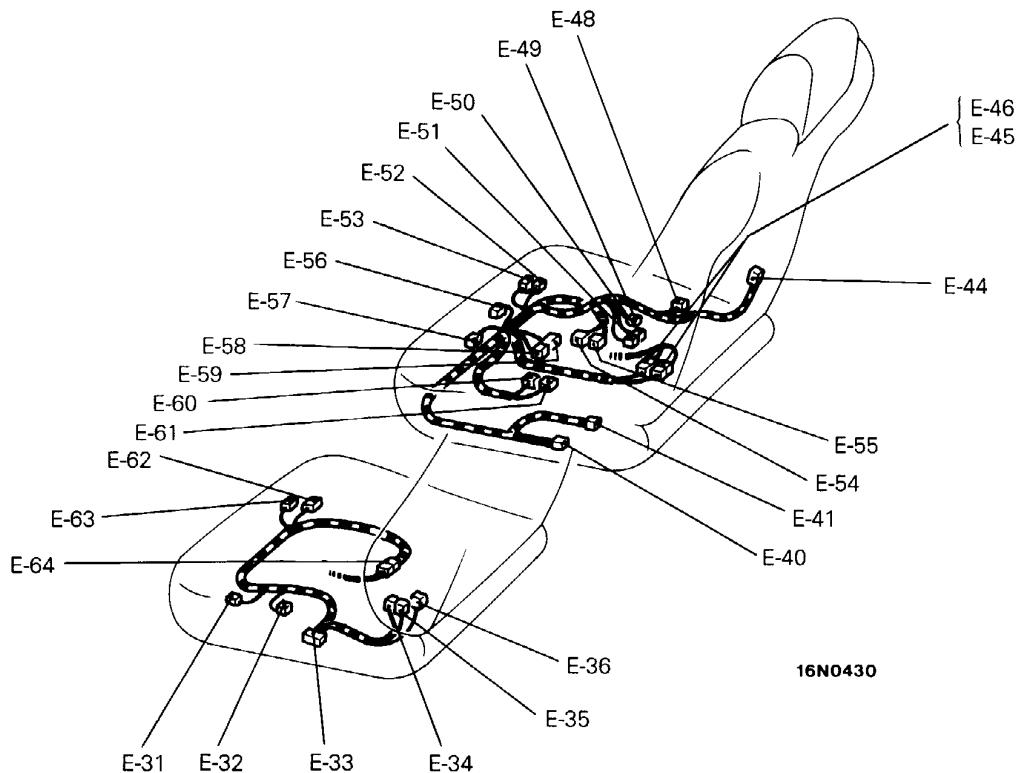


E-37	to	E-54	Power seat control unit
E-39	-	E-55	Power seat inspection connector
E-40	Slide position limit switch (Driver's side)	E-56	Slide position adjusting motor (Driver's side)
E-41	Reclining position limit switch (Driver's side)	E-57	Slide position adjusting motor (Driver's side)
E-42	-	E-58	to
E-43	-	E-61	Power seat control unit
E-44	Rear height limit switch (Driver's side)	E-62	Slide position limit switch (Passenger's side)
E-45	Body wiring harness and power seat wiring	E-63	Slide position adjusting motor (Passenger's side)
E-46	harness combination (Driver's side)	E-64	Body wiring harness and power seat wiring
E-47	-		harness combination (Passenger's side)
E-48	Power seat switch (Driver's side)		
E-49	Reclining position adjusting motor/reclining		
	position sensor (Driver's side)		
E-50	Rear height adjusting motor/rear height position		
	sensor (Driver's side)		
E-51	Front height limit switch (Driver's side)		
E-52	Slide position sensor (Driver's side)		
E-53	Front height adjusting motor/front height position		
	sensor (Driver's side)		

Remarks

- (1) *1: Vehicles without ABS.
 (2) *2: Vehicles with ABS.

7 DOOR

7-1 L.H. drive vehicles

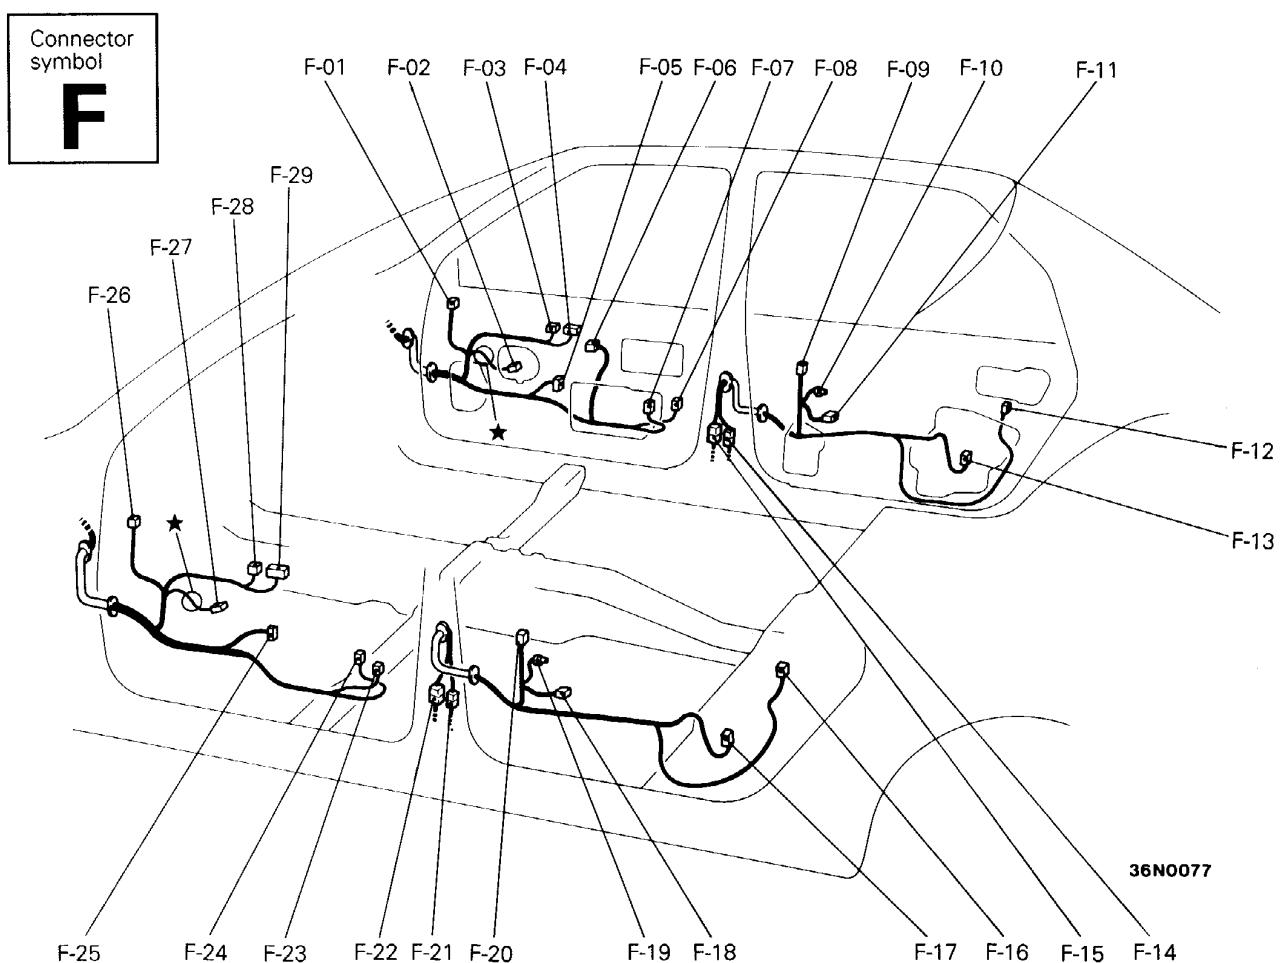


- | | |
|------|--|
| F-01 | Door mirror (R.H.) |
| F-02 | Door speaker (R.H.) |
| F-03 | Door control unit (R.H.) |
| F-04 | Power window motor (Front: R.H.) |
| F-05 | Door lock key cylinder switch |
| F-06 | Door lamp (Front: R.H.) |
| F-07 | Door lock actuator (Front: R.H.) |
| F-08 | Rear power window unit (R.H.) |
| F-09 | Rear ashtray illumination lamp (R.H.) |
| F-10 | Power window motor (Rear: R.H.) |
| F-11 | Door lamp (Rear: R.H.) |
| F-12 | Door lock actuator (Rear: R.H.) |
| F-13 | Door lamp (Rear: R.H.) |
| F-14 | Body wiring harness and rear door wiring harness (R.H.) combination <Vehicles without ACTIVE-ECS> |
| F-15 | <ACTIVE-ECS> or ACTIVE-ECS wiring harness and rear door wiring harness (R.H.) combination <Vehicles with ACTIVE-ECS> |

- | | |
|------|---|
| F-16 | Door lock actuator (Rear: L.H.) |
| F-17 | Door lamp (Rear: L.H.) |
| F-18 | Power window motor (Rear: L.H.) |
| F-19 | Rear ashtray illumination lamp (L.H.) |
| F-20 | Rear power window unit (L.H.) |
| F-21 | Body wiring harness and rear door wiring harness (L.H.) combination |
| F-22 | Door lock actuator (Front: L.H.) |
| F-23 | Door lamp (Front: L.H.) |
| F-24 | Power window motor (Front: L.H.) |
| F-25 | Door mirror (L.H.) |
| F-26 | Door speaker (L.H.) |
| F-27 | Door control unit (L.H.) |
| F-28 | Door control unit (L.H.) |
| F-29 | Door control unit (L.H.) |

Remark
The mark ★ shows the standard mounting position of wiring harness.

7-2 R.H. drive vehicles

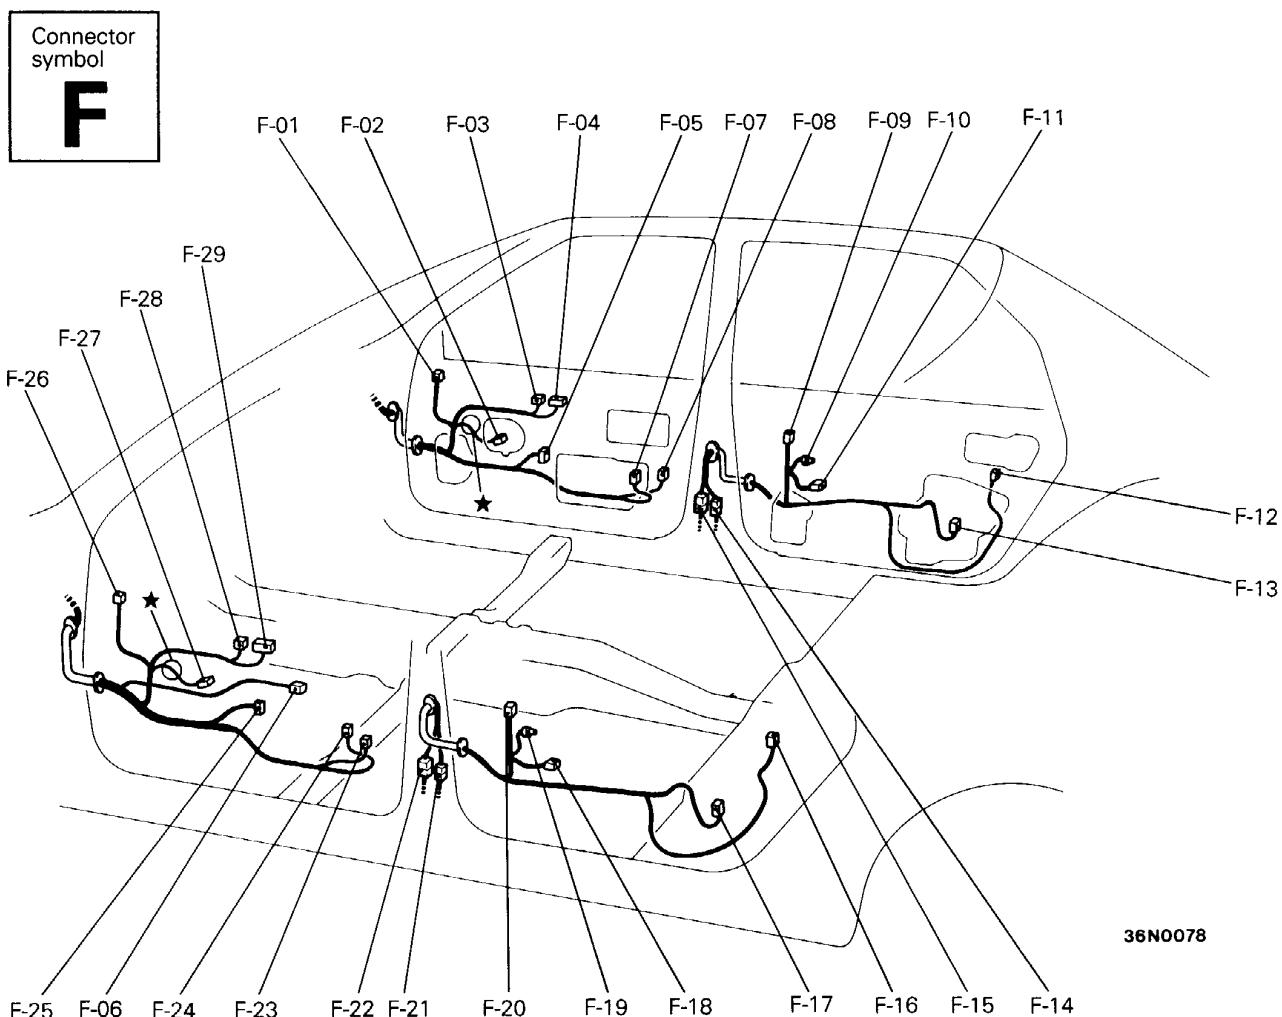


- F-01 Door mirror (R.H.)
- F-02 Door speaker (R.H.)
- F-03 }
- F-04 } Door control unit (R.H.)
- F-05 Power window motor (Front: R.H.)
- F-06 Door lock key cylinder switch
- F-07 Door lamp (Front: R.H.)
- F-08 Door lock actuator (Front: R.H.)
- F-09 Rear power window unit (R.H.)
- F-10 Rear ashtray illumination lamp (R.H.)
- F-11 Power window motor (Rear: R.H.)
- F-12 Door lock actuator (Rear: R.H.)
- F-13 Door lamp (Rear: R.H.)
- F-14 }
- F-15 } Body wiring harness and rear door wiring harness (R.H.) combination
- F-16 Door lock actuator (Rear: L.H.)
- F-17 Door lamp (Rear: L.H.)

- F-18 Power window motor (Rear: L.H.)
- F-19 Rear ashtray illumination lamp (L.H.)
- F-20 Rear power window unit (L.H.)
- F-21 }
- F-22 } Body wiring harness and rear door wiring harness (L.H.) combination <Vehicles without ABS> or ABS wiring harness and rear door wiring harness (L.H.) combination <Vehicles with ABS>
- F-23 Door lock actuator (Front: L.H.)
- F-24 Door lamp (Front: L.H.)
- F-25 Power window motor (Front: L.H.)
- F-26 Door mirror (L.H.)
- F-27 Door speaker (L.H.)
- F-28 }
- F-29 } Door control unit (L.H.)



Remark
The mark ★ shows the standard mounting position of wiring harness.

8 LUGGAGE COMPARTMENT

8-1 L.H. drive vehicles

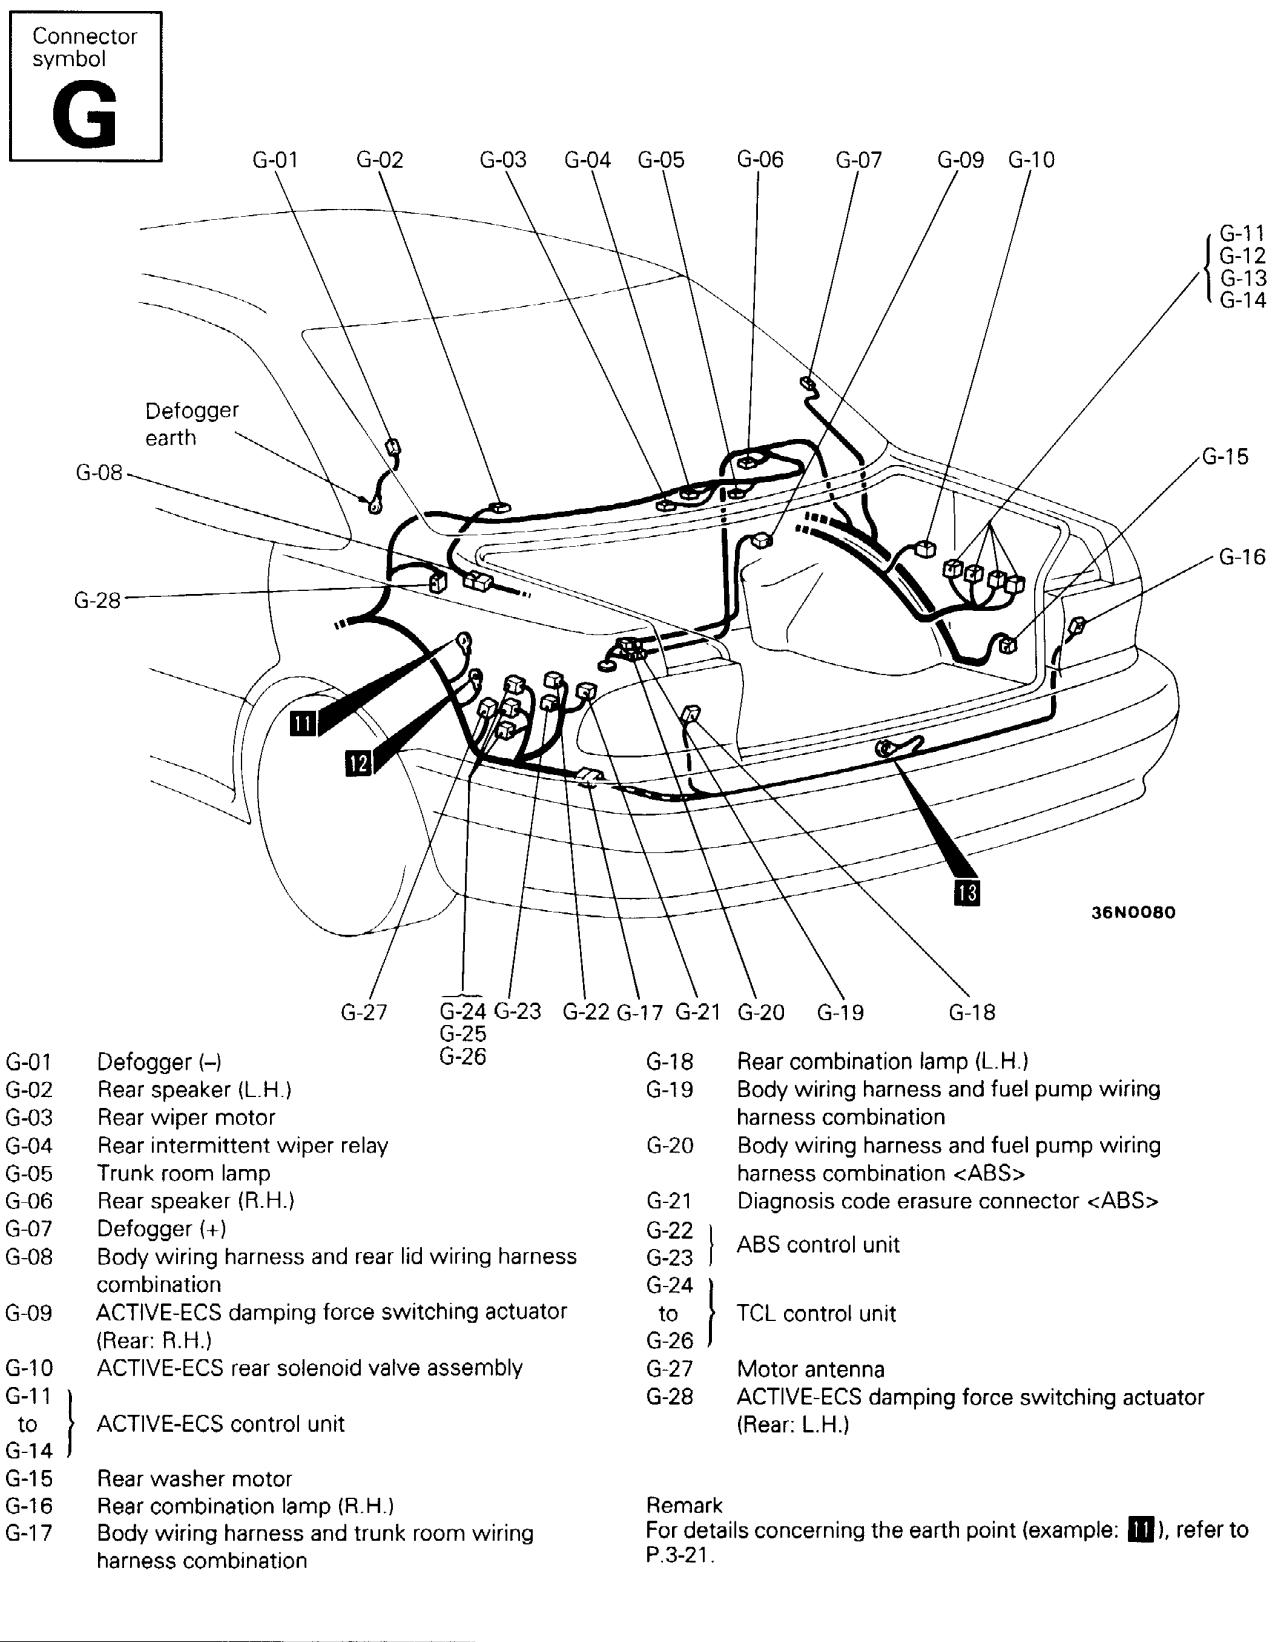


8-2 R.H. drive vehicles

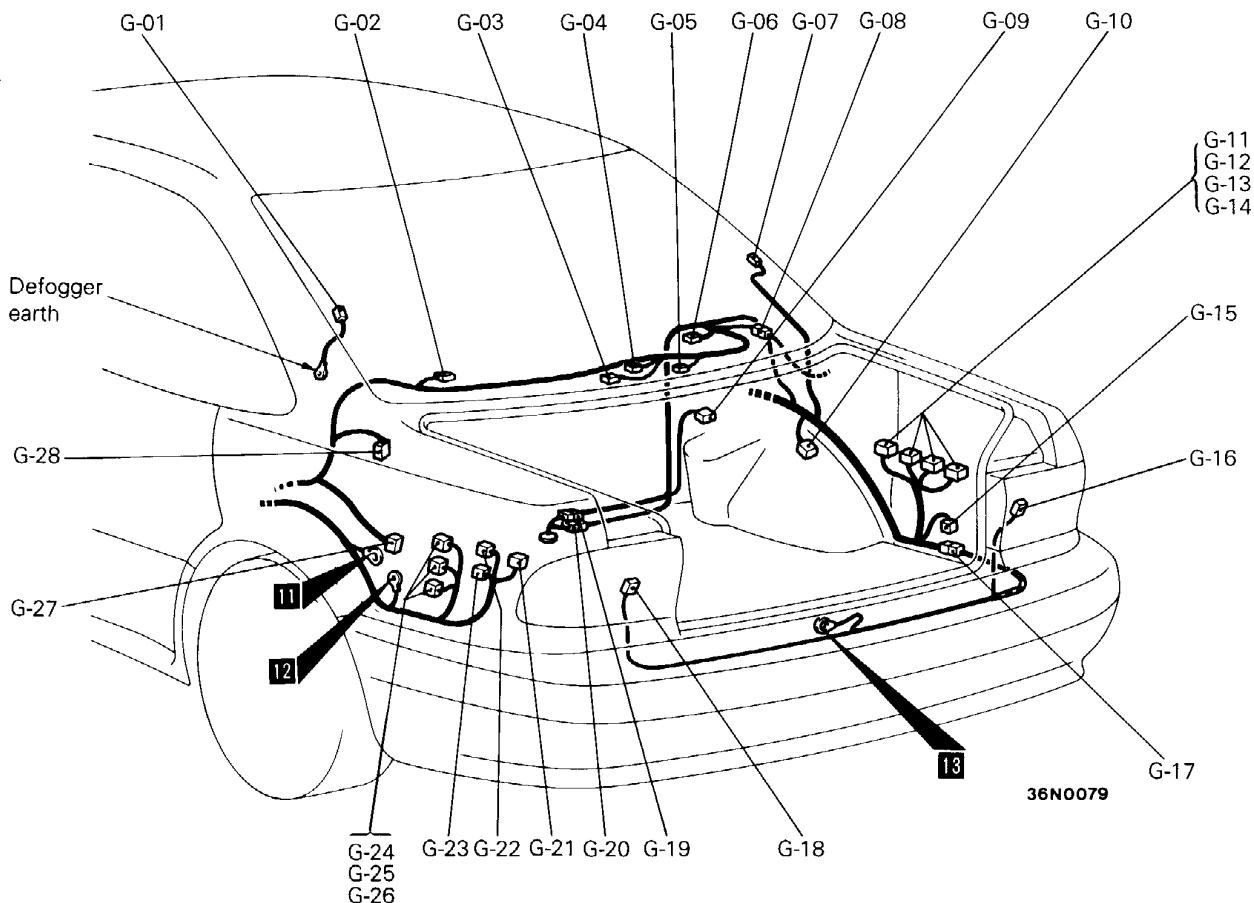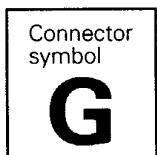


- | | | | |
|------|---|--|--|
| G-01 | Defogger (-) | G-18 | Rear combination lamp (L.H.) |
| G-02 | Rear speaker (L.H.) | G-19 | Body wiring harness and fuel pump wiring harness combination |
| G-03 | Rear wiper motor | G-20 | Body wiring harness and fuel pump wiring harness combination <ABS> |
| G-04 | Rear intermittent wiper relay | G-21 | Diagnosis code erasure connector <ABS> |
| G-05 | Trunk room lamp | G-22 | ABS control unit |
| G-06 | Rear speaker (R.H.) | G-23 | |
| G-07 | Defogger (+) | G-24 | TCL control unit |
| G-08 | Body wiring harness and rear lid wiring harness combination | G-25 | |
| G-09 | ACTIVE-ECS damping force switching actuator (Rear: R.H.) | G-26 | |
| G-10 | ACTIVE-ECS rear solenoid valve assembly | G-27 | Motor antenna |
| G-11 | ACTIVE-ECS control unit | G-28 | ACTIVE-ECS damping force switching actuator (Rear: L.H.) |
| G-14 | | | |
| G-15 | Rear washer motor | Remark | |
| G-16 | Rear combination lamp (R.H.) | For details concerning the earth point (example: 11), refer to P.3-21. | |
| G-17 | Body wiring harness and trunk room wiring harness combination | | |


9 TRUNK LID

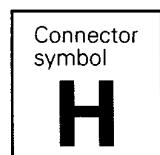



<L.H. drive vehicles>

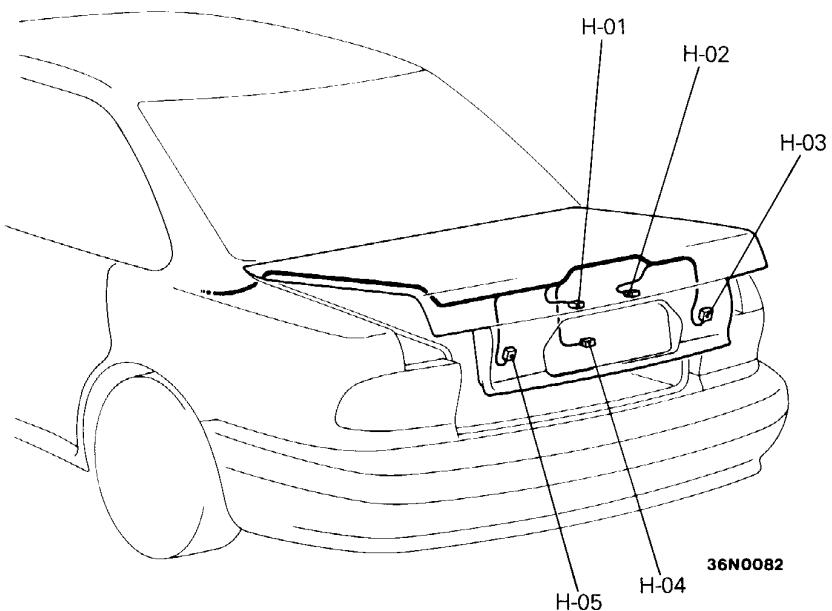

<R.H. drive vehicles>

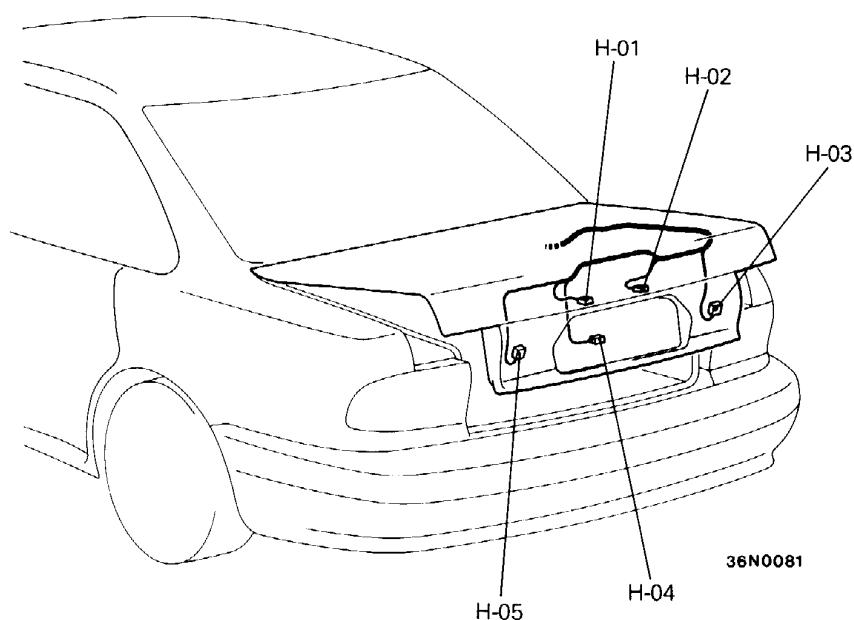

- H-01 License plate lamp (L.H.)
- H-02 License plate lamp (R.H.)
- H-03 Rear lid lamp (R.H.)
- H-04 Trunk room lamp switch
- H-05 Rear lid lamp (L.H.)

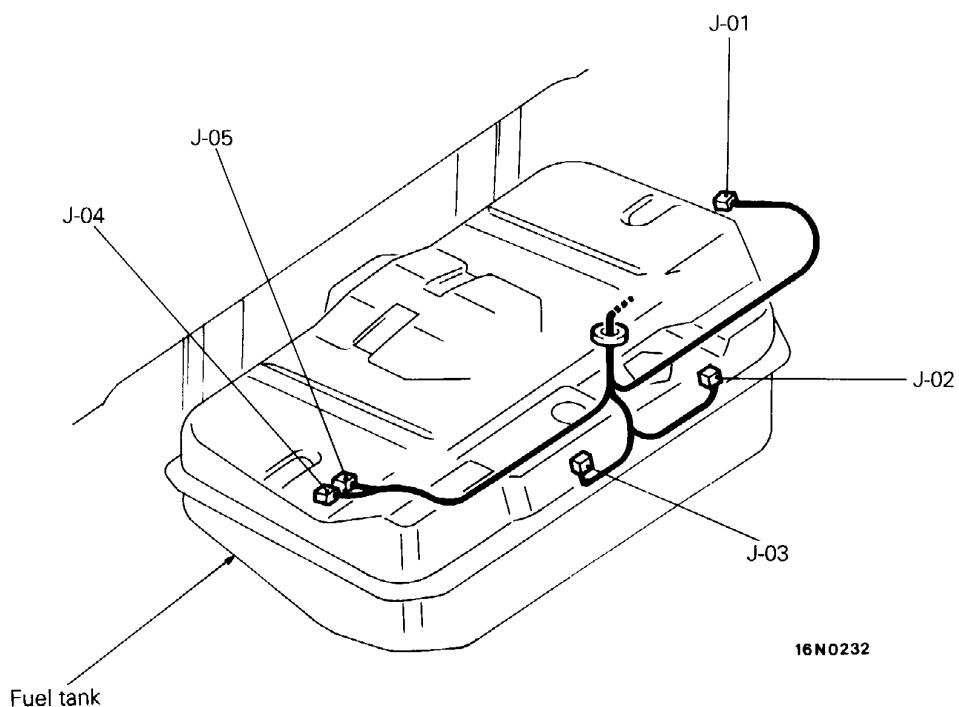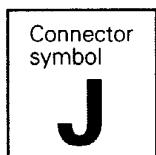10 UNDER REAR FLOOR

- J-01 ABS speed sensor (Rear: R.H.) <ABS>
- J-02 Fuel pump
- J-03 Fuel gauge unit
- J-04 ABS speed sensor (Rear: L.H.) <ABS>
- J-05 ACTIVE-ECS rear height sensor