

AUTOMATIC TRANSMISSION OVERHAUL

CONTENTS

GENERAL INFORMATION

SECTIONAL VIEW

HYDRAULIC CIRCUIT

SPECIFICATIONS

GENERAL SPECIFICATIONS

SERVICE SPECIFICATIONS

VALVE BODY SPRING IDENTIFICATION TABLE

SNAP RING, SPACER, THRUST WASHER,
THRUST RACE AND PRESSURE PLATE FOR
ADJUSTMENT

TORQUE SPECIFICATIONS

SEALANTS

SPECIAL TOOLS

FORM-IN-PLACE GASKET

DISASSEMBLY

SURFACE PREPARATION

FORM-IN-PLACE GASKET APPLICATION (FIPG)

TRANSMISSION

DISASSEMBLY AND REASSEMBLY

DISASSEMBLY

REASSEMBLY

OIL PUMP

DISASSEMBLY AND REASSEMBLY

DISASSEMBLY SERVICE POINTS

UNDERDRIVE CLUTCH AND INPUT SHAFT

DISASSEMBLY AND REASSEMBLY

DISASSEMBLY SERVICE POINT

REASSEMBLY SERVICE POINTS

REVERSE AND OVERDRIVE CLUTCH

DISASSEMBLY AND REASSEMBLY

DISASSEMBLY SERVICE POINT

REASSEMBLY SERVICE POINTS

OVERDRIVE PLANETARY CARRIER

DISASSEMBLY AND REASSEMBLY

LOW-REVERSE BRAKE

DISASSEMBLY AND REASSEMBLY

REASSEMBLY SERVICE POINT

SECOND BRAKE

DISASSEMBLY AND REASSEMBLY

REASSEMBLY SERVICE POINT

OUTPUT SHAFT

DISASSEMBLY AND REASSEMBLY

DISASSEMBLY SERVICE POINTS

REASSEMBLY SERVICE POINTS

DIFFERENTIAL

DISASSEMBLY AND REASSEMBLY
DISASSEMBLY SERVICE POINTS
REASSEMBLY SERVICE POINTS

VALVE BODY

DISASSEMBLY AND REASSEMBLY
DISASSEMBLY SERVICE POINT

REASSEMBLY SERVICE POINTS

SPEEDOMETER GEAR

DISASSEMBLY AND REASSEMBLY
REASSEMBLY SERVICE POINT

DRIVE SHAFT OIL SEAL

DISASSEMBLY AND REASSEMBLY
REASSEMBLY SERVICE POINT