

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

CONTENTS

GENERAL INFORMATION

CONSTRUCTION DIAGRAM

WARNING/CAUTION LABELS

SRS SERVICE PRECAUTIONS

SPECIAL TOOLS

TEST EQUIPMENT

TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS
TROUBLESHOOTING

DIAGNOSIS FUNCTION

INSPECTION CHART FOR DIAGNOSIS
TROUBLE CODES

INSPECTION PROCEDURE CLASSIFIED BY
DIAGNOSIS CODE

SRS WARNING LIGHT CHECK

INSPECTION CHART FOR TROUBLE
SYMPTOMS

INSPECTION PROCEDURE FOR TROUBLE
SYMPTOMS

SRS MAINTENANCE

SRS COMPONENT VISUAL CHECK

POST-COLLISION DIAGNOSIS

SRS-ECU MEMORY CHECK

REPAIR PROCEDURE

INDIVIDUAL COMPONENT SERVICE

SRS AIR BAG CONTROL UNIT (SRS-ECU)

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS

INSPECTION

AIR BAG MODULES AND CLOCK SPRING

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

INSPECTION

AIR BAG MODULE DISPOSAL PROCEDURES

UNDEPLOYED AIR BAG MODULE DISPOSAL

DEPLOYED AIR BAG MODULE DISPOSAL

CAUTION

- Carefully read and observe the information in the [SRS SERVICE PRECAUTIONS](#) prior to any service.
- For information concerning troubleshooting or maintenance, always observe the procedures in the [Troubleshooting](#) or the [SRS Maintenance](#) sections, respectively.
- If any SRS components are removed or replaced in connection with any service procedures, be sure to follow the procedures in the [INDIVIDUAL COMPONENT SERVICE](#) section for the components involved.
- If you have any questions about the SRS, please contact your local distributor.